

## REMOVAL

### 1. SUPPORT BODY WITH SAFETY STANDS

- (a) Jack up and support the body on safety stands.
- (b) Lower the axle housing until the leaf spring tension is free, and keep it at this position.

### 2. REMOVE REAR WHEEL

### 3. REMOVE REAR SHOCK ABSORBER

- (a) Remove the bolt and nut on the lower side of the shock absorber.
- (b) While holding the piston rod, remove the nut, retainer, cushion and shock absorber.
- (c) Remove the 2 retainers and cushion from the shock absorber.

