


## REAR WHEEL HUB BOLT REPLACEMENT

SA0BC-05


1. REMOVE REAR WHEEL
2. REMOVE BRAKE DRUM AND GASKET

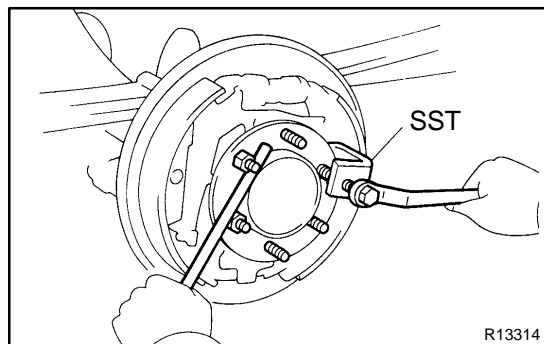

### 3. REMOVE REAR HUB BOLT

Using SST and a brass bar or an equivalent, remove the hub bolt.

SST 09650-17011

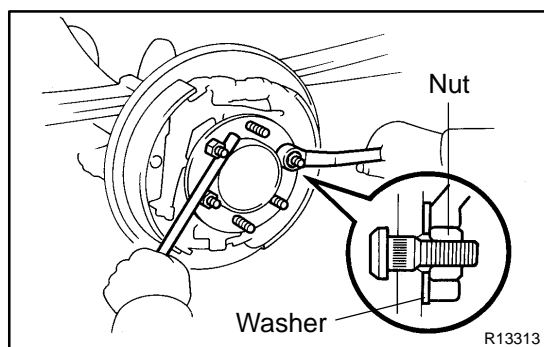

### 4. INSTALL HUB BOLT

- (a) Install a washer and nut to a new hub bolt as shown in the illustration.
- (b) Using a brass bar or an equivalent to hold, install the hub bolt by torquing the nut.
- (c) Remove the nut and washer.

### 5. INSTALL NEW GASKET AND BRAKE DRUM

### 6. INSTALL REAR WHEEL

Torque: 110 N·m (1,150 kgf·cm, 83 ft·lbf)