



REPLACEMENT

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
2. **REMOVE ROOF HEADLINING**
(See page [BO-126](#) or [BO-133](#))

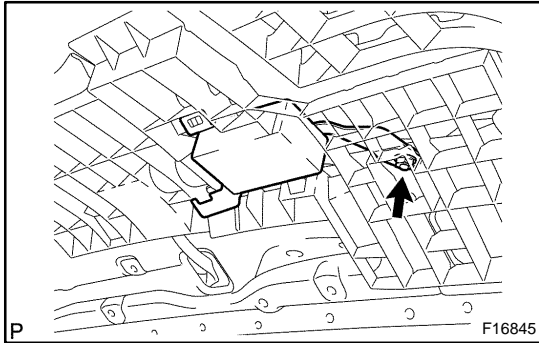

3. **REMOVE TIRE PRESSURE MONITOR RECEIVER**
 - (a) Disconnect the connector.
 - (b) Remove the nut.
 - (c) Remove the EA RIB LH.
 - (d) Remove the tire pressure monitor receiver from the EA RIB LH.

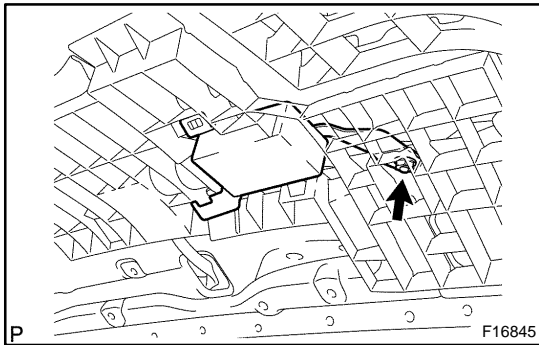

4. **INSTALL TIRE PRESSURE MONITOR RECEIVER**
 - (a) Install the tire pressure monitor receiver to the EA RIB LH.
 - (b) Connect the connector.
 - (c) Install the EA RIB LH to the body.
 - (d) Install the nut.
Torque: 7.5 N·m (76 kgf·cm, 66 in·lbf)
5. **INSTALL ROOF HEADLINING**
(See page [BO-130](#) or [BO-138](#))
6. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**