


## DISPOSAL


### HINT:

The tire pressure monitor valve sub-assy is powered by a lithium battery. When disposing of the tire pressure monitor valve sub-assy, remove the battery and dispose of it correctly.

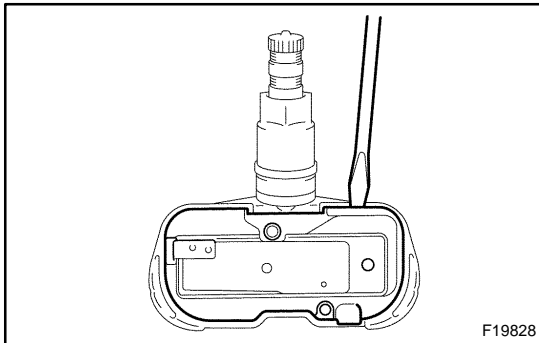

### DISPOSE OF TIRE PRESSURE MONITOR VALVE

- (a) Insert the tip of a screwdriver into the clearance and pry off the cover. Remove the back cover.

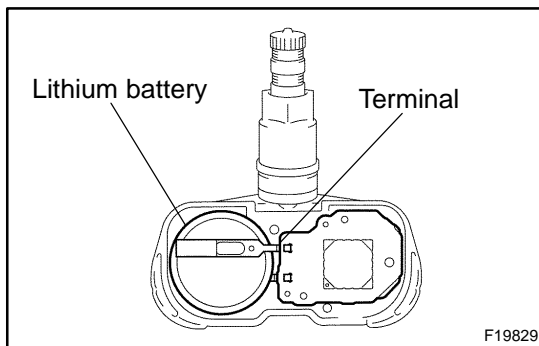

- (b) The battery and base board covered with silicone resin are exposed. While taking out the battery, cut off the 2 terminals which connect the battery and base board.