

INSTALLATION

1. INSTALL CAMSHAFT TIMING OIL CONTROL VALVE

- (a) Install the 2 camshaft timing oil control valves to each cylinder head, and tighten the 2 bolts.

Torque: 9.0 N·m (92 kgf·cm, 80 in·lbf)

- (b) Connect the 2 oil control valve connectors.

2. INSTALL FUEL DELIVERY PIPE

3. INSTALL INTAKE AIR SURGE TANK (See page [EM-89](#))

4. INSTALL AIR CLEANER (See page [EM-89](#))

5. INSTALL V-BANK COVER