

FUEL CUT RPM

SF12H-01

INSPECTION

INSPECT FUEL CUT OFF RPM

- (a) Increase the engine speed to at least 3,500 rpm.
- (b) Use a sound scope to check for injector operating noise.
- (c) Check that the injector operation noise stops momentarily and then resumes when the accelerator pedal is released.

Fuel cut off rpm: 2,500 rpm

Fuel return rpm: 1,200 rpm