


## REMOVAL

1. REMOVE THROTTLE BODY COVER
2. REMOVE INTAKE MANIFOLD ASSEMBLY  
(See page [EM-36](#))

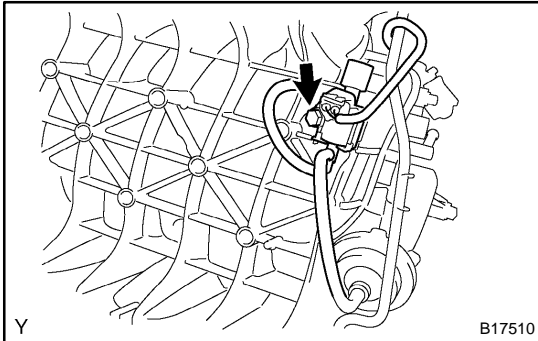

### 3. REMOVE VSV FOR ACIS

- (a) Remove the 2 vacuum hoses from the VSV.
- (b) Remove the bolt and VSV from the intake manifold.