

INSPECTION

INSPECT ACCELERATOR PEDAL POSITION SENSOR (See page [DI-794](#))

If necessary, replace the accelerator pedal assembly.

NOTICE:

- Be care not to give a shock to the accelerator pedal assembly.
- Be care not to disassemble the accelerator pedal assembly.