


## A/F SENSOR HEATER RELAY INSPECTION

SF1XR-01

1. REMOVE RELAY BOX COVER
2. REMOVE A/F SENSOR HEATER RELAY (Marking: A/F HTR)

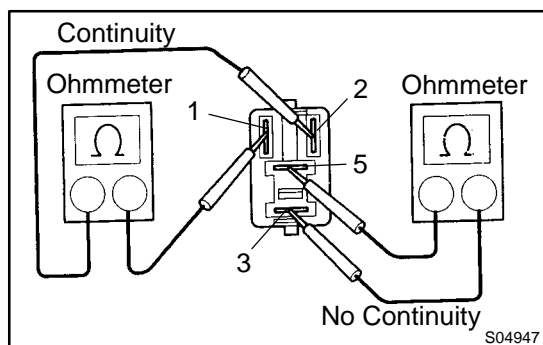


### 3. INSPECT A/F SENSOR HEATER RELAY CONTINUITY

- (a) Using an ohmmeter, check that there is continuity between terminals 1 and 2.

If there is no continuity, replace the relay.

- (b) Check that there is no continuity between terminals 3 and 5.

If there is continuity, replace the relay.

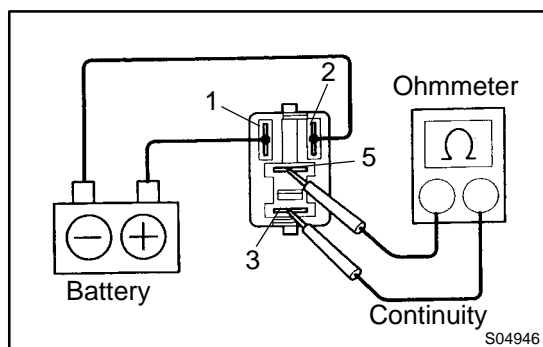

### 4. INSPECT A/F SENSOR HEATER RELAY OPERATION

- (a) Apply battery voltage across terminals 1 and 2.

- (b) Using an ohmmeter, check that there is continuity between terminals 3 and 5.

If there is no continuity, replace the relay.

### 5. REINSTALL A/F SENSOR HEATER RELAY

### 6. REINSTALL RELAY BOX COVER