



## INSPECTION

1. REMOVE FUEL PUMP RESISTOR
2. INSPECT FUEL PUMP RESISTOR

Using an ohmmeter, measure the resistance between the terminals.

**Resistance: 0.70 to 0.76  $\Omega$  at 20°C (68°F)**

If the resistance is not as specified, replace the resistor.

3. REINSTALL FUEL PUMP RESISTOR

**Torque: 8.0 N·m (82 kgf·cm, 71 in.-lbf)**