


INSTALLATION

1. **INSTALL FUEL PUMP ASSEMBLY** (See page [SF-19](#))
2. **INSTALL FUEL TANK ASSEMBLY**
 - (a) Set up the fuel tank on the transmission jack.
 - (b) Operate the transmission jack and install the fuel tank.
 - (c) Install the 2 fuel tank bands with the 2 bolts.


Torque: 62 N·m (632 kgf-cm, 45 ft-lbf)

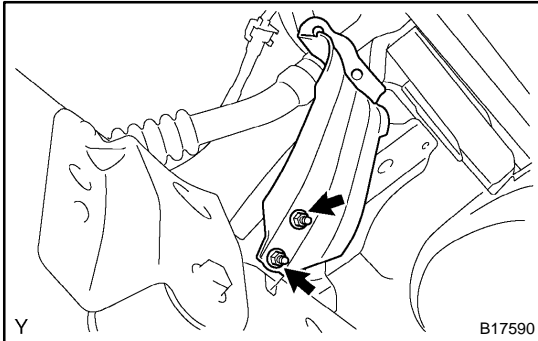


- (d) Install the fuel pipe bracket to the body with the 2 nuts.

Torque: 20 N·m (204 kgf-cm, 15 ft-lbf)

3. CONNECT FUEL PUMP CONNECTOR

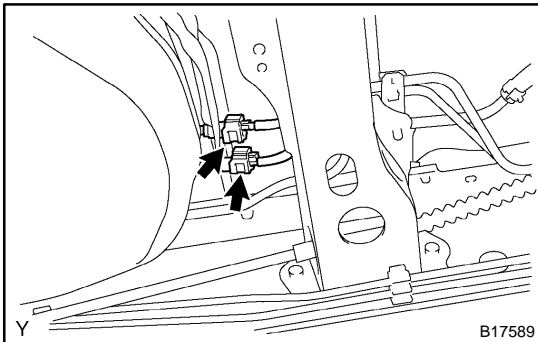


4. CONNECT FUEL MAIN TUBE AND RETURN TUBE (See page [SF-1](#))

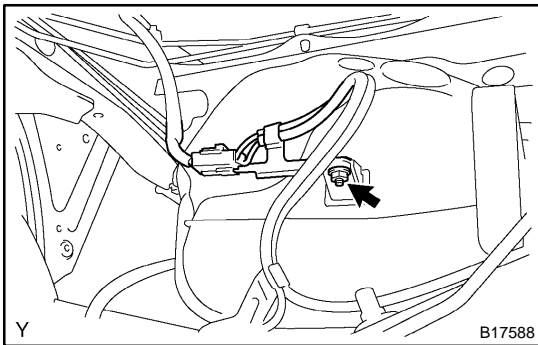

5. CONNECT SPEED SENSOR WIRE


Connect the speed sensor wire to the fuel tank with the nut.

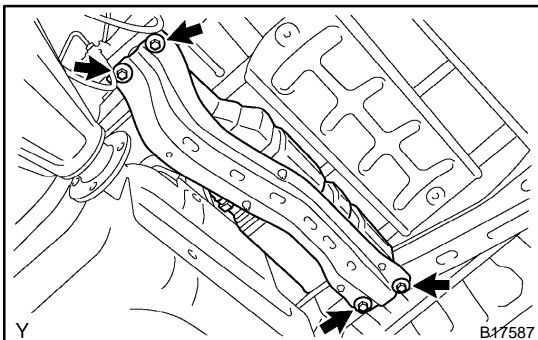

6. INSTALL CHARCOAL CANISTER ASSEMBLY

- (a) Connect the pump module connector, vent hose and purge line hose to the charcoal canister.
- (b) Install the charcoal canister assembly with the 4 bolts.

Torque: 14.7 N·m (150 kgf-cm, 11 ft-lbf)

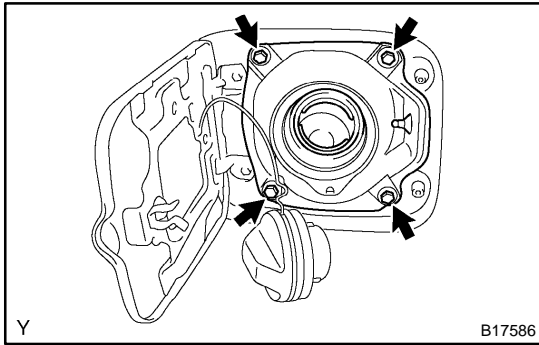**7. INSTALL FUEL INLET PIPE SHIELD**

- (a) Install the fuel inlet pipe shield with the 4 bolts.
- (b) Install the fuel tank cap.

8. CHECK FOR FUEL LEAKS**9. INSTALL SPARE TIRE**