



INSTALLATION

1. INSTALL STARTER

Install the starter with the 2 bolts.

Torque: 37 N·m (377 kgf·cm, 27 ft·lbf)

- (a) Connect the wire harness to the terminal 30 and install the nut.

Torque: 9.8 N·m (100 kgf·cm, 7 ft·lbf)

- (b) Connect the terminal 50 to the starter.

2. INSTALL ENGINE UNDER COVER ASSY REAR

3. CONNECT CABLE TO NEGATIVE (-) BATTERY TERMINAL