


REMOVAL

1. REMOVE ENGINE UNDER COVER
2. DISCONNECT CABLE FROM NEGATIVE (-) BATTERY TERMINAL

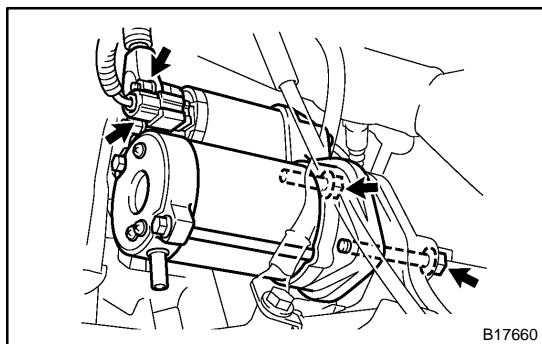

3. REMOVE STARTER ASSEMBLY
 - (a) Disconnect the terminal 50 connector from the starter.
 - (b) Remove the nut and disconnect the wire harness from terminal 30.
 - (c) Remove the 2 bolts and the starter.