 


BODY CONSTRUCTION

BC

BODY COMPONENTS

Body construction will sometimes differ depending on specifications and country of destination. Therefore, please keep in mind that the information contained herein is based on vehicles for general destination.

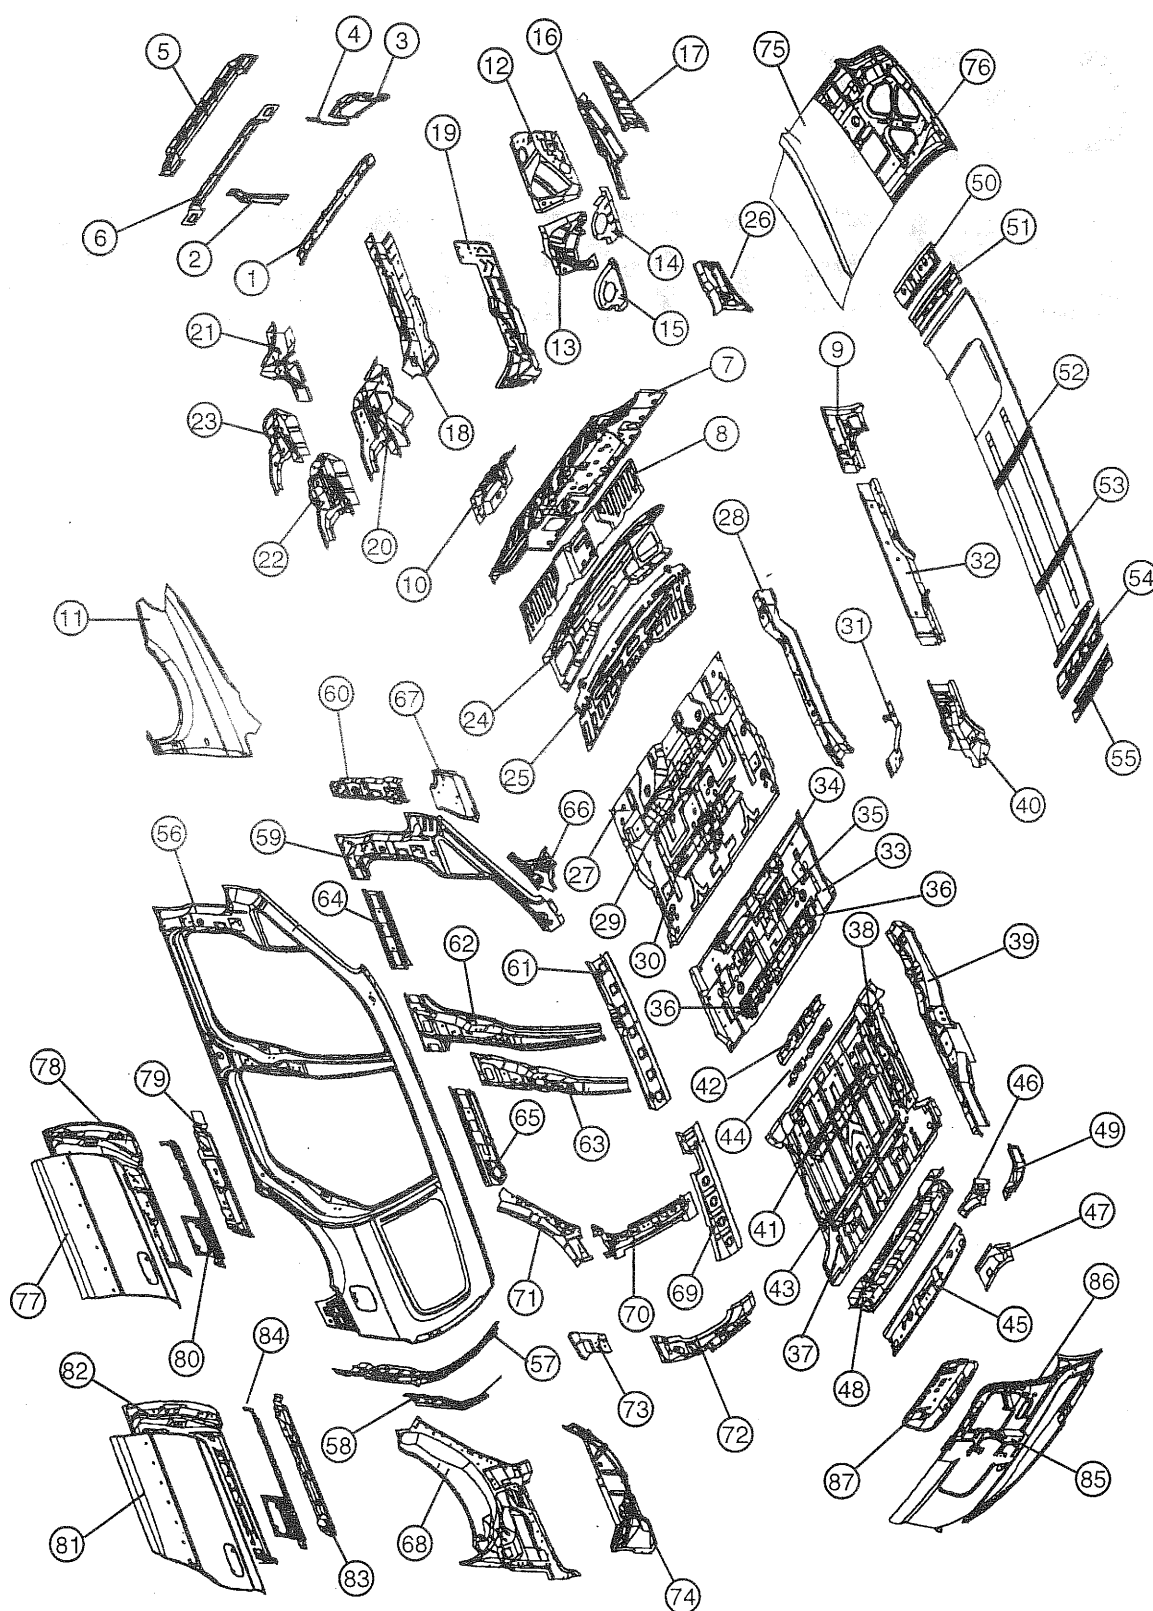


FO-01

BODY COMPONENTS

1. Radiator support upper center member
2. Radiator support center member
3. Head lamp support panel(LH/RH)
4. Head lamp support reinforcement(LH/RH)
5. Radiator support lower outer member
6. Radiator support lower inner member
7. Dash panel
8. Dash lower panel
9. Side sill inner front extension(LH/RH)
10. Dash lower member
11. Fender panel(LH/RH)
12. Fender apron inner front panel(LH/RH)
13. Shock absorber housing panel(LH/RH)
14. Shock absorber housing reinforcement(LH/RH)
15. Shock absorber housing cover(LH/RH)
16. Fender apron upper inner panel(LH/RH)
17. Fender apron upper outer panel(LH/RH)
18. Front side inner member(LH/RH)
19. Front side outer member(LH/RH)
20. Front side rear lower member(LH/RH)
21. Front side inner rear member(LH/RH)
22. Front side member rear upper member(LH/RH)
23. Front side rear upper inner reinforcement(LH/RH)
24. Cowl inner lower panel
25. Cowl top outer panel
26. Cowl side upper outer panel
27. Center floor panel
28. Center floor side member(LH/RH)
29. Center cross No. 1 member
30. Center cross No. 2 member
31. Manual transaxle front seat mounting center bracket(RH)
32. Side sill inner panel(LH/RH)
33. Gas interm floor panel
34. Center cross No. 3 member(LH/RH)
35. Fuel tank mounting rear inner reinforcement
36. Center cross No.4 member(LH/RH)
37. Rear floor panel
38. Rear floor side reinforcement(LH/RH)
39. Rear floor side member(LH/RH)
40. Side sill inner rear extension(LH/RH)
41. Center cross No.5 member(LH/RH)
42. Rear cross member rear mounting reinforcement
43. Center cross No.6 member(LH/RH)
44. Rear seat rear mounting reinforcement(LH/RH)
45. Rear end cross upper member
46. Rear end cross upper gusset(LH/RH)
47. Rear end cross upper pillar(LH/RH)
48. Rear end cross lower member
49. Rear end cross lower extension(LH/RH)
50. Roof front lower rail
51. Roof front upper rail
52. Roof center No. 1 rail
53. Roof center No. 3 rail
54. Roof rear upper rail
55. Roof rear lower rail
56. Side outer panel(LH/RH)
57. Side outer rear filler(LH/RH)
58. Rear combination lamp housing reinforcement(LH/RH)
59. Front pillar outer reinforcement(LH/RH)
60. Front door hinge mounting reinforcement(LH/RH)
61. Roof side outer front rail(LH/RH)
62. Center pillar outer reinforcement(LH/RH)
63. Rear door hinge mounting reinforcement(LH/RH)
64. Side sill outer front reinforcement(LH/RH)
65. Side sill outer rear reinforcement(LH/RH)
66. Front pillar inner upper reinforcement(LH/RH)
67. Front pillar inner filler(LH/RH)
68. Quarter inner panel(LH/RH)
69. Roof side outer rear rail(LH/RH)
70. "C" pillar inner upper reinforcement(LH/RH)
71. "C" pillar inner lower reinforcement(LH/RH)
72. "D" pillar inner upper reinforcement(LH/RH)
73. 3rd seat belt rear mounting bracket(LH/RH)
74. Wheel house inner panel(LH/RH)
75. Hood outer panel
76. Hood inner panel
77. Front door outer panel(LH/RH)
78. Front door inner panel(LH/RH)
79. Front door belt outer rail(LH/RH)
80. Front door belt inner rail(LH/RH)
81. Rear door outer panel(LH/RH)
82. Rear door inner panel(LH/RH)
83. Rear door belt outer rail(LH/RH)
84. Rear door belt inner rail(LH/RH)
85. Tailgate outer panel
86. Tailgate inner panel
87. Tailgate plate mounting panel

HIGH STRENGTH STEEL PANELS

Because High strength steel panel has excellent resistance, it is used in areas which have a high possibility of painting deficiency below.

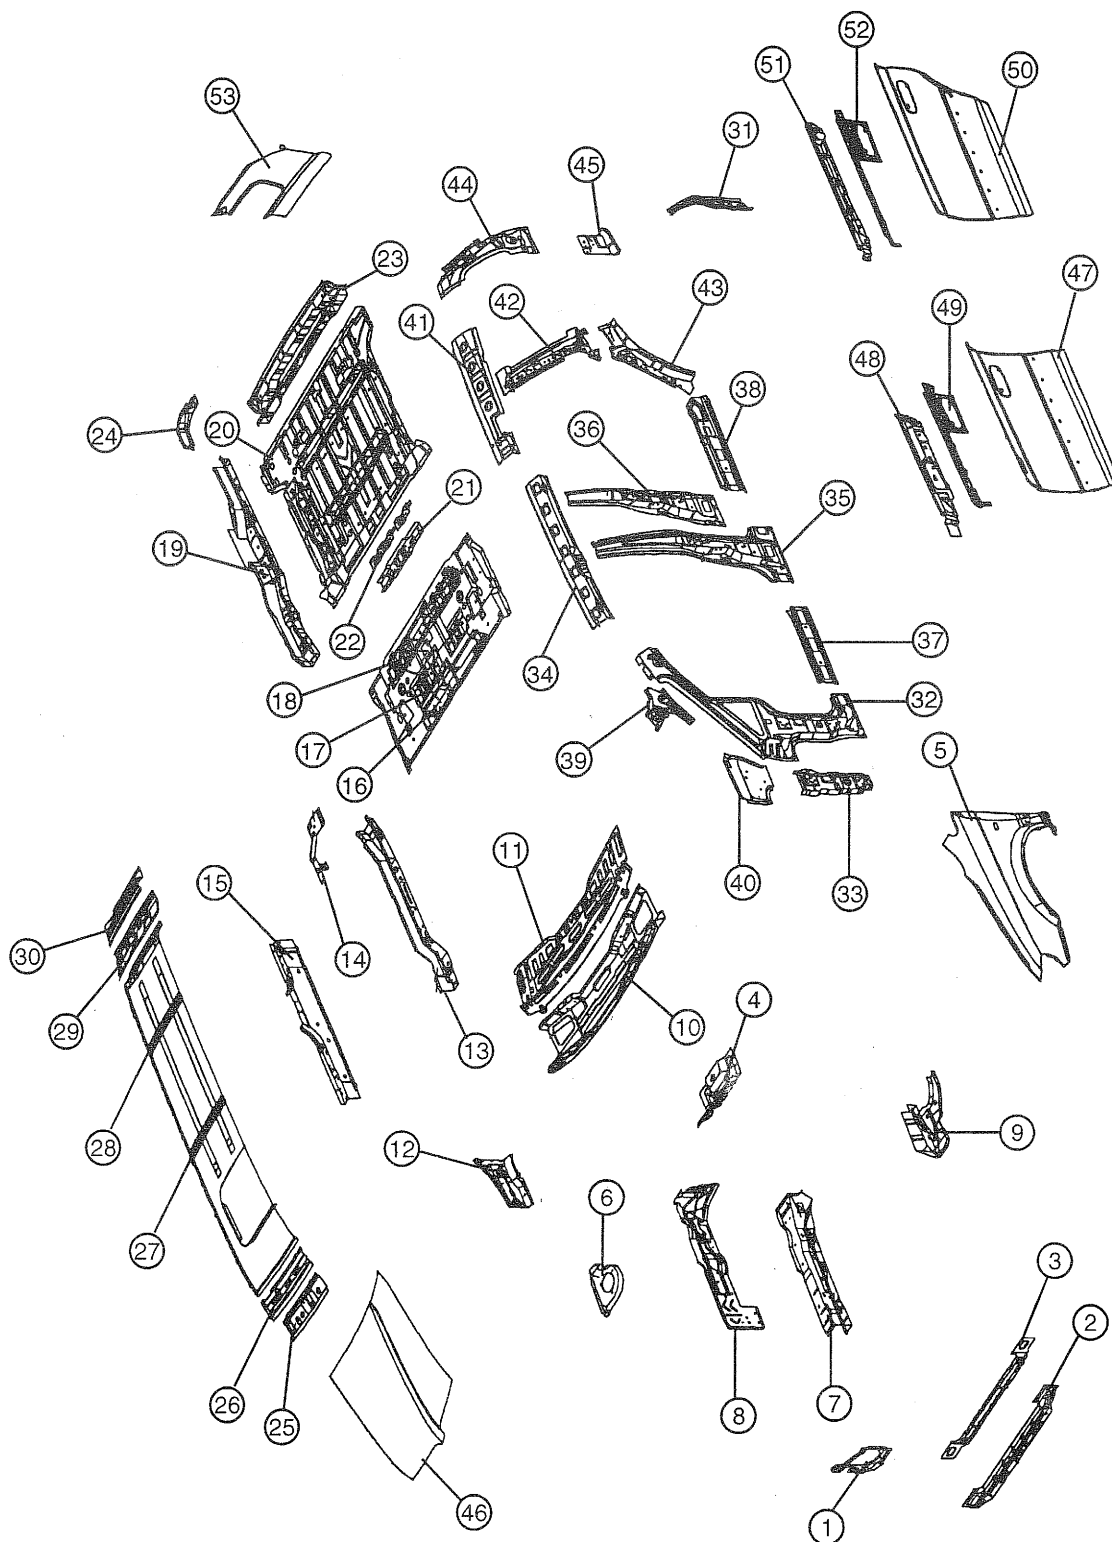


HIGH

HIGH STRENGTH STEEL PANELS

1. Head lamp support panel
2. Radiator support lower outer member
3. Radiator support lower inner member
4. Dash lower member
5. Fender panel(LH/RH)
6. Shock absorber housing cover(LH/RH)
7. Front side inner member(LH/RH)
8. Front side outer member(LH/RH)
9. Front side rear upper inner reinforcement(LH/RH)
10. Cowl inner lower panel
11. Cowl top outer panel
12. Cowl side upper outer panel
13. Center floor side member(LH/RH)
14. Manual transaxle front mounting center bracket(LH/RH)
15. Side sill inner panel(LH/RH)
16. Center cross No.3 member(LH/RH)
17. Fuel tank mounting rear reinforcement
18. Center cross No.4 member(LH/RH)
19. Rear floor side member(LH/RH)
20. Center cross No.5 member(LH/RH)
21. Rear cross member rear mounting reinforcement
22. Rear seat rear mounting reinforcement(LH/RH)
23. Rear and cross lower member
24. Rear and cross lower extension
25. Roof front lower rail
26. Roof front upper rail
27. Roof center No.1 rail
28. Roof center No.3 rail
29. Roof rear upper rail
30. Roof rear lower rail
31. Rear combination lamp housing reinforcement(LH/RH)
32. Front pillar outer reinforcement(LH/RH)
33. Front door hinge mounting reinforcement(LH/RH)
34. Roof side outer front rail(LH/RH)
35. Center pillar outer reinforcement(LH/RH)
36. Rear door hinge mounting reinforcement(LH/RH)
37. Side sill outer front reinforcement(LH/RH)
38. Side sill outer rear reinforcement(LH/RH)
39. Front pillar inner upper reinforcement(LH/RH)
40. Front pillar inner filler
41. Roof side outer rear rail(LH/RH)
42. "C" pillar inner upper reinforcement(LH/RH)
43. "C" pillar inner lower reinforcement(LH/RH)
44. "D" pillar inner upper reinforcement(LH/RH)
45. 3rd seat belt rear mounting bracket(LH/RH)
46. Hood outer panel
47. Front door outer panel(LH/RH)
48. Front door belt outer rail(LH/RH)
49. Front door belt inner rail(LH/RH)
50. Rear door outer panel(LH/RH)
51. Rear door belt outer rail(LH/RH)
52. Rear door belt inner rail(LH/RH)
53. Tailgate outer panel

ZINC-GALVANIZED STEEL PANELS

Because galvanized steel panel has excellent resistance, it is used in areas which have a high possibility of painting deficiency below.

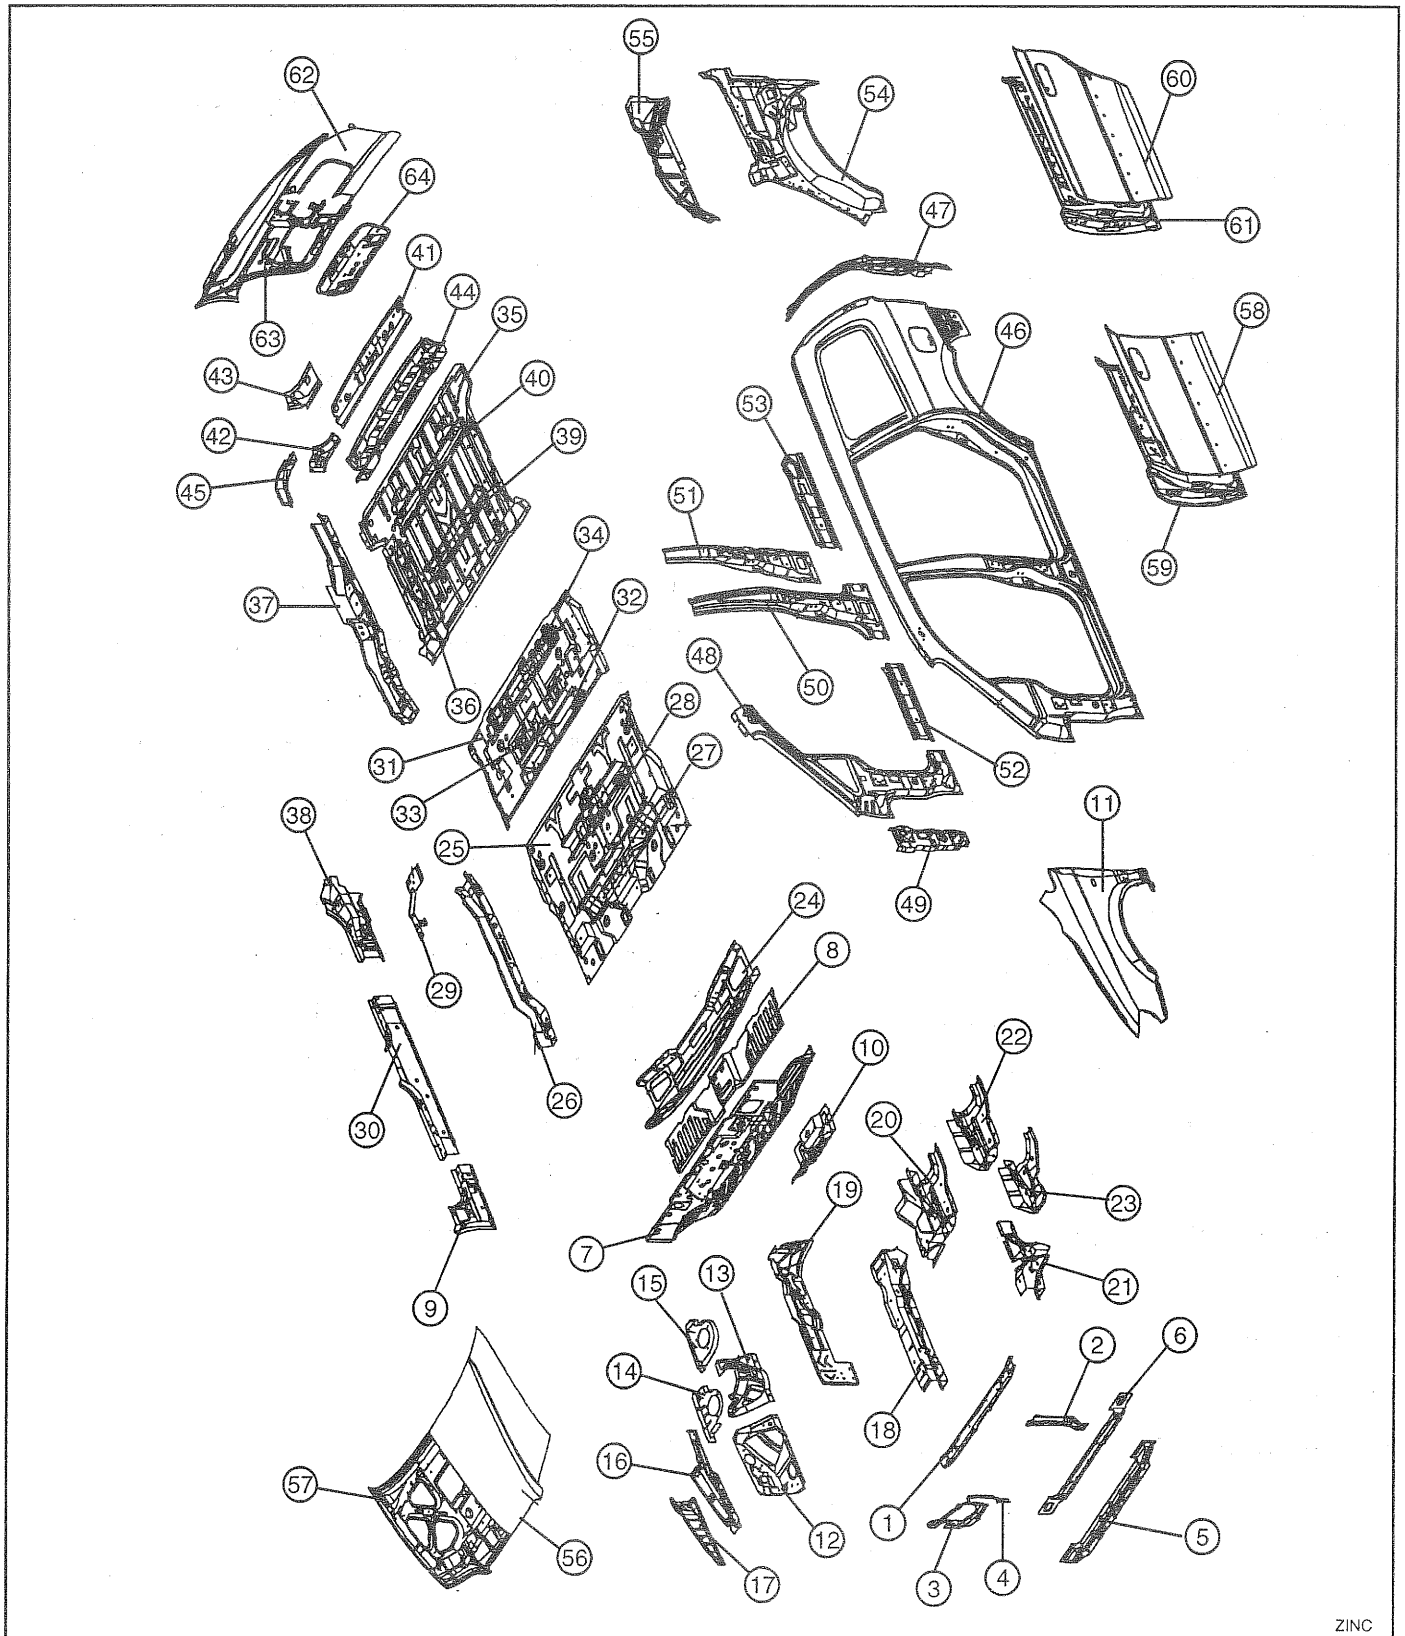


ZINC

ZINC-GALVANIZED STEEL PANELS

1. Radiator support upper center member
2. Radiator support center member
3. Head lamp support panel(LH/RH)
4. Head lamp support reinforcement(LH/RH)
5. Radiator support lower outer member
6. Radiator support lower inner member
7. Dash panel
8. Dash lower panel
9. Side sill inner front extension(LH/RH)
10. Dash lower member
11. Fender panel(LH/RH)
12. Fender apron inner front panel(LH/RH)
13. Shock absorber housing panel(LH/RH)
14. Shock absorber housing reinforcement(LH/RH)
15. Shock absorber housing cover(LH/RH)
16. Fender apron upper inner panel(LH/RH)
17. Fender apron upper outer panel(LH/RH)
18. Front side inner member(LH/RH)
19. Front side outer member(LH/RH)
20. Front side rear lower member(LH/RH)
21. Front side inner rear member(LH/RH)
22. Front side member rear upper member(LH/RH)
23. Front side rear upper inner reinforcement(LH/RH)
24. Cowl inner lower panel
25. Center floor panel
26. Center floor side member(LH/RH)
27. Center cross No. 1 member
28. Center cross No. 2 member
29. Manual transaxle mounting center bracket(RH)
30. Side sill inner panel(LH/RH)
31. Gas interm floor panel
32. Center cross No.3 member(LH/RH)
33. Fuel tank mounting rear inner reinforcement
34. Center cross No. 4 member(LH/RH)
35. Rear floor panel
36. Rear floor side reinforcement(LH/RH)
37. Rear floor side member(LH/RH)
38. Side sill inner rear extension(LH/RH)
39. Center cross No. 5 member(LH/RH)
40. Center cross No. 6 member(LH/RH)
41. Rear end cross upper member
42. Rear end cross upper gusset(LH/RH)
43. Rear end cross upper pillar(LH/RH)
44. Rear end cross lower member
45. Rear end cross lower extension(LH/RH)
46. Side outer panel(LH/RH)
47. Side outer rear filler(LH/RH)
48. Front pillar outer reinforcement(LH/RH)
49. Front door hinge mounting reinforcement(LH/RH)
50. Center pillar outer reinforcement(LH/RH)
51. Rear door hinge mounting reinforcement(LH/RH)
52. Side sill outer front reinforcement(LH/RH)
53. Side sill outer rear reinforcement(LH/RH)
54. Quarter inner panel(LH/RH)
55. Wheel house inner panel(LH/RH)
56. Hood outer panel
57. Hood inner panel
58. Front door outer panel(LH/RH)
59. Front door inner panel(LH/RH)
60. Rear door outer panel(LH/RH)
61. Rear door inner panel(LH/RH)
62. Tailgate outer panel
63. Tailgate inner panel
64. Tailgate lower plate mounting panel

FRONT END STRUCTURE PANEL ASSEMBLY

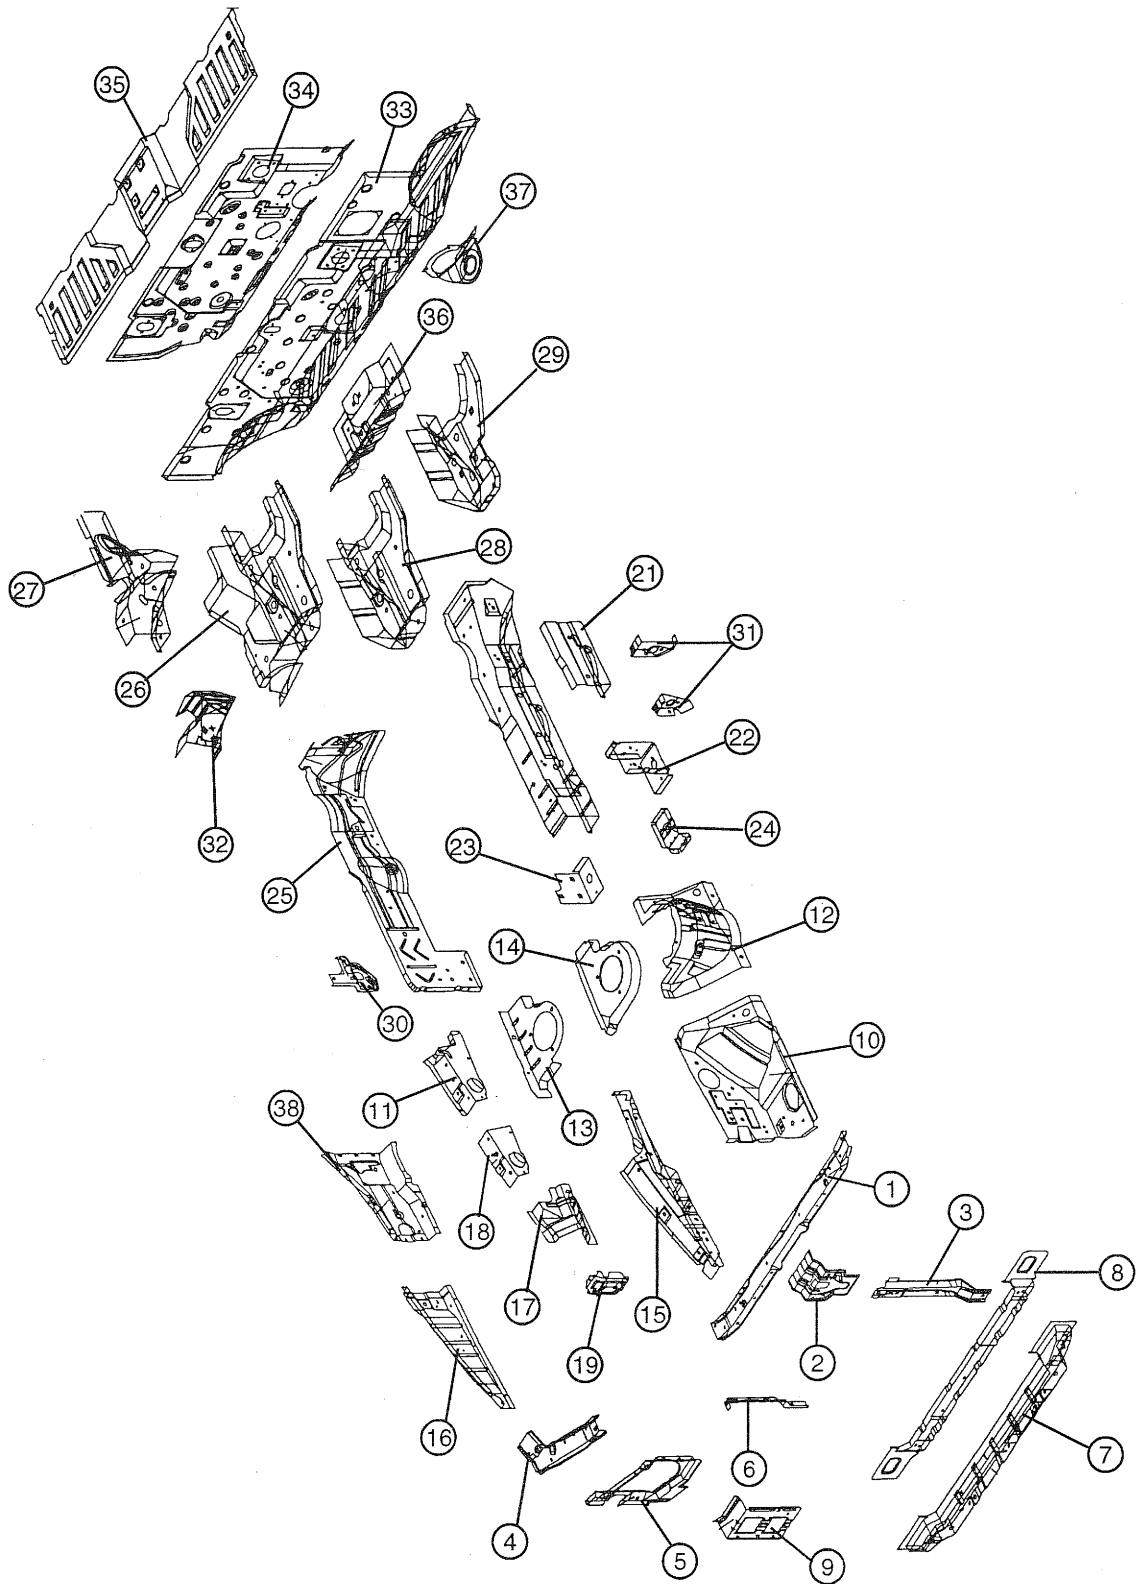


FES-01


FRONT END STRUCTURE PANEL ASSEMBLY

1. Radiator support upper center member
2. Hood latch mounting bracket
3. Radiator support center member
4. Radiator support upper side member(LH/RH)
5. Head lamp support panel(LH/RH)
6. Head lamp support reinforcement(LH/RH)
7. Radiator support lower outer member
8. Radiator support lower inner member
9. Front bumper mounting reinforcement(LH/RH)
10. Fender apron inner front panel(LH/RH)
11. Fender apron upper rear extension(LH/RH)
12. Shock absorber housing panel(LH/RH)
13. Shock absorber housing reinforcement(LH/RH)
14. Shock absorber housing cover(LH/RH)
15. Fender apron upper inner panel(LH/RH)
16. Fender apron upper outer panel(LH/RH)
17. Fender apron upper rear gusset(LH/RH)
18. Hood hinge mounting reinforcement(LH/RH)
19. Fender apron upper front gusset(LH/RH)
20. Front side inner member(LH/RH)
21. Front side member inner reinforcement(LH/RH)
22. Front side member front gusset(LH/RH)
23. Side frame mounting front reinforcement(LH/RH)
24. Side frame mounting front support(LH/RH)
25. Front side outer member(LH/RH)
26. Front side rear lower member(LH/RH)
27. Front side inner rear member(LH/RH)
28. Front side member rear upper member(LH/RH)
29. Front side rear upper reinforcement(LH/RH)
30. Front shipping hook(LH/RH)
31. Transaxle manual mounting front rear reinforcement
32. Front side inner rear reinforcement(LH/RH)
33. Dash panel
34. Dash reinforcement
35. Dash lower panel
36. Dash lower member
37. Dust cover panel
38. Cowl side upper outer panel(LH/RH)

 RADIATOR SUPPORT PANEL

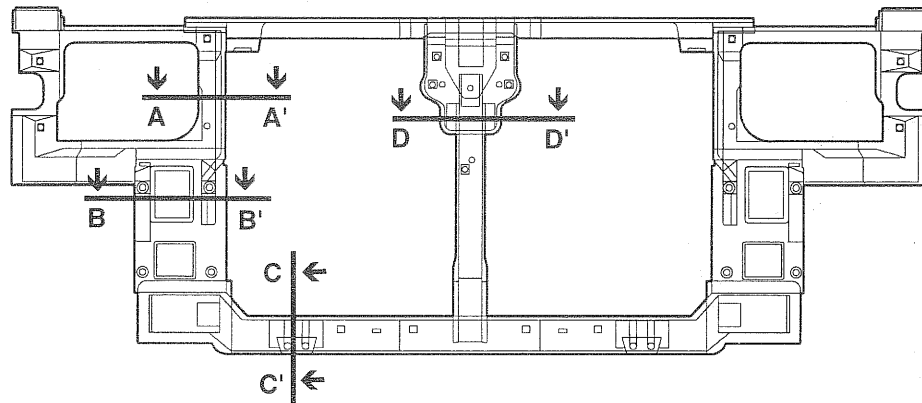


RSP1100

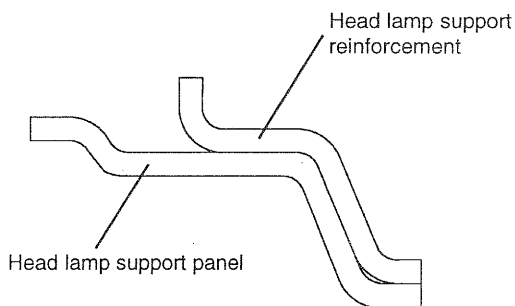 


SECTION A-A'

 RSP1101

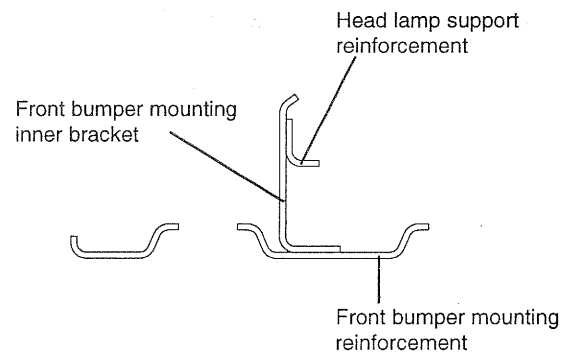


SECTION B-B'

 RSP1104

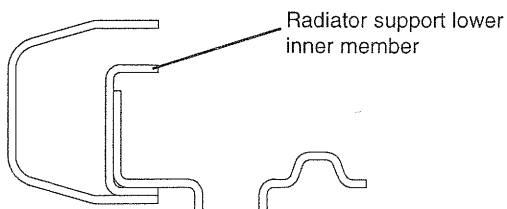

SECTION C-C'

 
RSP1103

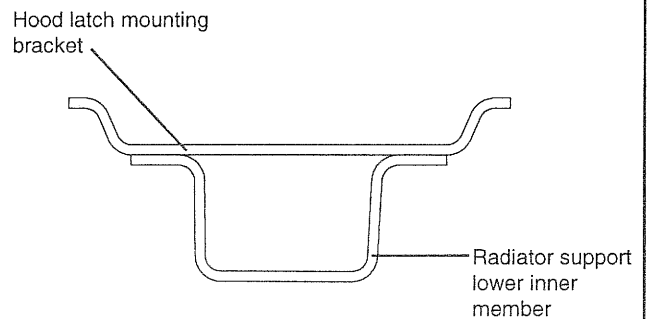


SECTION D-D'

RSP1102

 FENDER OUTER PANEL

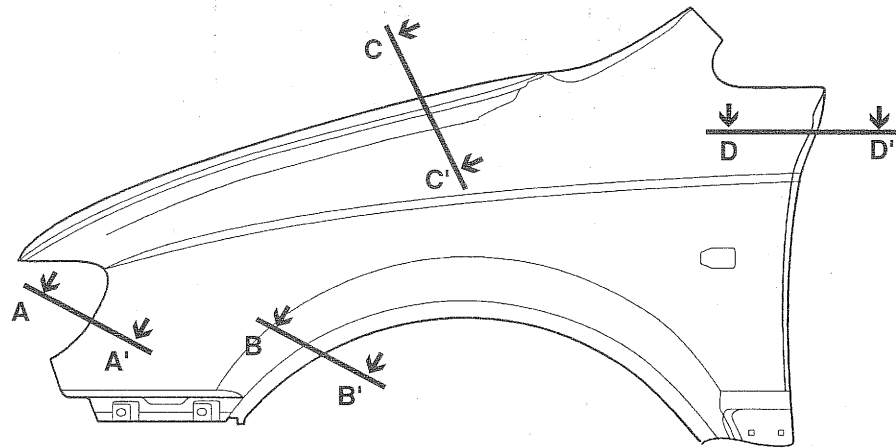


FP1100

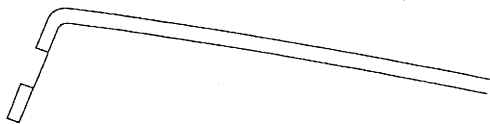 


SECTION A-A'

 FP1101

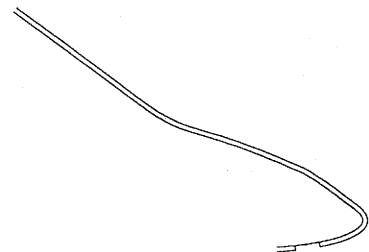


SECTION B-B'

 FP1102

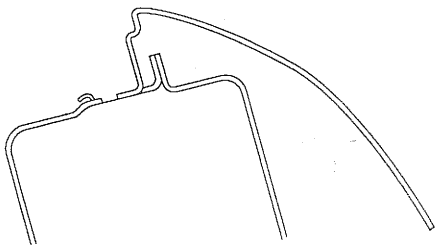

SECTION C-C'

 
FP1103

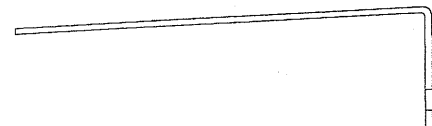


SECTION D-D'

FP1104

 FENDER AND APRON PANEL

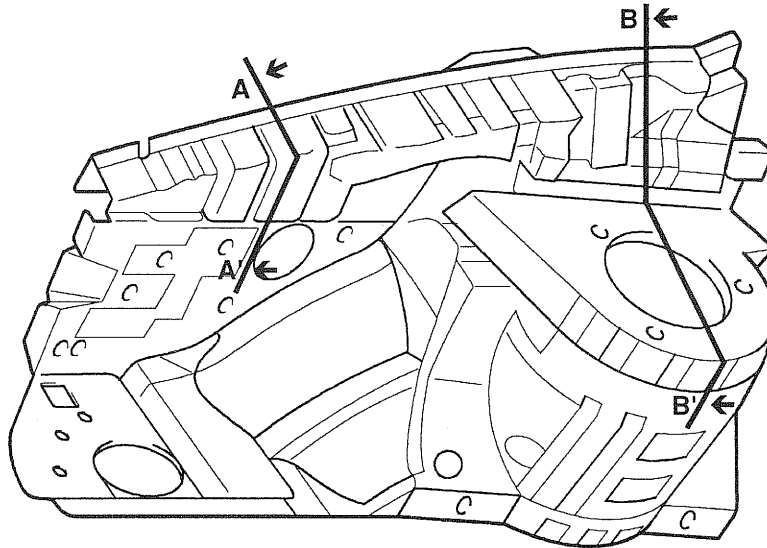


FP1100

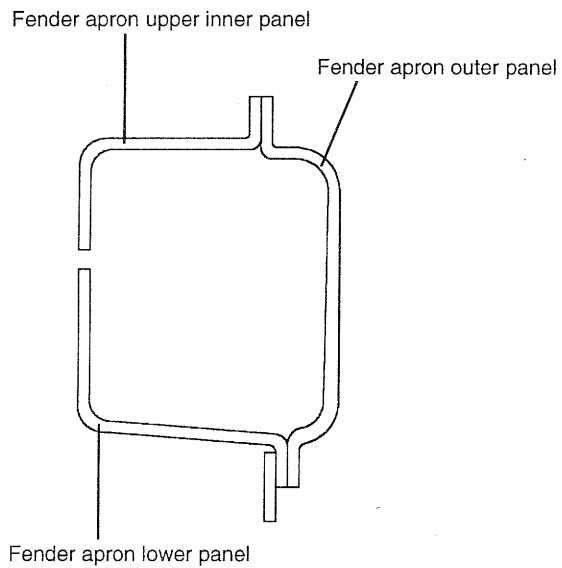 

SECTION A-A'

 
FP1101

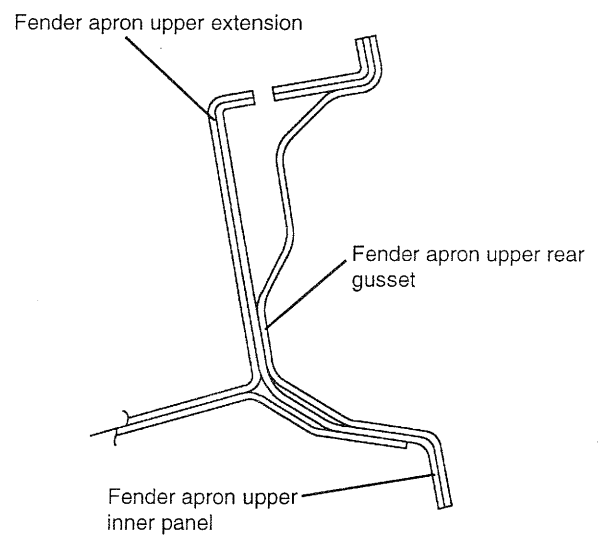


SECTION B-B'

FP1102

 FRONT SIDE MEMBER

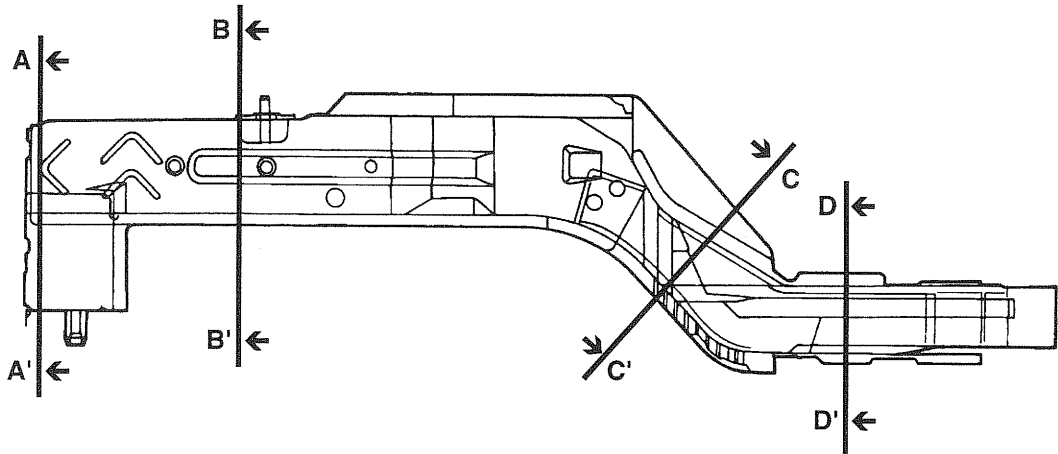


FSM1100

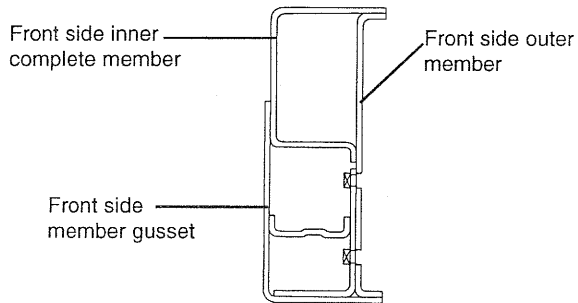 


SECTION A-A'

 FSM1101

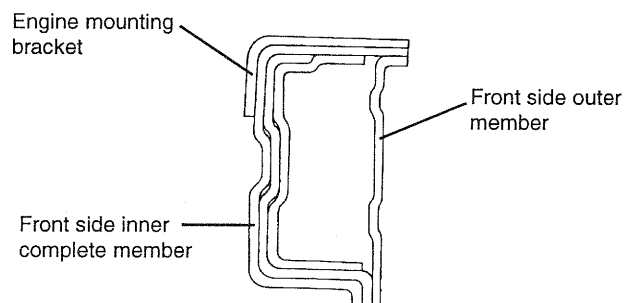


SECTION B-B'

 FSM1102

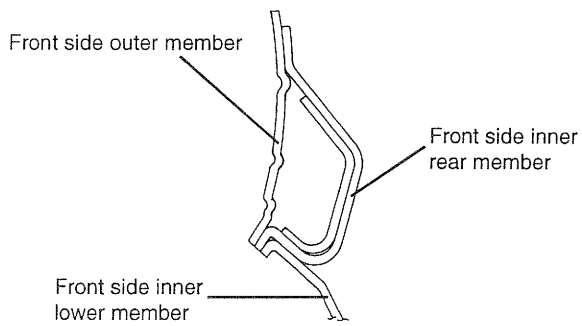

SECTION C-C'

 
FSM1103

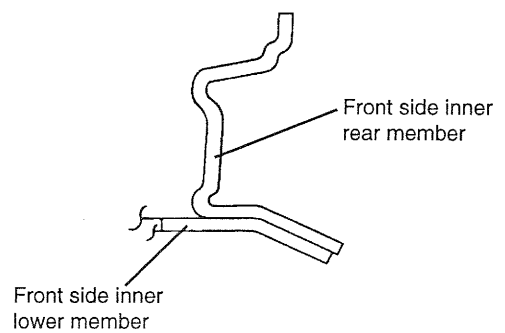


SECTION D-D'

FSM1104

 DASH PANEL

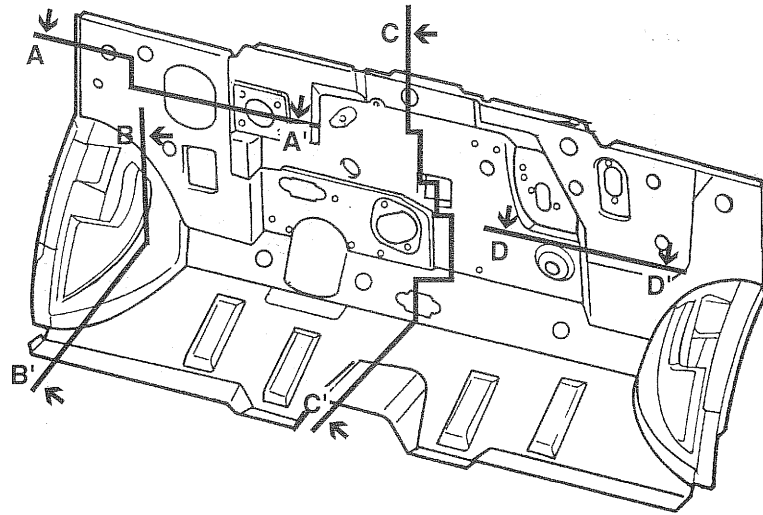


DP1100

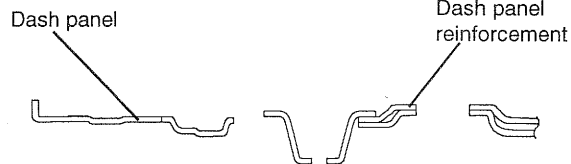 


SECTION A-A'

 DP1103

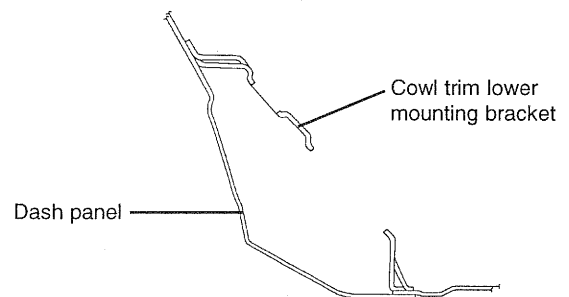


SECTION B-B'

 DP1102

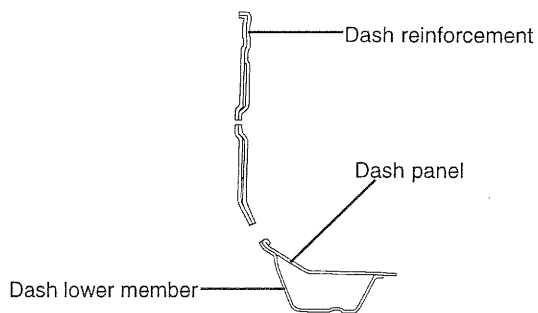

SECTION C-C'

 
DP1101

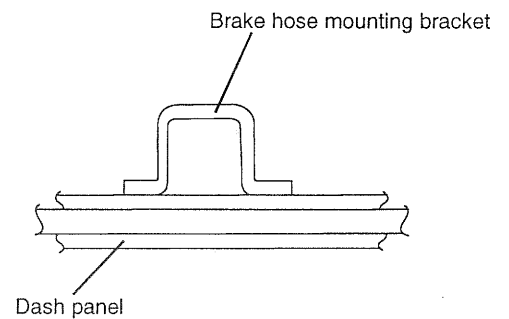

SECTION D-D'

DP1104

 COWL PANEL

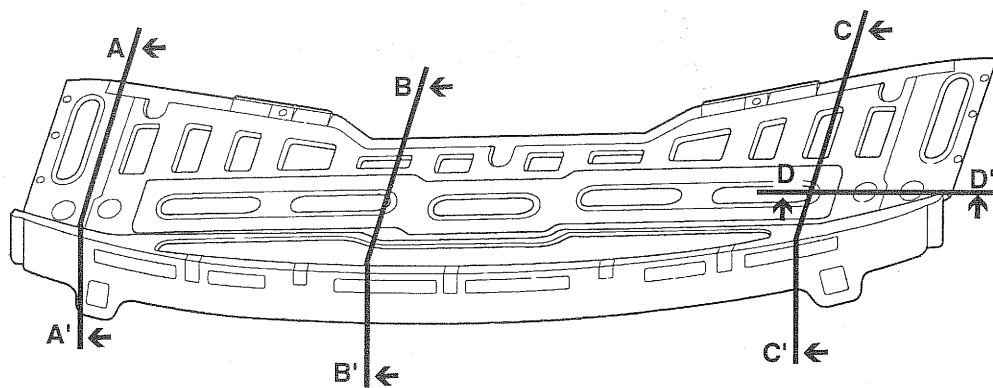

CP1100

Cowl top outer panel

Cowl inner lower panel

SECTION A-A'

CP1101

Cowl top outer panel

Dash panel

Cowl inner lower panel

SECTION B-B'

CP1102

Cowl top outer panel

Cowl inner lower panel

Dash panel

SECTION C-C'

CP1103

Cowl top outer panel


Cowl top outer side extension

Cowl inner lower panel

SECTION D-D'

CP1104

 
SIDE OUTER COMPLETE PANEL ASSEMBLY

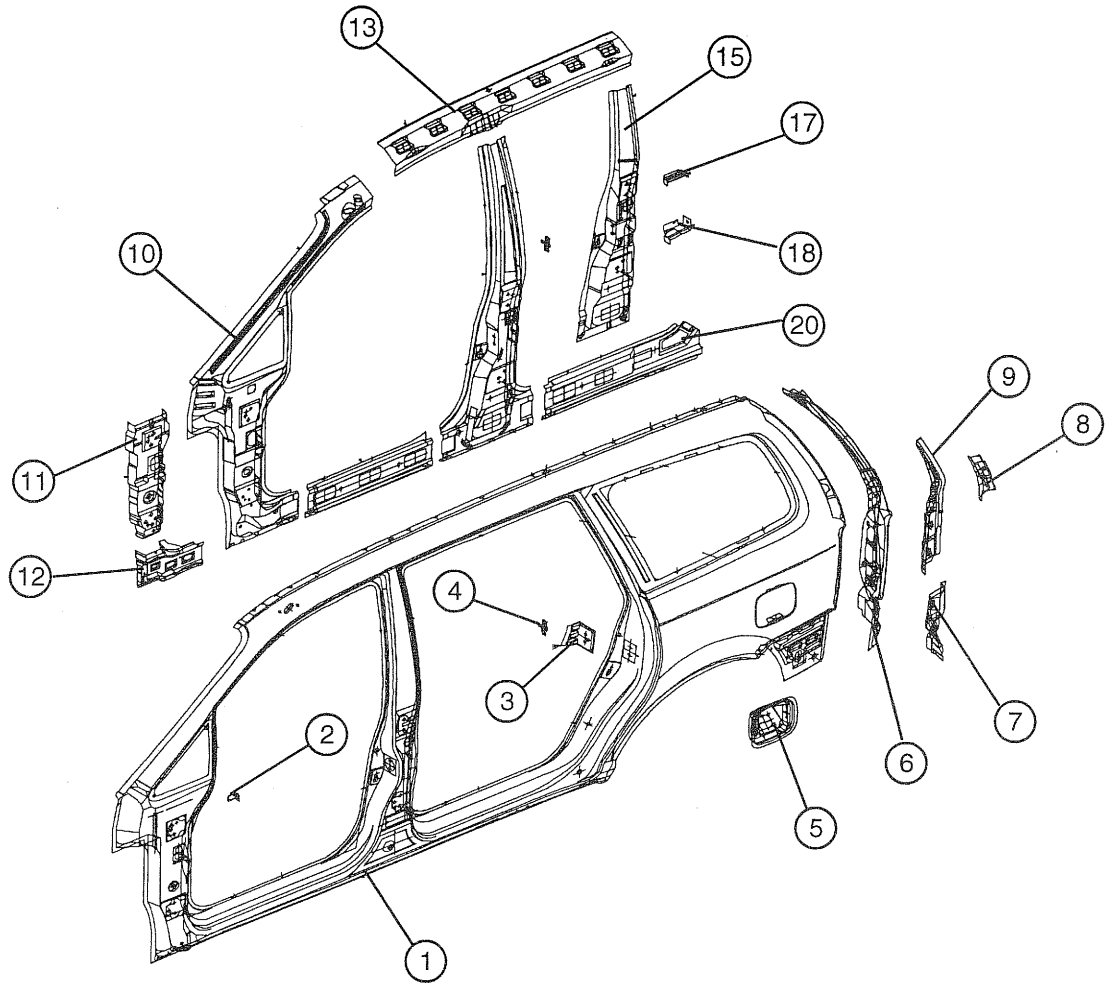

SOC-01

No.	PART NAME	No.	PART NAME
1	Side outer panel(LH/RH)	11	Front door hinge mounting reinforcement(LH/RH)
2	Fender mounting bracket(LH/RH)	12	Front pillar outer lower reinforcement(LH/RH)
3	Rear door striker ring	13	Roof side outer front rail(LH/RH)
4	Rear door striker support plate	14	Center pillar outer reinforcement(LH/RH)
5	Fuel filler housing	15	Rear door hinge mounting reinforcement(LH/RH)
6	Side outer rear filler(LH/RH)	16	Rear door striker support plate
7	Rear combination lamp housing lower reinforcement(LH/RH)	17	B pillar cross upper reinforcement
8	Tailgate gas lift mounting bracket(LH/RH)	18	B pillar cross lower reinforcement
9	Rear combination lamp housing reinforcement	19	Side sill outer front reinforcement(LH/RH)
10	Front panel outer pillar reinforcement(LH/RH)	20	Side sill outer rear reinforcement(LH/RH)

 
SIDE INNER COMPLETE PANEL ASSEMBLY

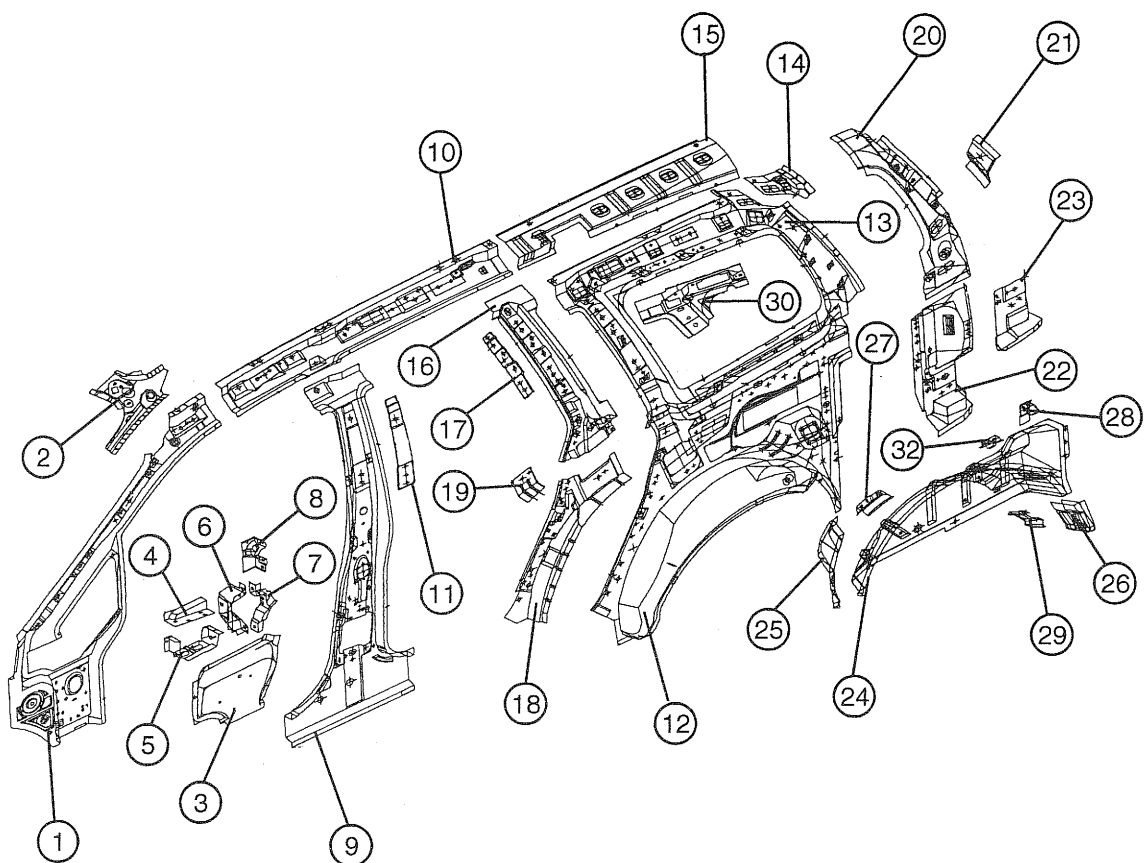


SIC-01

No.	PART NAME	No.	PART NAME
1	Front pillar inner panel(LH/RH)	16	C pillar inner upper reinforcement(LH/RH)
2	Front pillar inner upper reinforcement(LH/RH)	17	2nd seat belt mounting upper bracket(LH/RH)
3	Front pillar inner filler(LH/RH)	18	C pillar inner lower reinforcement(LH/RH)
4	Cowl side upper extension(LH/RH)	19	2nd seat belt rear mounting bracket(LH/RH)
5	Cowl side lower extension(LH/RH)	20	D pillar inner upper reinforcement(LH/RH)
6	Center cross bar mounting front bracket(LH/RH)	21	3rd seat belt mounting upper bracket(LH/RH)
7	Center cross bar mounting rear bracket(LH/RH)	22	D pillar inner lower reinforcement(LH/RH)
8	Center cross bar mounting bracket(LH/RH)	23	3rd seat belt rear mounting bracket(LH/RH)
9	Center inner pillar(LH/RH)	24	Wheel house inner panel(LH/RH)
10	Roof side inner rail(LH/RH)	25	Wheel house inner front extension(LH/RH)
11	Front seat belt upper mounting bracket(LH/RH)	26	Wheel house inner rear extension(LH/RH)
12	Quarter inner panel(LH/RH)	27	Speaker mounting front bracket(LH/RH)
13	Quarter inner upper panel(LH/RH)	28	CD changer mounting rear bracket
14	Quarter inner upper extension(LH/RH)	29	Air conditioning mounting rear bracket
15	Roof side outer rear rail(LH/RH)	30	C pillar inner upper extension(LH/RH)

 SIDE OUTER PANEL : "A" PILLAR

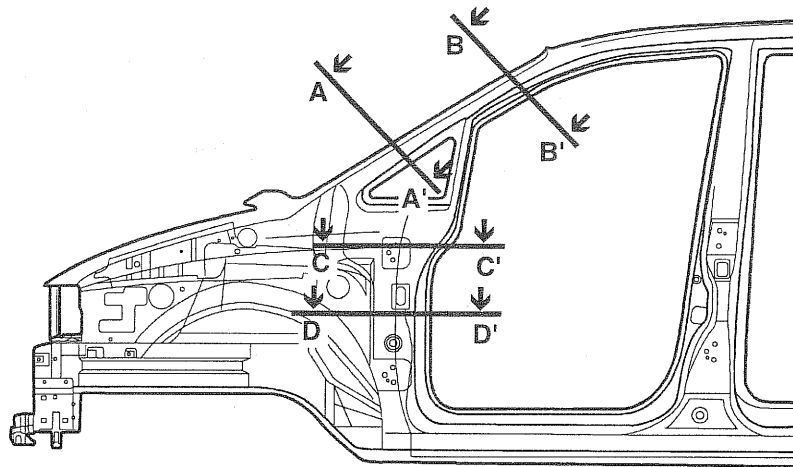


SOP1100

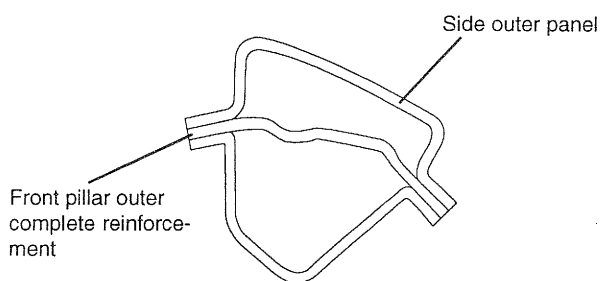 


SECTION A-A'

 SQA1101

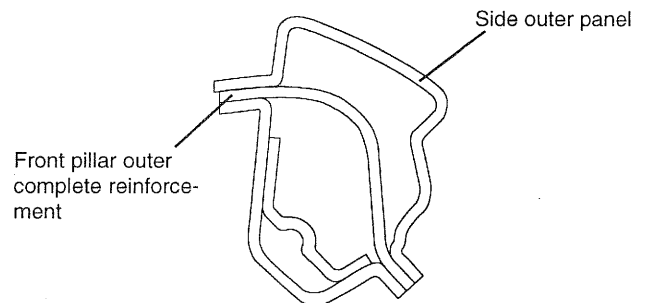


SECTION B-B'

 SQA1102

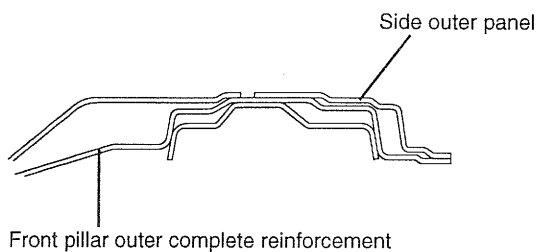

SECTION C-C'

 
SQA1103

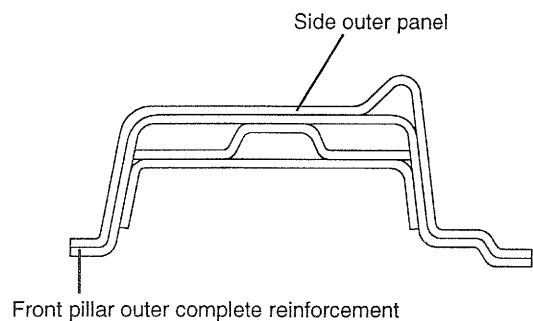


SECTION D-D'

SQA1104

 SIDE OUTER PANEL : "B" PILLAR

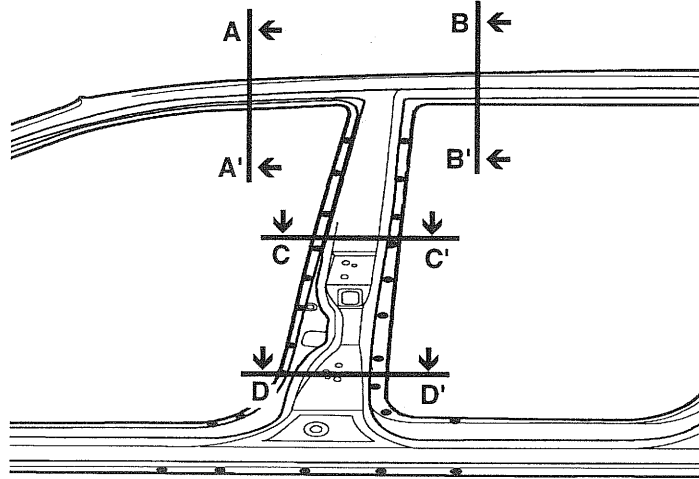


SQB1100D

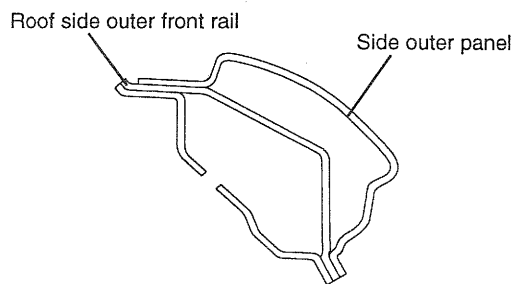 


SECTION A-A'

 SQB1101

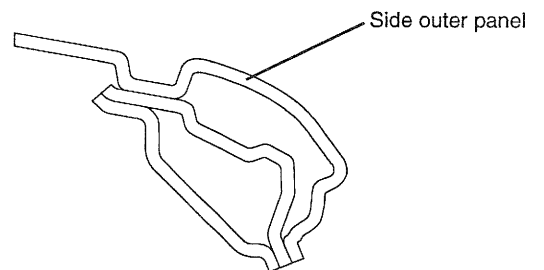


SECTION B-B'

 SQB1102

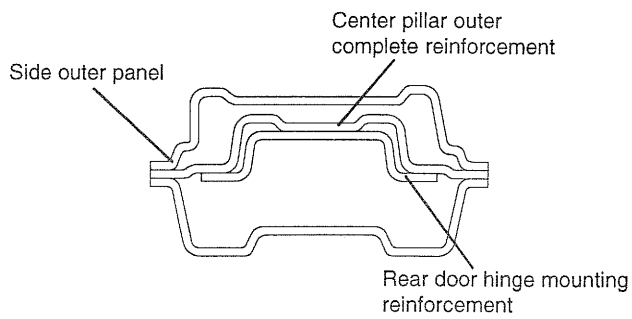

SECTION C-C'

 
SQB1103

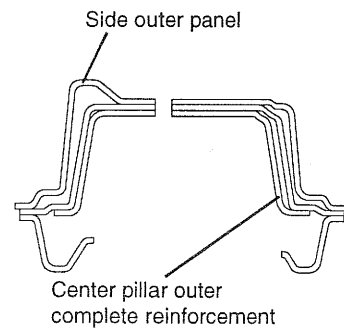


SECTION D-D'

SQB1104

 SIDE OUTER PANEL : "C" & "D" PILLAR

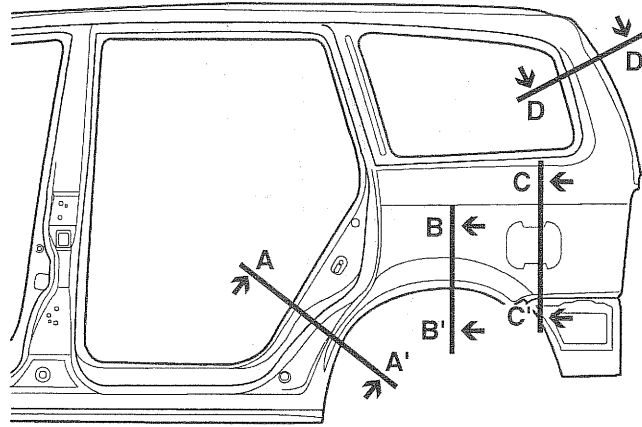


SOP1100B

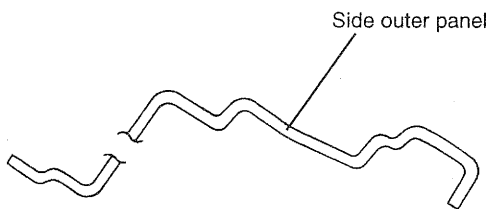 


SECTION A-A'

 SQC1101

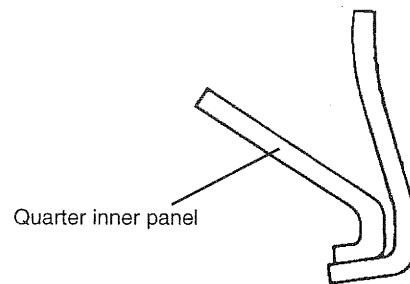


SECTION B-B'

 SQC1102

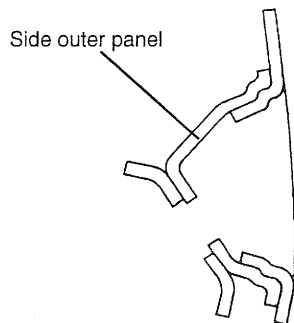

SECTION C-C'

 
SQC1103

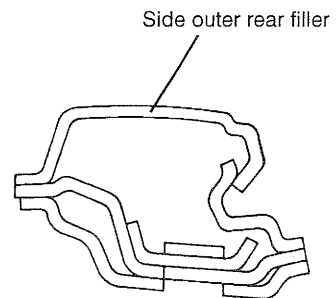


SECTION D-D'

SQC1104

 SIDE OUTER PANEL : SIDE SILL

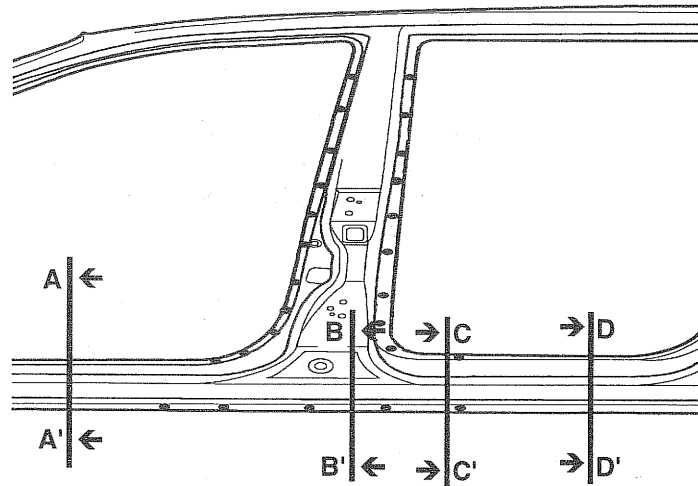


SOP1100D

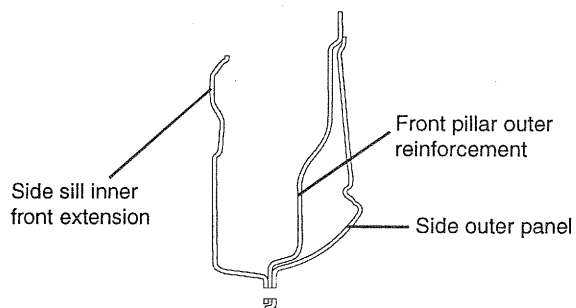 


SECTION A-A'

 SSP1101

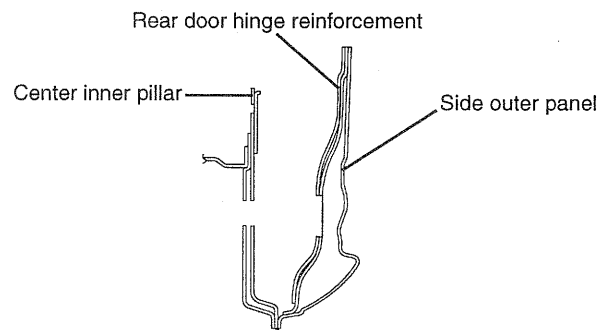


SECTION B-B'

 SSP1102

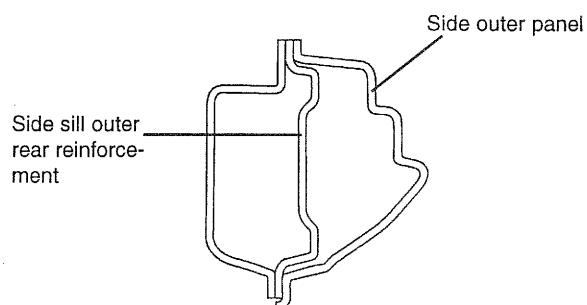

SECTION C-C'

 
SSP1103

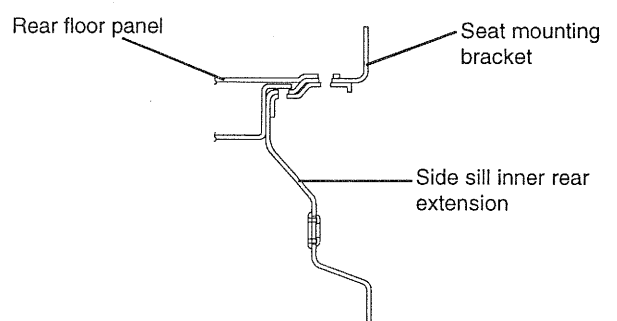

SECTION D-D'

SSP1104

 CENTER FLOOR PANEL ASSEMBLY

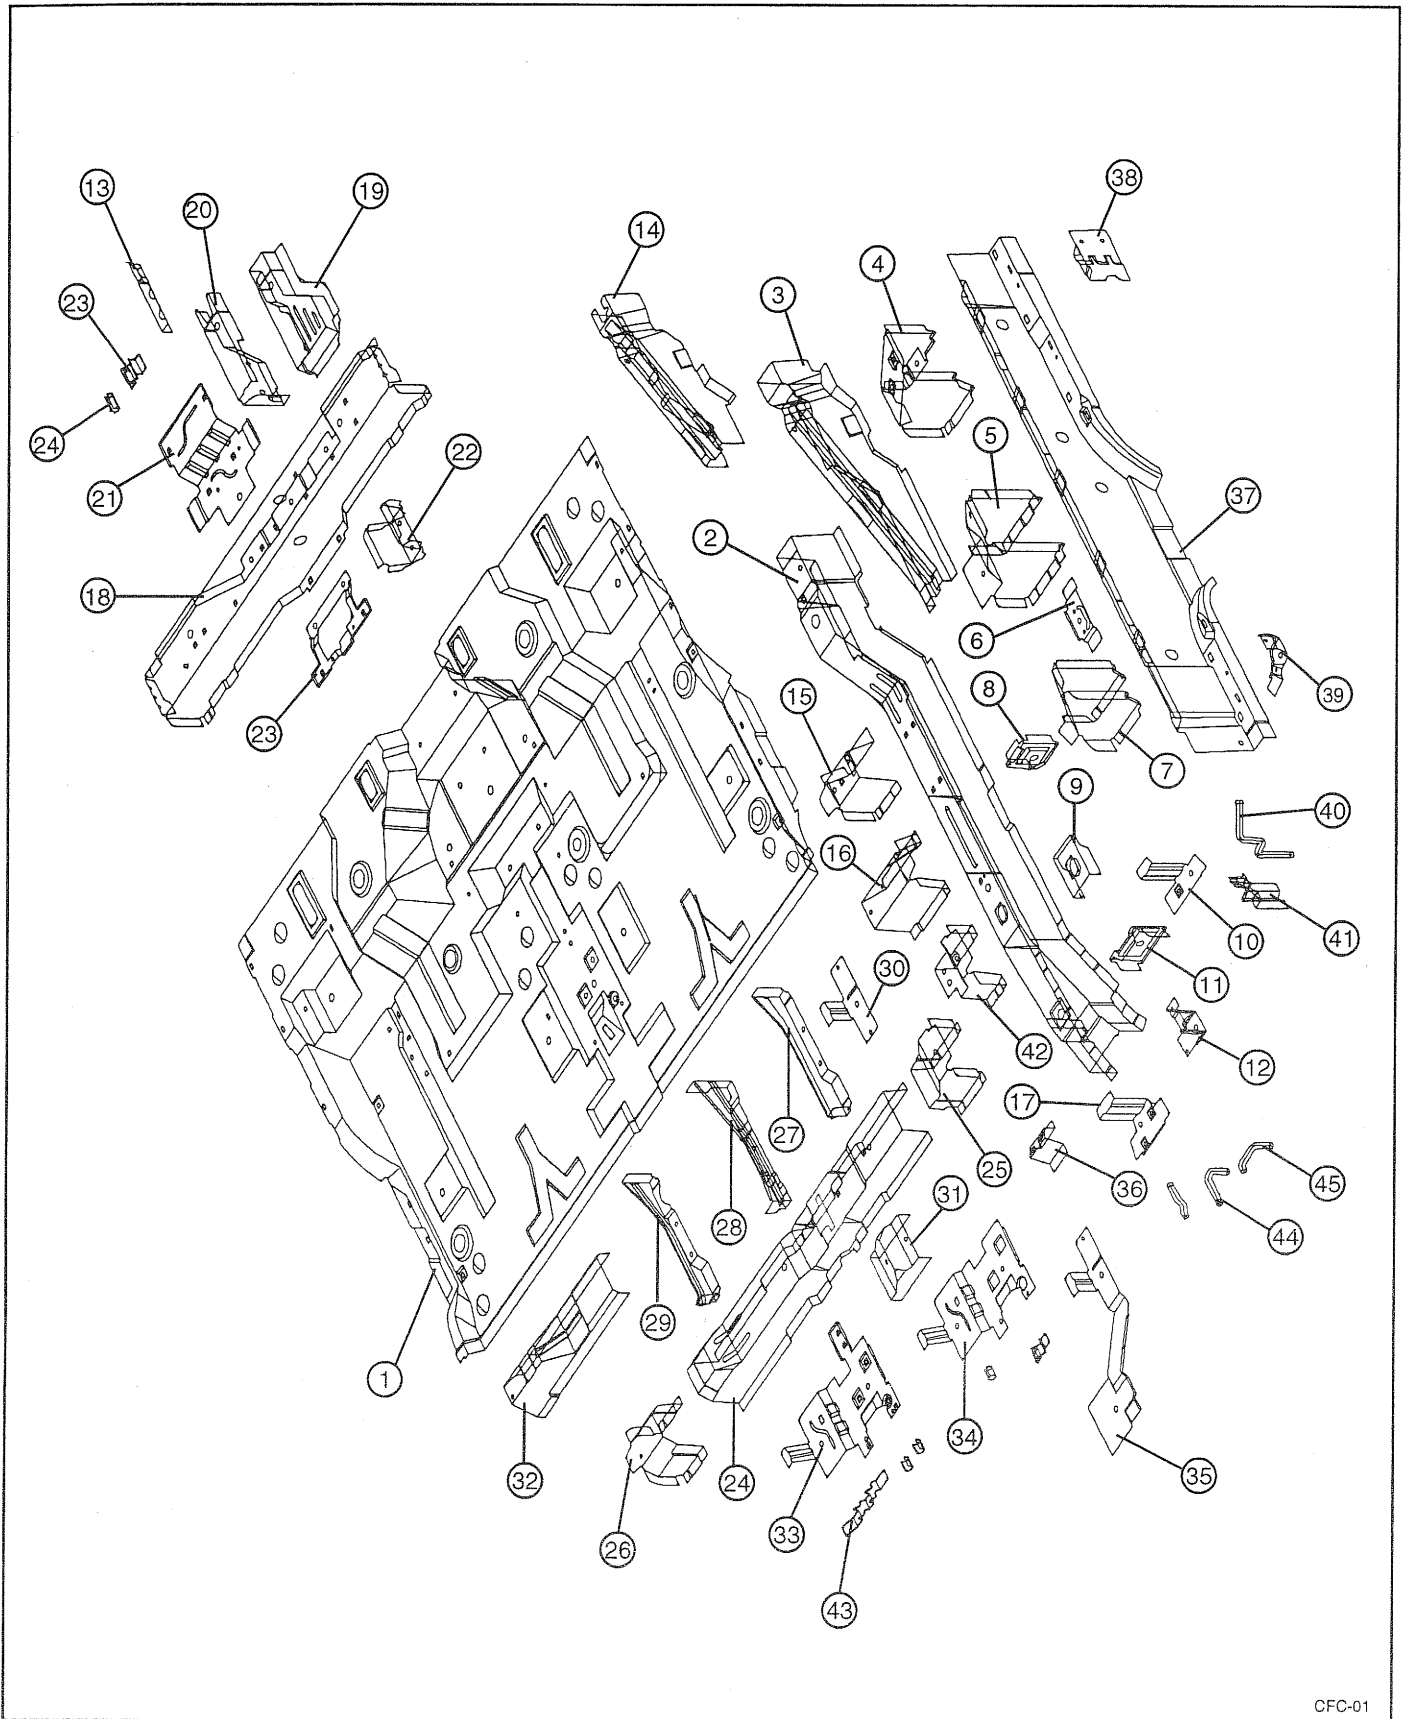


CFC-01


CENTER FLOOR PANEL ASSEMBLY

1. Center floor panel
2. Center floor side member(LH/RH)
3. Center floor side reinforcement(LH/RH)
4. Center side member front gusset(LH/RH)
5. Center side member center gusset(LH/RH)
6. Front seat mounting side bracket(LH/RH)
7. Center side member rear gusset(LH/RH)
8. Center side member front bulk head(LH/RH)
9. Rear tie down bracket(RH)
10. 2nd seat mounting side bracket(RH)
11. Center side member bulk head(LH/RH)
12. Center seat rear mounting bracket(LH/RH)
13. Center cross No. 1 gusset reinforcement(LH/RH)
14. Center side member reinforcement gusset(LH/RH)
15. Center cross No. 3 extension(LH)
16. Center cross No. 3 extension(RH)
17. 2nd seat mounting side bracket(LH/RH)
18. Center cross No. 1 member
19. Center cross No. 1 gusset(LH/RH)
20. Center cross No. 1 gusset floor(LH/RH)
21. Transmission gear shift lever mounting front reinforcement
22. Center cross No.1 reinforcement
23. Console mounting rear bracket
24. Center cross No. 2 member
25. Center cross No. 2 extension(RH)
26. Center cross No. 2 extension(LH)
27. Center cross No. 1 versus No. 2 beam(RH)
28. Center cross No. 1 versus No. 2 center beam
29. Center cross No. 1 versus No. 2 beam(LH)
30. Front seat mounting center bracket(RH)
31. Fuel tank mounting rear inner bracket
32. Center cross No. 2 reinforcement
33. Parking brake lever mounting bracket
34. Parking brake lever mounting bracket
35. Manual transaxle front seat mounting center bracket(RH)
36. Manual transaxle parking brake wire passing bracket
37. Side sill inner panel(LH/RH)
38. Side sill inner front gusset(LH/RH)
39. Center seat rear mounting outer bracket(LH/RH)
40. LPG muffler hanger center No. 2 bar(LH/RH)
41. LPG muffler hanger center No. 2 bracket
42. Center cross No. 3 extension(LH/RH)
43. LPG parking brake center bracket
44. Muffler hanger center No. 2 bar
45. Muffler hanger center No. 2 bar

 CENTER FLOOR PANEL

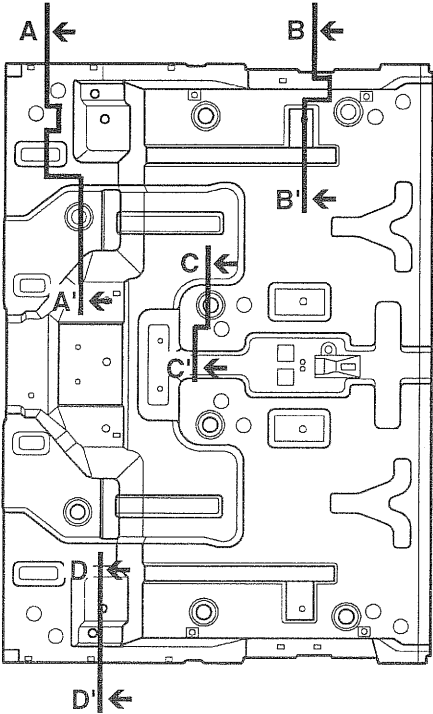


CFP1100

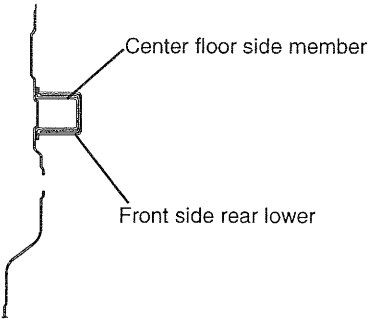 

SECTION A-A'

 CFP1101

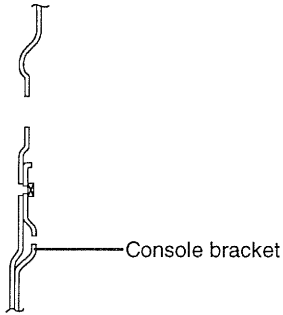

SECTION B-B'

CFP1102



SECTION C-C'


CFP1103



SECTION D-D'

CFP1104

 
REAR FLOOR PANEL ASSEMBLY

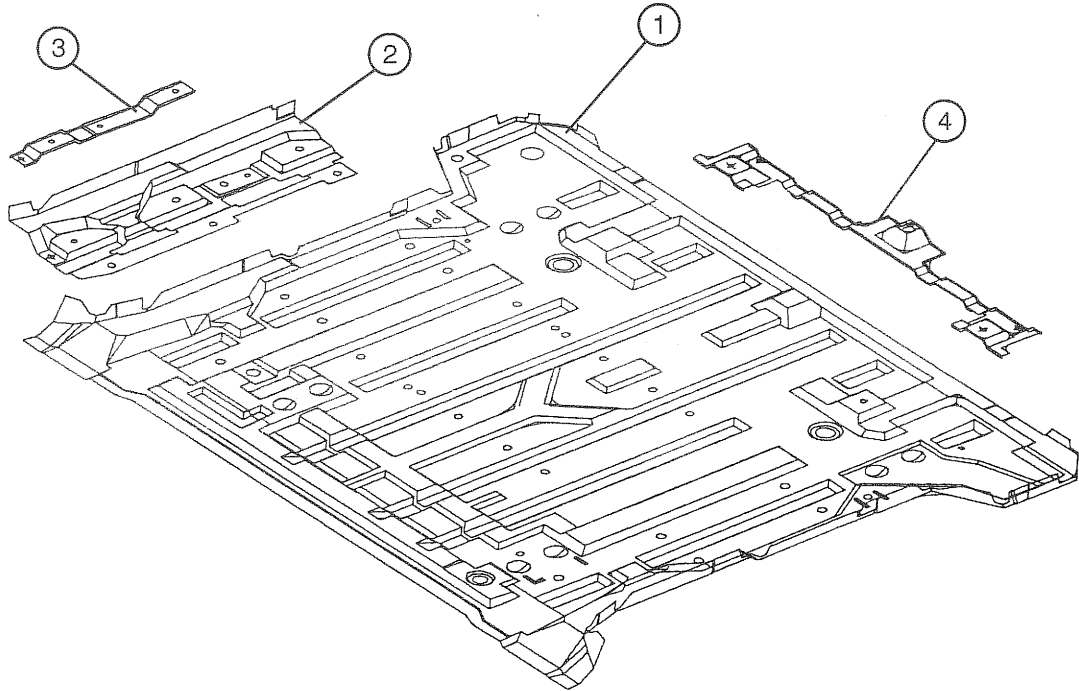


RFP-01

No.	PART NAME
1	Rear floor panel
2	Rear floor side reinforcement assembly
3	Rear seat mounting outer reinforcement assembly
4	Rear fishing seat mounting reinforcement

 REAR FLOOR PANEL

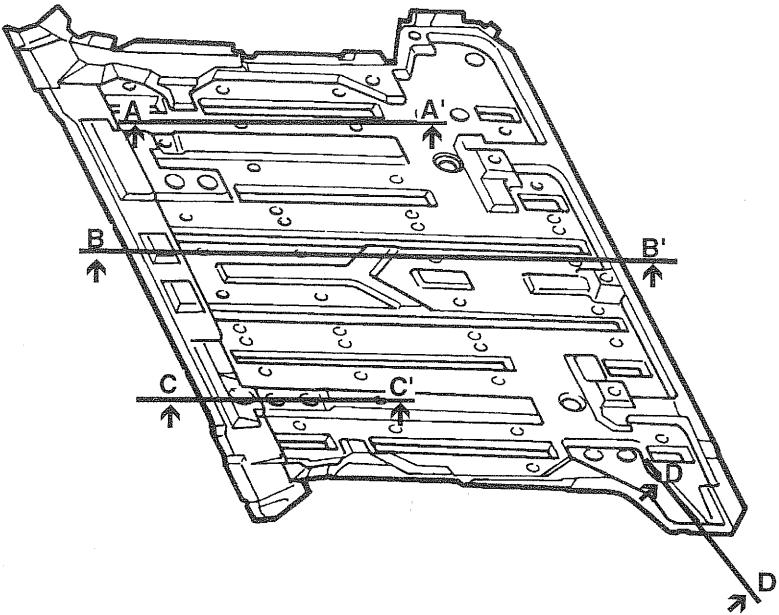


RFP1100

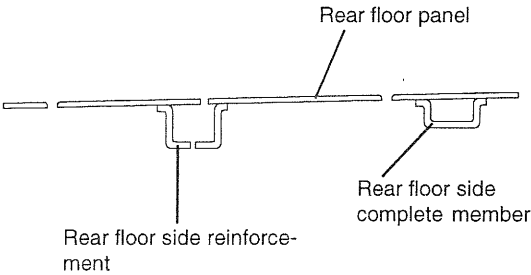 

SECTION A-A'

 RFP1101

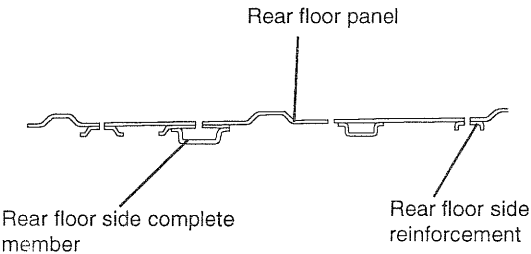

SECTION B-B'

RFP1102



SECTION C-C'


RFP1103



SECTION D-D'

RFP1104

 
REAR FLOOR & MEMBER PANEL ASSEMBLY

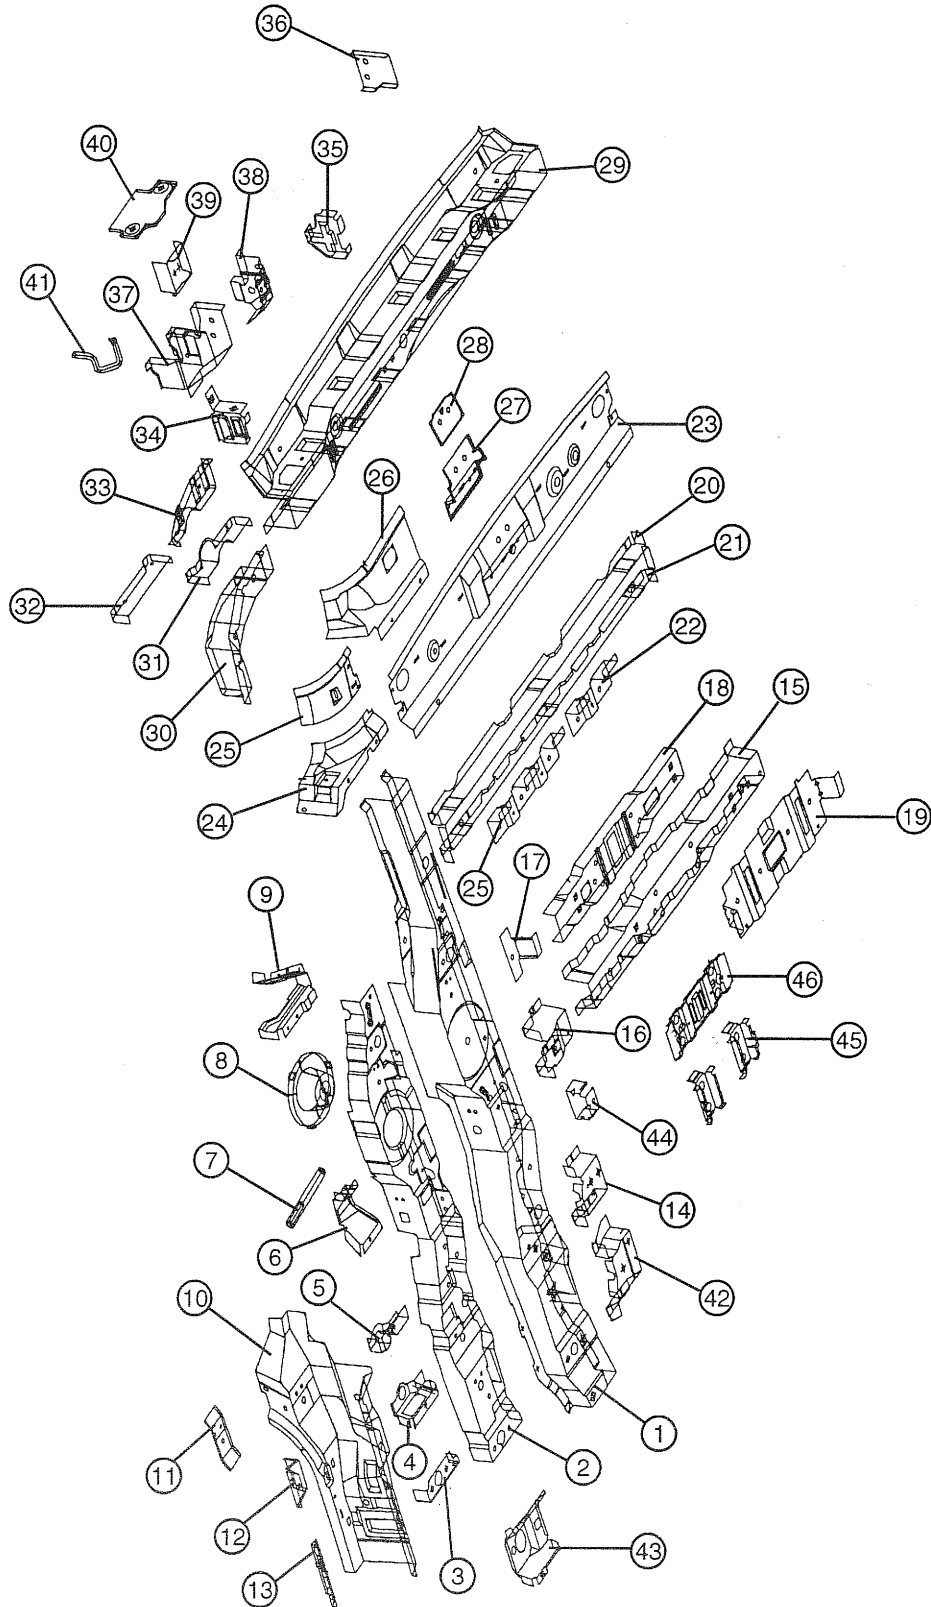


REAR FLOOR & MEMBER PANEL ASSEMBLY

1. Rear floor side member(LH/RH)
2. Rear side member reinforcement(LH/RH)
3. Cross member bush mounting(LH/RH)
4. Cross member front mounting No.2 bracket(LH/RH)
5. Cross member front mounting No.2 bracket(LH/RH)
6. Rear shock absorber mounting reinforcement(LH/RH)
7. Rear shock absorber mounting pipe nut(10T)
8. Rear spring sheet
9. Rear shock absorber mounting bulk head
10. Side sill inner rear extension(LH/RH)
11. Center seat rear side mounting bracket(LH/RH)
12. Rear bush mounting side reinforcement(LH/RH)
13. Jack up point reinforcement(LH/RH)
14. Center cross No. 4 extension(LH/RH)
15. Center cross No. 5 member
16. Center cross No. 5 extension(LH/RH)
17. 2nd seat rear mounting bracket
18. Cross member rear mounting reinforcement
19. Rear seat folding reinforcement
20. Center cross No.6 member
21. Rear seat rear mounting reinforcement(RH)
22. Rear seat rear mounting reinforcement(LH)
23. Rear end cross upper member
24. Rear end cross upper gusset(LH/RH)
25. Rear end cross upper extension(LH/RH)
26. Rear end cross upper panel(LH/RH)
27. Tail gate striker reinforcement
28. Rear gate lock bracket assembly
29. Rear end cross lower member
30. Rear end cross lower extension(LH/RH)
31. Rear end cross lower pillar(RH)
32. Rear end cross lower pillar(LH)
33. Rear end cross lower gusset(LH/RH)
34. Bulk head rear end cross(LH/RH)
35. Bulk head rear end cross(LH/RH)
36. Rear towing hook plate
37. Rear bumper mounting reinforcement(LH/RH)
38. Rear bumper mounting reinforcement(LH/RH)
39. Rear bumper mounting gusset(LH/RH)
40. Rear bumper mounting plate(LH/RH)
41. Muffer hanger mounting rear No. 2 bar
42. Center cross No. 4 extension(LH/RH)
43. Rear floor side member(LH/RH)
44. Rear side member reinforcement assembly
45. Rear bush mounting bolt
46. Bush bar nut(10T)

 
REAR FLOOR MEMBER

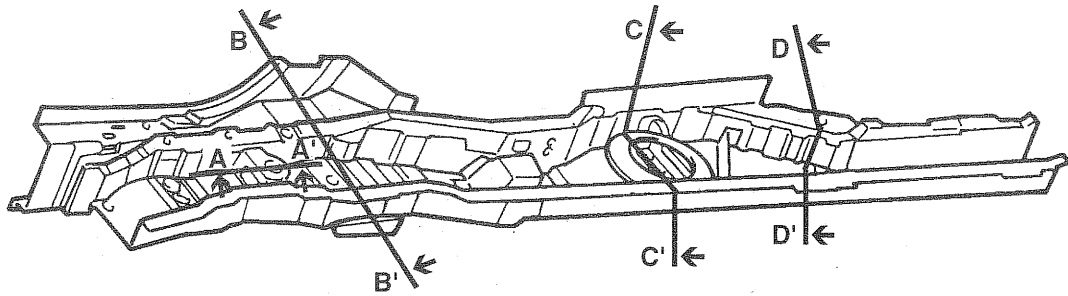

RFM1100

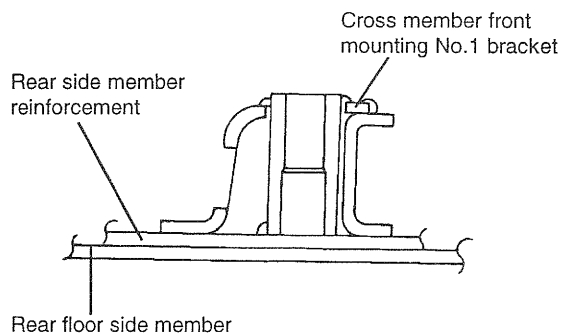 


RFM1101

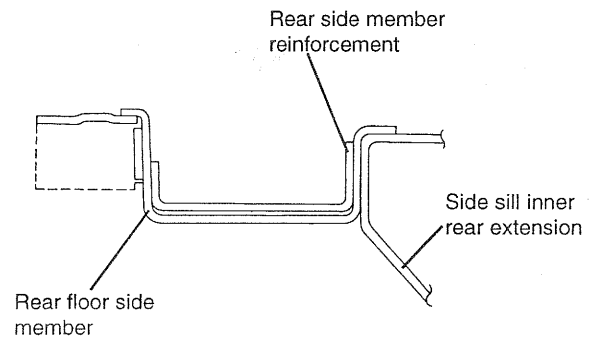 


SECTION B-B'

 RFM1102

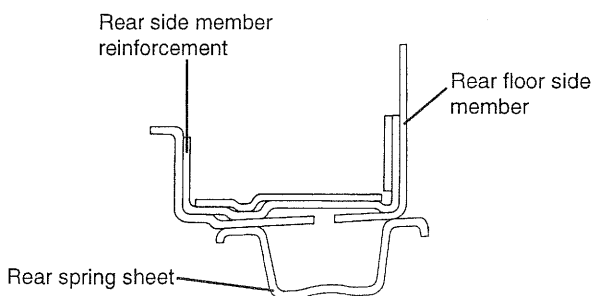

SECTION C-C'

 
RFM1103

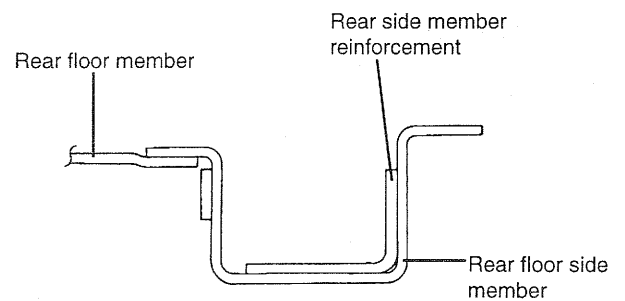

SECTION D-D'

RFM1104

 
GAS INTERM FLOOR COMPLETE PANEL ASSEMBLY

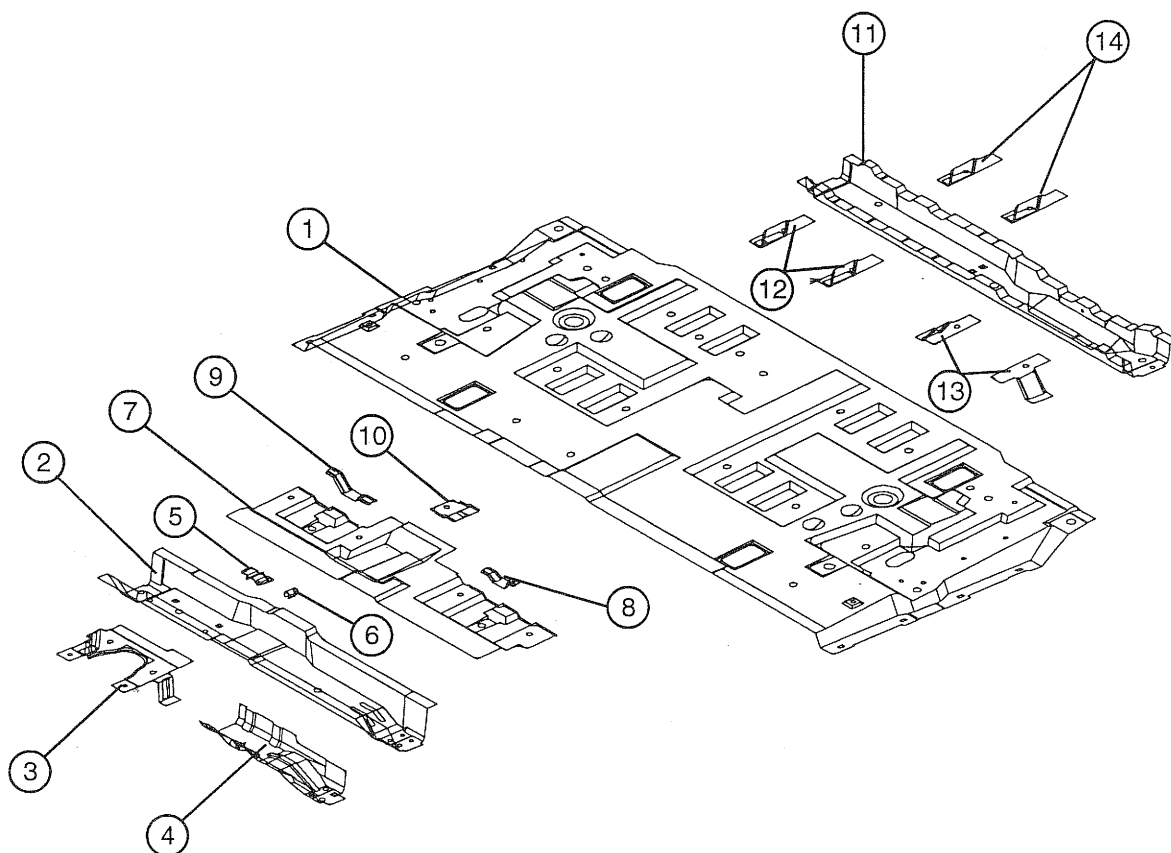

IFC-01


No.	PART NAME	No.	PART NAME
1	Gas interm floor panel	11	Center cross No. 4 member
2	Center cross No. 3 member	12	2nd seat mounting center No. 3 bracket
3	2nd seat mounting center bracket(RH)	13	2nd seat mounting No. 1 bracket(LH/RH)
4	Center cross No. 3 reinforcement	14	2nd seat mounting center No.2 bracket
5	Parking brake wire passing bracket		
6	Parking brake wire passing pipe		
7	Fuel tank mounting rear inner reinforcement		
8	Fuel tank center No. 2 protector		
9	Fuel tank center No. 3 protector		
10	Fuel tank mounting rear inner bracket		

 ROOF PANEL

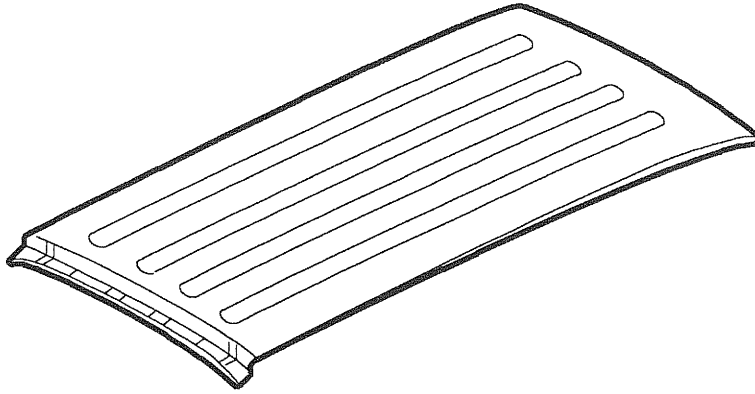

RP1100

 
ROOF PANEL ASSEMBLY

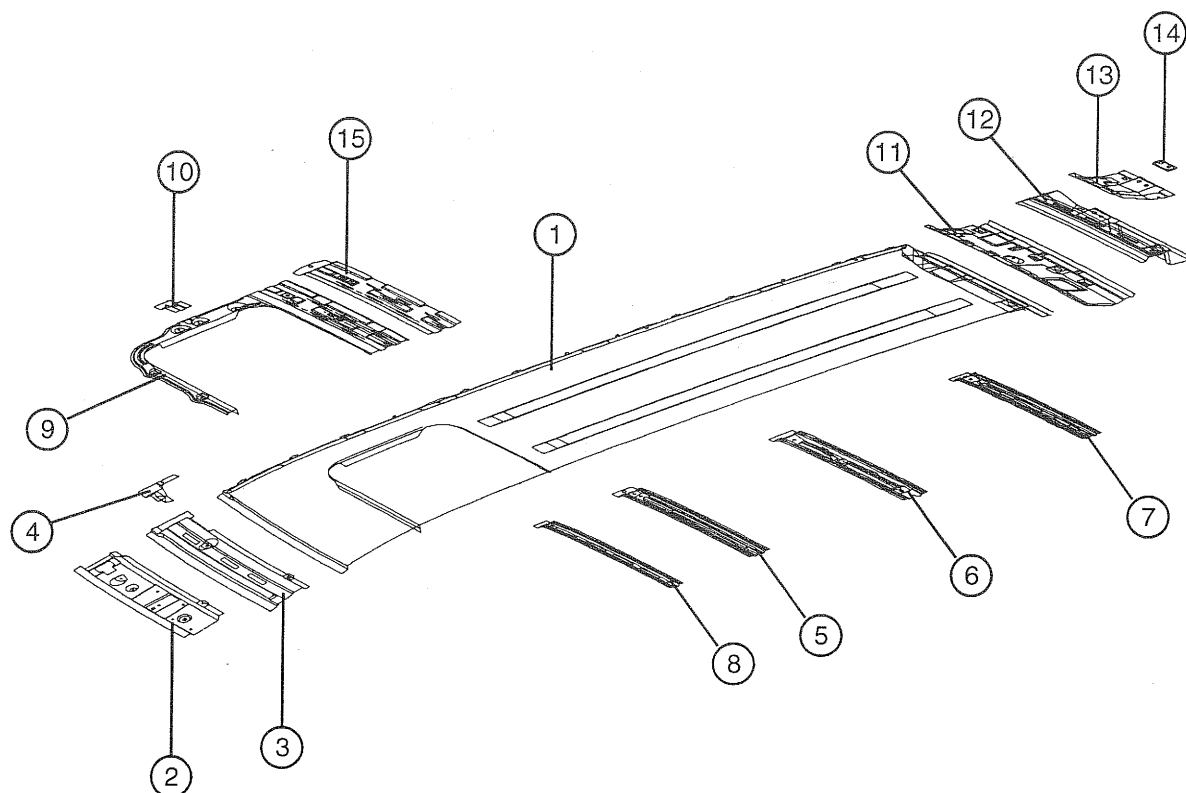

RFP-02

No.	PART NAME	No.	PART NAME
1	Roof panel	11	Roof rear upper rail
2	Roof front lower rail	12	Roof rear lower rail
3	Roof front upper rail	13	Tailgate hinge mounting reinforcement(LH/RH)
4	Roof front rail side extension(LH/RH)	14	Tailgate hinge mounting plate
5	Roof center No. 1 rail	15	Side roof rear lower reinforcement
6	Roof center No. 2 rail		
7	Roof center No. 3 rail		
8	Roof center No. 4 rail		
9	Side roof reinforcement ring		
10	Side roof ring reinforcement extension		

 
HOOD PANEL

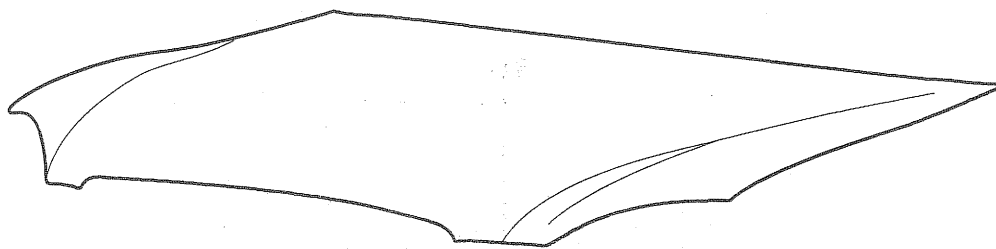


HP1100

BODY CONSTRUCTION - Tail gate

 TAIL GATE PANEL

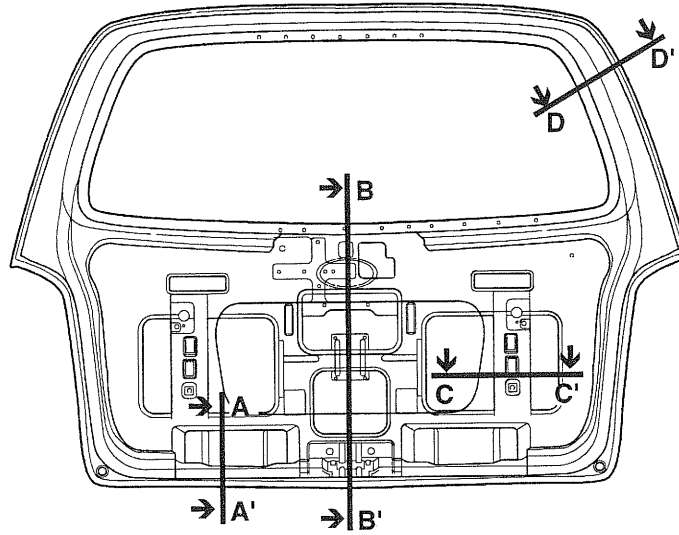


TG1100

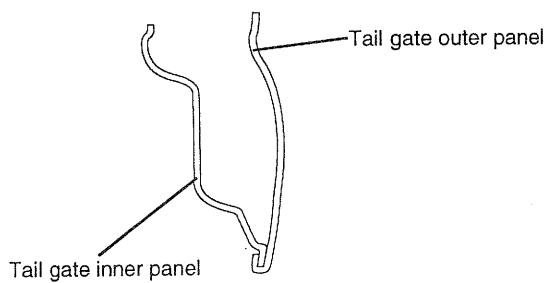 


SECTION A-A'

 TG1101

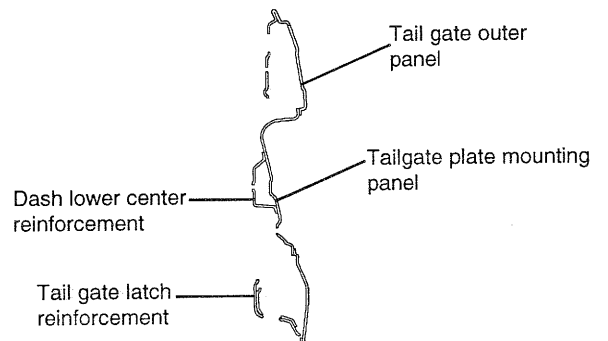


SECTION B-B'

 TG1102

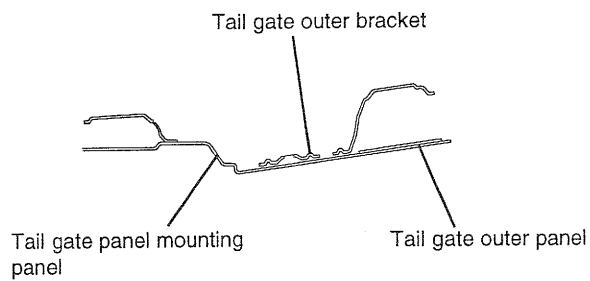

SECTION C-C'

 
TG1103

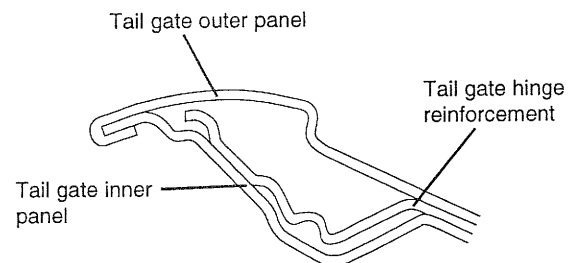


SECTION D-D'

TG1104

 
FRONT DOOR PANEL

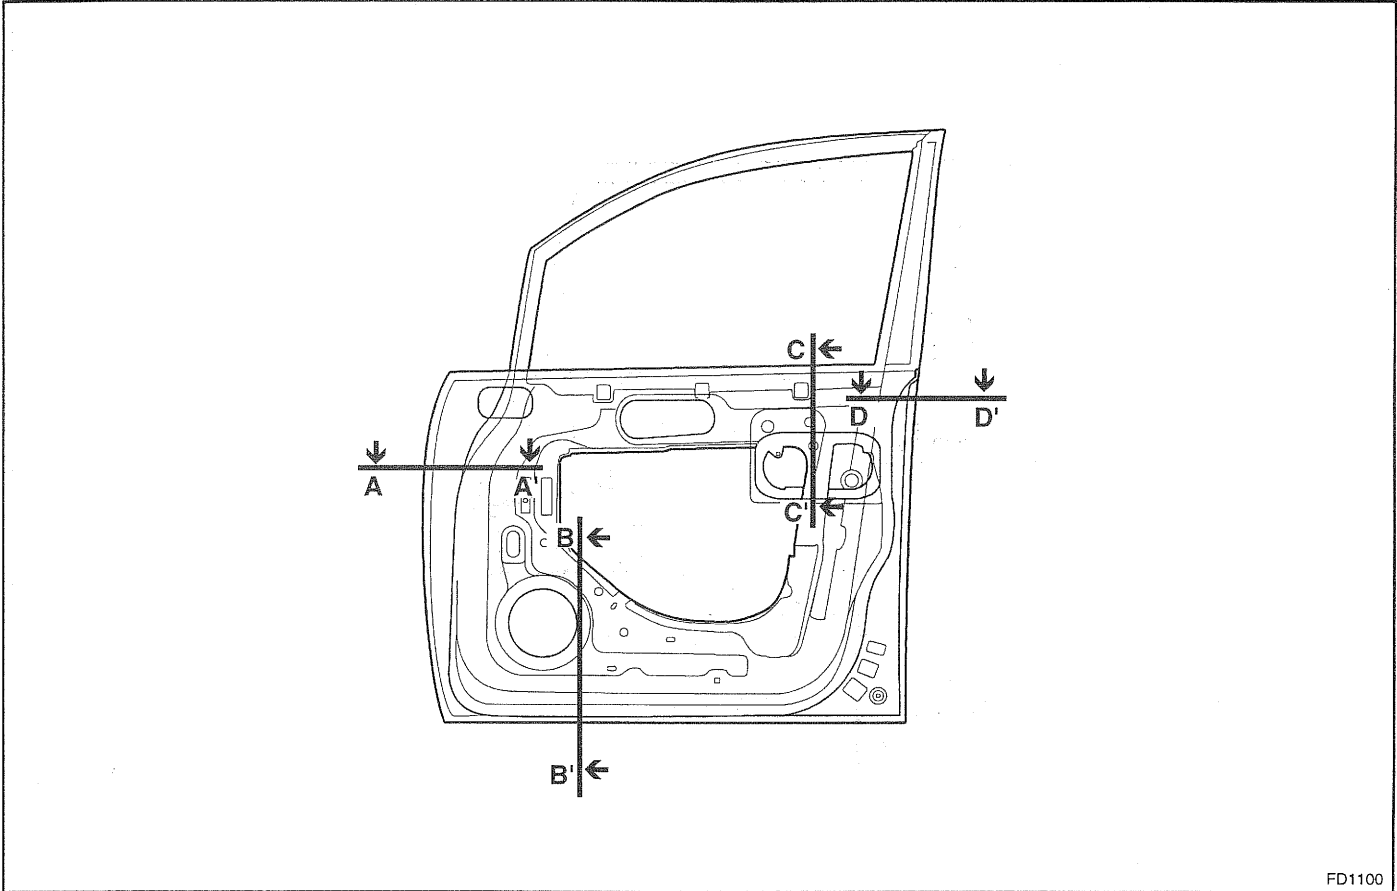


FD1100

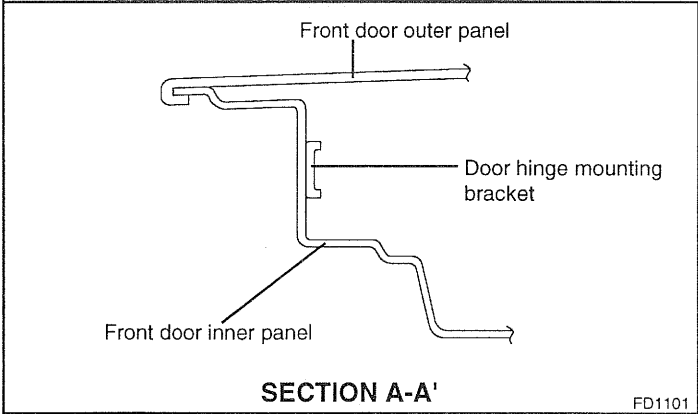 


FD1101

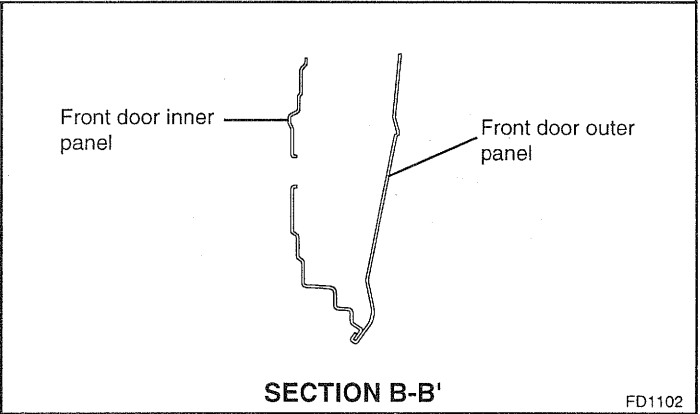 

FD1102

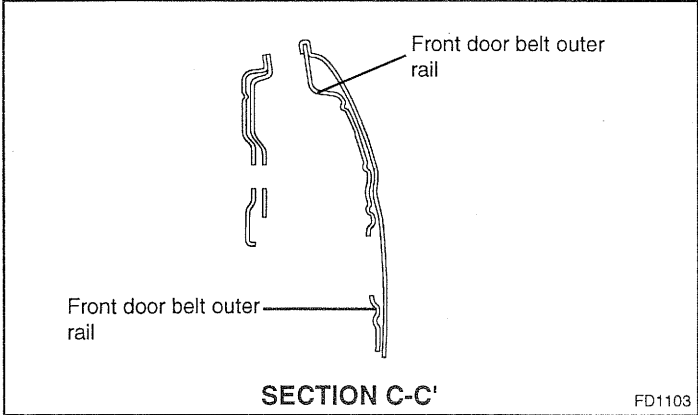 


FD1103

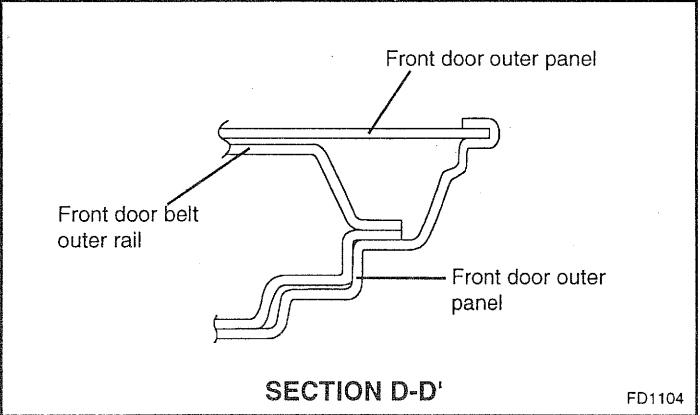 


FD1104

 REAR DOOR PANEL

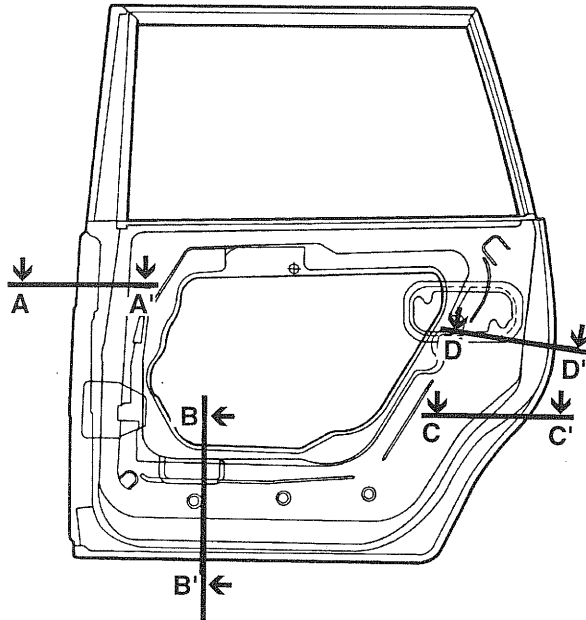


RD1100

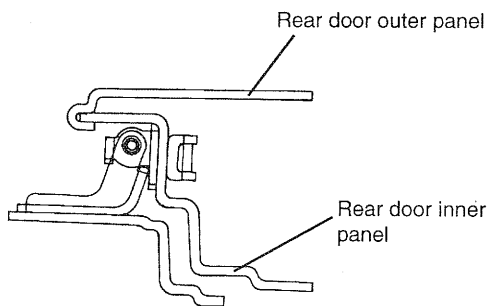 


SECTION A-A'

 RD1101

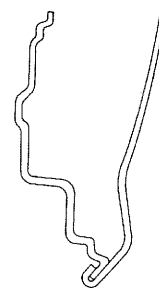


SECTION B-B'

 RD1102

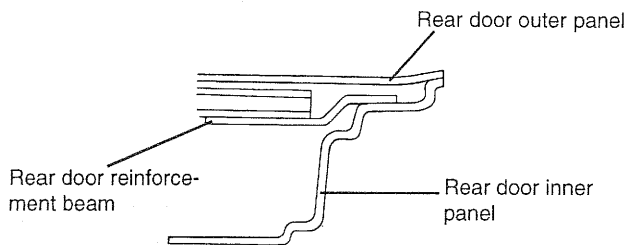

SECTION C-C'

 
RD1103

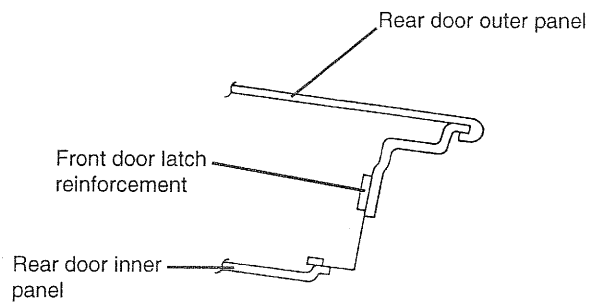


SECTION D-D'

RD1104

 FRONT CROSS MEMBER

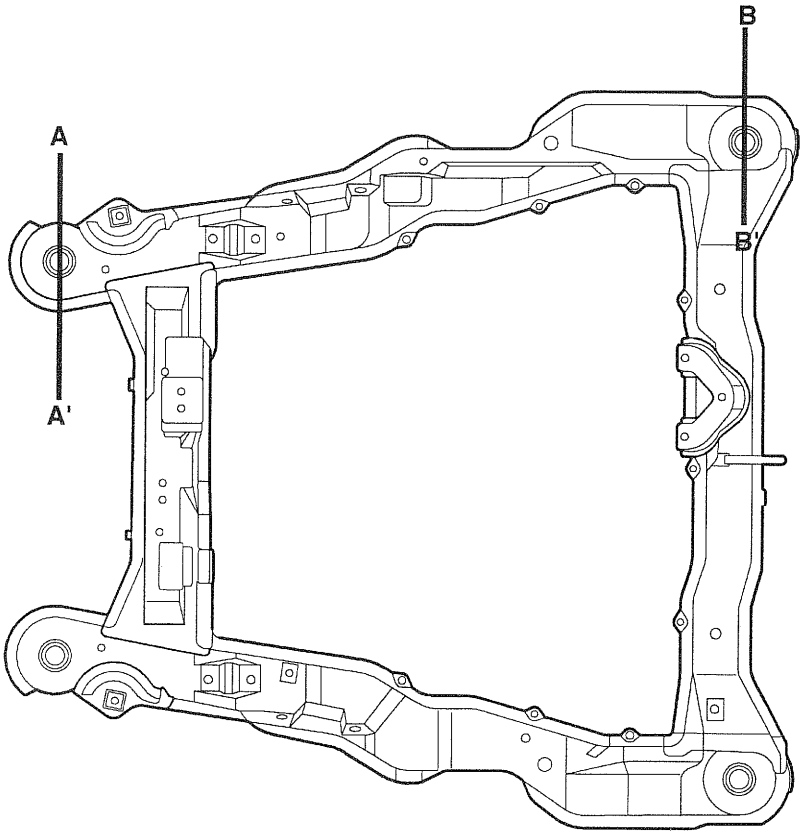


FCM1100

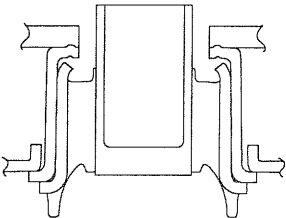 

SECTION A-A'

 FCM1101

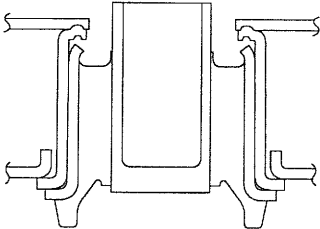

SECTION B-B'

FCM1102