

CONTENTS

GENERAL INFORMATION

GENERAL GUIDELINES AND PRECAUTIONS	6
SRS AIRBAG	7
ELECTRONIC PARTS.....	8
CORROSION PROTECTION AND SEALING	8
SIDE BODY PANELS	8
WELDING	9
SAFETY FACTORS.....	9

BODY CONSTRUCTION

BODY COMPONENTS	12
FRONT END STRUCTURE.....	18
FRONT BODY	20
SIDE BODY	26
FLOOR	32
ROOF.....	41
HOOD.....	43
TAIL GATE.....	44
DOOR.....	45
FRONT CROSS MEMBER.....	47

BODY DIMENSIONS

GENERAL	50
SIDE BODY	51
INTERIOR	54
UPPER BODY	56
UNDER BODY	58
FRONT BODY.....	60
REAR BODY.....	62

BODY PANEL REPAIR PROCEDURE.

FENDER APRON AND FRONT SIDE MEMBER (ASSEMBLY)	66
FRONT PILLAR	73
CENTER PILLAR	80
QUARTER PANEL	86
REAR FLOOR	89
GAS INTERM FLOOR.....	93
FRONT AND REAR DOOR OUTER PANELS	97

BODY SEALING LOCATIONS

FLOOR , UPPER & SIDE BODY.....	102
--------------------------------	-----

CORROSION PROTECTION

ZINC-GALVANIZED STEEL PANELS	106
ZINC-PHOSPHATE COAT & CATIONIC ELECTRODEPOSITION PRIMER	108
ANTI-CORROSION PRIMER.....	109
UNDER BODY COAT (FLOOR).....	110
UNDER BODY COAT(SIDE BODY)	111
CAVITY WAX INJECTION	113
UNDER BODY ANTI-CORROSION AGENT	116