





8. Remove the pinion from the gear housing by tapping it lightly.

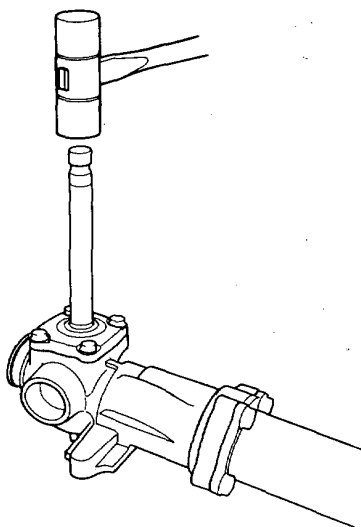


9. Check the pinion lower ball bearing for play; if it is good and the grease in it is clean, go on step 10. If the bearing is noisy or has excessive play, replace the bearing.


- Remove the 12 mm snap ring.

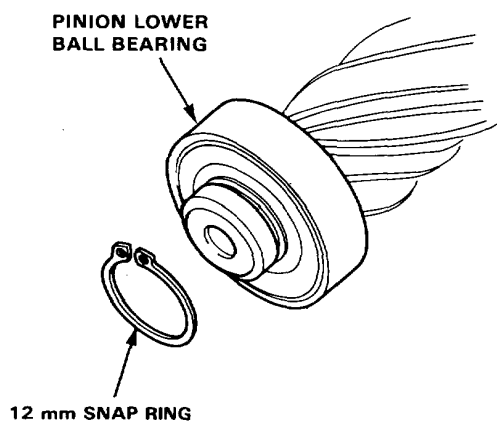

- Remove the bearing using a commercially available bearing pulley.

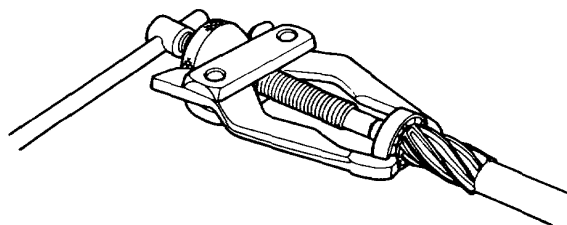

- Using a press, install the lower bearing on the pinion, with its shielded side facing down.

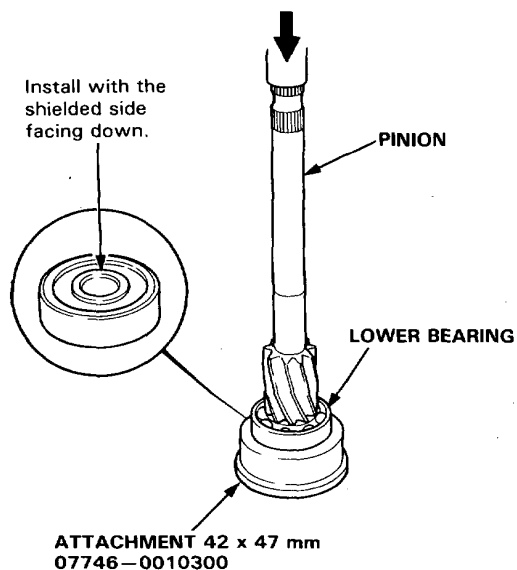


(cont'd)


Steering Gearbox

Overhaul (2WS) (cont'd)


- Apply grease to the lower ball bearing and check for smooth operation. Install the 12 mm snap ring.

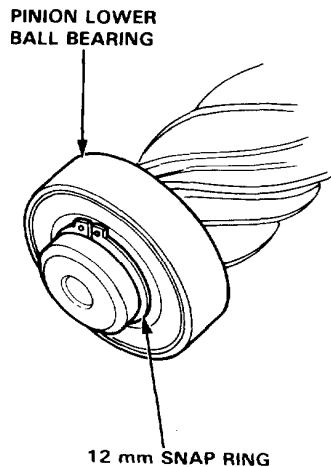


10. Remove the four bolts from the end of the cylinder housing, then slide the housing off the rack.
11. Remove the cylinder housing.

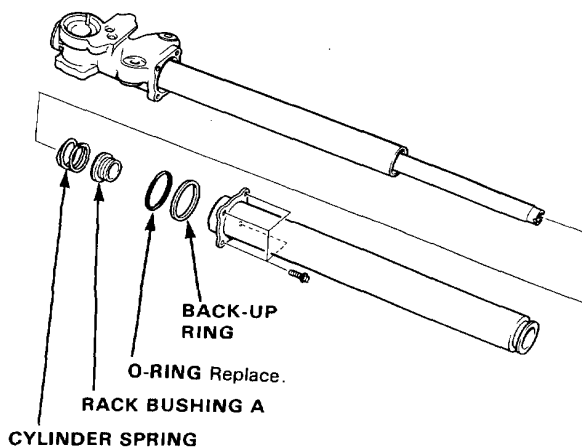

12. Remove the O-ring, back-up ring, steering rack bushing A and cylinder spring.
13. Remove the cylinder end seal from the cylinder housing.
14. Use your fingers or a wooden stick to avoid damaging the housing.

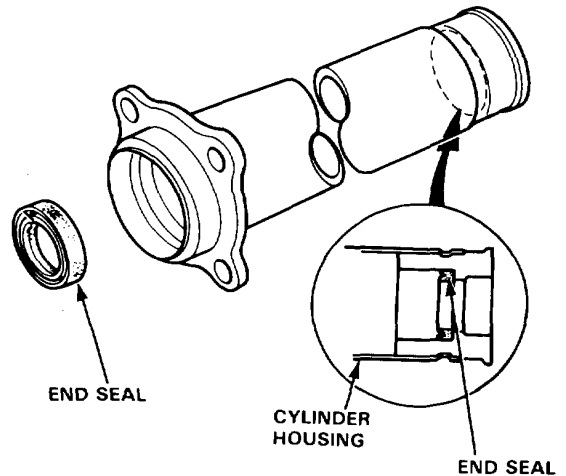


15. Remove the cylinder, cylinder seal retainer, cylinder cap and steering rack from the gear housing.

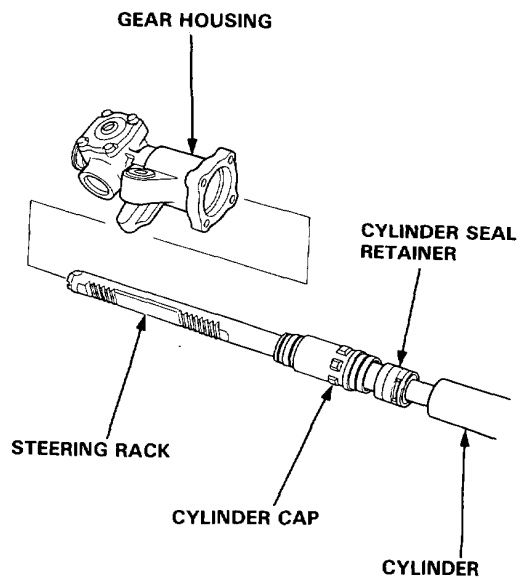




16. Remove the retainer washer from the gear housing.

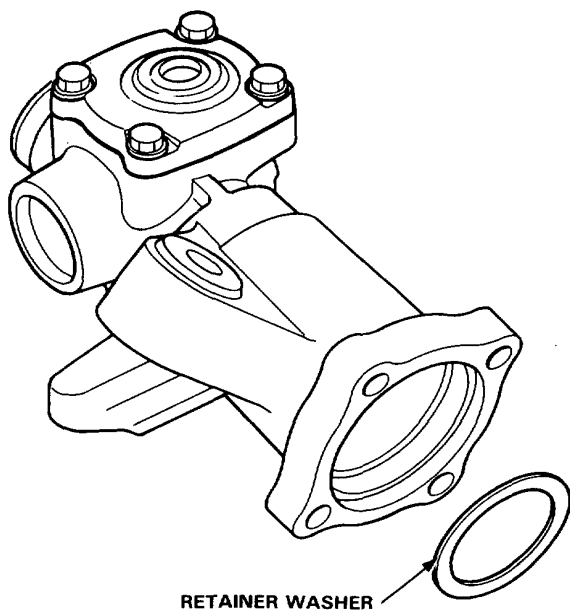

17. Remove the gear housing cap from the gear housing by removing the four 6 mm flange bolts.

18. Remove the steering pinion seal from the gear housing cap.

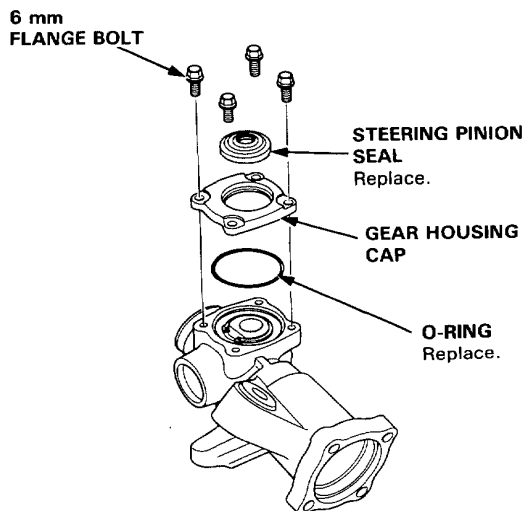


19. Remove the O-ring from the gear housing.


20. Check the upper bearing for free movement and excessive play; if it is good and the grease in it is clean, go on step 21.

If it is damaged, or if dirt has gone past the seal into the grease, replace the bearing.

- Remove the 30 mm snap ring from the pinion holder.

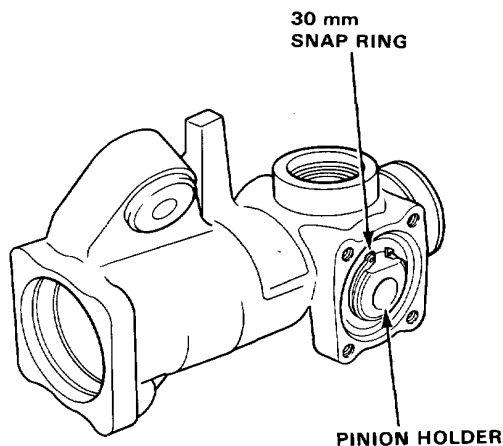

- Remove the pinion holder from the gear housing.

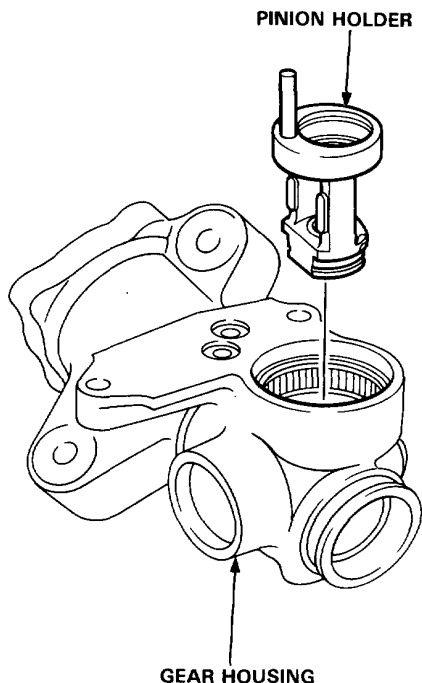


(cont'd)


Steering Gearbox

Overhaul (2WS) (cont'd)


- Remove the pinion upper ball bearing from the gear housing.

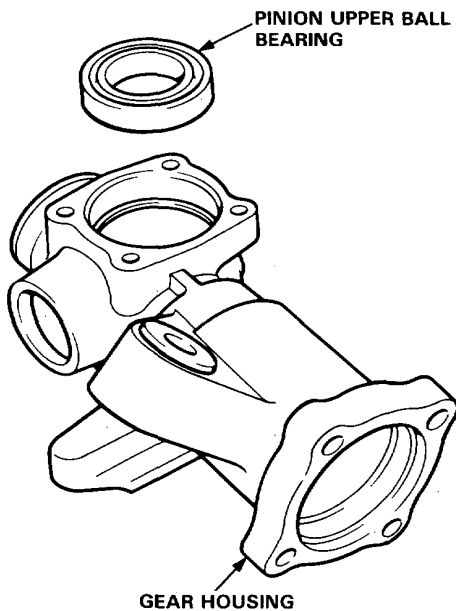


- Check the needle roller bearing in the pinion holder and in the gear housing for damage; if they are OK, pack them with grease. If the bearings are damaged, replace them as a set.

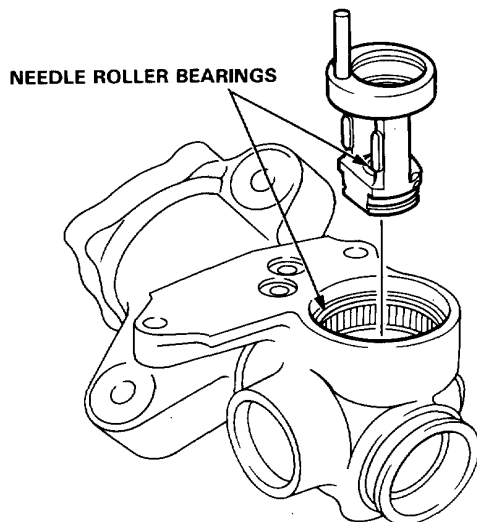

- Pack a new upper bearing with grease, then drive the bearing into the gear housing with its sealed side facing out.

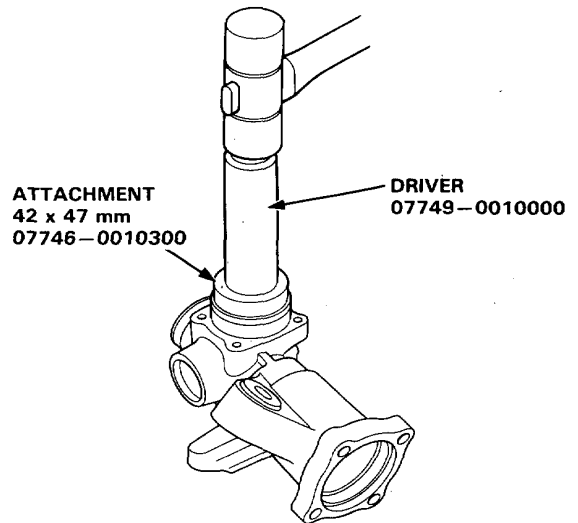


- Install the pinion holder in the gear housing.

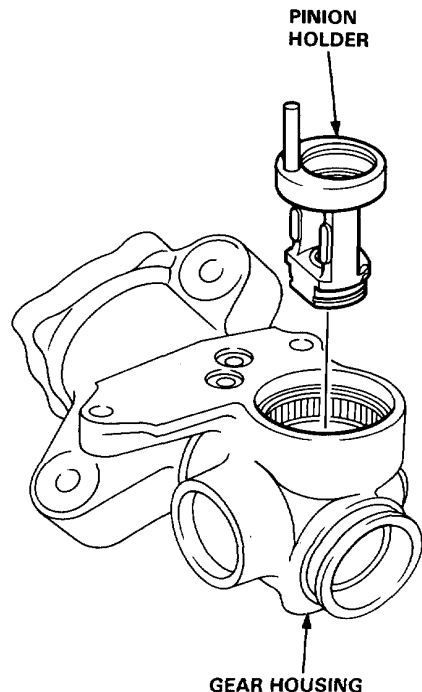




- Reinstall the 30 mm snap ring with its tapered side facing out.

NOTE: Snap ring ends must be aligned with the flat area.

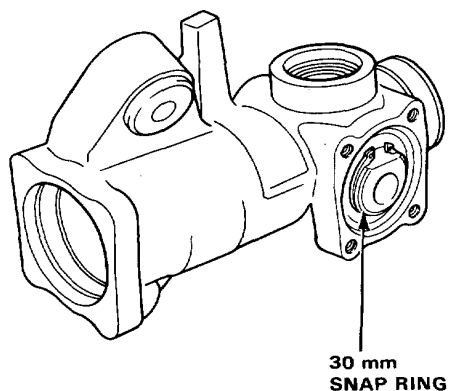


21. Remove the cylinder and seal retainer from the steering rack.

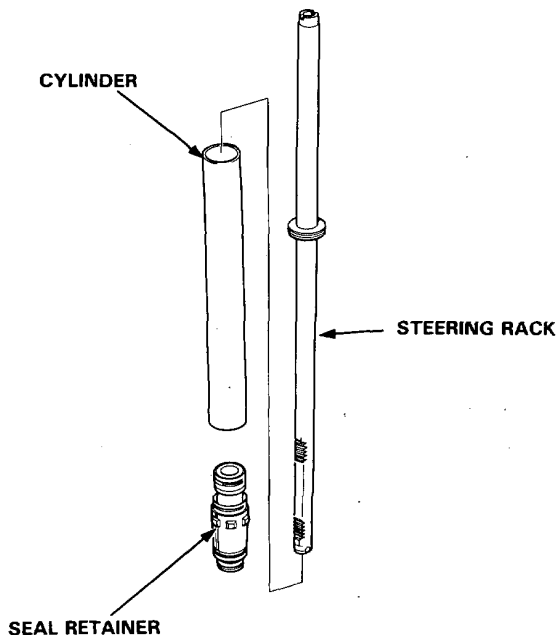


22. Remove the O-ring and snap ring from the seal retainer, then remove the cylinder cap from the seal retainer.

23. Remove the O-rings from the cylinder cap.

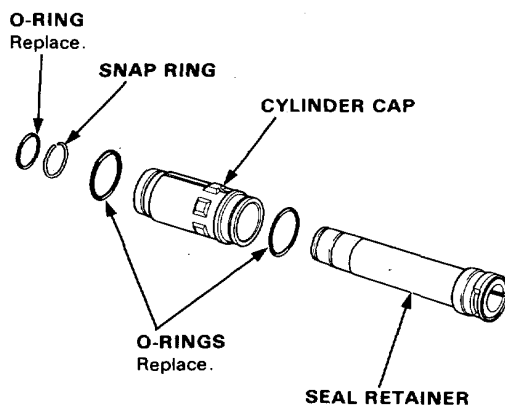

24. Remove the bushing stopper ring from the seal retainer.

25. Remove the cylinder end seal and rack bushing B.

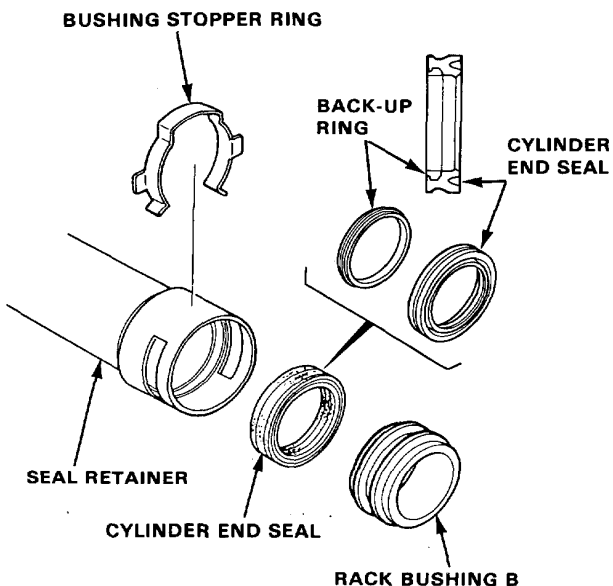


(cont'd)

Steering Gearbox


Overhaul (2WS) (cont'd)

26. Carefully pry the piston seal ring and O-ring off the rack.

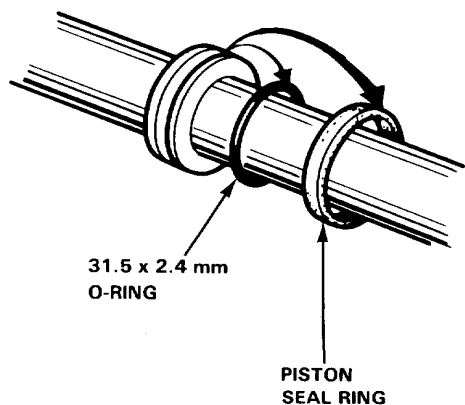


NOTE: Before reassembling any parts, inspect them as described on page 11-48 and make sure they are clean. Replace worn or damaged parts.

27. Install a new O-ring on the rack with its narrow edge facing out.

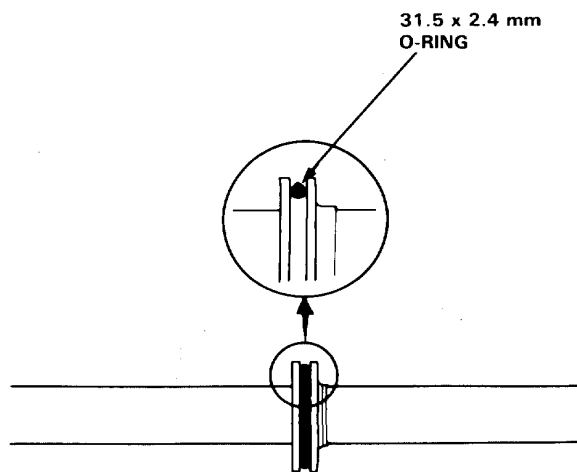


28. Coat the pinion seal ring guide with power steering fluid, then slide it onto the rack, big end first.

29. Position the new piston seal ring on the special tool, slide it down onto the big end of the tool, then pull it off into the piston groove on top the O-ring.

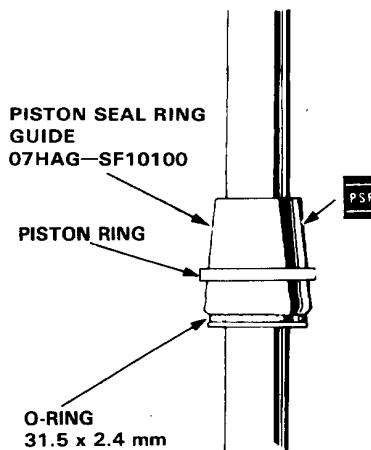


30. Coat the piston seal ring and inside of the special tool with power steering fluid. Carefully slide the tool onto the rack and over the piston ring, then rotate the tool as you move it up and down to seat the piston ring.

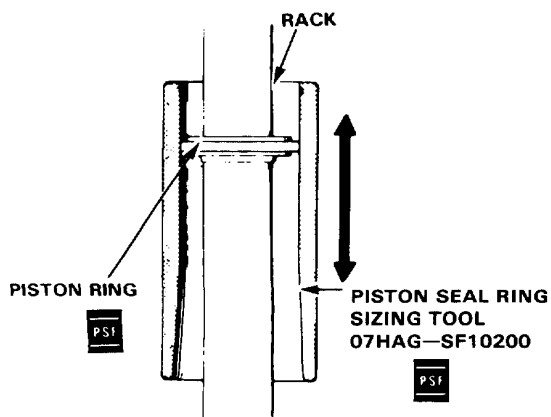




31. Coat new O-rings with grease and install them on the cylinder cap.

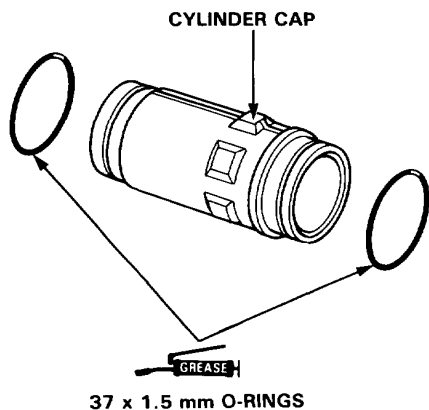


32. Slide the cylinder cap onto the seal retainer.


33. Install the snap ring and O-ring on the seal retainer.

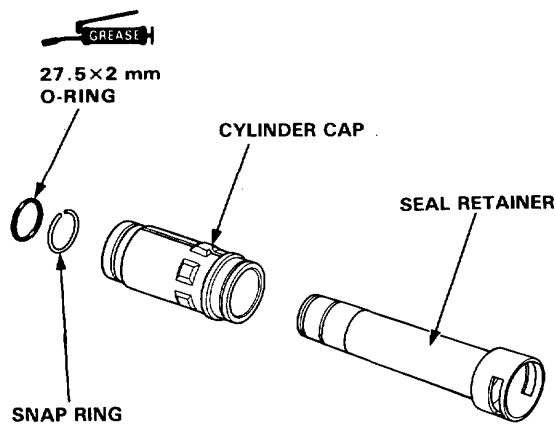

34. Grease the sliding surface of the steering rack bushing B, and install the bushing on the steering rack with the groove of the bushing facing the steering rack piston.

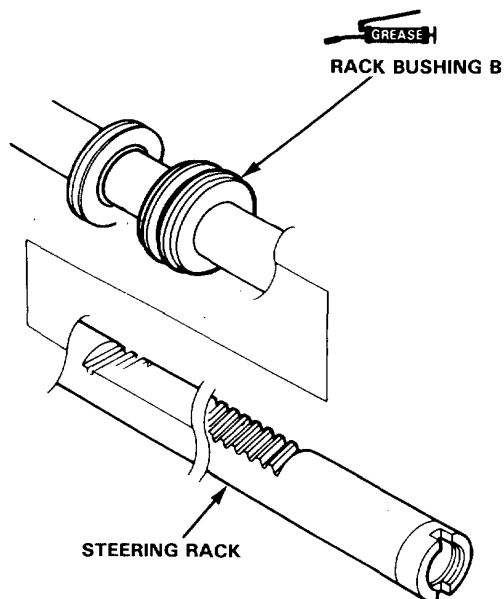

35. Grease the sliding surfaces of the new cylinder end seal and the special tool, then place the seal on the special tool with its grooved side facing opposite the slider.

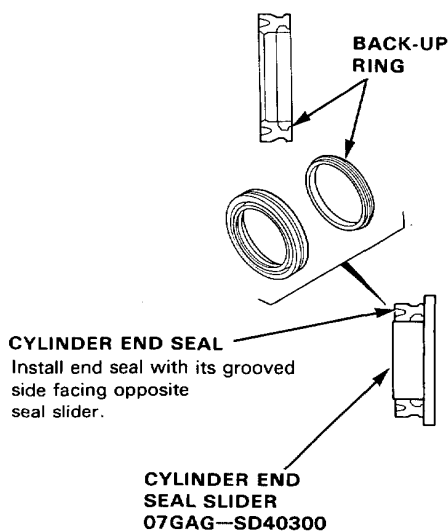


(cont'd)

Steering Gearbox


Overhaul (2WS) (cont'd)

36. Grease the steering rack, and install the special tool.


CAUTION: Make sure the rack teeth do not face the slot in the special tool.

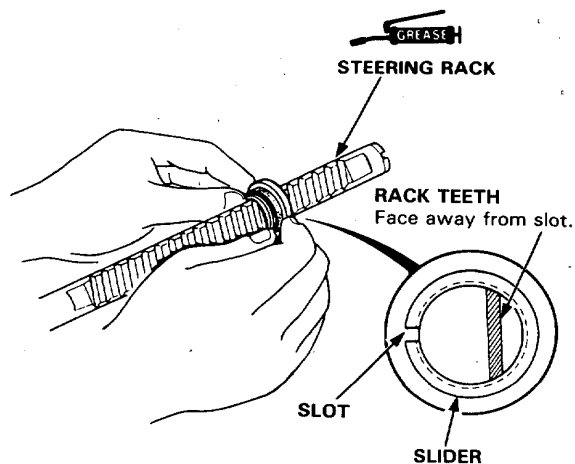


37. Remove the special tool from the cylinder end seal, then separate the ends of the tool and remove it from the rack.

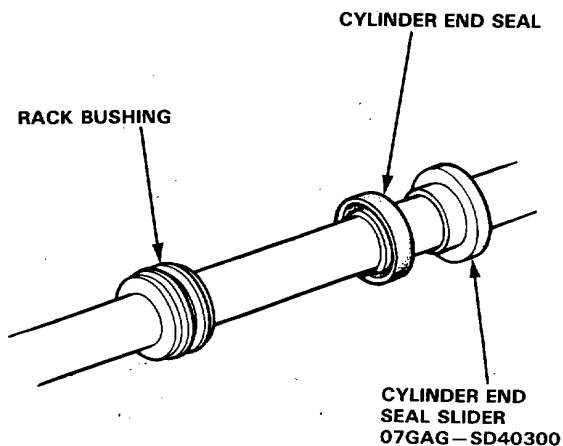

38. Fit the seal retainer on the steering rack.

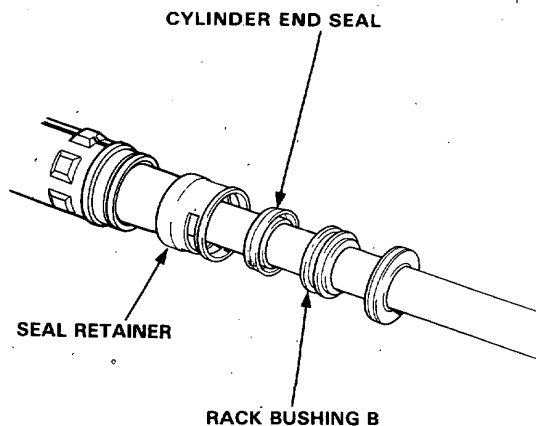


39. Push the rack bushing B toward the seal retainer by hand until the cylinder end seal is seated in the retainer. Fit the seal stopper ring in the groove of the seal retainer securely.

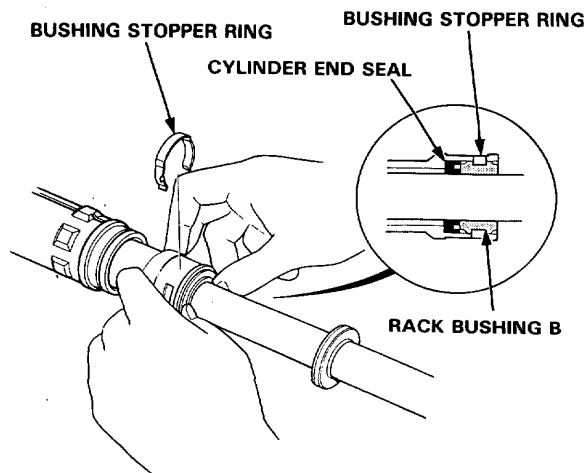




40. Install the retainer washer on the gear housing.

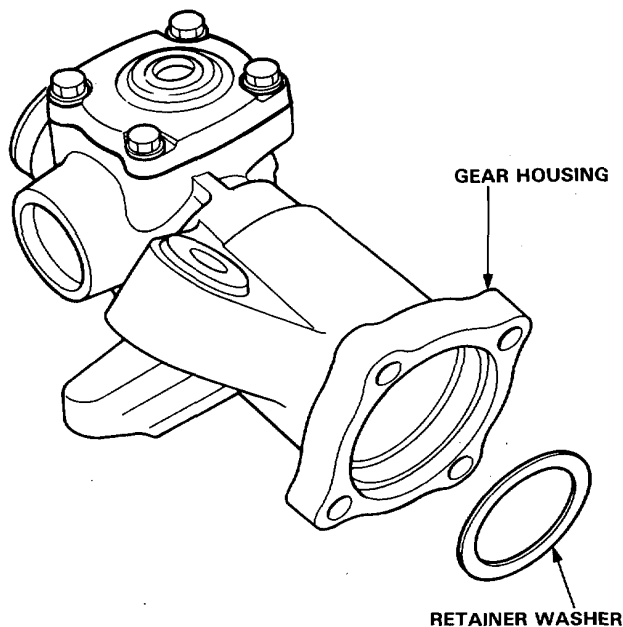


41. Place the gear housing on the work bench and insert the seal retainer and steering rack into the gear housing.

42. Coat the inside surface of the cylinder with power steering fluid, slide it over the rack and into the gear housing; press it into the housing until it seats.

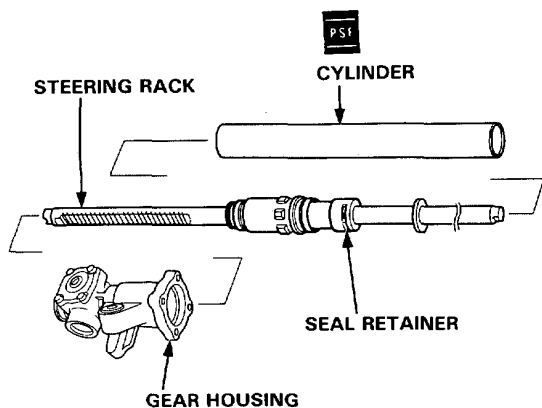


43. Install the cylinder spring over the rack, then coat the rack bushing A with power steering fluid and install it on the spring.

44. Wrap the end of the steering rack with vinyl tape or use the special tool. Coat the tape or tool with grease.

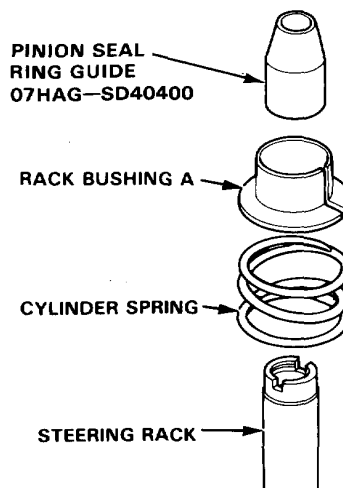

45. Coat the inside surface of the cylinder with power steering fluid and install the cylinder end seal with its grooved side facing out.

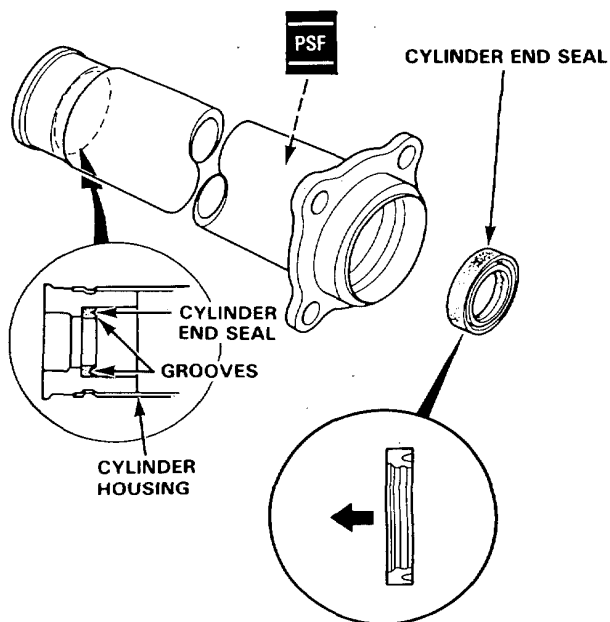

(cont'd)

Steering Gearbox


Overhaul (2WS) (cont'd)

46. Install the O-ring and back-up ring on the gear housing.


47. Carefully position the cylinder on the gear housing and loosely install with four bolts.

CAUTION: Be careful not to damage the end seal in the cylinder housing.

48. Remove the special tool from the steering rack.

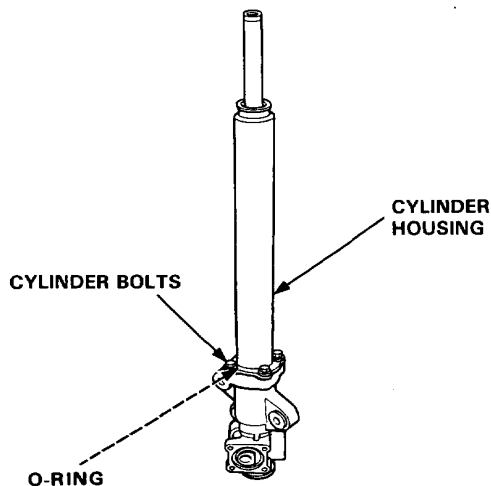


49. Insert the steering rack into the cylinder housing, being careful not to damage the steering rack sliding surface.

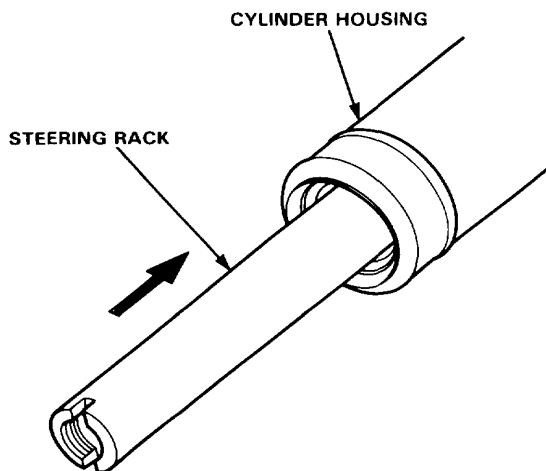


50. Tighten the cylinder housing to the gear housing.

NOTE: Before tightening the bolts, make sure the mating surfaces of the cylinder and gear housings fit properly by pushing them together; hold them together while tightening the bolts.

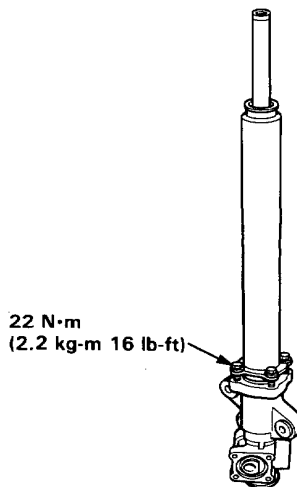


51. Install the steering pinion in the pinion holder.

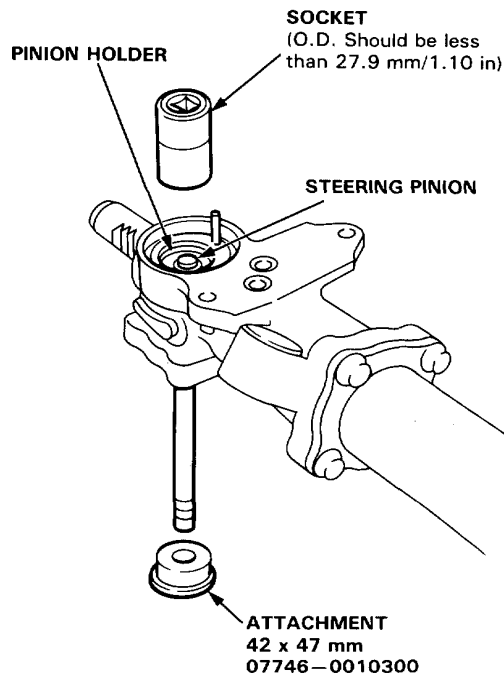




52. Install the 28 mm snap ring securely in the pinion holder groove.


NOTE: Install the snap ring with its tapered side facing out.

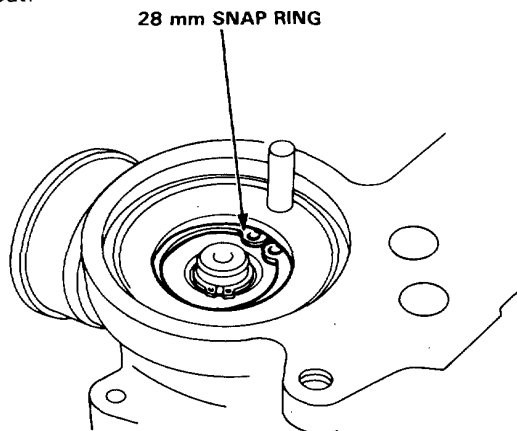

53. Grease the steering pinion seal, and install it on the gear housing using the special tools.

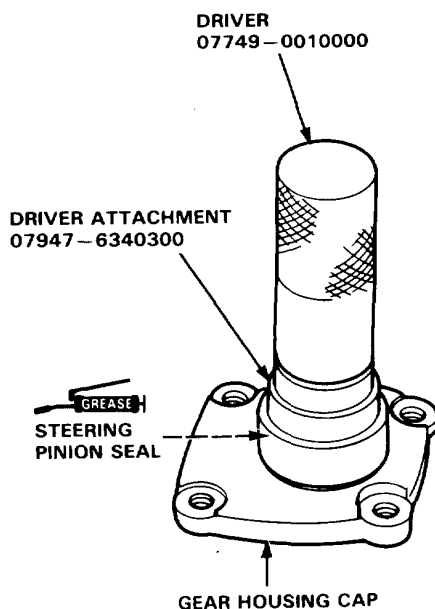

55. Grease the special tool and fit it over the steering pinion.

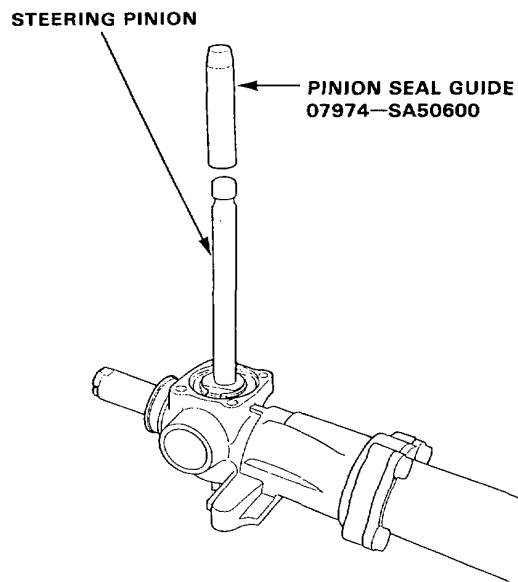


(cont'd)

Steering Gearbox


Overhaul (cont'd)

56. Slide the gear housing cap over the steering pinion, being careful not to damage the sealing lip of the pinion seal.

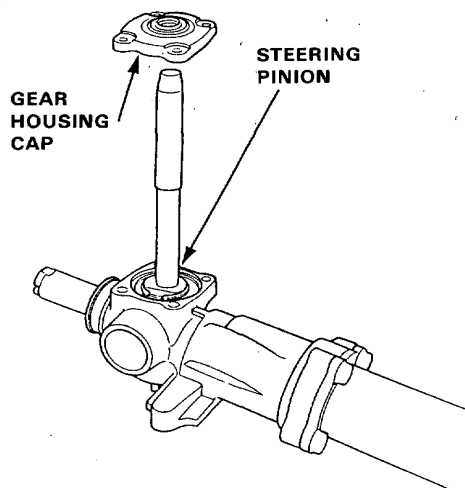

57. Remove the special tool.

58. Tighten the four flange bolts.

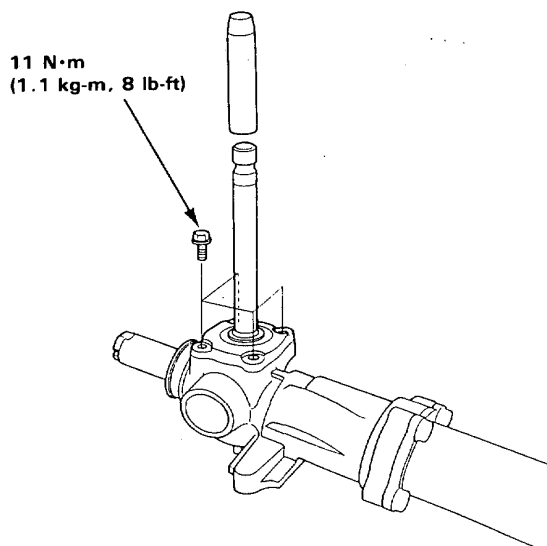


59. Install the O-ring on the rack guide screw.

60. Coat the rack guide with grease.

61. Install the rack guide, spring and rack guide screw on the gear housing.


62. Install the control valve unit (page 11-43).

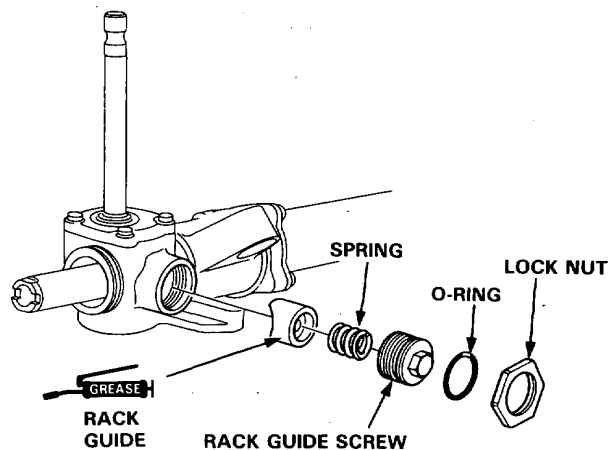

63. Tighten the rack guide screw until it compresses the spring and seats against the rack guide, then loosen it.

64. Retighten it to 4 N·m (0.4 kg-m, 2.9 lb-ft), back off about $35^\circ \pm \frac{8}{8}$ and install the locknut on the rack guide screw.


65. Tighten the locknut while holding the rack guide screw with the special tool.

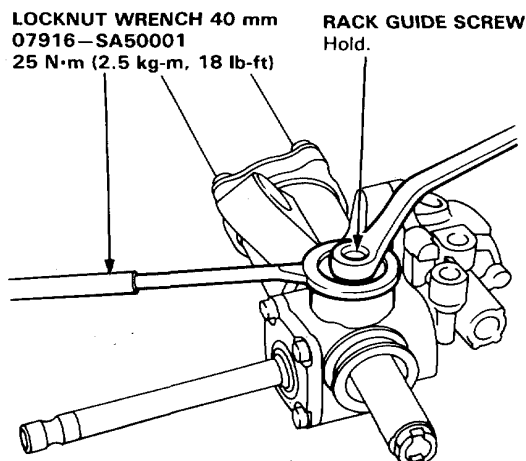




66. Install the transfer tube clip as shown.

NOTE: LH Drive shown, RH Drive is similar.

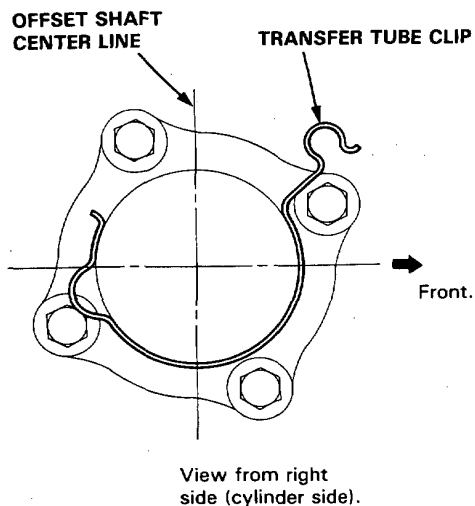


67. Install the band rubber and band; position the band as shown and tighten it.

NOTE: LH Drive shown, RH Drive is similar.

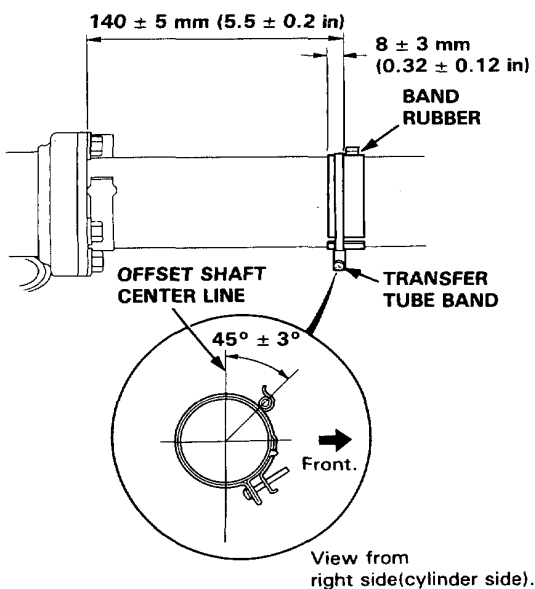

68. Install the new boot band on the boot.


NOTE: Coat the rack end and inside of the boot with the grease.

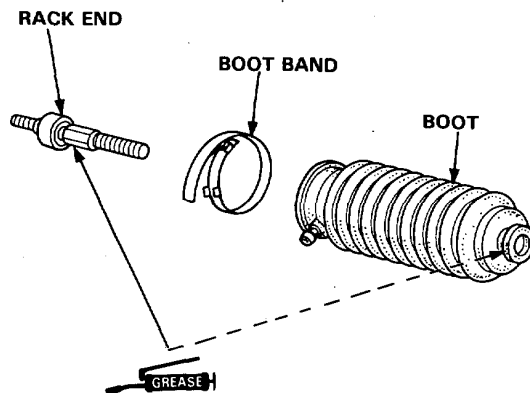

69. Screw each tie-rod into the rack while holding the lock washer so its tabs are in the slots in the rack end.

NOTE: Install the stopper washer with the chamfered side facing out.

70. Tighten the tie-rod securely, then bend the lock washer back against the flat on the flange as shown.

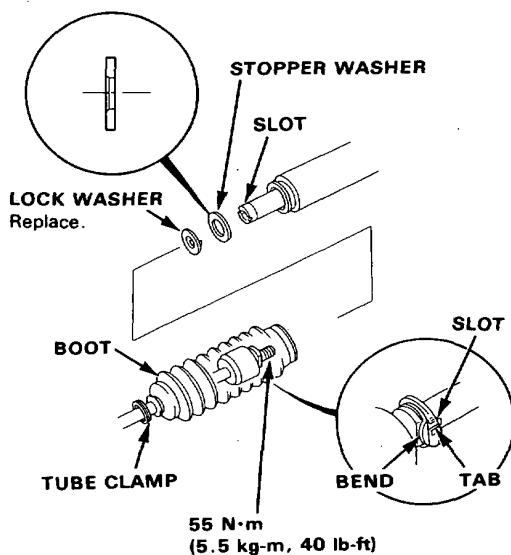

(cont'd)


Steering Gearbox

Overhaul (2WS) (cont'd)


71. Install the boots so that the angle of the offset shaft center line is as shown.

NOTE: LH Drive shown, RH Drive is similar.

<CYLINDER SIDE>

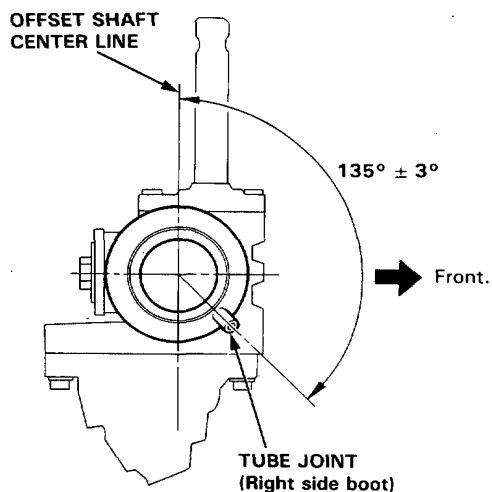


<GEAR HOUSING SIDE>

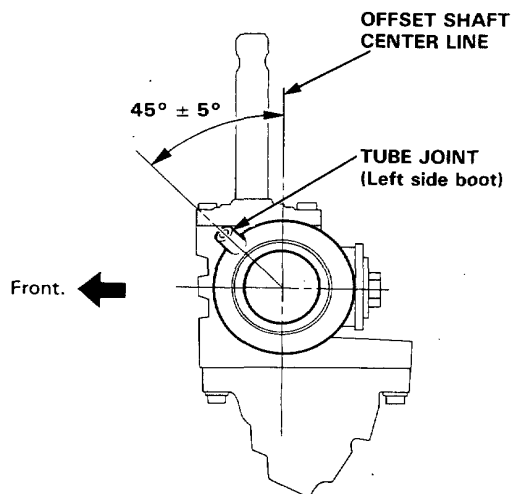


72. Install new boot bands on the boot and bend both sets of locking tabs.

73. Lightly tap on the doubled-over portions to reduce their height.

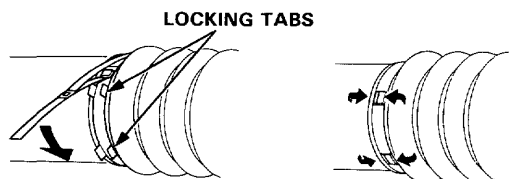


<CYLINDER SIDE>

NOTE: LH Drive shown, RH Drive is similar.

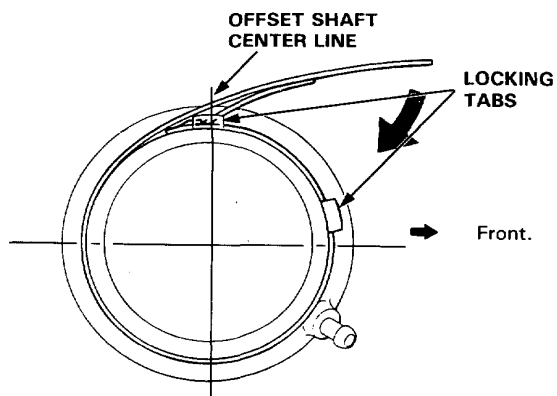

<GEAR HOUSING SIDE>

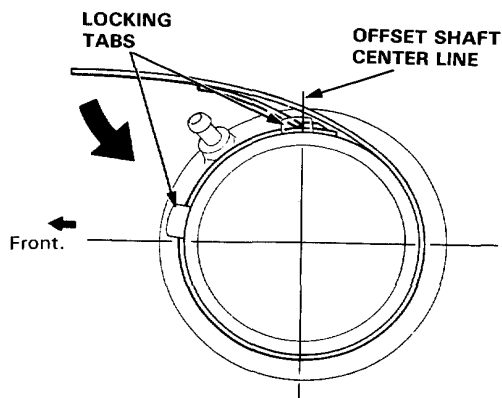


74. Install the air transfer tube.

75. After assembling, slide the rack right and left to be certain that the boots are not deformed or twisted.




Overhaul (4WS)


1. Remove the steering gearbox assembly (page 11-44).
2. Remove the control valve assembly (page 11-38).
3. Strainghten the tab of the lock washer.
4. While holding the steering rack with a 22 mm wrench, remove the tie-rod with a 17 mm wrench.

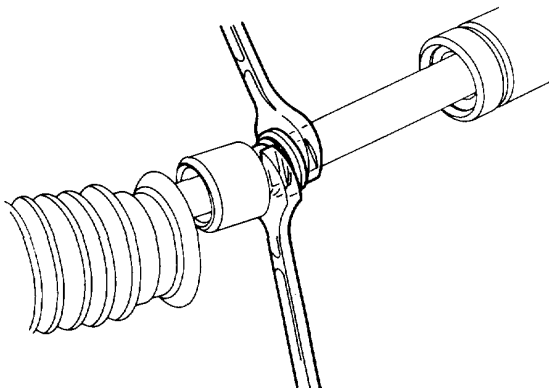


5. Slide the steering rack into the cylinder housing until the end is projected 62.2 mm (2.4 in.) from the rack bushing retainer.

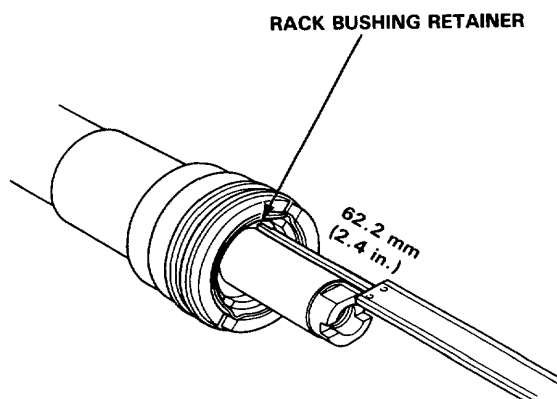

6. Loosen the rack screw lock nut, and turn off the guide screw.

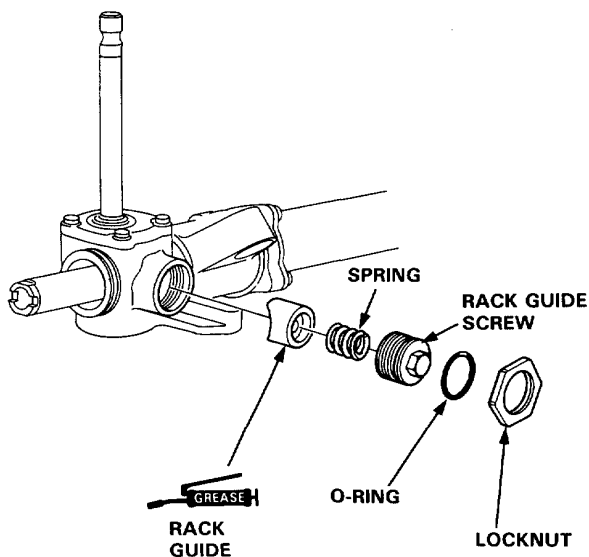

7. Remove the 28 mm internal snap ring from the bottom of the gear housing.

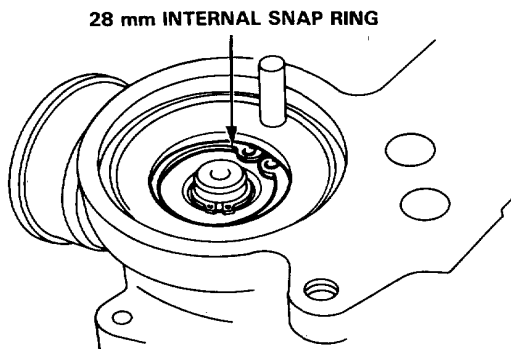

(cont'd)