


# Doors

## Glass Adjustment (cont'd)


5. Lower the window until there is a small gap between the door glass and the glass run channel.
6. Loosen the roller guide bolts and adjust the window glass so it is parallel with the glass run channel.

Front:

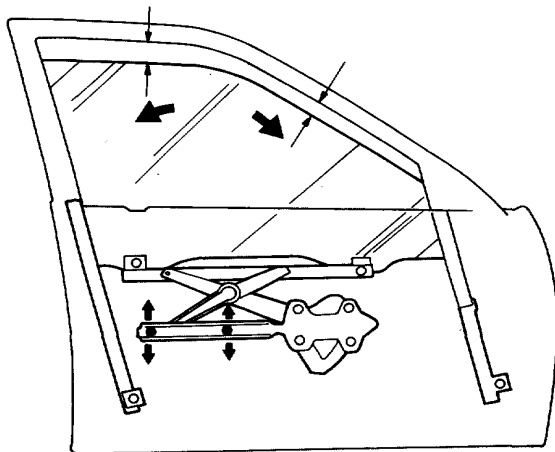


Rear:

NOTE: Loosen the upper regulator mounting bolts and adjust the window glass.

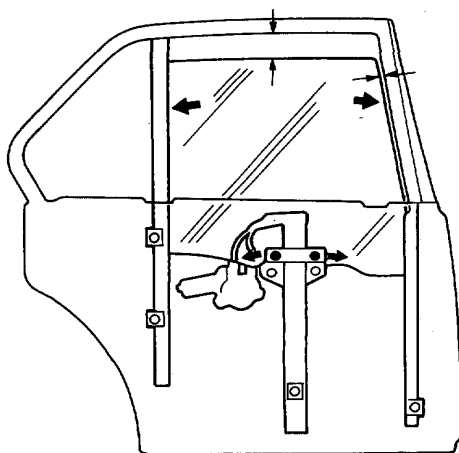


7. Raise the window glass fully and check gap.
8. Perform the operation test.

NOTE: Check that the glass run channel is not pinched by the glass.

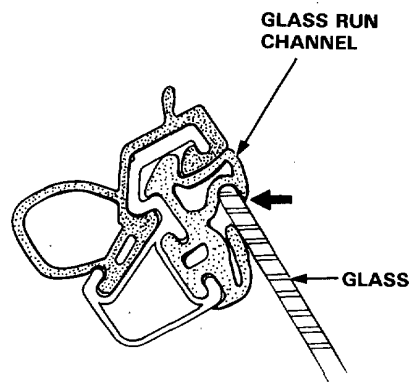

9. With the door and glass closed fully, check for water leaks.

NOTE: Do not use high pressure water.

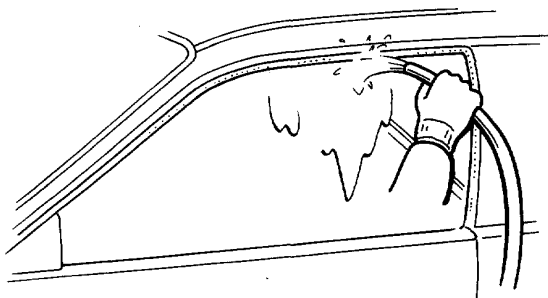

10. Install the door harness.
11. Attach the plastic cover, and install the door panel.
12. Check for air leaks.




## Door Position Adjustment

After installing the door, check for a flush fit with the body, then check for equal gap between the front and rear, and top and bottom door edges and the body. The door and body edges should also be parallel. Adjust at the hinges as shown.

**CAUTION:** Place a shop towel on the jack to prevent damage to the door when the hinge bolts are loosened for adjustment.


### HINGE MOUNTING BOLTS

Loosen the bolts, and move the door BACKWARD or FORWARD, UP or DOWN as necessary to equalize the gaps.

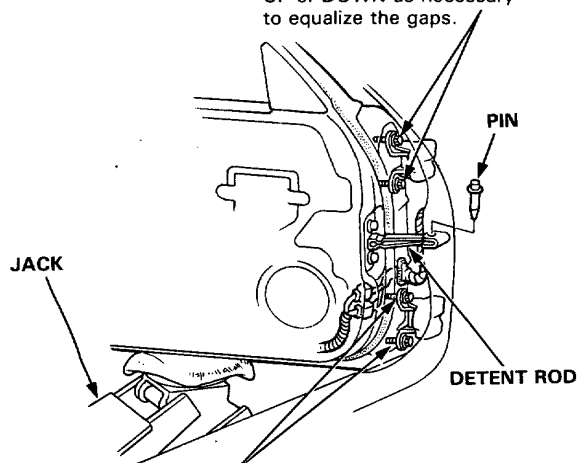

### DOOR MOUNTING BOLTS

Loosen the bolts slightly to move the door IN or OUT until it's flush with the body. If necessary, you can install a shim behind one hinge to make the door edges PARALLEL with the body.

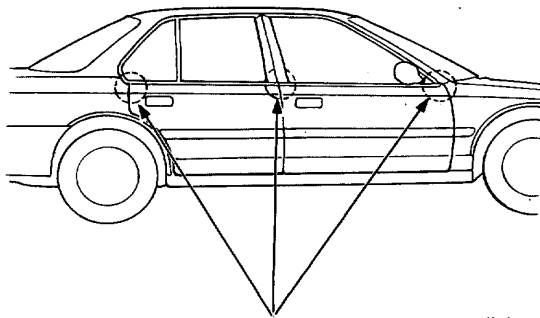

The door and body edges should be parallel.


**NOTE:** Check that the water and air leaks.

## Door Striker Adjustment

Make sure the door latches securely without slamming. If it needs adjustment:

1. Draw a line around the striker plate for reference.
2. Loosen the striker screws and move the striker IN or OUT to make the latch fit tighter or looser. Move the striker UP or DOWN to align it with the latch opening. Then lightly tighten the screws and recheck.

**NOTE:** Do not tap the striker with an iron hammer to adjust the position.

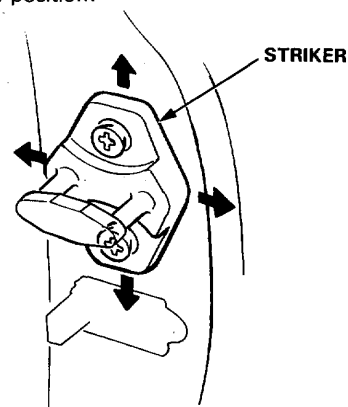

**NOTE:** Hold the outside handle out and push the door against the body to be sure the striker allows a flush fit.

3. If the door latches properly, tighten the screws and recheck.

**NOTE:** Replace the striker if a crack is seen on any parts of the resin.