


Lubrication Points

For details of lubrication points and types of lubricants to be applied, refer to the illustrated index and various work procedures (such as Assembly/Reassembly, Replacement, Overhaul, Installation, etc.) contained in each section.

No.	LUBRICATION POINTS		LUBRICANT
1	Engine		API Service Grade: SF or SG grade detergent oil only SAE Viscosity: See chart below
2	Transmission	Manual Automatic	API Service Grade: SE or SF grade motor oil SAE Viscosity: See chart below Honda Premium Formula Automatic Transmission Fluid or an equivalent DEXRON® II Automatic transmission fluid
3	Brake line		Brake fluid DOT3 or DOT4
4	Clutch line		Brake fluid DOT3 or DOT4
5	Power steering gearbox		Steering grease P/N 08733—B070E
6	Shift lever pivots (Manual)		Silicone grease with molybdenum disulfide
7	Steering ball joints		Multi-purpose grease
8	Suspension ball joints		
9	Steering boots		
10	Steering column bushings		
11	Select lever (Automatic)		
12	Pedal linkage		
13	Intermediate shaft (Manual)		
14	Brake master cylinder pushrod		
15	Trunk hinges		
16	Door hinges upper and lower		
17	Door opening detents		
18	Fuel filler lid		
19	Engine hood hinges		
20	Engine hood latch		
21	Tilt lever		
22	Caliper	Piston seal Dust seal Caliper pin Piston	Silicone grease
23	Power steering system		Power steering fluid-V P/N 08280—99954

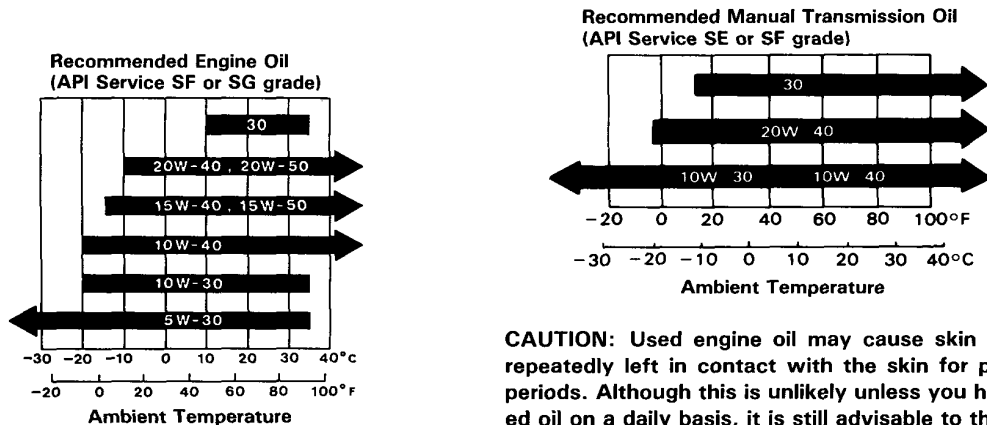

CAUTION: Used engine oil may cause skin cancer if repeatedly left in contact with the skin for prolonged periods. Although this is unlikely unless you handle used oil on a daily basis, it is still advisable to thoroughly wash your hands with soap and water as soon as possible after handling used oil.

