


Fuel Pump

Replacement

WARNING Do not smoke while working on fuel system. Keep open flame away from work area.

1. Attach fuel line clamps to fuel pump lines.
2. Disconnect fuel lines at fuel pump.

CAUTION: When disconnecting fuel lines, slide back clamps then twist lines as you pull, to avoid damaging them.

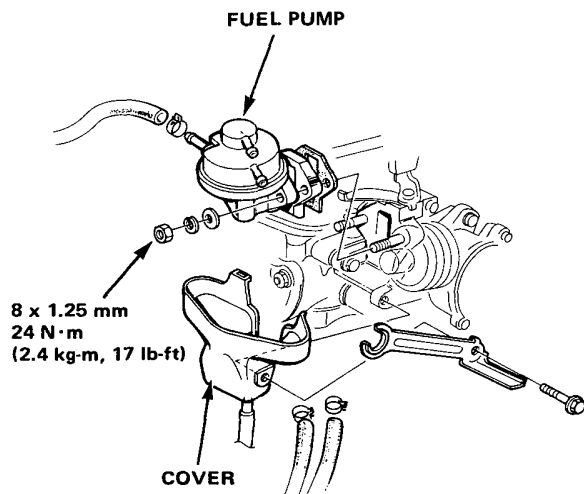

3. Remove fuel pump.
4. Install in the reverse order of removal.

CAUTION: Make sure that the fuel lines are connected properly and securely.

Fuel Filter

Replacement


Replace filter every 48,000 Km (30,000 miles)

WARNING

- Do not smoke while working on fuel system. Keep open flame away from work area.
- Block front wheels before jacking up rear of car.

1. Raise the rear of the car and place the jackstands in proper locations.
2. Remove the fuel filter cover (Except for coupe model).
3. Push in the tab of the fuel filter to release the holder, then remove the filter from its bracket.
4. Attach fuel line clips to the fuel lines and disconnect the lines from the filter.

CAUTION: To avoid damaging the fuel lines when disconnecting, slide back the clamps then twist the lines as you pull.

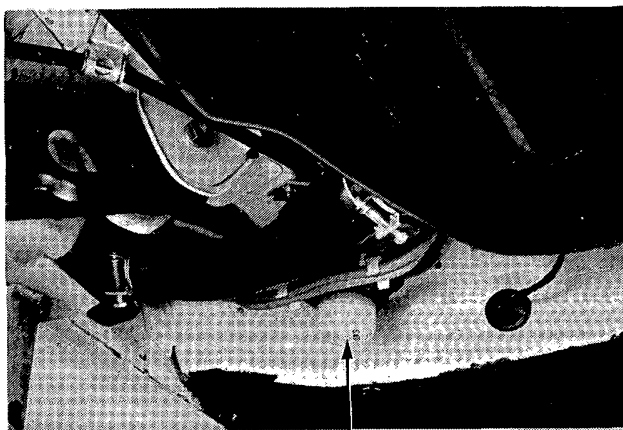

FUEL FILTER