




## Adjustment

### NOTE:

- Before adjusting the tailgate, loosen each bolt and nut slightly.
- Do not install the support struts.

1. Adjust the tailgate hinges right and left, as well as fore and aft, by using the elongated holes.
2. Turn the tailgate edge cushions, as necessary, to make the tailgate fit flush with the body at each side.
3. Adjust the tailgate fit to the tailgate opening by moving the striker.
4. After adjustment, tighten each bolt and nut securely.

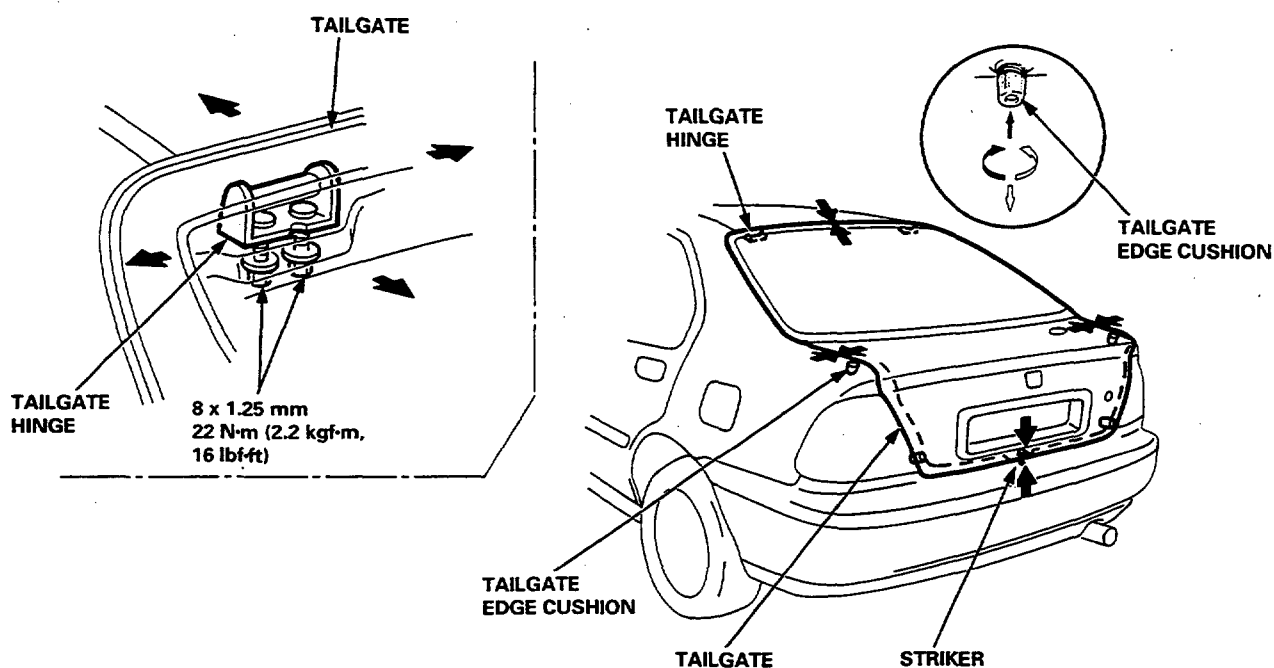

NOTE: Move the striker right or left until it's centered in the tailgate latch, as shown.

