


Parking Brake

Disassembly and Reassembly

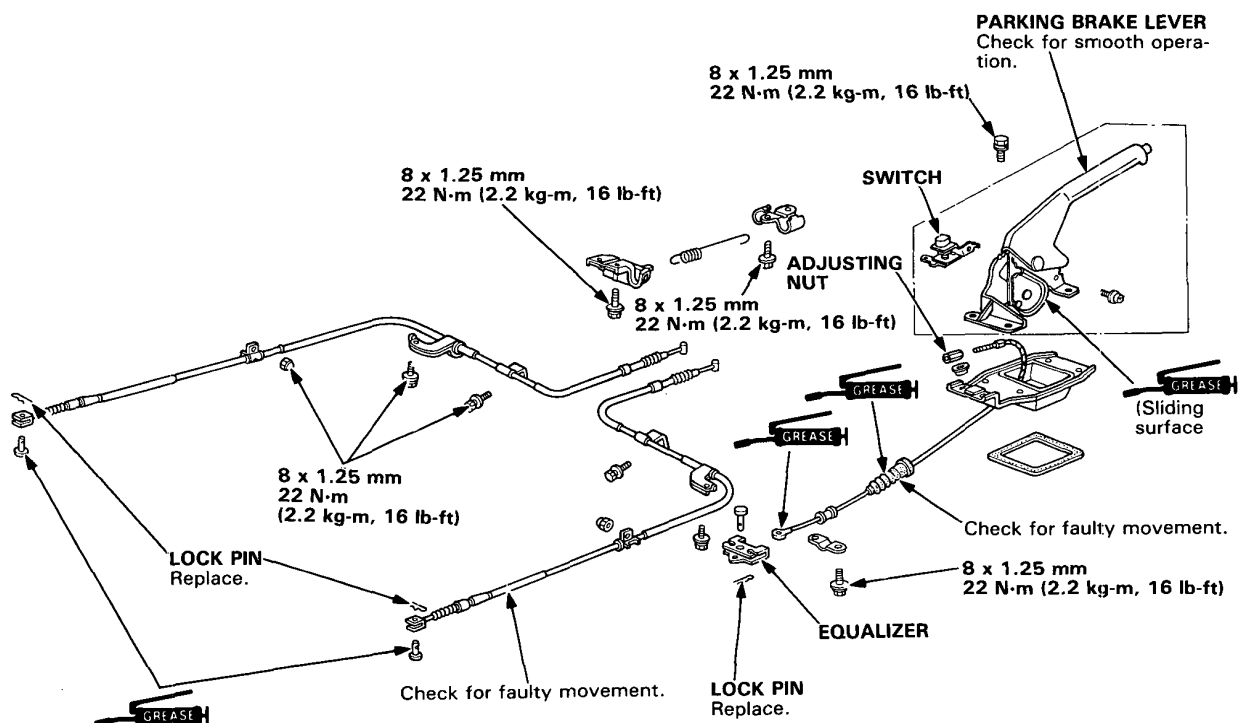

NOTE: To disconnect the parking brake:

1. Pull out lock pin.
2. Remove clevis pin.
3. Remove clip.

