



SYSTEM DIAGRAM

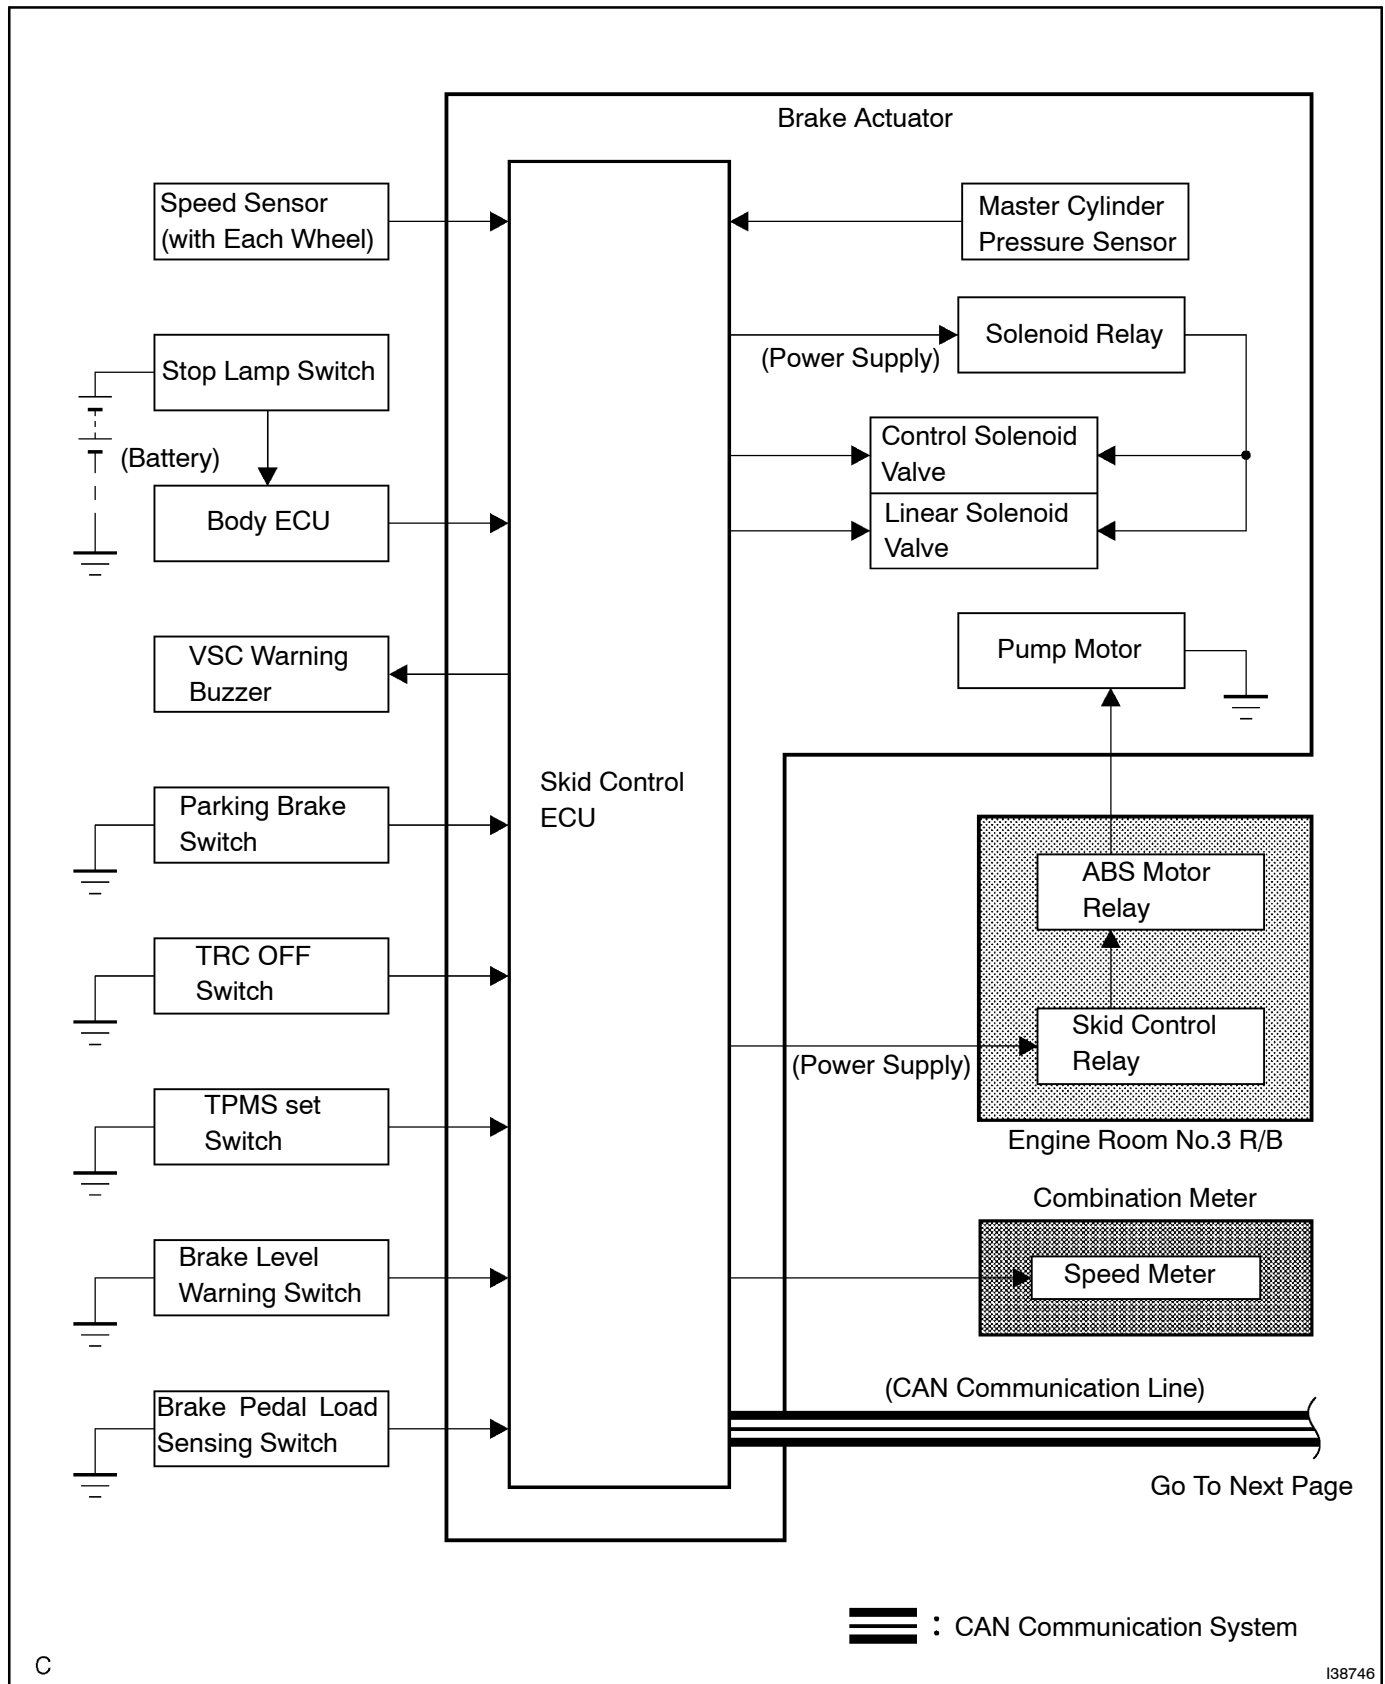

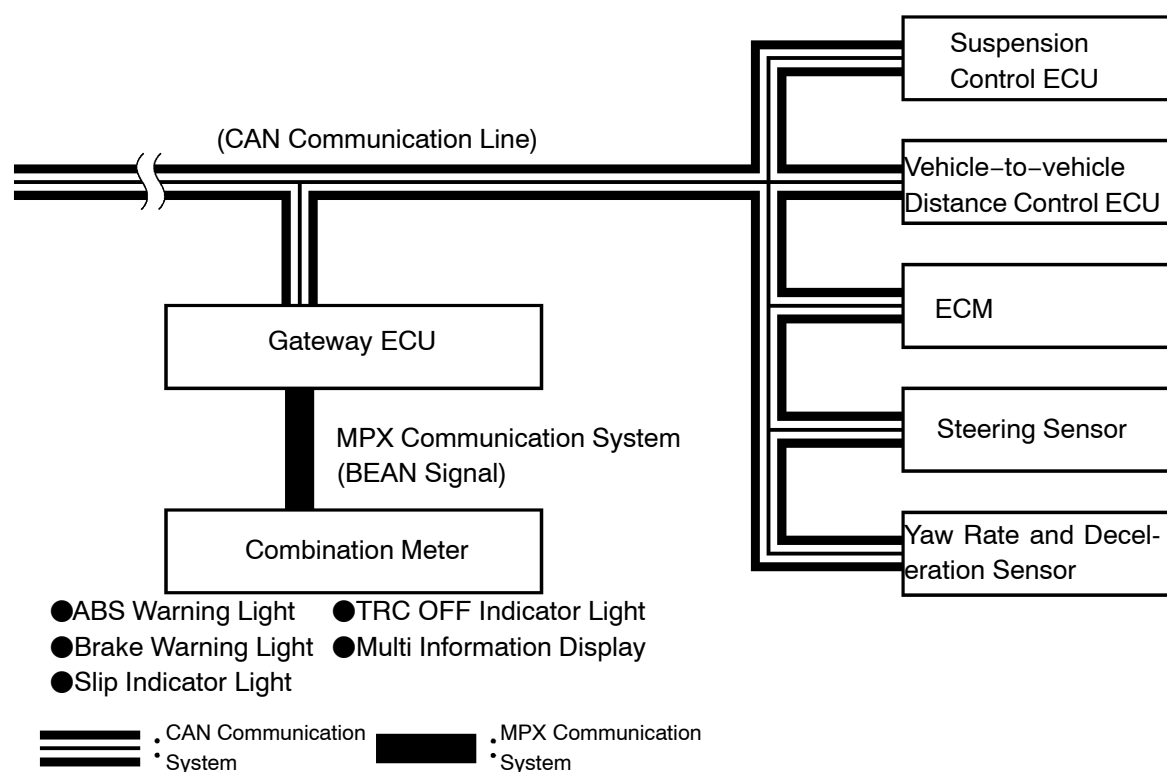

C

I38747

Transmitting ECU (transmitter)	Receiving ECU	Signals	Communication method
Suspension Control ECU	Skid Control ECU	Suspension Control Signal	CAN Communication System
Skid Control ECU	Suspension Control ECU	Yaw Rate/Deceleration Signal	CAN Communication System
Skid Control ECU	Suspension Control ECU	STP Switch Signal	CAN Communication System
Skid Control ECU	Suspension Control ECU	Wheel Speed Signal	CAN Communication System
Distance Control ECU	Skid Control ECU	Distance Control Signal	CAN Communication System
ECM	Skid Control ECU	Shift Position Signal	CAN Communication System
ECM	Skid Control ECU	Throttle Position Signal	CAN Communication System
ECM	Skid Control ECU	Engine Revolution Signal	CAN Communication System
ECM	Skid Control ECU	Water Temperature Sensor Signal	CAN Communication System
ECM	Skid Control ECU	Intake Air Temperature Sensor Signal	CAN Communication System
Skid Control ECU	ECM	Yaw Rate (Deceleration) Signal	CAN Communication System
Skid Control ECU	ECM	VSC Data Signal	CAN Communication System
Skid Control ECU	Gate Way ECU	Brake Warning Lamp ON Signal	BEAN System
Skid Control ECU	Gate Way ECU	ABS Warning Lamp ON Signal	BEAN System
Skid Control ECU	Gate Way ECU	TRC OFF Indicator ON Signal	BEAN System
Skid Control ECU	Gate Way ECU	Slip Indicator ON Signal	BEAN System
Skid Control ECU	Gate Way ECU	Multi Information display Signal	BEAN System