


ABS WARNING LIGHT CIRCUIT (DOES NOT LIGHT UP)

WIRING DIAGRAM

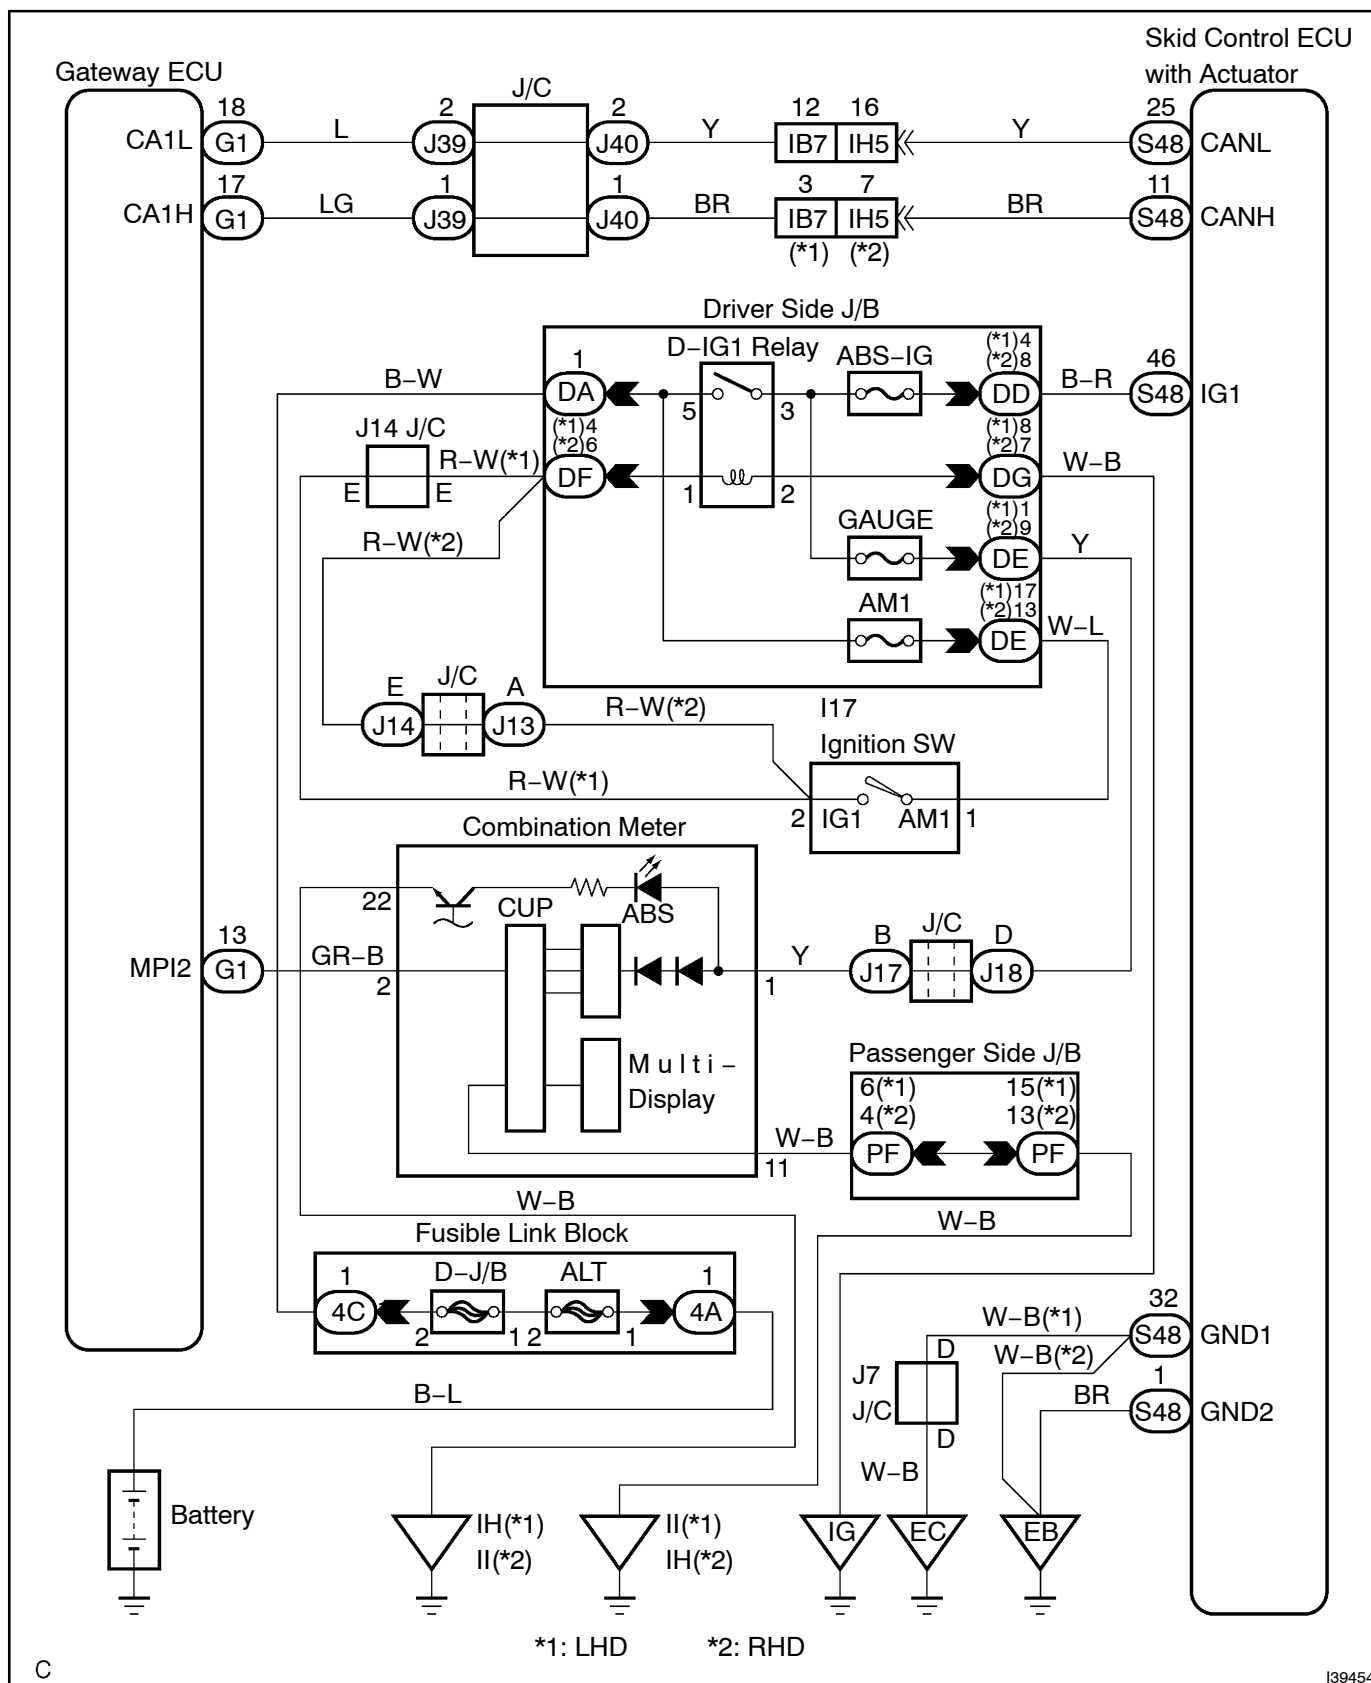

INSPECTION PROCEDURE

1 INSPECT CAN COMMUNICATION SYSTEM

- (a) Is the DTC output for CAN communication system?

Result:

DTC is not output	A
DTC is output	B

B

REPAIR CAN COMMUNICATION SYSTEM
(SEE PAGE 05-3331)

A

2 INSPECT MULTIPLEX COMMUNICATION SYSTEM

- (a) Is the DTC output for Multiplex communication system?

Result:

DTC is not output	A
DTC is output	B

B

REPAIR MULTIPLEX COMMUNICATION SYSTEM
(SEE PAGE 05-3162)

A

3 INSPECT ABS WARNING LIGHT

- (a) Connect the intelligent tester II to the DLC3 and start the engine.
(b) Select the item "ABS Light" in the ACTIVE TEST and operate the ABS warning light on the intelligent tester II.

Item	Vehicle Condition / Test Details	Diagnostic Note
ABS Warning Light	Turns ABS warning light ON / OFF	Observe combination meter

- (c) Check that "ON" and "OFF" of the ABS warning light can be shown on the combination meter by the intelligent tester II.

OK:

Turn the ABS warning light ON or OFF in accordance with the intelligent tester II.

NG

CHECK AND REPAIR ABS WARNING LIGHT CIRCUIT

OK

REPLACE ABS & TRACTION ACTUATOR ASSY (SEE PAGE 32-53)

NOTICE:

When replacing the ABS & TRACTION Actuator assy, perform zero point calibration (see page 05-387).