


BLOWER MOTOR REMOVAL

AC0P1-03

1. REMOVE NO.2 UNDER COVER

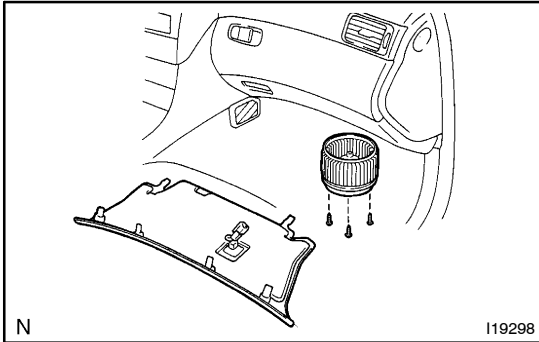

2. REMOVE BLOWER MOTOR

- (a) Disconnect the connector.
- (b) Remove the 3 screws and blower motor.