



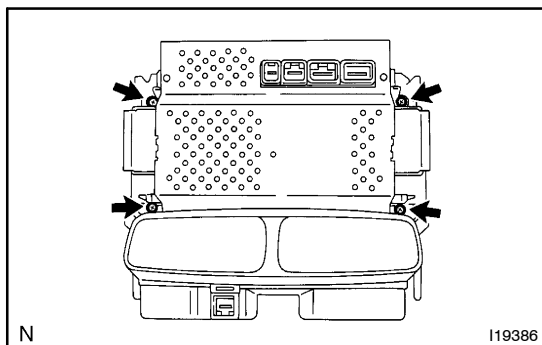

DISASSEMBLY

REMOVE MULTI DISPLAY

(a) Remove the 4 screws and multi display.

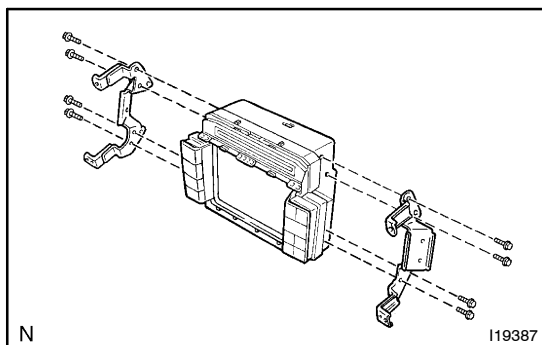

(b) Remove the 8 bolts and 2 brackets.