


Lumber Support Switch and Motor Circuit

CIRCUIT DESCRIPTION

Pressing the lumbar support switch activates the lumbar support motor.

Because the lumbar support switch is not connected to the Power Seat ECU, pressing this switch does not operate ECU operations such as the memory function.

WIRING DIAGRAM

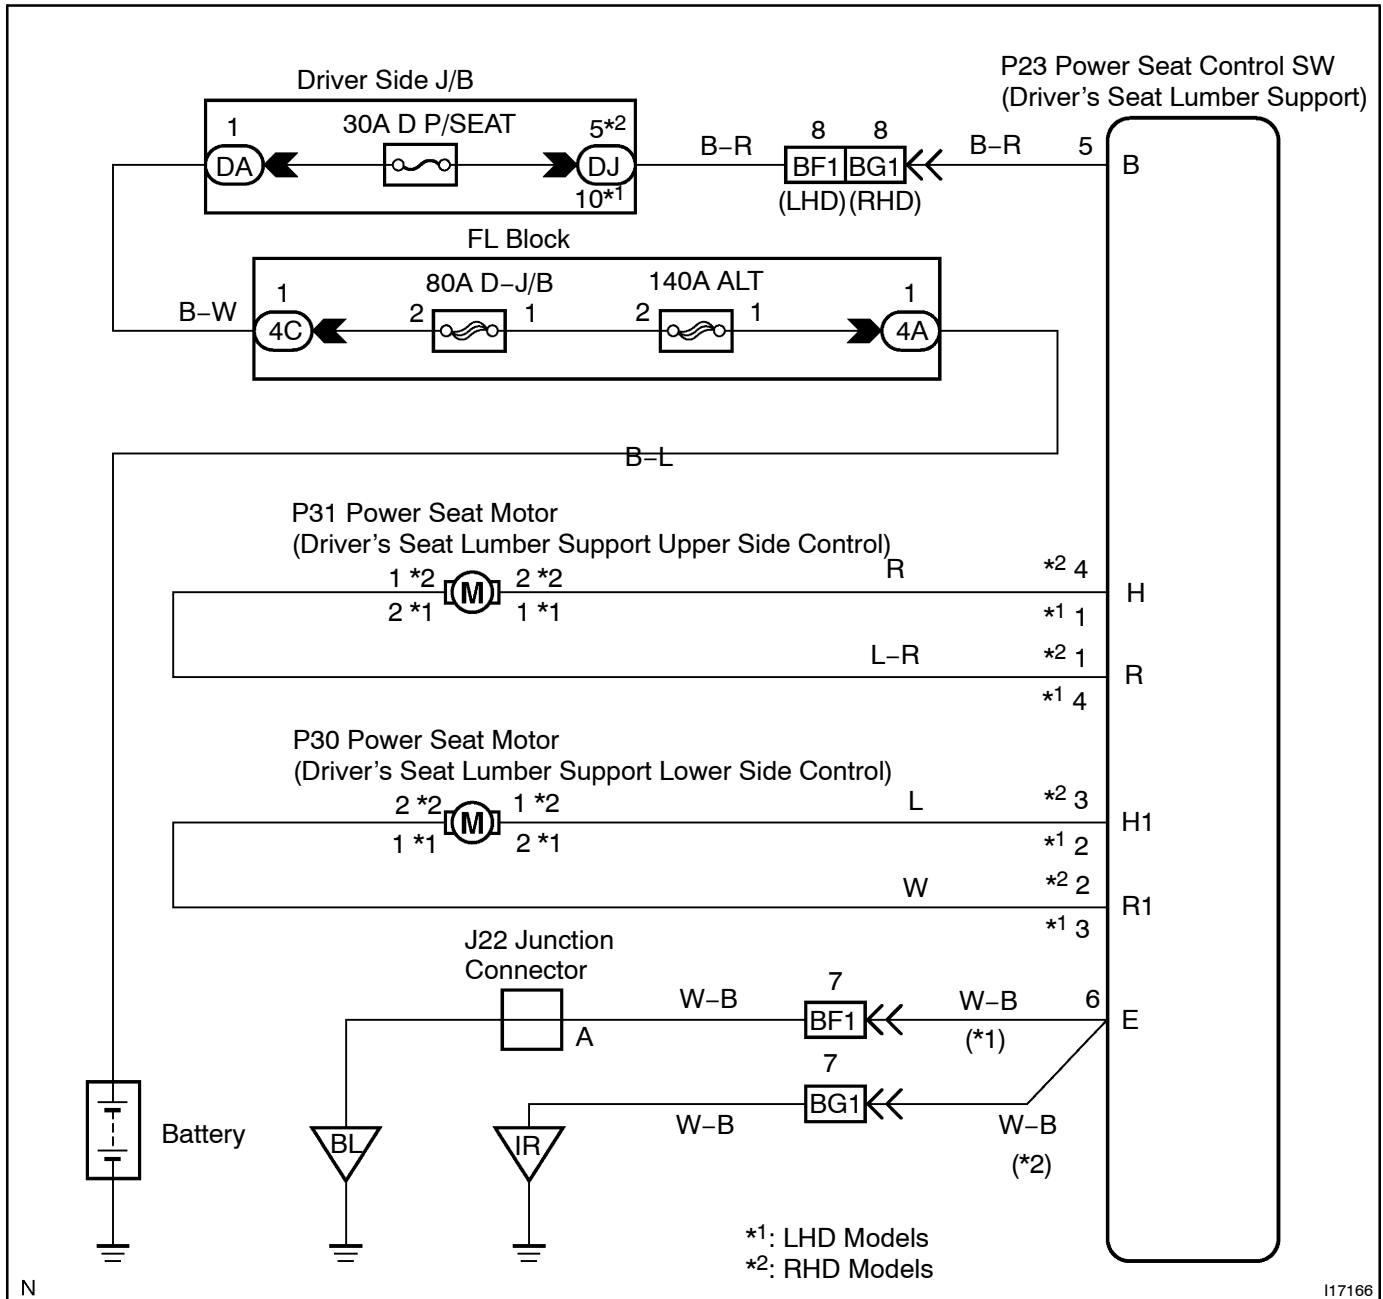

INSPECTION PROCEDURE

- | | |
|---|--|
| 1 | Check lumber support switch (See page BE-131). |
|---|--|

NG

Replace lumber support switch.

OK

- | | |
|---|---|
| 2 | Check harness and connectors between power seat ECU and lumber support switch (See page IN-35). |
|---|---|

NG

Repair and replace harness or connector.
--

OK

Check and replace power seat ECU (See page IN-35).
--