


Power Source Circuit

CIRCUIT DESCRIPTION

This circuit provides power to operate the Driver side J/B ECU.

WIRING DIAGRAM

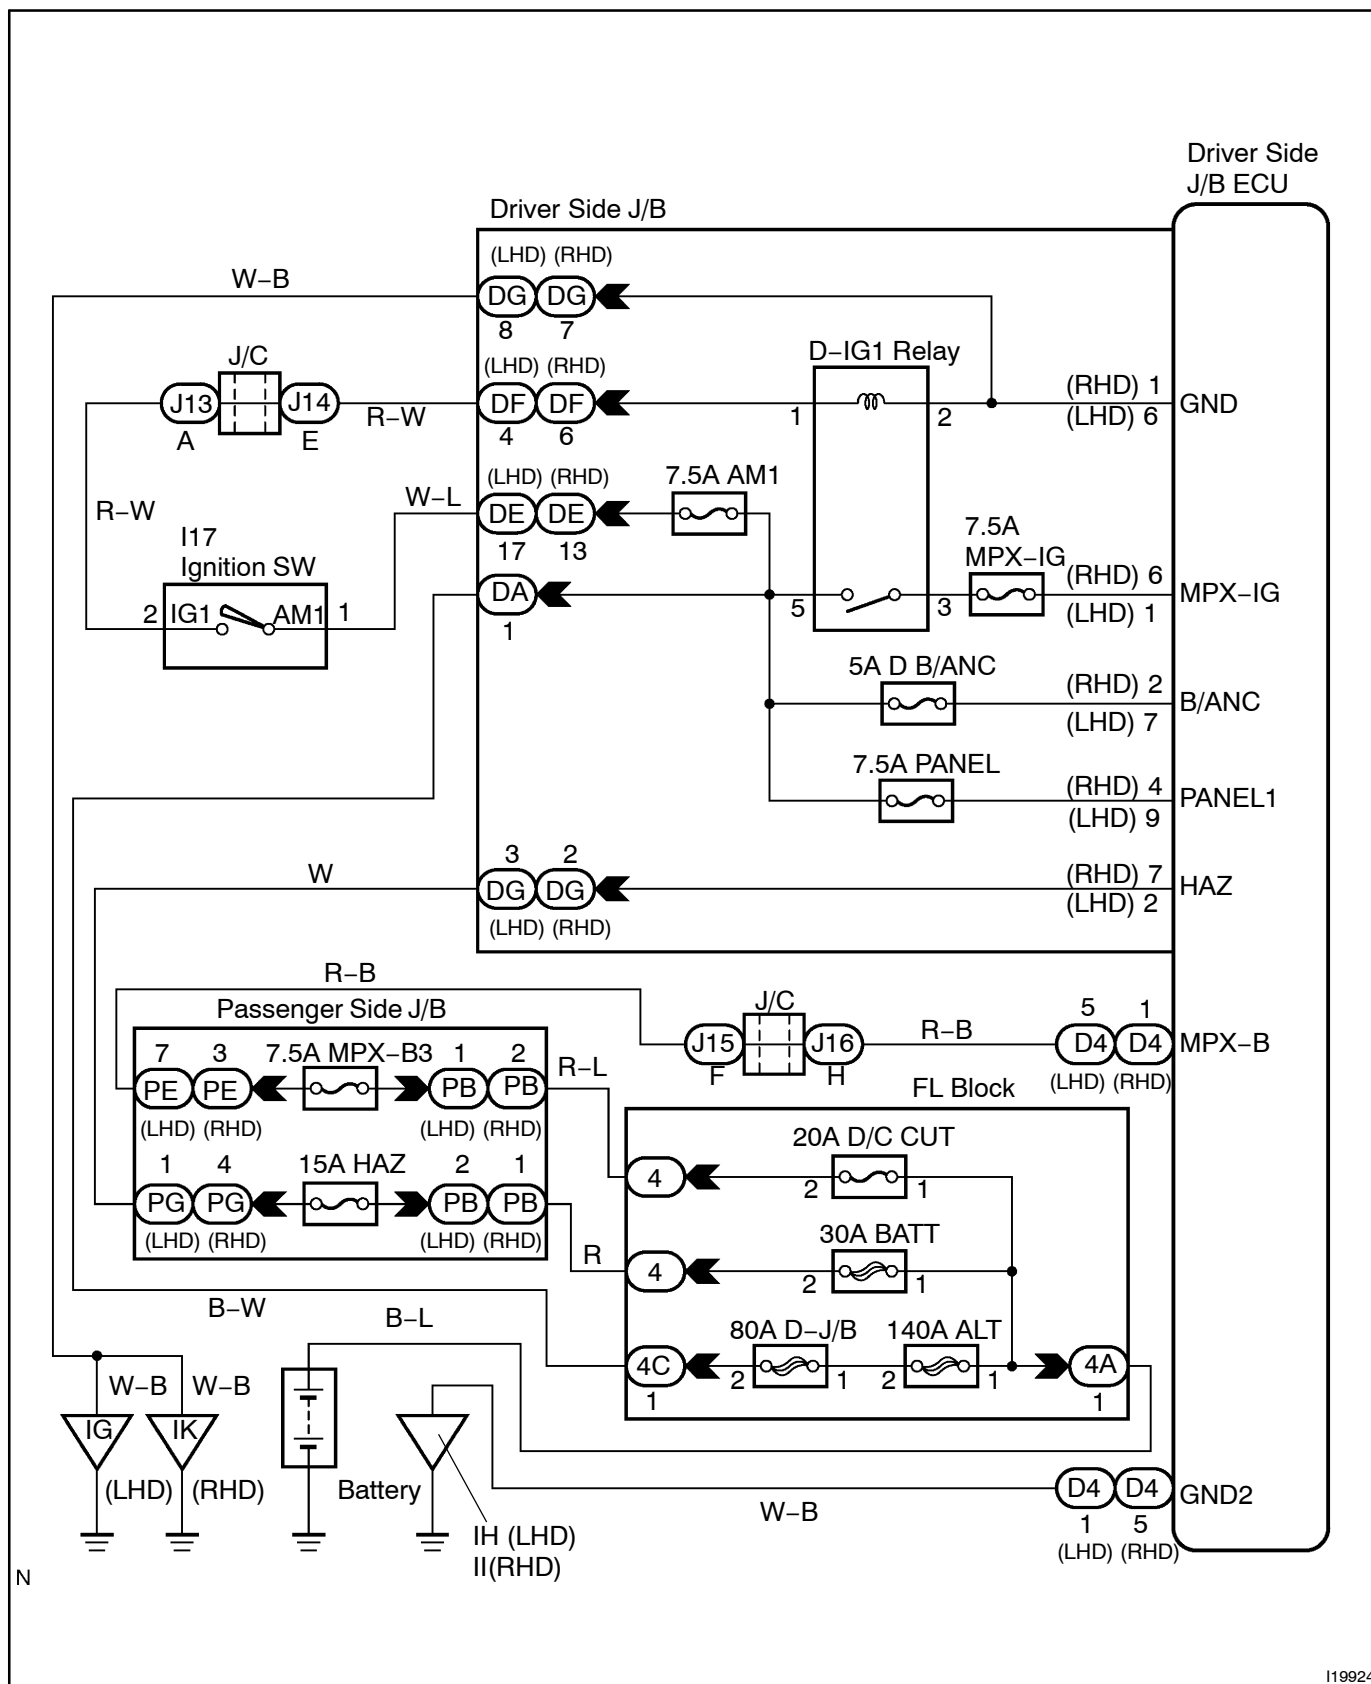

INSPECTION PROCEDURE

1	Check MPX-B3, MPX-IG, D B/ANC, HAZ and PANEL fuse.
---	--

CHECK:

Check continuity of MPX-B3 and MPX-IG, D B/ANC, HAZ and PANEL fuse.

OK:

Continuity

NG

Replace the failure fuse.

OK

2	Check voltage between terminal MPXB, MPX-IG, B/ANC, HAZ and PANEL1 and GND, GND2 of driver side junction block.
---	---

PREPARATION:

Turn the ignition switch ON.

CHECK:

Measure voltage between terminals MPX-IG and GND of driver side J/B.

OK:

Voltage: 10 – 14 V

PREPARATION:

- (a) Turn the ignition switch OFF.
- (b) Disconnect the driver side junction block.

CHECK:

Measure voltage between terminals MPXB, B/ANC, HAZ, PANEL1 and GND2 of driver side J/B.

OK:

Voltage: 10 – 14 V

OK

Proceed to next circuit inspection shown on problem symptom table ([See page DI-1012](#)).

NG

3**Check wire harness and connector between driver side J/B ECU and body ground ([See page IN-35](#)).****NG****Repair or replace wire harness or connector.****OK****Proceed to next circuit inspection shown on problem symptom table ([See page DI-1012](#)).**