


Power source circuit

CIRCUIT DESCRIPTION

This circuit supplies power to operate the rear left door ECU.

WIRING DIAGRAM

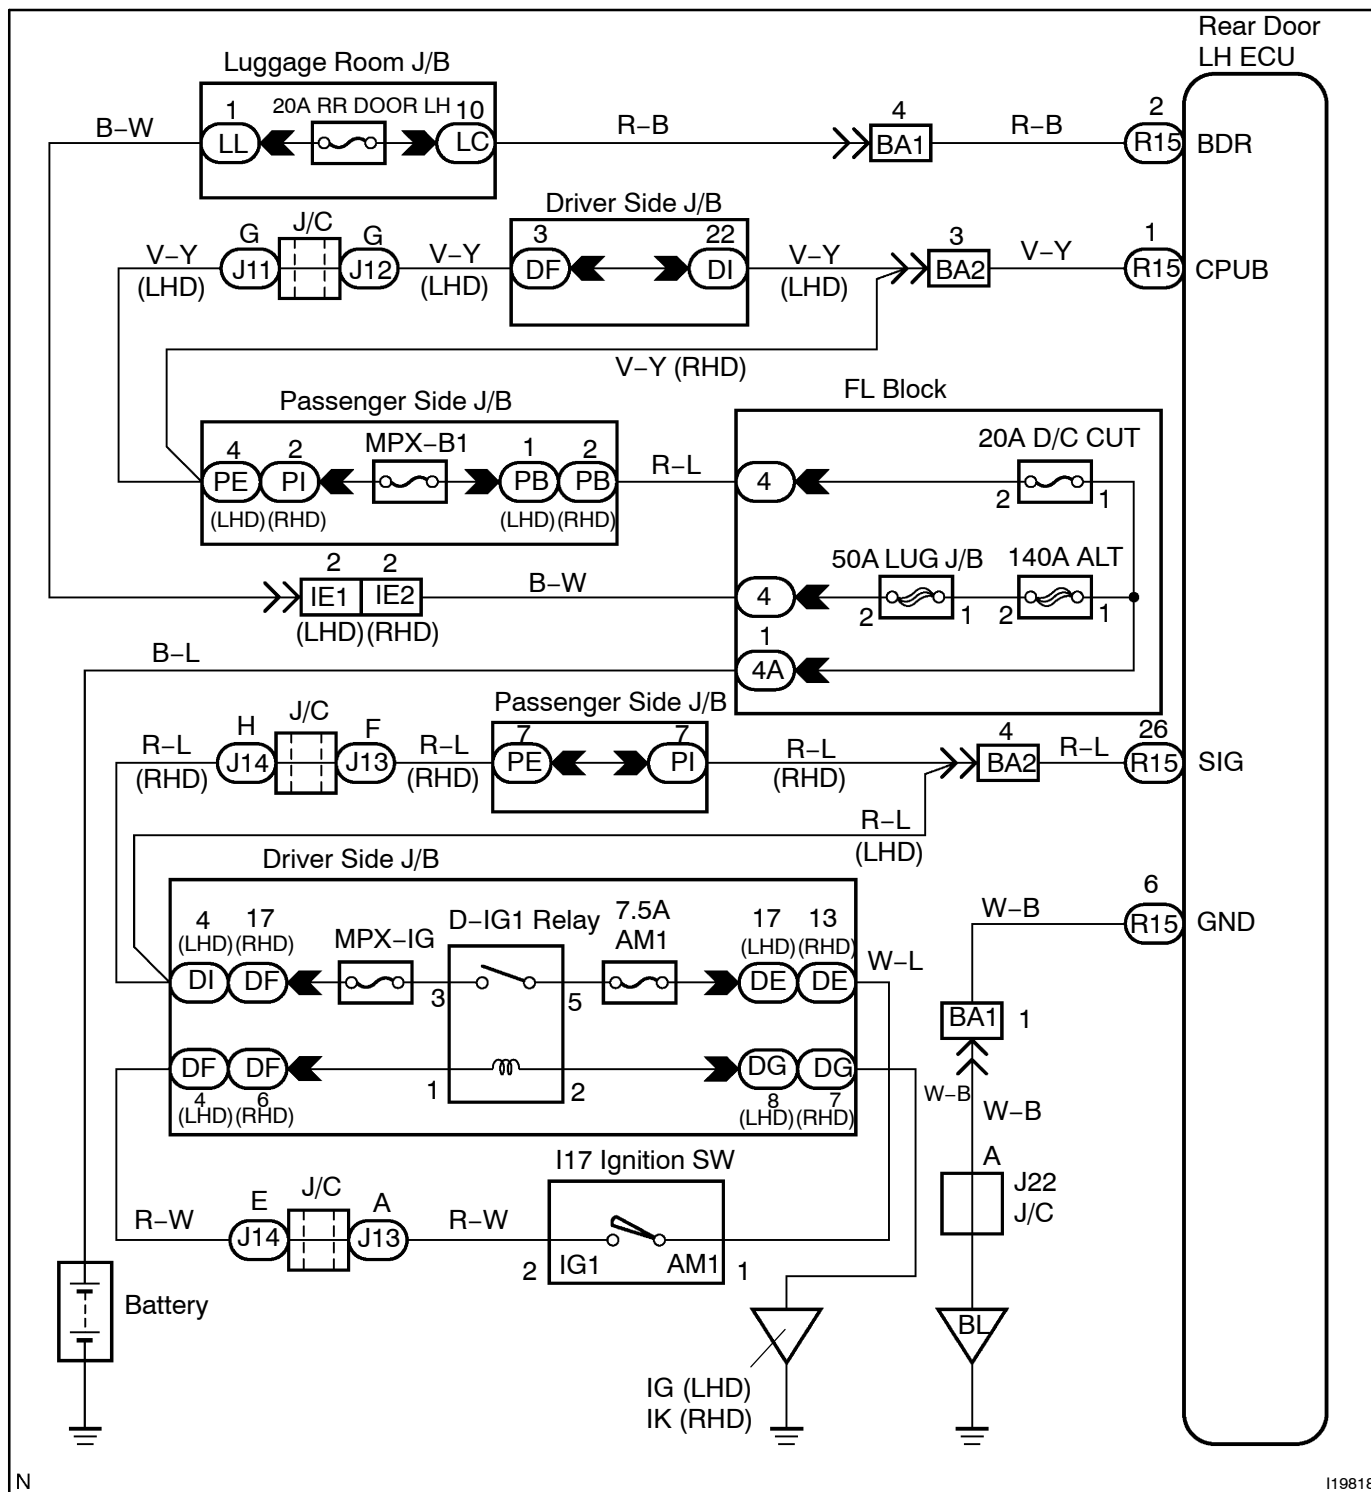

N

I19818

INSPECTION PROCEDURE

- | | |
|---|--|
| 1 | Check MPX-B1, MPX-IG and RL-DOOR LH fuse. |
|---|--|

CHECK:

Check continuity of MPX-B1, MPX-IG and RL-DOOR LH fuse.

OK:

Continuity

NG

Replace defective fuse.

OK

- | | |
|---|---|
| 2 | Check voltage between terminals BDR,CPUB, SIG and GND of rear door LH ECU connector. |
|---|---|

PREPARATION:

Turn the ignition switch ON.

CHECK:

Measure the voltage between terminals SIG and GND.

OK:

Voltage: 10 – 14V

PREPARATION:

- (a) Turn the ignition switch OFF.
- (b) Disconnect the rear door LH ECU connector.

CHECK:

Measure the voltage between terminals BDR, CPUB and GND.

OK:

Voltage: 10 – 14V

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-1395](#)).

NG

- | | |
|----------|--|
| 3 | Check wireharness and connector between ECU and body ground (See page IN-35). |
|----------|--|

NG

Repair or replace wireharness or connector

OK

Proceed to next circuit inspection shown on problem symptom table ([See page DI-1395](#)).