

FUEL SUPPLY

CONTENTS


13509000104

FUEL TANK	3	SEALANT	2
GENERAL INFORMATION	2	TROUBLESHOOTING	2

GENERAL INFORMATION

(1) The fuel tank is located under the floor below the rear seats to provide increased safety and a wider luggage space.

(2) A fuel cut-off valve has been adopted to prevent fuel from leaking out in the event of a collision.

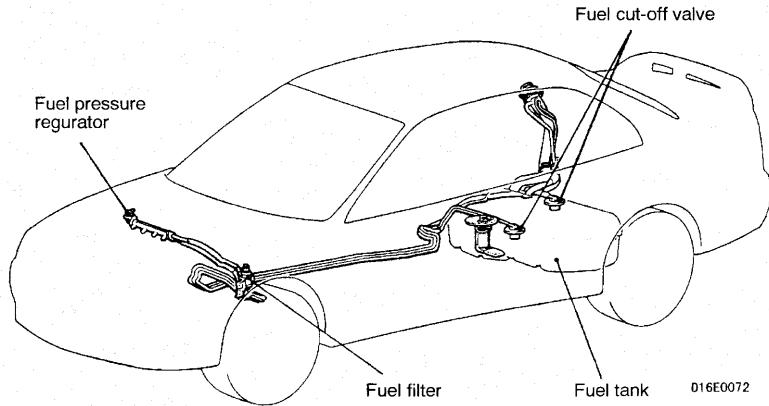

D16E0072

SEALANT

Item	Specified sealant
Plug and floor pan	3M 8513 Grommeted windshield sealer (Black)

TROUBLESHOOTING

Symptom	Probable cause	Remedy
Engine malfunctions due to insufficient fuel supply	Bent or kinked fuel pipe or hose	Repair or replace
	Clogged fuel pipe or hose	Clean or replace
	Clogged fuel filter or in-tank fuel filter	Replace
	Water in fuel filter	Replace the fuel filter or clean the fuel tank and fuel line
	Dirty or rusted fuel tank interior	Clean or replace
	Malfunctioning fuel pump (Clogged filter in the pump)	Replace
Evaporative emission control system malfunctions (When tank filler tube cap is removed, pressure releasing noise is heard)	Mis piping of vapor line	Correct
	Disconnected vapor line piping joint	Correct
	Folded, bent, cracked or clogged vapor line	Replace
	Faulty fuel tank filler tube cap	Replace
	Malfunctioning fuel tank pressure control valve	Replace

FUEL TANK

13500190374


REMOVAL AND INSTALLATION

Pre-removal Operation

- (1) Draining Fuel
- (2) Reduce the Inner Pressure of Fuel Line and Hose
(Refer to GROUP 13A - On-vehicle Service.)

Post-installation Operation

- (1) Refilling Fuel.
- (2) Checking for Fuel Leaks

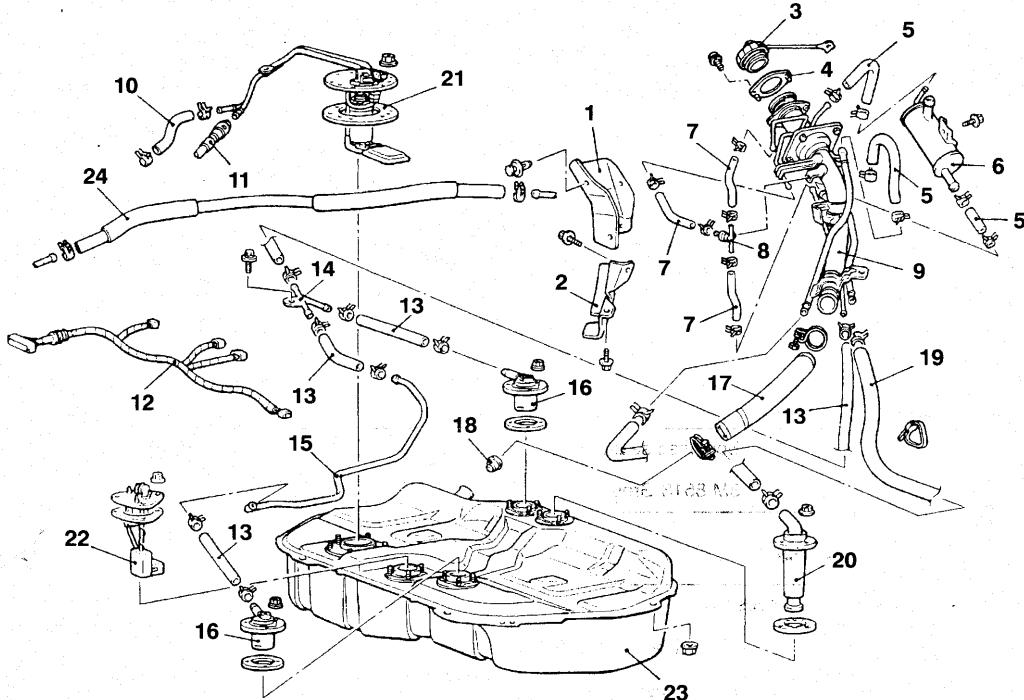


A03M0076

Removal steps

1. Filler neck protector A
2. Filler neck protector B
3. Fuel filler cap
4. Packing
5. Vapor hose
6. Separator assembly
7. Vapor hose
8. Fuel check valve assembly
9. Fuel filler neck assembly
10. Return hose
11. High-pressure fuel hose
 - Rear seat cushion (Refer to GROUP 52A - Rear Seat.)
12. Harness connector
13. Vapor hose
14. Pipe assembly
15. Vapor pipe
16. Fuel cut-off valve assembly
17. Filler hose
18. Fuel shut-off valve
19. Leveling hose
20. Leveling valve assembly
21. Fuel pump
22. Fuel gauge unit assembly
23. Fuel tank
24. Purge hose


13500450038

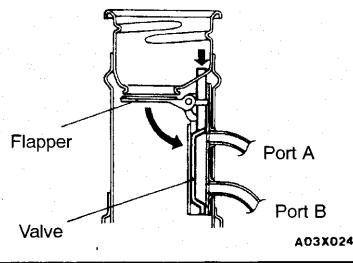

INSPECTION

FUEL TANK FILLER NECK ASSEMBLY CHECK


- (1) Connect a clean rubber hose to the port A of the fuel tank filler neck assembly.
- (2) Use a screwdriver or similar tool to push the flapper in order to close the valve, and then blow air into the hose. Check that the air does not flow out of the port B.
- (3) Use a screwdriver or similar tool to push the portion A shown in the illustration in order to open the valve, and then blow air into the hose. Check that the air flows out of the port B.

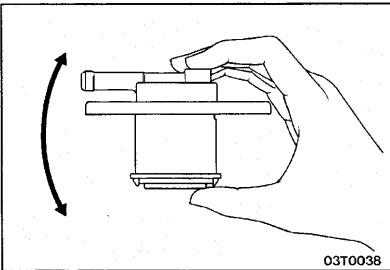

13500300135

FUEL CUT OFF VALVE CHECK


If the sound of the float valve moving (knocking sound) can be heard when the valve assembly is gently shaken up and down, then the valve is okay.

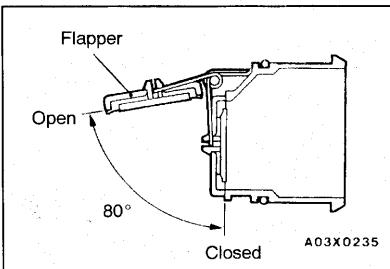

FUEL SHUT-OFF VALVE CHECK

13500440035

Check that the flapper and valve open and close as shown in the illustration.

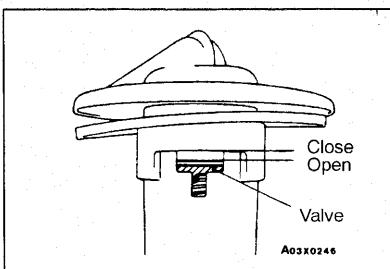

LEVELING VALVE CHECK


13500430025

- (1) Check that the leveling valve is at the open position when it is held vertically.
- (2) Check that the leveling valve is at the close position when it is tilted.

FUEL GAUGE UNIT CHECK

13500310060

Refer to GROUP 54, Combination Meter.

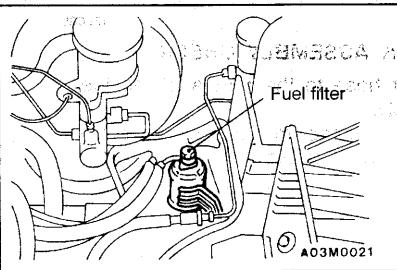


FUEL FILTER REPLACEMENT

13500130079

1. Bleed the residual pressure from inside the fuel line. (Refer to GROUP 13A - On-vehicle Service.)
2. Remove the air intake hose and canister.
3. Hold the fuel filter with an adjustable wrench and remove the eye bolt. Then remove the high-pressure fuel hose.

Caution


As there will be some pressure remaining in the fuel pipe line, cover it with a rag to prevent fuel from spraying out.

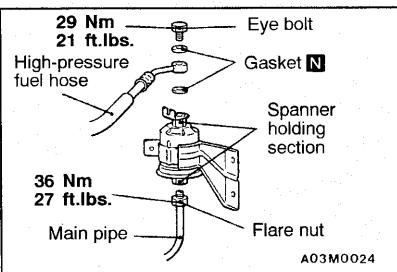


4. Hold the fuel filter with an adjustable wrench and loosen the flare nut. Then disconnect the main pipe connection.
5. Remove the fuel filter.
6. When installing the fuel filter, use a new gasket, and tighten the flare nut of the high-pressure fuel hose and the main pipe to the specified torque.
7. After installation, check that there are no fuel leaks.
 - (1) Apply battery voltage to the fuel pump drive terminal to operate the fuel pump. (Refer to GROUP 13A - On-vehicle Service.)
 - (2) Check for leaks when fuel pressure is applied.

FUEL GAUGE UNIT REPLACEMENT

13500160108

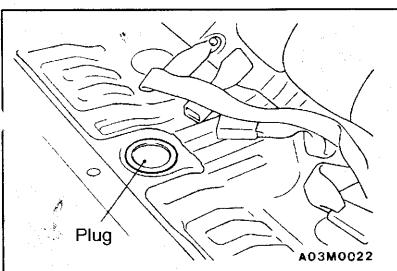

1. Remove the rear seat cushion. (Refer to GROUP 52A - Rear Seat.)
2. Remove the plug.

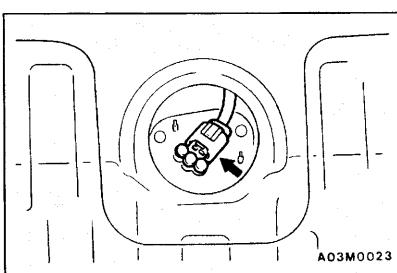

3. Disconnect the fuel gauge unit connector and remove the fuel gauge unit.
4. Apply the specified sealant to the contact surfaces of the plug and the floor pan, and install the plug.
Specified sealant:
3M ATD Part No. 8513 or equivalent
5. Install the rear seat cushion. (Refer to GROUP 52A - Rear Seat.)

