

Pre-Delivery Inspection and Periodic Maintenance

GROUP INDEX

General	0
Pre-delivery Inspection	1

FOREWORD

This Inspection and Maintenance Manual explains the main points necessary for inspection and maintenance of Mitsubishi vehicles, combining Pre-Delivery Inspection and Periodic Inspection in one volume. It is intended to contain enough information to allow the user to conduct work quickly and with precision.

For checking procedures, specifications, tightening torques, etc., there may be instances in which reference to the Workshop Manual is necessary. If so, refer to the Workshop Manual applicable to that model.

All information, illustrations and product descriptions contained in this manual are current as of time of publication. We, however, reserve the right to make changes at any time without prior notice or obligation.

Periodic Inspection and Maintenance ..	2
--	---

HOW TO USE THIS MANUAL

CONTENTS

The preceding page contains the GROUP INDEX which lists the group title and group number.

GROUP CONTENTS

The first page in each main group has an index to the subjects included in that group and it lists the contents of that group.

PAGE NUMBERS

All page numbers consist of two sets of digits separated by a dash. The digits preceding the dash identify the number of the main group. The digits following the dash represent the consecutive page number within the main group. The page numbers can be found on the top left or right of each page.

TEXT

Information is provided regarding the pre-delivery inspection and periodic inspection and maintenance applicable to all models.

Make the inspection after selecting the items corresponding to the model to be inspected.

MAINTENANCE INTERVAL

All inspection and maintenance must be conducted according to the table of "PERIODIC INSPECTION AND MAINTENANCE SCHEDULE" shown in GROUP 2.

Group title → **PERIODIC INSPECTION AND MAINTENANCE OPERATIONS INSIDE THE ENGINE COMPARTMENT** ← Section title Page number
↓
2-15

OPERATIONS INSIDE THE ENGINE COMPARTMENT

→ A1. CHECK V-BELT FOR CRACKS, FRAYING, WEAR, AND ADJUST ITS TENSION

M6020200100022

V-BELT CONDITION

Check the whole rounds of the V-belt for cracks, fraying and wear.

1. Check the ignition cable and rubber cap for damage or weakness, and check the installation condition.
2. Check the ignition cable and spark plug, distributor, and ignition coil connections for contamination, dirt, etc.
3. If dirty, clean it; if damaged, replace it.

Indicates the inspection to be made. The number preceding the indication of the inspection to be made is the same number as that used preceding in the periodic inspection and maintenance schedule.

Subject models

This manual is for the following models.

Vehicle model	Model code	Engine model	Total displacement ml	Transmission model	Transmission type	Wheel-drive system
L200	KB4T	4D56 DI-I T/C	2477	V5MB1	5M/T	4WD
	KB4T	4D56 DI-I T/C	2477	V4A5A	4A/T	

GROUP 0

GENERAL

CONTENTS

HOW TO USE THIS MANUAL.....	0-2	LUBRICANTS	0-3
PRECAUTIONS BEFORE SERVICE.	0-2	BRAKE FLUID.....	0-3
PROTECTING THE VEHICLE	0-2	SERVICING THE ELECTRICAL SYSTEM	0-4
DOING SERVICE WORK IN GROUPS OF TWO OR MORE MECHANICS	0-2	APPLICATION OF ANTI-CORROSION AGENTS AND UNDERCOATS.....	0-4
REMOVAL AND DISASSEMBLY	0-2	PRE-INSPECTION CONDITION.....	0-4
SPECIAL TOOLS	0-3	VEHICLE WASHING.....	0-4
PARTS TO BE REPLACED	0-3	MULTI USE TESTER (M.U.T.-III) SUB ASSEMBLY.....	0-4
PARTS	0-3	IN ORDER TO PREVENT VEHICLES FROM FIRE	0-5
TUBES AND OTHER RUBBER PARTS...	0-3	ENGINE OILS	0-5

HOW TO USE THIS MANUAL


This manual contains Pre-delivery inspection and Periodic inspection and maintenance.

M6000000100015
Group 0 and 1 have the contents for all vehicle models, and Group 2 has contents for the relevant vehicle models.

PRECAUTIONS BEFORE SERVICE

PROTECTING THE VEHICLE

M6001000100029

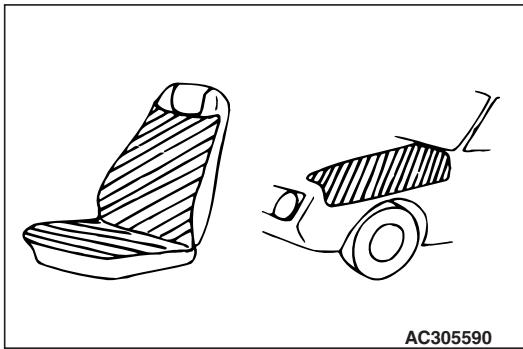


AC305590

If there is a likelihood of damaging interior or exterior parts during service operations, protect them with suitable covers (such as seat covers, fender covers, etc.).

DOING SERVICE WORK IN GROUPS OF TWO OR MORE MECHANICS

M6001000200026

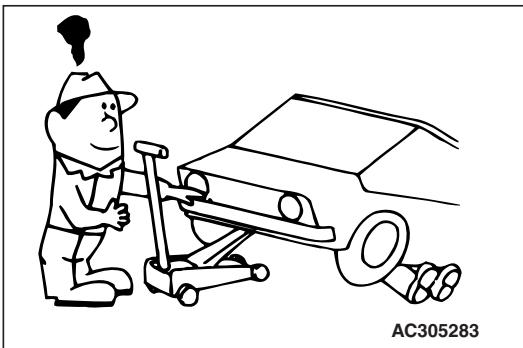

AC305283

If the service work is to be done by two or more mechanics working together, all the mechanics involved should take safety into consideration while they work.


REMOVAL AND DISASSEMBLY

M6001000300023



AC305591

When checking a malfunction, find the cause of the problem. If it is determined that removal and/or disassembly is necessary, perform the work by following the procedures contained in this manual.

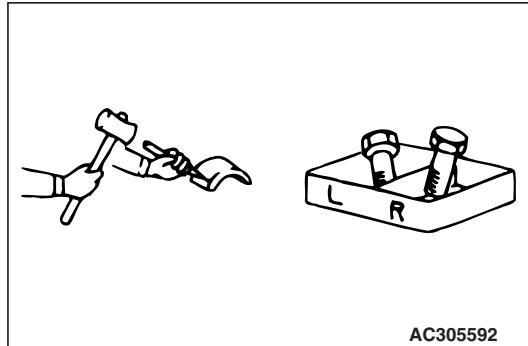


AC305592

If punch marks or mating marks are made to avoid error in assembly and facilitate the assembly work, be sure to make them in locations which will have no detrimental effect on performance and/or appearance. If an area having many parts, similar parts, and/or parts which are symmetrical right and left is disassembled, be sure to arrange the parts so that they do not become mixed during the assembly process.

1. Arrange the parts removed in the proper order.
2. Determine which parts are to be reused and which are to be replaced.
3. If bolts, nuts, etc., are to be replaced, be sure to use only the exact size specified.

SPECIAL TOOLS

M6001000400031

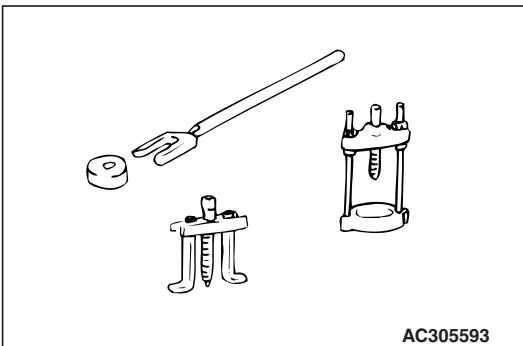


AC305593

If other tools are substituted for the special tools to do service or repair work, there is the danger that vehicle parts might be damaged, or the technician might be injured; therefore, be sure to use the special tool whenever doing any work for which the use of one is specified.

PARTS TO BE REPLACED

M6001000500027

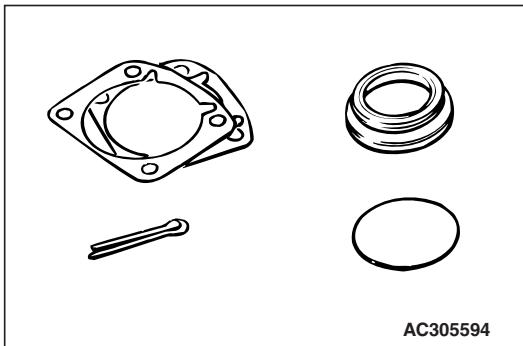


AC305594

If any of the following parts are removed, they must be replaced with new parts.

- Oil seals
- Gaskets (except rocker cover gasket)
- Packings
- O-rings
- Lock washers
- Split pins
- Self-locking nuts

PARTS

M6001000600024

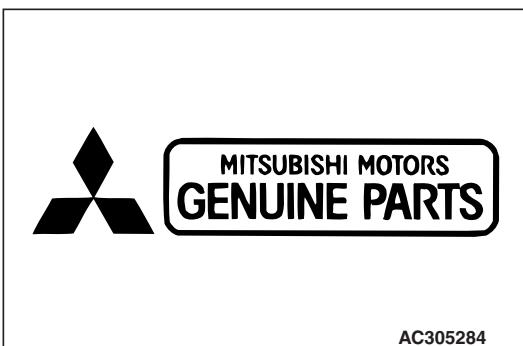


AC305284

When replacing parts, use MITSUBISHI genuine parts.

TUBES AND OTHER RUBBER PARTS

M6001000700021

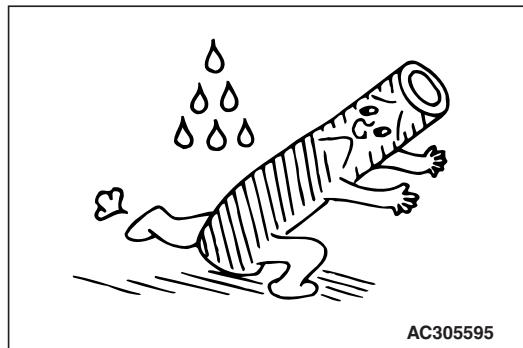


AC305595

Be careful to avoid spilling any petrol, oil, etc., because if it adheres to any tubes or other rubber parts, they might be adversely affected.

LUBRICANTS

M6001000800028

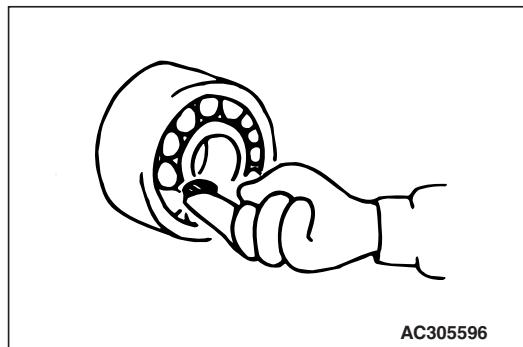


AC305596

In accordance with the instructions in this manual, apply the specified lubricants in the specified locations during assembly and installation.

BRAKE FLUID

M6001000900025

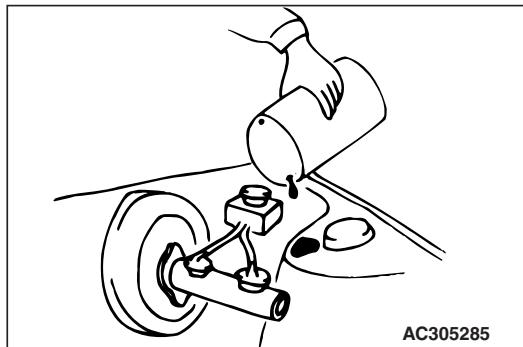


AC305285

Be careful to avoid spilling any brake fluid, because if it adheres to the vehicle body, the paint coat might be discoloured.

SERVICING THE ELECTRICAL SYSTEM

M6001001000025

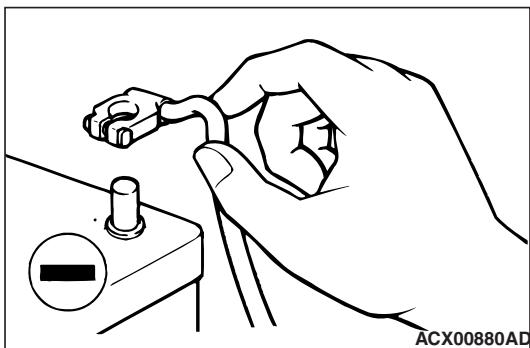

ACX00880AD

Before replacing a component related to the electrical system and before undertaking any repair procedures involving the electrical system, be sure to first disconnect the negative (-) cable from the battery in order to avoid damage caused by short-circuiting.

CAUTION

Before connecting or disconnecting the negative (-) cable, be sure to turn off the ignition switch and the lighting switch. (If this is not done, there is the possibility of semiconductor parts being damaged.)

APPLICATION OF ANTI-CORROSION AGENTS AND UNDERCOATS

M6001001100022

If oil or grease gets onto the oxygen sensor, it will cause a drop in the performance of the sensor. Cover the oxygen sensor with a protective cover when applying anti-corrosion agents and undercoats.

PRE-INSPECTION CONDITION


M6001001200029

"Pre-inspection condition" refers to the condition that the vehicle must be in before proper engine inspection can be carried out. If you see the words "Set the vehicle to the pre-inspection condition" in this manual, it means to set the vehicle to the following condition.

- Engine coolant temperature: 80 to 90°C
- Lamps, electric cooling fan and all accessories: OFF
- M/T: Neutral
- A/T: P range

VEHICLE WASHING

M6001001300037

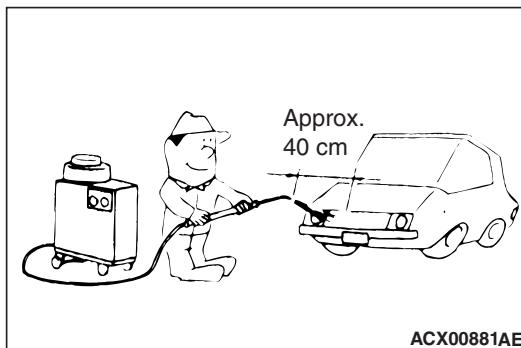

ACX00881AE


If high-pressure car-washing equipment or steam car-washing equipment is used to wash the vehicle, be sure to note the following information in order to avoid damage to plastic components, etc.

- Spray nozzle distance: Approx. 40 cm or more
- Spray pressure: 3,900 kPa or less
- Spray temperature: 82°C or less
- Time of concentrated spray to one point: within 30 sec.

MULTI USE TESTER (M.U.T.-III) SUB ASSEMBLY

M6001001900017

Refer to the "M.U.T.-III OPERATING INSTRUCTIONS" for instructions on handling the M.U.T.-III.

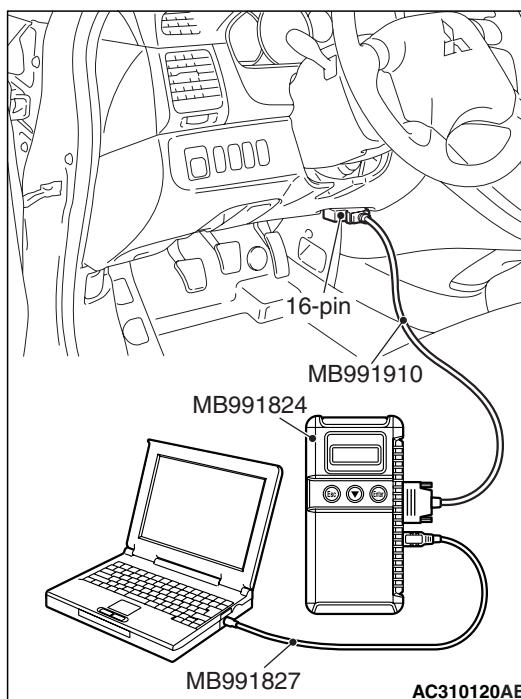

AC310120AB

Connect the M.U.T.-III to the diagnosis connector as shown in the illustration.

CAUTION

Turn the ignition switch to the LOCK (OFF) position before connecting or disconnecting the M.U.T.-III.

IN ORDER TO PREVENT VEHICLES FROM FIRE

M6001001500053
"Improper installation of electrical or fuel related parts could cause a fire. In order to retain the high quality and safety of the vehicle, it is important that any accessories that may be fitted or modifications/repairs that may be carried out which involve the electrical or fuel systems, must be carried out in accordance with MMC's information/Instructions".

ENGINE OILS

M6001001600050

HEALTH WARNING

Prolonged and repeated contact with mineral oil will result in the removal of natural fats from the skin, leading to dryness, irritation and dermatitis. In addition, used engine oil contains potentially harmful contaminants which may cause skin cancer. Adequate means of skin protection and washing facilities must be provided.

RECOMMENDED PRECAUTIONS

The most effective precaution is to adapt working practices which prevent, as far as practicable, the risk of skin contact with mineral oils, for example by using enclosed systems for handling used engine oil and by degreasing components, where practicable, before handling them.

Other precautions:

- Avoid prolonged and repeated contact with oils, particularly used engine oils.
- Wear protective clothing, including impervious gloves where practicable.
- Avoid contaminating clothes, particularly underpants, with oil.
- Do not put oily rags in pockets, the use of overalls without pockets will avoid this.
- Do not wear heavily soiled clothing and oil-impregnated foot-wear. Overalls must be cleaned regularly and kept separately from personal clothing.
- Where there is a risk of eye contact, eye protection should be worn, for example, chemical goggles or face shields; in addition an eye wash facility should be provided.
- Obtain first aid treatment immediately for open cuts and wounds.
- Wash regularly with soap and water to ensure all oil is removed, especially before meals (skin cleansers and nail brushes will help). After cleaning, the application of preparations containing lanolin to replace the natural skin oils is advised.
- Do not use petrol, kerosine, diesel fuel, gas oil, thinners or solvents for cleaning skin.
- Use barrier creams, applying them before each work period, to help the removal of oil from the skin after work.
- If skin disorders develop, obtain medical advice without delay.

NOTES

GROUP 1

PRE-DELIVERY INSPECTION

CONTENTS

NOTES CONCERNING ENTRIES	1-3	15. STEERING LINKAGE AND SPLIT PINS	1-12
PAINTWORK TERMS	1-5	16. UNDER BODY	1-12
FIRST STEP	1-6	BEFORE ROAD TEST	1-12
1. CONNECTION OF DARK CURRENT CONNECTOR	1-6	17. SEAT ADJUSTERS AND SEATBACK LATCHES	1-12
BODY	1-7	18. INHIBITOR SWITCH	1-12
2. WRAP FILM	1-7	19. IDLE CONTROL KNOB	1-12
3. EXTERIOR	1-8	20. INSTRUMENT PANEL CONTROLS	1-12
4. OPERATION OF DOOR LOCKING SYSTEMS AND DOOR HINGES	1-9	21. METERS, GAUGES, WARNING LAMPS AND INDICATION LAMPS	1-13
5. OPERATION OF DOOR MIRRORS, WINDOWS AND SUNROOF	1-9	22. AIR CONDITIONING, HEATER AND DEFROSTER SYSTEM	1-13
UNDER HOOD	1-10	23. WIPERS AND WASHERS	1-13
6. ENGINE OIL LEVEL	1-10	24. OPERATION OF SERVICE BRAKES AND PARKING BRAKES	1-14
7. BRAKE MASTER CYLINDER FLUID LEVEL	1-10	25. CLUTCH OPERATION	1-14
8. CLUTCH MASTER CYLINDER FLUID LEVEL	1-10	26. OPERATION OF SEAT BELTS, SHOULDER BELTS AND RETRACTORS	1-14
9. WASHER FLUID LEVEL	1-10	ROAD TEST	1-15
10. BATTERY CONDITION AND CONNECTIONS	1-10	27. ENGINE PERFORMANCE AND EXHAUST GAS	1-15
11. POWER STEERING FLUID LEVEL	1-10	28. TRANSMISSION IN ALL RANGES	1-15
12. ELECTRICAL WIRING	1-11	29. BRAKES	1-15
UNDER VEHICLE	1-11	30. STEERING CONTROL	1-16
13. TYRE AND SPARE TYRE PRESSURES	1-11	31. VIBRATION AND RATTLES	1-16
14. SUSPENSION SYSTEM	1-11	32. ELECTRICAL EQUIPMENT	1-16

Continued on next page

AFTER ROAD TEST	1-17		
33. IDLE SPEED.....	1-17	40. FRONT AND REAR DIFFERENTIAL OIL LEVELS.....	1-18
34. IGNITION TIMING.....	1-17	41. HOSES, FLUID LINES AND CONNECTIONS LOCATED UNDER VEHICLE	1-18
35. RADIATOR COOLANT LEVEL.....	1-17		
36. HOSES, FLUID LINES AND CONNECTIONS LOCATED UNDER HOOD	1-17		
37. MANUAL TRANSMISSION AND TRANSFER (4WD) OIL LEVEL.....	1-17	FINAL STEPS.....	1-19
38. AUTOMATIC TRANSMISSION FLUID LEVEL.....	1-18	42. HEADLAMP AIMING.....	1-19
39. ENGINE, TRANSMISSION, STEERING GEAR BOX AND DIFFERENTIAL FOR LEAKS ..	1-18	43. EQUIPMENT.....	1-19
		44. EXTERIOR AND INTERIOR	1-19
		45. OWNER INSTRUCTIONS.....	1-19

NOTES CONCERNING ENTRIES

M6010100100154

This section describes the details and the inspection methods employed for the pre-delivery inspection of vehicles.


The inspection should be conducted according to the sequence described in the TABLE OF PRE-DELIVERY INSPECTION.

Inspection methods are described following the TABLE OF PRE-DELIVERY INSPECTION.

NOTE: The spaces for model, C/# (Chassis number), E/# (engine number), aggregate distance travelled in kilometres (miles), date of inspection, name of person conducting the inspection, and body colour must be completed without fail.

NOTE: The spaces for place of inspection, and name of owner should be completed as required.

TABLE OF PRE-DELIVERY INSPECTION

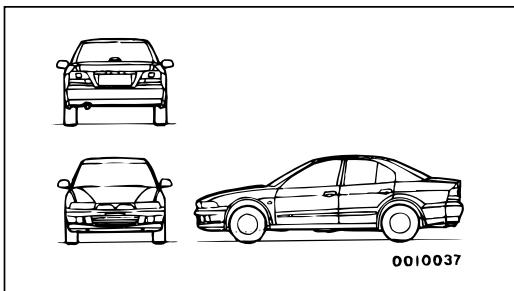

Model	
Chassis number	
Engine number	
Distance Travelled	km
Owner	
Date of inspection	
Place of inspection	
Inspector	
Body colour	

Symbols to be used					
✓	Good	A	Needs adjustment	T	Needs retightening
C	Needs cleaning	L	Needs replenishment of lubricant, water, etc.	X	Needs replenishment of repair

INSPECTION PROCEDURE

First Step

- Connection of the dark current connector

Body

- Wrap film
- Exterior
- Operation of door locking systems and door hinges
- Operation of door mirrors, windows and sunroof
- Under Hood
- Engine oil level
- Brake master cylinder fluid level
- Clutch master cylinder fluid level
- Washer fluid level
- Battery condition and connections
- Power steering fluid level
- Electrical wiring

Under Vehicle

- Tyre and spare tyre pressures
- Suspension system
- Steering linkage and split pins
- Under body

Before Road Test

- Seat adjusters and seat back latches
- Choke system and inhibitor switch
- Idle control knob
- Instrument panel controls
- Meters, gauges, warning lamps and indication lamps
- Air conditioning, heater and defroster systems
- Wipers and washers
- Operation of service brakes and parking brakes
- Clutch operation
- Operation of seat belts, shoulder belts and retractors

Road Test

- Engine performance and exhaust gas
- Transmission in all ranges
- Brakes
- Steering control
- Vibration and rattles
- Electrical equipment

After Road Test

- Idle speed
- Ignition timing
- Radiator coolant level
- Hoses, fluid lines and connections located under hood
- Manual transmission and transfer (4WD) oil level
- Automatic transmission fluid level
- Engine, transmission, steering gear box and differential for leaks
- Front and rear differential oil levels
- Hoses, fluid lines and connections located under vehicle

Final Steps

- Headlamp aiming
- Equipment
- Exterior and interior
- Owner instructions

PAINTWORK TERMS

M6010200100032


Term	Definition	Remarks
Blister	A raised bubble in the paint (from the base or the undercoat) caused by abnormal moisture. The bubble may contain either water or air.	
Change in tone	The colour tone of the painted surface is not uniform.	Including wrong colour, discoloration and decoloration.
Contact mark	A mark on the painted surface as a result of contact by hands or clothing at the time of paint application.	
Crack	A crack in the painted surface.	Cracks may be either shallow or deep.
Dirt in paintwork	Rough surface resulting from foreign material in the paint or from dust deposited on wet paint during painting or storage.	
Filed or ground traces	Deep scratches in sheet metal surface, resulting from improper use of buffer or sander, are not completely covered, and are visible through paint coating.	
Orange peel	The painted surface has the appearance of an orange peel.	
Peeling	The paint flakes off (partly or over a wide area).	The peeling may be minor, medium, or major.
Pin holes	Tiny holes in the painted surface.	
Runs	A visible trickle of dried paint on the surface.	Either undercoat or top-coat.
Scratches	Scratches on the painted surface.	
Shrink	The painted surface "shrinks", causing wrinkles.	
Smears	Spots of soot or other material deposited on the painted surface.	Including stains and water spots.
Spray mist	The painted surface includes fine particles of other paint.	
Uneven lustre	The lustre of the painted surface is not uniform.	
Uneven metallic dispersion	The metallic dispersion of the painted surface is not uniform.	
Visibly incomplete topcoating	A part of the undercoating visible.	

FIRST STEP

1. CONNECTION OF DARK CURRENT
CONNECTOR


CONNECTING PROCEDURE

M6010300100136


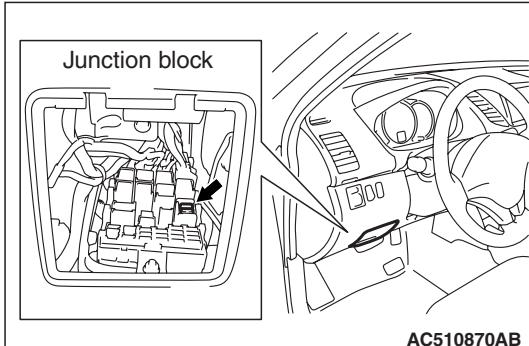


The fuse (2 pieces) in the junction block as shown is removed at shipping. The removed fuse is housed in the ashtray. Install it in the location shown in the figure again.


COMPASS ADJUSTMENT OF RV METER

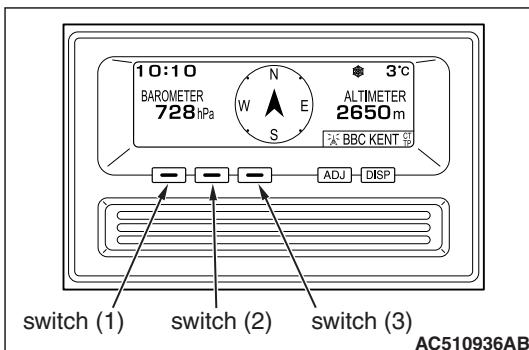

1. Press function switch (3) for three seconds or more during the environment information screen to call up the screen as shown in the illustration.

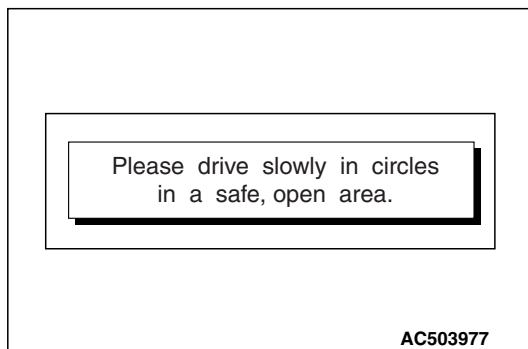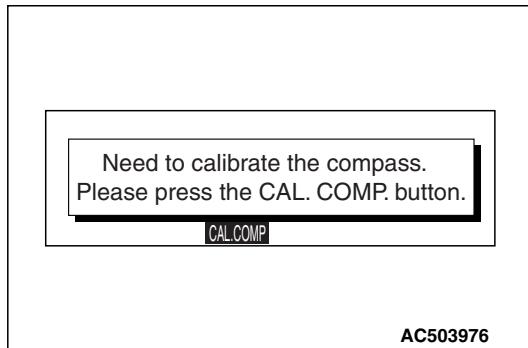


2. When function switch (3) (CAL.COMP) is pressed, a message of urging geomagnetization calibration is displayed.

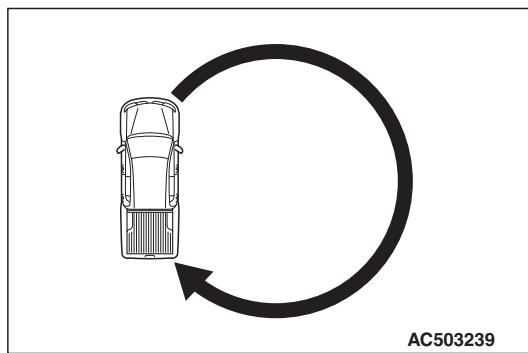

3. Turn the vehicle slowly through 360 degrees.

NOTE: When driving around the vehicle to correct the sensor, select a safe and open area where there are no structures exist such as the high-tension line and the iron bridge that affect the geo-magnetic sensor in circumference.

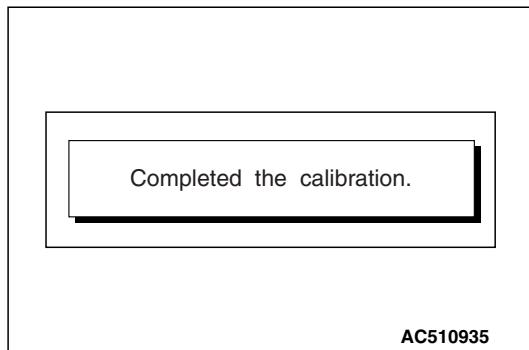


4. A message of completing geomagnetization calibration is displayed.

BODY

2. WRAP FILM


M6010400100025

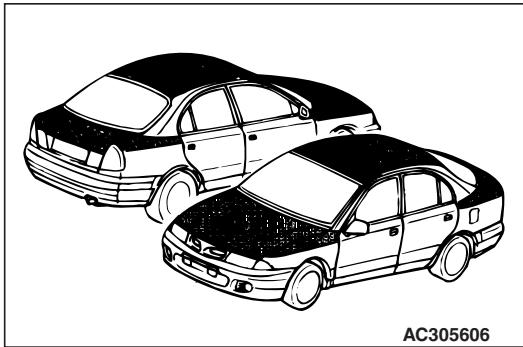

AC305606

To protect the exterior finish of vehicles prior to dealer delivery, a protective coating is used. The coating is a thin white resin film. It is applied to all painted exterior horizontal surfaces of the vehicle and is held in place with a tacky adhesive backing.

Removal procedure

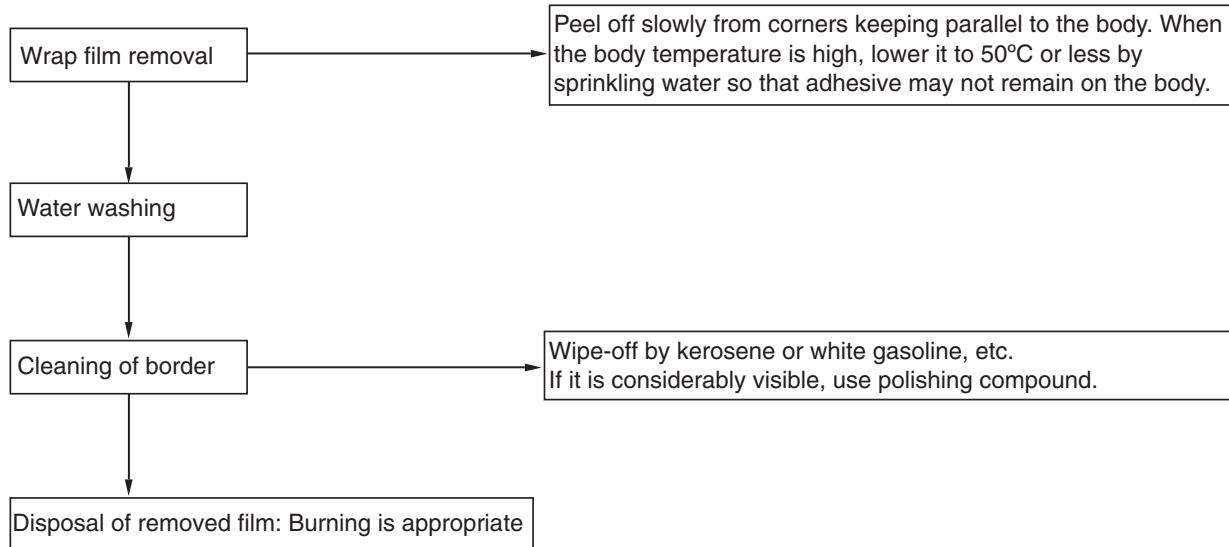

AC306352 AB

Wrapping work


No.	Process	Operation Content
1	Continuous peeling of film	The film is peeled off.
2	Water rinse	Sand and dust are removed from the vehicle body and it is dried thoroughly.
3	Parts where the film is to be reapplied are checked.	There should be no leftover adhesive, swelling or discoloration of the paint film, or other defects.
4	Treatment of parts where film is to be reapplied.	Treat the defects on the parts where film is to be reapplied. If a solvent is used to remove leftover adhesive, wipe off the solvent thoroughly.
5	Reapplication	<ol style="list-style-type: none"> Basically, the parts where the film is to be applied should be the same as the film that is to be applied. Apply the film from the lower portion of the body, working upward progressively. Apply pressure using a plastic squeegee or similar tool. As necessary, cut the film at the various parts such as windshield washer nozzles, hood and trunk lid.

⚠ CAUTION

1. **Apply the film with the body at a temperature of 10 – 40°C. (Workability is good in this temperature range.)**
2. **If the outside surface of the film (the side with no adhesive) is brought into direct contact with the paint film and left in that state, it may result in loss of paint gloss, so make sure the film does not get folded under or otherwise make contact with the paint film.**
3. **Air bubbles and wrinkles do not have a particularly bad influence on the paint film, but every effort should be made to prevent air bubbles from being trapped under the film by applying pressure from the center of the film outward toward the edges during application.**
4. **To prevent intrusion of rainwater, be sure to press down the overlapping portions and cut ends of the film securely.**

3. EXTERIOR

M6010400200066

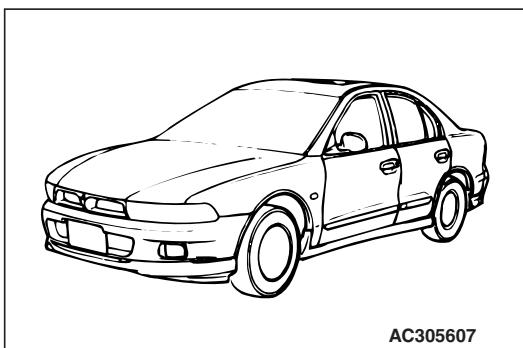



1. Visually inspect the entire exterior.
 - (1) Paint condition
 - (2) Corrosion, scratches
 - (3) Bent edges, dented panels
2. Coated surfaces maintenance

Touch up minor paint chips and flaws.

NOTE: For terms of paintwork, refer to P.1-5.


4. OPERATION OF DOOR LOCKING SYSTEMS AND DOOR HINGES

M6010400300063

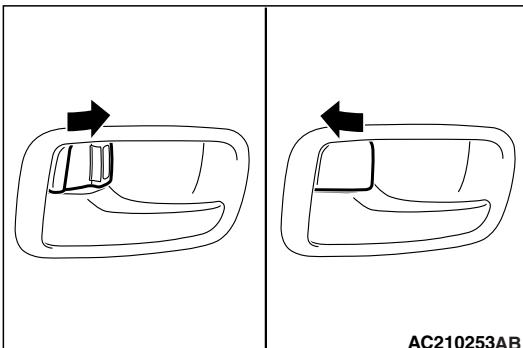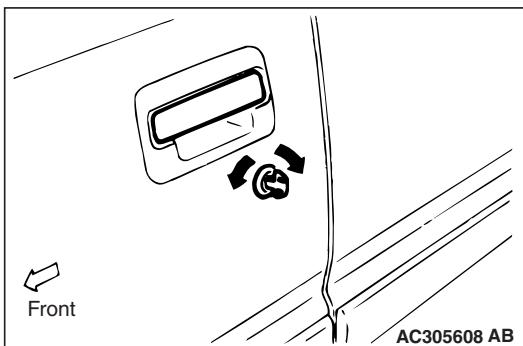

1. Open each door to check the release mechanism and ease of operation.
2. Close the door to check the latch and striker.
3. Open the door, operate the lock lever and close the door to check the lock.
4. Partially close the door to check the open-door detent.
5. Unlock each door with the key to check lock operation.
6. Verify that all doors can be locked by the lock buttons.

NOTE: Adjust and lubricate the door latches, strikers and locks as required.

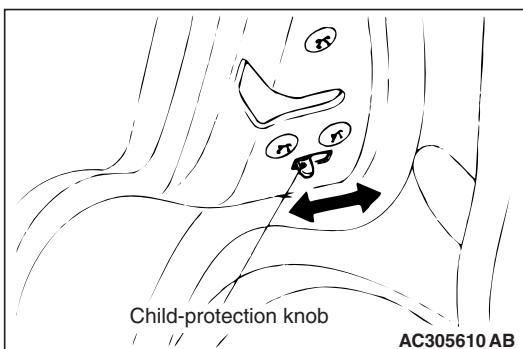


7. Verify that the rear doors can't be opened by the inner door handle when the child protection knob at the end of the door is shifted to the "LOCK" position with the inside lock plunger raised.

CAUTION

Set the lock to the "FREE" position on child protection of both rear doors. (For four door models)

5. OPERATION OF DOOR MIRRORS, WINDOWS AND SUNROOF

M6010400400026

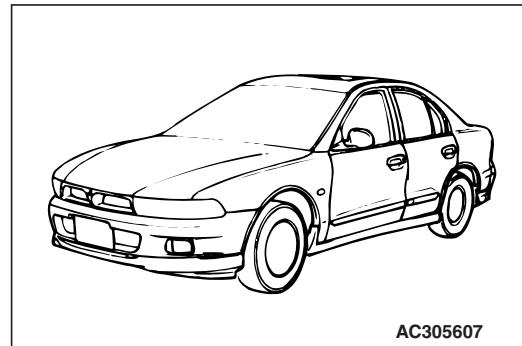

1. Door mirrors

Check that the mirror operate properly.

2. Door windows

Close all door windows to the fully closed position to check ease of operation.

3. Power windows

Check that the door windows operate when the respective switches are operated. Check that when the lock switches are depressed, the respective door windows can no more be opened or closed.

4. Slide window

Close the slide window to the fully closed position to check operation.


5. Sunroof

Close the sunroof to the fully closed position to check operation.

UNDER HOOD

6. ENGINE OIL LEVEL


M6010500100022

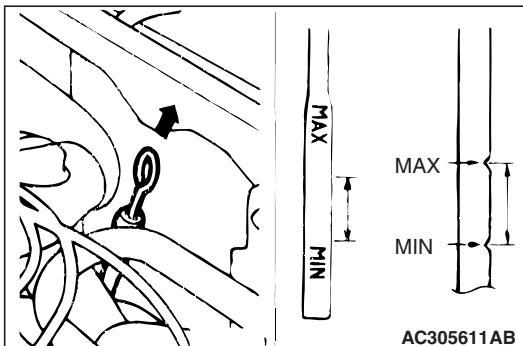

Check that the oil level is between "MAX" and "MIN". If it is at or below MIN, add the necessary amount of the specified engine oil referring to GROUP 2, Periodic Inspection and Maintenance P.2-3.

7. BRAKE MASTER CYLINDER FLUID LEVEL

M6010500200029

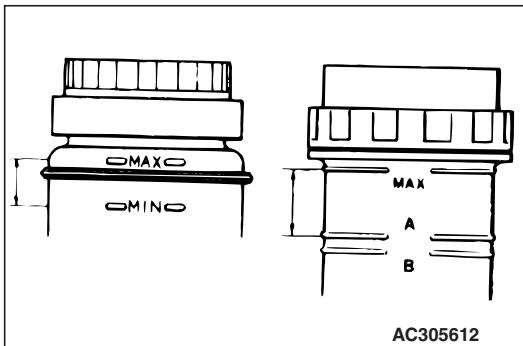


Check the fluid level.

If it is below the "MIN" mark, replenish fresh brake fluid up to the "MAX" mark.

Specified Brake Fluid: DOT3 or DOT4

8. CLUTCH MASTER CYLINDER FLUID LEVEL

M6010500300026

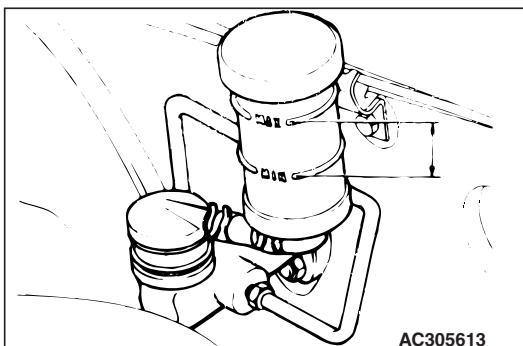


Check the fluid level.

If it is below the "MIN" mark, replenish fresh brake fluid up to the "MAX" mark.

Specified Brake Fluid: DOT3 or DOT4

9. WASHER FLUID LEVEL

M6010500400023

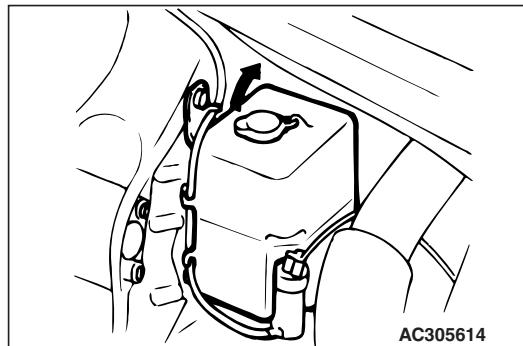


Check the fluid level; if it is low, replenish the washer fluid at the up to MAX mark.

1. Windshield washer reservoir
2. Rear window washer reservoir

10. BATTERY CONDITION AND CONNECTIONS

M6010500500064

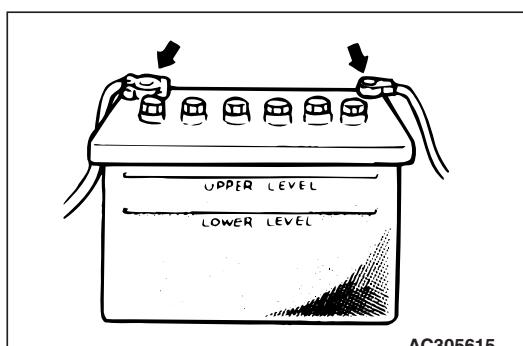


Inspect the battery connections. Verify that they are tightened.

NOTE: Do not wipe the lubricant from the battery posts and cable clamps.

11. POWER STEERING FLUID LEVEL

M6010500600094

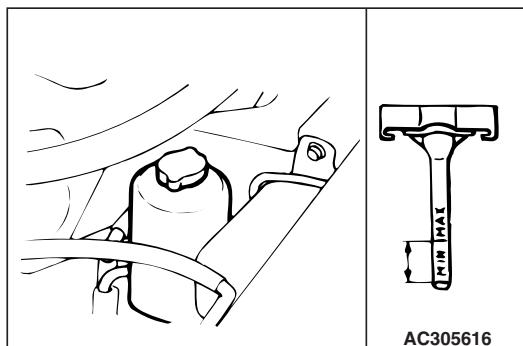


1. Check that the fluid level is between "MAX" and "MIN".

2. If the fluid is added, start the engine and turn the steering wheel from stop to stop several times to expel air from the system.

Specified gear oil: Automatic transmission fluid DEXRON III or DEXRON II

12. ELECTRICAL WIRING

M6010500700024

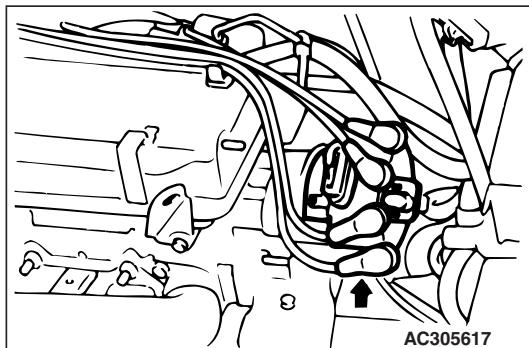


1. Each electrical wiring harness and connector
 - (1) Check each harness to be correctly routed and securely clipped.
 - (2) Confirm that all connections are tight.
2. Ignition cable
Be sure that all ignition cables are firmly attached to the spark plugs, distributor cap (or crank angle sensor) and ignition coil.

UNDER VEHICLE

13. TYRE AND SPARE TYRE PRESSURES


M6010600100063

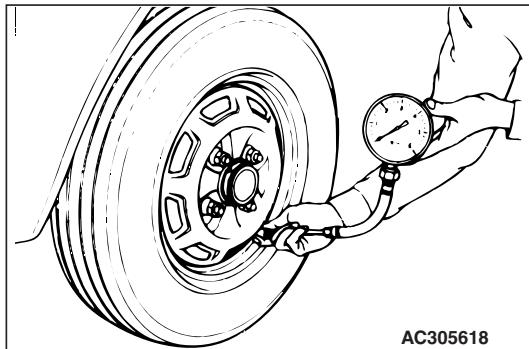

1. Tyre specification
Check the correct tyre specification.
2. Tyre pressures
Adjust each tyre pressure.
NOTE: Recommended pressure is shown on the tyre pressure label.
3. Valve stem extensions
Verify that the valve stem extensions are installed where necessary.
4. Install the wheel covers, wheel rings and hub caps.

14. SUSPENSION SYSTEM


M6010600200026

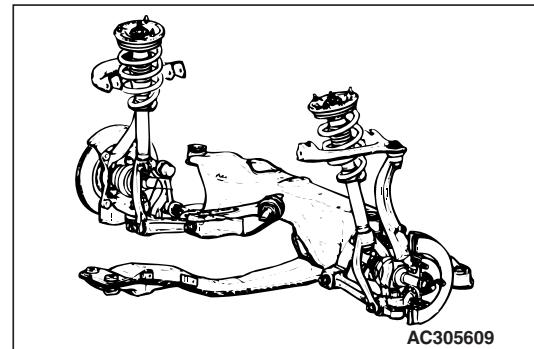

Check to be sure that each installation bolt and nut is tightened. If split pins are used, make sure that they are properly installed.

1. Lower arm, Upper arm
2. Stabilizer bar
3. Strut assembly

REMOVE FRONT SPRING RESTRAINTS

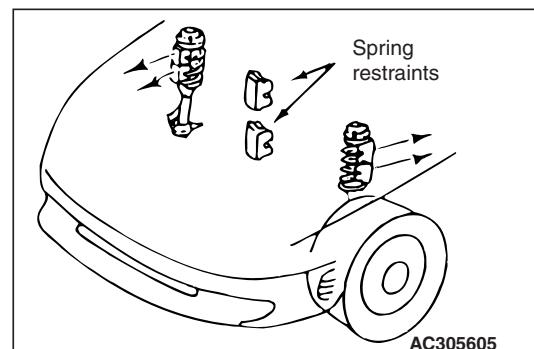


With the vehicle correctly positioned on the sub-frame contact points, and the suspension fully extended, remove the rubber restraints from the front springs.

CAUTION

It is very important that these restraints must be removed during predelivery-inspection. Failure to do so could cause ride and handling complaints.

15. STEERING LINKAGE AND SPLIT PINS

M6010600300023

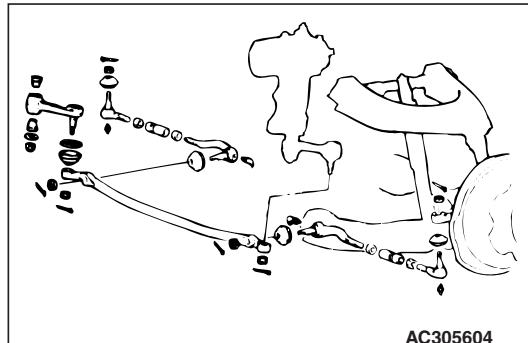

1. Steering linkage retaining nuts and split pins
Check visually and by feel that the steering linkage retaining nuts are correctly tightened and the split pins are correctly installed.
2. Tie rods and relay rod
Check that the tie rods and relay rod of the steering linkage are not bent and that the tie rod end lock nuts are securely tightened.
3. Steering components
 - (1) Check that each of the steering components is tightened.
 - (2) Check the tie rod end, nuts and split pins for proper installation.
 - (3) Check the condition of bellows-type dust seals.
4. Split pins
Check the front axle nuts and rear wheel spindle nuts for split pins.

16. UNDER BODY


M6010600400020

Check under body and under body coating for damage.

BEFORE ROAD TEST

17. SEAT ADJUSTERS AND SEATBACK LATCHES

M6010700100060

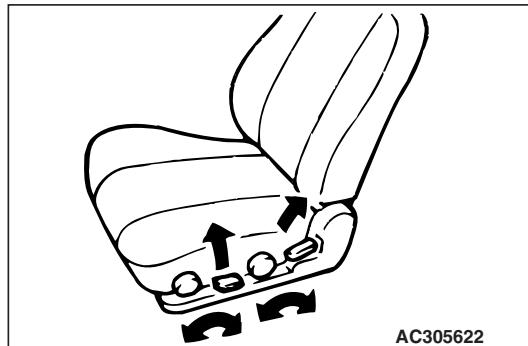

Check the operation of the various parts of the seats.

1. Mechanical adjusters of the seats
2. Operation of the latch for tilting the seatbacks forward and backward.

18. INHIBITOR SWITCH

M6010701100029

On models with an automatic transmission, be sure the engine starts in both "P" and "N" position, and does not start in other positions.

19. IDLE CONTROL KNOB

M6010700300020

Verify that the diesel engine revolution increases when the idle control knob is pulled out.

20. INSTRUMENT PANEL CONTROLS


M6010700400061

Check the operation of the following

1. Horn
2. Headlamps
3. Exterior and interior lamps
4. Instrument panel lamps
5. Instrument brightness control

21. METERS, GAUGES, WARNING LAMPS AND INDICATION LAMPS

M6010700500024

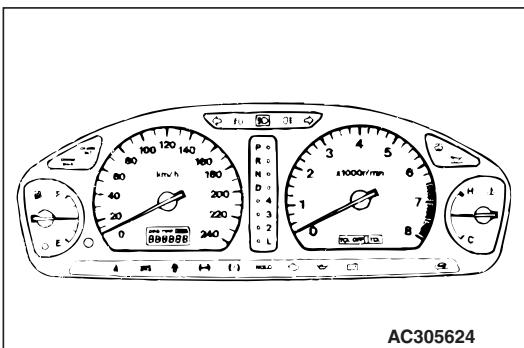


1. Check the meters and gauges are functioning properly.
2. Check each indicator lamp and warning lamp functions properly.


22. AIR CONDITIONING, HEATER AND DEFROSTER SYSTEM

M6010700600021

Check the systems for proper operation.

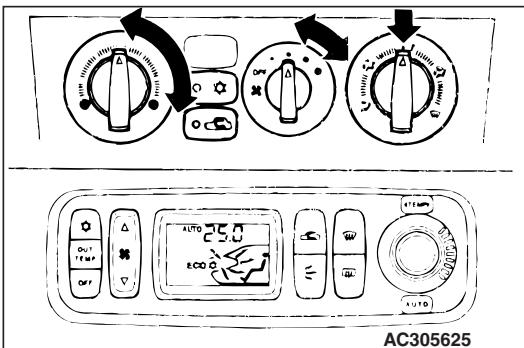

1. Air conditioning
 - (1) Operate the air conditioning system.
 - (2) Operate the air conditioning light.
 - (3) Operate the control lever in all ranges.
 - (4) Operate the blower motor switch in all ranges.

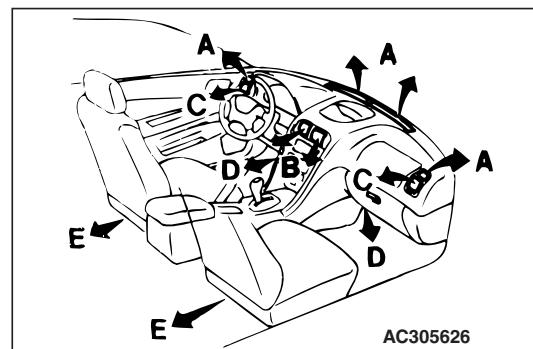

2. Heater and defroster

- (1) After the engine has warmed up, turn on the heater.
- (2) Operate the blower motor switch in all ranges.
- (3) Move the control to "Defrost" position.

A: From front and side defroster

B: From centre ventilators


C: From side ventilators

D: From under the instrument panel

E: From under the front seat (some models only)

23. WIPERS AND WASHERS

M6010700700028

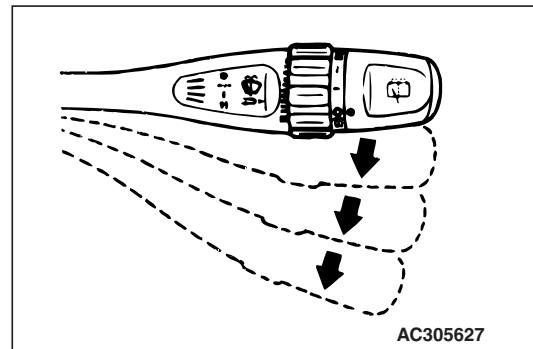

1. Front wiper and washer


- (1) Check operation of the front wipers in all ranges.
- (2) Check the aim of the front washer stream.
- (3) Check the wiper blade-stop positions.
- (4) Verify that the interval between cycles of wiping is shifted when timer knob is turned to any position.
- (5) Verify that the front wipers function by operating the washer switch.

2. Rear wiper and washer

- (1) Check the operation of the rear wiper.
- (2) Check the aim of the rear washer stream.
- (3) Check the wiper blade-stop positions.


24. OPERATION OF SERVICE BRAKES AND PARKING BRAKES

M6010700800177

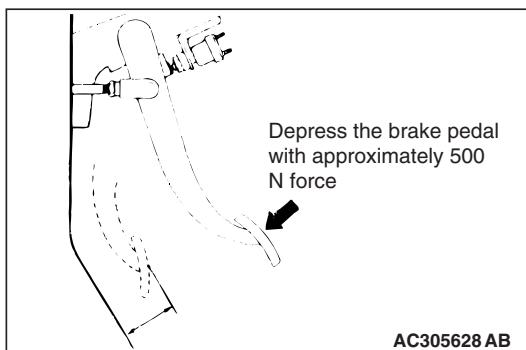

1. Service brakes

- (1) Check the clearance between the brake pedal and the floorboard when the brake pedal is depressed.

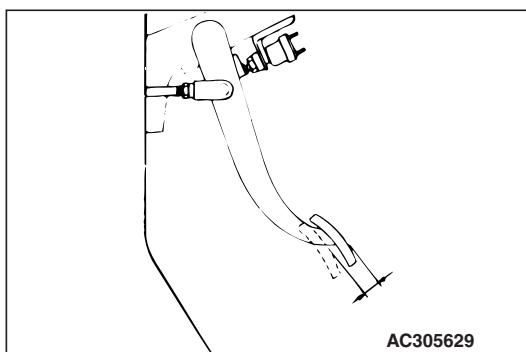

- (2) Verify correct brake pedal free play.

NOTE: For inspection and adjustment of the service brake, refer to GROUP 2, Periodic Inspection and Maintenance P.2-3.


2. Parking brake

Check the parking brake drag and lever travel.


NOTE: For inspection and adjustment of the parking brake, refer to GROUP 2, Periodic Inspection and Maintenance P.2-3.

25. CLUTCH OPERATION

M6010700900174

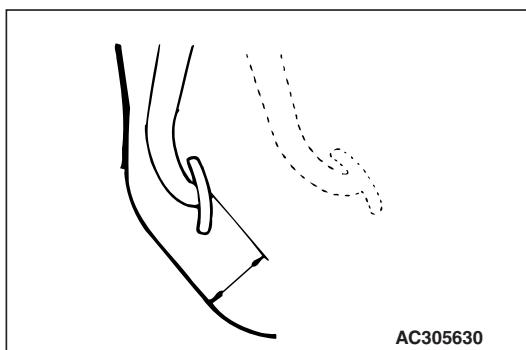

1. Check the clutch operation in all driving ranges.
2. Check the pedal to floorboard clearance when the clutch is just disengaged.

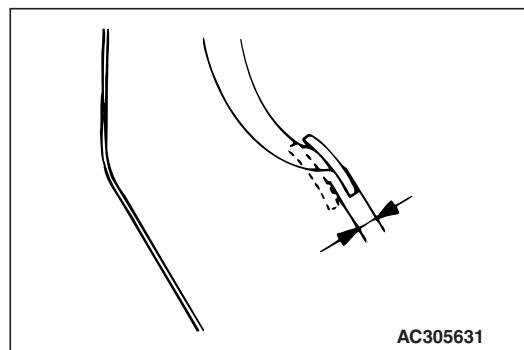


3. Verify correct clutch pedal free play.

NOTE: For inspection and adjustment of the clutch pedal, refer to GROUP 2, Periodic Inspection and Maintenance P.2-3.

26. OPERATION OF SEAT BELTS, SHOULDER BELTS AND RETRACTORS

M6010701000022

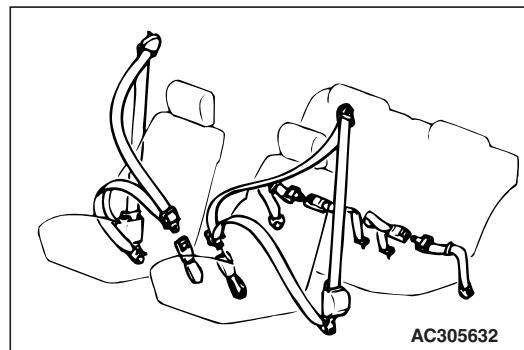


1. Verify that the seat belt warning lamp operates properly.
2. Check all seat belts and harnesses to assure that they connect and hold properly.
3. Lean forward to check that the shoulder harnesses allow movement.
4. Check the condition of the belts and anchors.
5. Check for proper seat belt retraction.

ROAD TEST

27. ENGINE PERFORMANCE AND EXHAUST GAS

M6010800100023

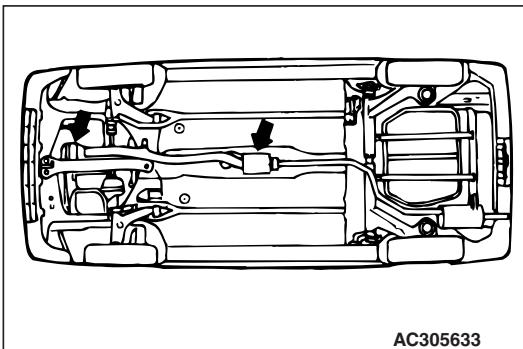

1. Engine performance


Check the engine for proper performance and accelerator pedal for smooth operation.

2. Exhaust system

- (1) Check the exhaust system components for gas leaks.
- (2) Verify that no black smoking is emitted from the end of the exhaust pipe (diesel-powered vehicles).


28. TRANSMISSION IN ALL RANGES

M6010800200020

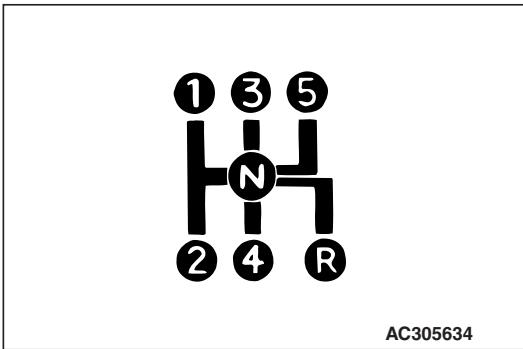

1. Manual transmission

Check the transmission in all forward ranges and in reverse.

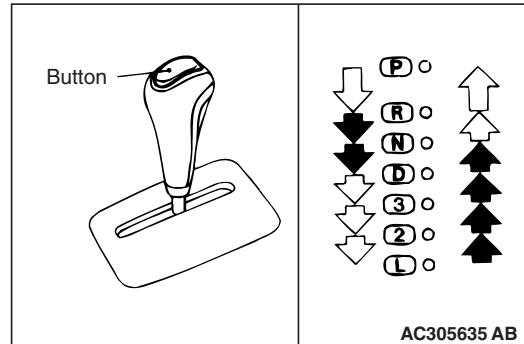

2. Automatic transmission

- (1) Make sure shift indicator lines up properly in all ranges.
- (2) Depress the accelerator completely to check that the manual kickdown is operating correctly.
- (3) Stop the vehicle on a steep incline. Put the automatic transmission in "P" position and slowly release the service brakes to see if "P" position lock holds. If it does not hold, the transmission requires further service.

29. BRAKES

M6010800300027

1. Service Brake


Put the vehicle in gear and apply the brakes while the vehicle is in motion. Be sure brake operation is smooth and positive.

2. Parking Brake

- (1) Stop the vehicle on a steep incline. With the service brakes firmly applied, place the transmission in "N" position, and set the parking brakes.
- (2) Slowly release the service brakes to see if the parking brakes will hold.

30. STEERING CONTROL

M6010800400024

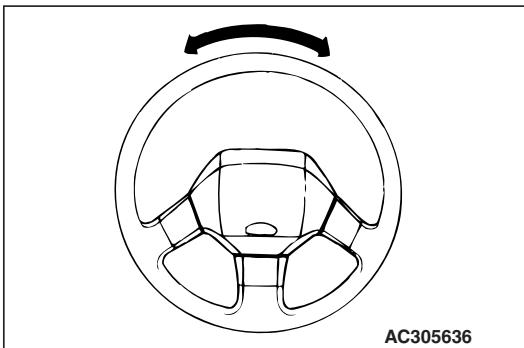

AC305636

1. Check for excessive play or looseness.
2. Check the steering wheel centre.


31. VIBRATION AND RATTLES

M6010800500021

1. Locate squeaks, rattles and unusual vibrations.
2. Verify that no noise occurs from the engine, transmission, axle and body.

32. ELECTRICAL EQUIPMENT

M6010800600028

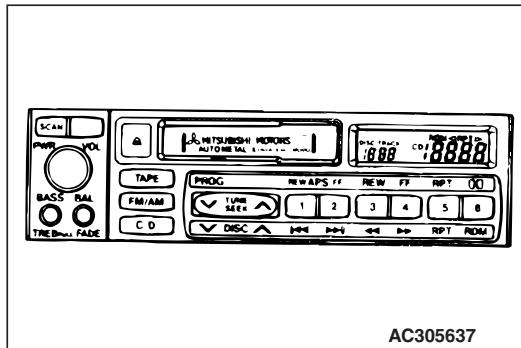

AC305637

1. Radio

Tune the radio to a local broadcasting station and check the following:

- (1) Operate the volume, tone, balance and fader controls, etc.
- (2) Pull out the pushbuttons, dial another station and set each pushbuttons.
- (3) Operate the AM/FM switch.

2. Tape player

Insert a cassette tape in the tape player and check as follows:

- (1) Check the operation of the tape feeder and rewind.
- (2) Check the ejection.
- (3) Check the operation of volume, tone, balance and fader controls, etc.

AFTER ROAD TEST

33. IDLE SPEED


Check the engine idle speed.

NOTE: For specific idle speed adjustment procedure, refer to GROUP 2, Periodic Inspection and Maintenance P.2-3.

M6010900100097

34. IGNITION TIMING

M6010900200094

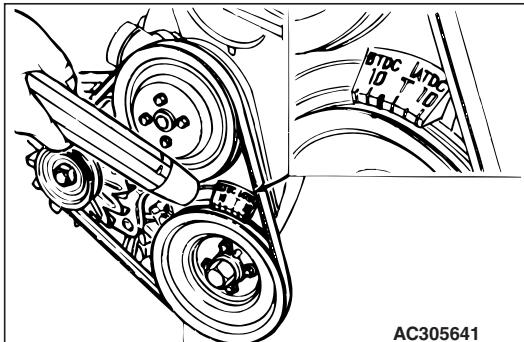


AC305641

Check the ignition timing. Except MPI vehicles with crankshaft-mounted crankshaft angle sensor.

NOTE: For the inspection and adjustment of the ignition timing, refer to GROUP 2, Periodic Inspection and Maintenance P.2-3.

35. RADIATOR COOLANT LEVEL

M6010900300091

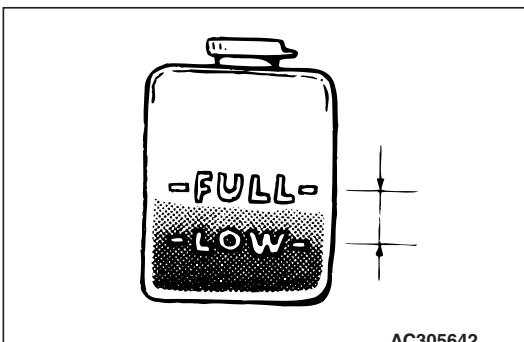

AC305642

1. Check that the coolant level in the reserve tank is at or above "LOW" mark at normal engine operating temperature. And check cooling system for leaks.
2. Check that the coolant concentration is 30% to 60%.


⚠ CAUTION

Do not remove the radiator cap while the cooling system is under pressure.

When removing the radiator cap, be careful of steam and boiling water. Add coolant only to the reserve tank if it is required.

36. HOSES, FLUID LINES AND CONNECTIONS LOCATED UNDER HOOD

M6010900400139

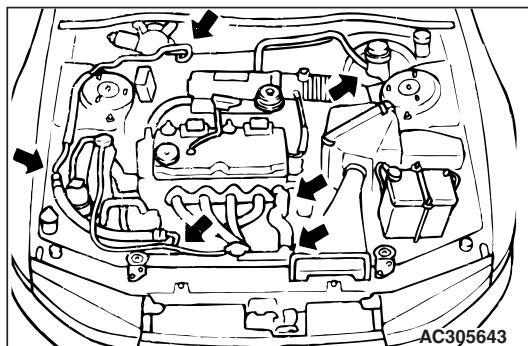

AC305643

1. Check all brake, fuel, power steering and air conditioner lines and connections; verify proper routing, check connections for leaks, tighten loose connector as required.
2. Inspect routing and connections of all vacuum, and radiator and heater houses.


⚠ CAUTION

Remember that the air conditioner system is under pressure.

NOTE: Keep in mind that an oily residue around an air conditioner connector does not necessarily indicate a leak. Oil is used to lubricate fittings during assembly. Be sure lines are not twisted or kinked.

37. MANUAL TRANSMISSION AND TRANSFER (4WD) OIL LEVEL

M6010900500125

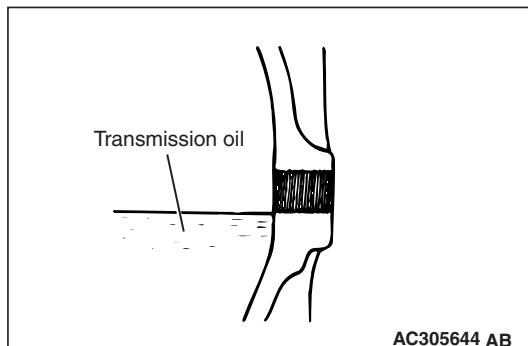


AC305644 AB

1. Remove the filler plug.
2. Check the oil level. If the oil level is at or slightly below the filler hole, it is in satisfactory condition.
3. If the level is low, replenish the transmission and transfer case with fresh oil by using a lubricator.

NOTE: For the specified oil, refer to GROUP 2, Periodic Inspection and Maintenance P.2-3.

38. AUTOMATIC TRANSMISSION FLUID LEVEL

M6010900600155

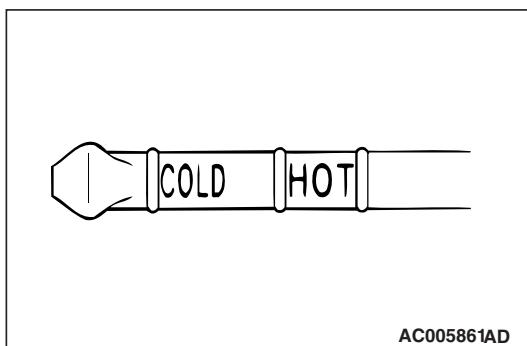

1. Remove the dipstick and check the fluid level.
2. Fluid level is okay if it is in the specified range as illustration at normal engine operating temperature.
3. If the level is below the lower notch, replenish fluid until the level reaches the upper notch.

Automatic transmission fluid: DIA QUEEN ATF SP III

CAUTION

Do not overfill.

39. ENGINE, TRANSMISSION, STEERING GEAR BOX AND DIFFERENTIAL FOR LEAKS


M6010900700099

Check the engine, transmission, steering gear box and differential for oil leaks.

40. FRONT AND REAR DIFFERENTIAL OIL LEVELS

M6010900800126

1. Remove the filler plug.
2. Check the oil level. If the oil level is at or slightly below the filler hole, it is in satisfactory condition.

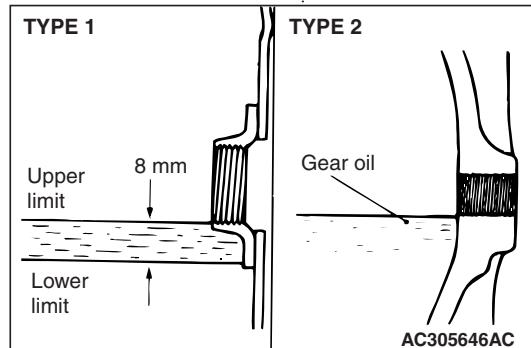


Type 1 only: Remove the filler plug, and check the gear oil level. Check that gear oil level is not 8 mm below the bottom of filler plug hole.

3. If the level is low, replenish the front and/or rear differential with fresh oil by using a lubricator.

NOTE: For the specified oil, refer to GROUP 2, Periodic Inspection and Maintenance P.2-3.

41. HOSES, FLUID LINES AND CONNECTIONS LOCATED UNDER VEHICLE

M6010901000093

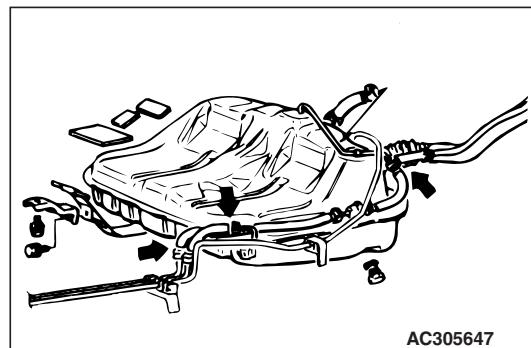


1. Check all hoses, fluid lines and connections for leaks.
2. Check all hoses and fluid lines for proper routing away from sharp edges and moving components.

FINAL STEPS

42. HEADLAMP AIMING

M6011000100138

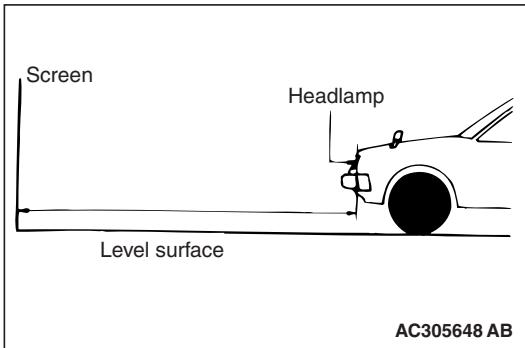


Check condition for headlamp aiming.

NOTE: For headlamp aiming procedures, refer to the Workshop Manual for that model.

43. EQUIPMENT

M6011000200094

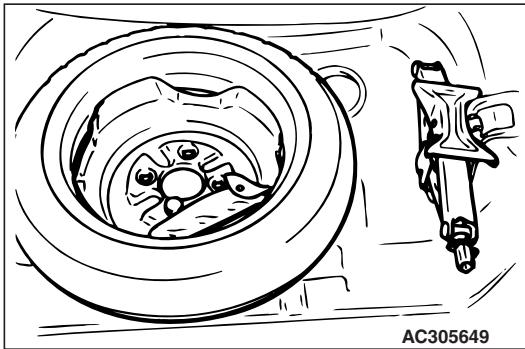


Check the installation of the various equipment.

1. Floor mats
2. Spare tyre
3. Jack, jack handle and tool set

44. EXTERIOR AND INTERIOR

M6011000300091

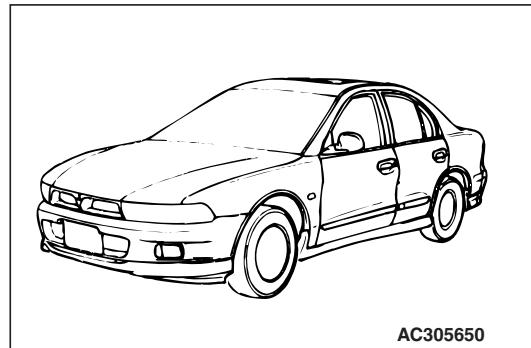

Finally check and clean the exterior and interior.

1. Wash the vehicle to remove all traces of road grime and other dirt on the vehicle as a result of new vehicle preparations.
2. Clean exterior and interior glass surface.
3. Remove all protective covers.
4. Remove undercoat overspray, excess window sealer, and excess weatherstrip adhesive.
5. Verify that the secondary key can not unlock the glove box and tailgate/boot lid (if so equipped).
6. Remove shipping and inspection stickers.

45. OWNER INSTRUCTIONS

M6011000400098

1. Verify that the owner's manual and service booklet is in the glove box.
2. Place the spare keys in envelope in the glove box before delivery.

NOTES

GROUP 2

PERIODIC INSPECTION AND MAINTENANCE

CONTENTS

PERIODIC INSPECTION AND MAINTENANCE SCHEDULE	2-3	OPERATIONS UNDER THE VEHICLE 2-12	
OPERATIONS INSIDE THE ENGINE COMPARTMENT	2-6	B1. CHECK SUSPENSION SYSTEM FOR DAMAGE AND LOOSENESS	2-12
A1. CHECK V-BELT FOR CRACKS, FRAYING, WEAR, AND ADJUST ITS TENSION	2-6	B2. CHECK SUSPENSION ARM BALL JOINTS FOR PLAY, AND DUST COVERS FOR DAMAGE	2-13
A2. CHECK VACUUM PUMP OIL HOSE FOR DAMAGE	2-6	B3. LUBRICATE PROPELLER SHAFT WITH GREASE FITTING	2-13
A3. CHECK INTAKE AIR HOSE FOR DAMAGE	2-6	B4. CHECK DRIVESHAFT BOOTS FOR DAMAGE	2-13
A4. REPLACE ENGINE TIMING BELT <EXCEPT VEHICLES WITH TIMING CHAIN>	2-7	B5. CHECK STEERING LINKAGE FOR DAMAGE AND LOOSE CONNECTIONS (INCLUDING SEALS AND BOOTS)	2-13
A5. CHECK RADIATOR HOSES FOR DAMAGE AND PROPER CONNECTION	2-7	B6. CHECK GEAR OIL LEVEL IN MANUAL TRANSMISSION	2-14
A6. CHECK ENGINE COOLANT LEVEL IN RESERVOIR	2-7	B7. CHECK GEAR OIL LEVEL IN TRANSFER CASE (4WD)	2-14
A7. CHANGE ENGINE COOLANT	2-7	B8. CHANGE GEAR OIL IN MANUAL TRANSMISSION	2-14
A8. CHECK AIR CLEANER ELEMENT FOR CLOGGING AND DAMAGE	2-9	B9. CHANGE GEAR OIL IN TRANSFER CASE (4WD)	2-15
A9. REPLACE AIR CLEANER ELEMENT	2-9	B10. CHECK GEAR OIL LEVEL IN FRONT AND REAR DIFFERENTIAL	2-15
A10. CHECK FLUID LEVEL IN BRAKE RESERVOIR AND CLUTCH RESERVOIR (HYDRAULIC TYPE CLUTCH)	2-9	B11. CHANGE GEAR OIL IN FRONT AND REAR DIFFERENTIAL	2-15
A11. CHANGE BRAKE FLUID	2-9	B12. CHECK EXHAUST PIPE CONNECTIONS FOR GAS LEAKAGE, AND CHECK PIPE INSTALLATION	2-16
A12. CHECK BATTERY ELECTROLYTE LEVEL	2-10		
A13. REPLACE FUEL FILTER	2-11		

Continued on next page

OPERATIONS INSIDE THE VEHICLE	2-16	OPERATIONS AFTER ENGINE IS WARMED UP	2-23
C1. CHECK BRAKE PEDAL AND CLUTCH PEDAL FOR FREE PLAY	2-16	E1. CHECK FLUID LEVEL IN AUTOMATIC TRANSMISSION	2-23
C2. CHECK PARKING BRAKE LEVER STROKE AND PLAY	2-18	E2. CHANGE AUTOMATIC TRANSMISSION FLUID	2-24
OPERATIONS OUTSIDE THE VEHICLE	2-19	E3. CHANGE ENGINE OIL	2-26
D1. CHECK UNEVEN TYRE WEAR	2-19	E4. REPLACE ENGINE OIL FILTER	2-26
D2. CHECK FRONT WHEEL BEARINGS FOR PLAY	2-20	E5. CHECK ENGINE IDLING SPEED	2-27
D3. CHECK BRAKE HOSES AND PIPES FOR LEAKAGE	2-21	E6. CHECK EXHAUST GAS RECIRCULATION (EGR) SYSTEM	2-27
D4. CHECK BRAKE PADS AND DISCS FOR WEAR	2-21	E7. CHECK VALVE CLEARANCE (EXCEPT VEHICLES WITH AUTO-LASH ADJUSTER)	2-28
D5. CHECK BRAKE SHOE LININGS AND DRUMS FOR WEAR	2-22	OTHERS	2-30
D6. CHECK FUEL HOSES AND PIPES FOR LEAKAGE OR DETERIORATION	2-23	F1. CHECK BODY CONDITION FOR DAMAGE	2-30
		F2. ROAD TEST	2-30

PERIODIC INSPECTION AND MAINTENANCE SCHEDULE

M6020100100296

For items which indicate both distance and time (in months), the inspection should be made at whichever (distance or time) comes first.

•: Applicable for L200

Maintenance item	Maintenance operation	Maintenance interval		Application
OPERATIONS INSIDE THE ENGINE COMPARTMENT				
A1 Check V-belt for cracks, fraying, wear, and adjust its tension	Inspection	Every 20,000 km or every 12 months		•
A2 Check vacuum pump oil hose for damage	Inspection	Every 20,000 km or every 12 months		•
A3 Check intake air hose for damage (vehicles with turbocharger)	Inspection	Every 40,000 km or every 2 years		•
A4 Replace engine timing belt [including timing belt B] (except vehicles with timing chain)	Replace	Every 100,000 km		•
A5 Check radiator hoses for damage and proper connection	Inspection	Every 20,000 km or every 12 months		•
A6 Check engine coolant level in reservoir	Inspection	Every 20,000 km or every 12 months		•
A7 Change engine coolant	Change	Every 80,000 km or every 4 years		•
A8 Check air cleaner element for clogging and damage	Inspection	Normal usage	Every 20,000 km or every 12 months	•
		Severe usage	Every 10,000 km or every 6 months	•
A9 Replace air cleaner element	Replace	Normal usage	Every 40,000 km or every 2 years	•
		Severe usage	More frequently	•
A10 Check fluid level in brake reservoir and clutch reservoir (hydraulic type clutch)	Inspection	Every 20,000 km or every 12 months		•
A11 Change brake fluid	Change	Every 40,000 km or every 2 years		•
A12 Check battery electrolyte level	Inspection	Every 20,000 km or every 12 months		•
A13 Replace fuel filter	Replace	Every 40,000 km or every 2 years		•
OPERATIONS UNDER THE VEHICLE				
B1 Check suspension system for damage and looseness	Inspection	Every 20,000 km or every 12 months		•
B2 Check suspension arm ball joints for play, and dust covers for damage	Inspection	Every 20,000 km or every 12 months		•
B3 Lubricate propeller shaft with grease fitting	Lubrication	Every 20,000 km or every 12 months		•
B4 Check driveshaft boots for damage	Inspection	Normal usage	Every 20,000 km or every 12 months	•
		Severe usage	Every 10,000 km	•

PERIODIC INSPECTION AND MAINTENANCE
PERIODIC INSPECTION AND MAINTENANCE SCHEDULE

Maintenance item		Maintenance operation	Maintenance interval		Application
B5	Check steering linkage for damage and loose connections (including seals and boots)	Inspection	Every 20,000 km or every 12 months		•
B6	Check gear oil level in manual transmission	Inspection	Every 20,000 km or every 12 months		•
B7	Check gear oil level in transfer case (4WD)	Inspection	Every 20,000 km or every 12 months		•
B8	Change gear oil in manual transmission	Change	Normal usage	Every 100,000 km or every 5 years	•
			Severe usage	Every 40,000 km or every 2 years	•
B9	Change gear oil in transfer case (4WD)	Change	Normal usage	Every 100,000 km or every 5 years	•
			Severe usage	Every 40,000 km or every 2 years	•
B10	Check gear oil level in front and rear differential	Inspection	Every 20,000 km or every 12 months		•
B11	Change gear oil in front and rear differential	Conventional differential	Change	Normal usage	Every 80,000 km or every 4 years
			Change	Severe usage	Every 40,000 km or every 2 years
	Hybrid type LSD		Change	Normal usage	Every 60,000 km or every 3 years
			Change	Severe usage	Every 20,000 km or every 12 months
B12	Check exhaust pipe connections for gas leakage, and check pipe installation	Inspection	Every 40,000 km or every 2 years		•
OPERATIONS INSIDE THE VEHICLE					
C1	Check brake pedal and clutch pedal for free play	Inspection	Every 20,000 km or every 12 months		•
C2	Check parking brake lever stroke and play	Inspection	Every 20,000 km or every 12 months		•
OPERATIONS OUTSIDE THE VEHICLE					
D1	Check uneven tyre wear	Inspection	Every 20,000 km or every 12 months		•
D2	Check front wheel bearings for play	Inspection	Every 60,000 km or every 3 years		•
D3	Check brake hoses and pipes for leakage	Inspection	Every 20,000 km or every 12 months		•
D4	Check brake pads and discs for wear	Inspection	Normal usage	Every 20,000 km or every 12 months	•
			Severe usage	Every 10,000 km or every 6 months	•

PERIODIC INSPECTION AND MAINTENANCE
PERIODIC INSPECTION AND MAINTENANCE SCHEDULE

2-5

Maintenance item		Maintenance operation	Maintenance interval		Application
D5	Check brake shoe linings and drums for wear	Inspection	Normal usage	Every 40,000 km or every 2 years	•
			Severe usage	Every 20,000 km or every 12 months	•
D6	Check fuel hoses and pipes for leakage or deterioration	Inspection	Every 40,000 km or every 2 years		•
OPERATIONS AFTER ENGINE IS WARMED UP					
E1	Check fluid level in automatic transmission	Inspection	Every 20,000 km or every 12 months		•
E2	Change automatic transmission fluid	Change	Normal usage	Every 80,000 km or every 4 years	•
			Severe usage	Every 40,000 km or every 2 years	•
E3	Change engine oil	ACEA and API classifications "ACEA A3/B3 or A3/B4" / "For service CF-4"	Change	Normal usage	Every 20,000 km or every 12 months
				Severe usage	Every 10,000 km or every 6 months
E4	Replace engine oil filter	ACEA and API classifications "ACEA A3/B3 or A3/B4" / "For service CF-4"	Replace	Normal usage	Every 20,000 km or every 12 months
				Severe usage	Every 10,000 km or every 6 months
E5	Check engine idling speed	Inspection	Every 20,000 km or every 12 months		•
E6	Check exhaust gas recirculation (EGR) system	Inspection	Every 20,000 km or every 12 months		•
E7	Check valve clearance (except vehicles with auto-lash adjuster)	Inspection	Every 20,000 km or every 12 months		•
OTHERS					
F1	Check body condition for damage	Inspection	Every year		•
F2	Road test	Inspection	Every 20,000 km or every 12 months		•

NOTE: "Severe usage" specifications apply to only vehicles used under severe operating conditions. Severe operating conditions include the followings:

1. Driving in a dusty area.
2. Driving on rough roads, on submerged roads, or hilly areas.
3. Driving cold zones.
4. Engine idling for a long time or short-distance travel during cold weather.
5. Frequent, sudden application of brakes.
6. Towing of a trailer.
7. Use as a taxi or as a rent-a-car.
8. When more than 50% of driving is in heavy city traffic and the ambient temperature is 32°C or more.
9. When more than 50% of driving is at 120 km/h or more and the ambient temperature is 30°C or more.

OPERATIONS INSIDE THE ENGINE COMPARTMENT

A1. CHECK V-BELT FOR CRACKS, FRAYING, WEAR, AND ADJUST ITS TENSION


V-BELT CONDITION

Check the whole rounds of the V-belt for cracks, fraying and wear.

V-BELT TENSION

ALTERNATOR DRIVE BELT TENSION CHECK

M6020200100237

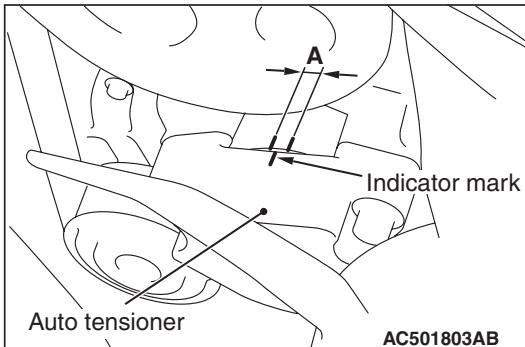

1. Make sure that the indicator mark is within the area marked with A in the illustration.

CAUTION


Check the drive belt tension after turning the crankshaft clockwise one turn or more.

2. If the mark is out of the area, replace the drive belt.

NOTE: The drive belt tension check is not necessary as auto-tensioner is adopted

A2. CHECK VACUUM PUMP OIL HOSE FOR DAMAGE


M6020200400045

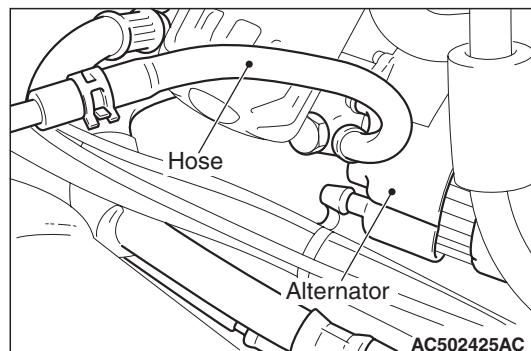

1. Inspect the surface of hose for evidence of heat and mechanical damage.

A3. CHECK INTAKE AIR HOSE FOR DAMAGE


M6020200500150

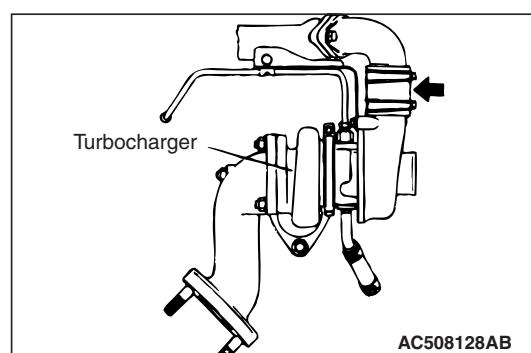

1. Inspect the intake air hoses for cracks or damage.


A4. REPLACE ENGINE TIMING BELT <EXCEPT VEHICLES WITH TIMING CHAIN>

M6020200600146
For information concerning the replacement procedures, refer to the Workshop Manual.

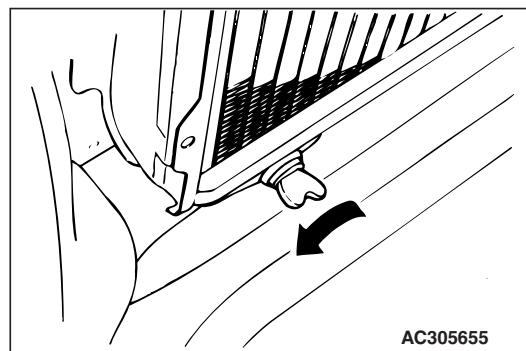

A5. CHECK RADIATOR HOSES FOR DAMAGE AND PROPER CONNECTION


M6020200900222

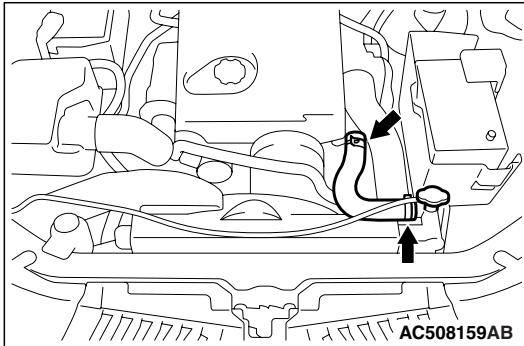

1. Check entire circumference and length of hoses, using a mirror as required.
2. Check that hoses installed in grommets pass through the centre of the grommets.
3. Check all clamps for tightness and connections for leakage.

A6. CHECK ENGINE COOLANT LEVEL IN RESERVOIR

M6020201000200

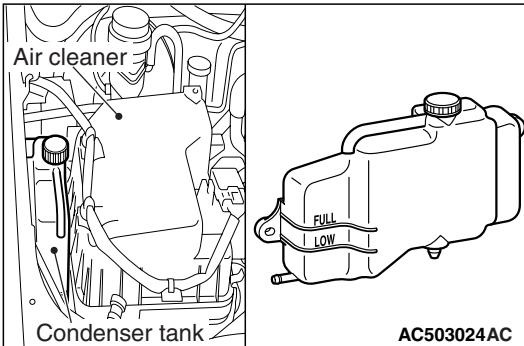


Check that the coolant level is between the "FULL" and "LOW" lines when the engine is at the normal operating temperature.

A7. CHANGE ENGINE COOLANT

M6020201100285

1. Stop the engine after it is fully warmed up.
2. Add detergent to the engine coolant in order to flush the cooling system, and start the engine.

3. Loosen the drain plug, remove the radiator can and drain the coolant.
4. Feed fresh water into the cooling system through the filler port of the radiator in order to wash the cooling system, and then tighten the drain plug.
5. Drain the coolant from the radiator condenser tank.
6. Install the radiator condenser tank.

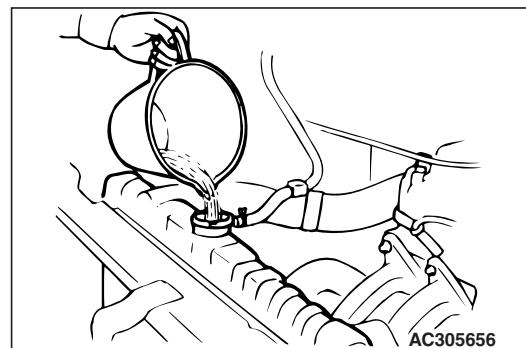

7. Depending upon conditions of operation, determine the amount of long life coolant, antifreeze or antirust to be added to the coolant.

Recommended antifreeze: DIA QUEEN SUPER LONG LIFE COOLANT or equivalent

CAUTION

Do not use alcohol or methanol anti-freeze or any engine coolants mixed with alcohol or methanol anti-freeze. The use of an improper anti-freeze can cause the corrosion of the aluminium components.


8. Fill the cooling system with soft water through the filler port, and add long life coolant, if necessary.
9. Fill the radiator condenser tank with coolant.
10. Install the radiator cap and the radiator condenser tank cap.
11. Recheck the engine coolant level after a road test.

⚠ CAUTION


When removing the radiator cap, be careful to blow out steam and boiling water.

REMOVAL OF ENGINE COOLANT FROM THE CYLINDER BLOCK DRAIN PLUG

1. Drain the water from the radiator, heater core and engine after unplugging the radiator drain plug and removing the radiator cap.

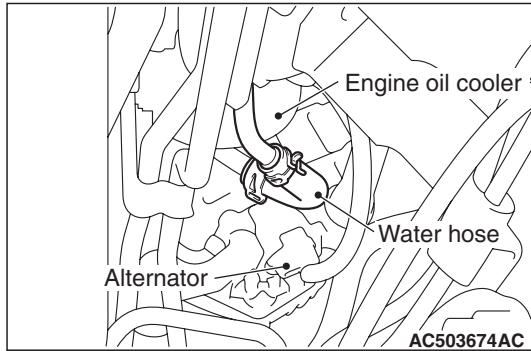

2. Drain the water in the water jacket by disconnect the water hose of the engine oil cooler.
3. Remove the radiator condenser tank and drain the coolant.
4. Drain the coolant then clean the path of the coolant by injecting water into the radiator from the radiator cap area.

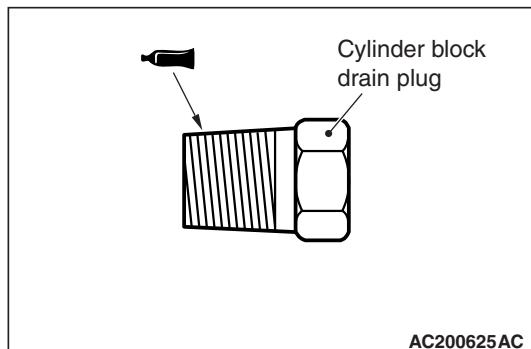


5. Apply the designated sealant to the screw area of the cylinder block drain plug, and then tighten to the standard torque.

Specified sealant: 3M Nut Locking Part No.4171 or equivalent

Tightening torque: $39 \pm 5 \text{ N}\cdot\text{m}$

6. Securely tighten the drain plug of the radiator.
7. Reinstall the radiator condenser tank.

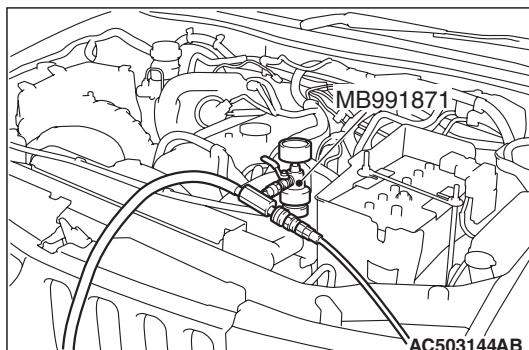

8. By referring to the section on coolant, select an appropriate concentration for safe operating temperature within the range of 30 to 60%. Use the special tool LLC changer (MB991871) to refill the engine coolant. A convenient mixture is a 50% water and 50% antifreeze solution (freezing point: -31°C).

Recommended antifreeze: DIA QUEEN SUPER LONG LIFE COOLANT or equivalent
Quantity: 8.2 L

NOTE: For how to use special tool MB991871, refer to its manufacturer's instructions.

⚠ CAUTION

Do not use alcohol or methanol anti-freeze or any engine coolants mixed with alcohol or methanol anti-freeze. The use of an improper anti-freeze can cause corrosion of the aluminium components.


9. Reinstall the radiator cap.
10. Start the engine and let it warm up until the thermostat opens.
11. After repeatedly revving the engine up to 3,000 r/min several times, then stop the engine.
12. Remove the radiator cap after the engine has become cold, and pour in coolant up to the brim. Reinstall the cap.
13. Add coolant to the radiator condenser tank between the "F" and "L" mark if necessary.

⚠ CAUTION

Do not overfill the radiator condenser tank.

A8. CHECK AIR CLEANER ELEMENT FOR CLOGGING AND DAMAGE

M6020201200174

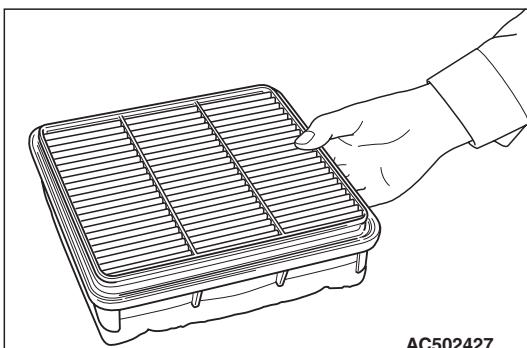


AC502427

1. Check air cleaner element for clogging and damage.
2. Clean deposited dust from the element in the following manner.
 - (1) Lightly tap the element against the top of a bench.
 - (2) Blow compressed air from inside the element.
3. Wipe off dust on the air cleaner interior.
4. Install the air cleaner body.

A9. REPLACE AIR CLEANER ELEMENT

M6020201300201

The air cleaner element will become dirty and loaded with dust during use, and the filtering effect will be substantially reduced. Replace it with a new one.

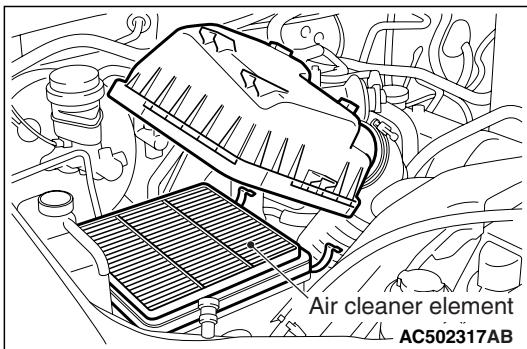


AC502317AB

1. Unclasp the air cleaner cover clip.
2. Remove the air cleaner element and install a new one.
3. Be sure to close the air cleaner cover completely when clamping it.

A10. CHECK FLUID LEVEL IN BRAKE RESERVOIR AND CLUTCH RESERVOIR (HYDRAULIC TYPE CLUTCH)

M6020202300033

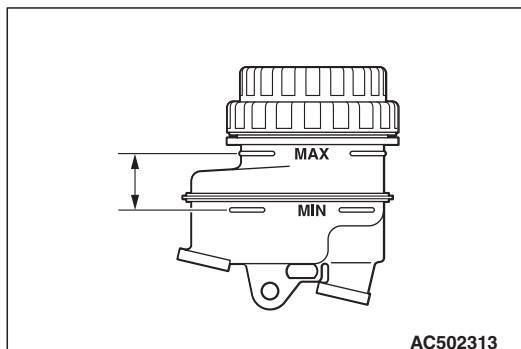


AC502313

1. Check that the fluid level is between the "MAX" and "MIN" mark.
2. If it is below the "MIN" marks, replenish with fresh brake fluid up to the "MAX" mark.

A11. CHANGE BRAKE FLUID

M6020201600257

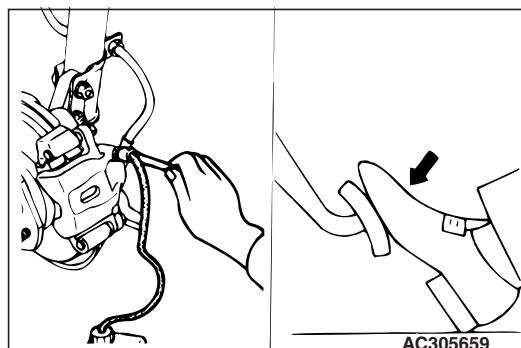

AC305659

1. Remove the cap of the bleeder screw, connect a vinyl tube, and place its other end in a receptacle.
2. Loosen the bleeder screw and depress the brake pedal; supply new brake fluid when the level of the fluid within the reservoir tank decreases.

CAUTION

If the reservoir tank completely runs out of fluid during operation, air will find way into the brake line. Pay attention, therefore, to the fluid level and replenish as necessary.


Specified brake fluid: DOT3 or DOT4

CAUTION

Use the specified brake fluid. Avoid using a mixture of the specified brake fluid and other fluid. If brake fluid is exposed to the air, it will absorb moisture; as water is absorbed from the atmosphere, the boiling point of the brake fluid will decrease and the braking performance will be seriously impaired. For this reason use a hermetically sealed 1 L or 0.5 L brake fluid container. Firmly close the cap of the brake fluid container after use.

- When fresh fluid has come to flow out from the vinyl tube, tighten the bleeder screw.

NOTE: This change from existing to fresh fluid can be judged by change in colour of fluid that flows out.

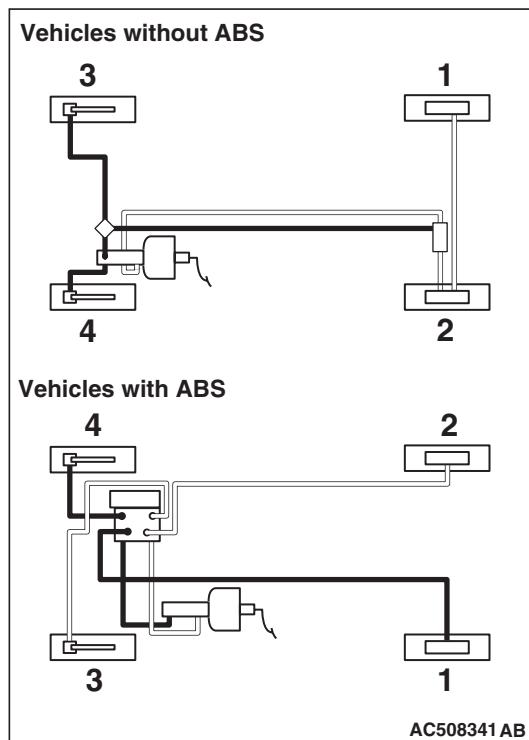


- Repeat above steps for other bleeder screws.

NOTE: The operating steps for each bleeder screws are illustrated on this page.

MASTER CYLINDER BLEEDING

The master cylinder used has no check valve, so if bleeding is carried out by the following procedure, bleeding of air from the brake pipeline will become easier. (When brake fluid is not contained in the master cylinder.)


- Fill the reserve tank with brake fluid.
- Keep the brake pedal depressed.

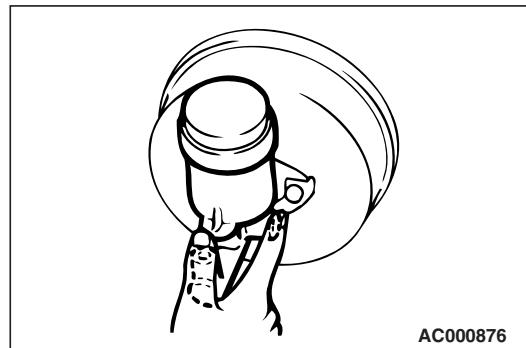

- Have another person cover the master cylinder outlet with a finger.
- With the outlet still closed, release the brake pedal.
- Repeat steps (2) - (4) three or four times to fill the inside of the master cylinder with brake fluid.

A12. CHECK BATTERY ELECTROLYTE LEVEL

M6020201700276

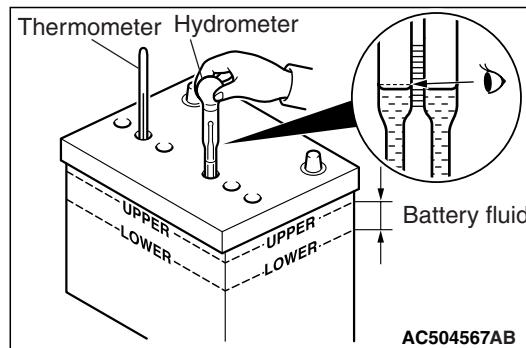

- Inspect whether or not the battery fluid is between the UPPER LEVEL and LOWER LEVEL marks.

CAUTION

- If the battery fluid is below the LOWER LEVEL, the battery could explode in using.
- If the battery fluid is over the UPPER LEVEL, leakage could result.

- Use a hydrometer and thermometer to check the specific gravity of the battery fluid.

Standard value: 1.220 – 1.290 [20°C]

- The specific gravity of the battery fluid varies with the temperature, so use the following formula to calculate the specific gravity for 20°C. Use the calculated value to determine whether or not the specific gravity is satisfactory.

$$D20 = (t - 20) \times 0.0007 + Dt$$


D20: Specific gravity of the battery fluid calculated for 20°C.

t: Actually measured temperature


Dt: Actually measured specific gravity

A13. REPLACE FUEL FILTER


M6020201900258

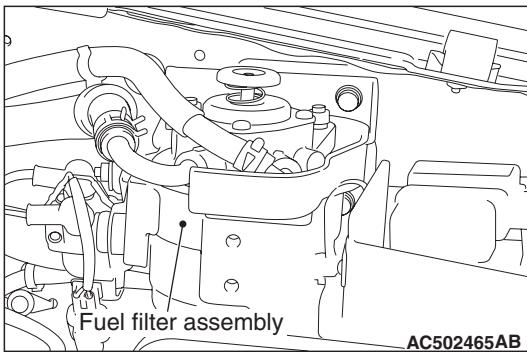

1. Remove the fuel tank cap to release the pressure inside the fuel tank.
2. Disconnect the connector and the fuel hose, and then remove the fuel filter assembly from the bracket.
3. Remove the water level sensor.

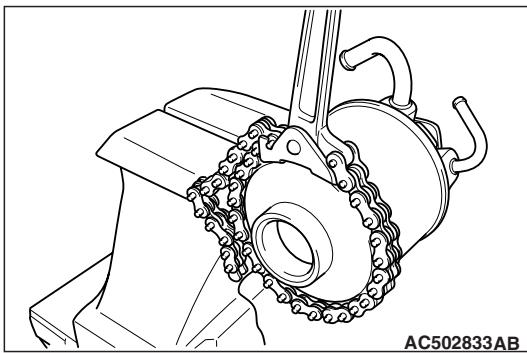

4. Use an oil filter wrench to remove the fuel filter cartridge from the fuel filter pump body.
5. Install a new filter, and bleed the air from fuel line.
6. Remove the fuel filter air plug and O-ring.

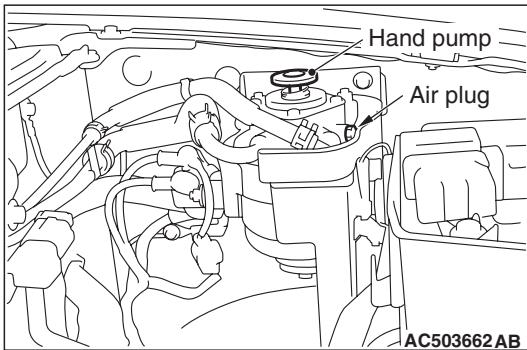


7. Cover the circumference of the air plug hole with cloth and use a hand pump repeatedly until no bubbles come out of the air plug hole.
8. Replace the air plug and O-ring with a new one. Tighten the air plug to the specified torque.

Tightening torque: $5.0 \pm 1.0 \text{ N}\cdot\text{m}$

9. Repeat until the hand pump operation becomes stiff.

REMOVAL OF WATER FROM THE FUEL FILTER

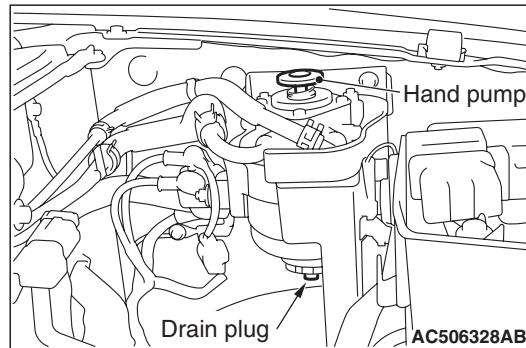


Water is in the fuel filter cartridge when fuel filter indicator lamp illuminates.

Remove water by the following procedures.

1. Loosen the drain plug.
2. Operate the hand pump to drain the water, and then tighten the drain plug.

WATER LEVEL SENSOR CHECK

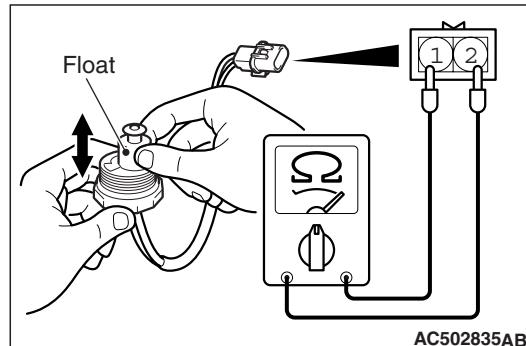


1. Connect the circuit tester to the water level sensor.
2. There should be continuity when the float is raised, while there is no continuity when it is lowered.
3. Replace the water level sensor if it is faulty.

OPERATIONS UNDER THE VEHICLE


B1. CHECK SUSPENSION SYSTEM FOR DAMAGE AND LOOSENESS

M6020300100160

FRONT SUSPENSION

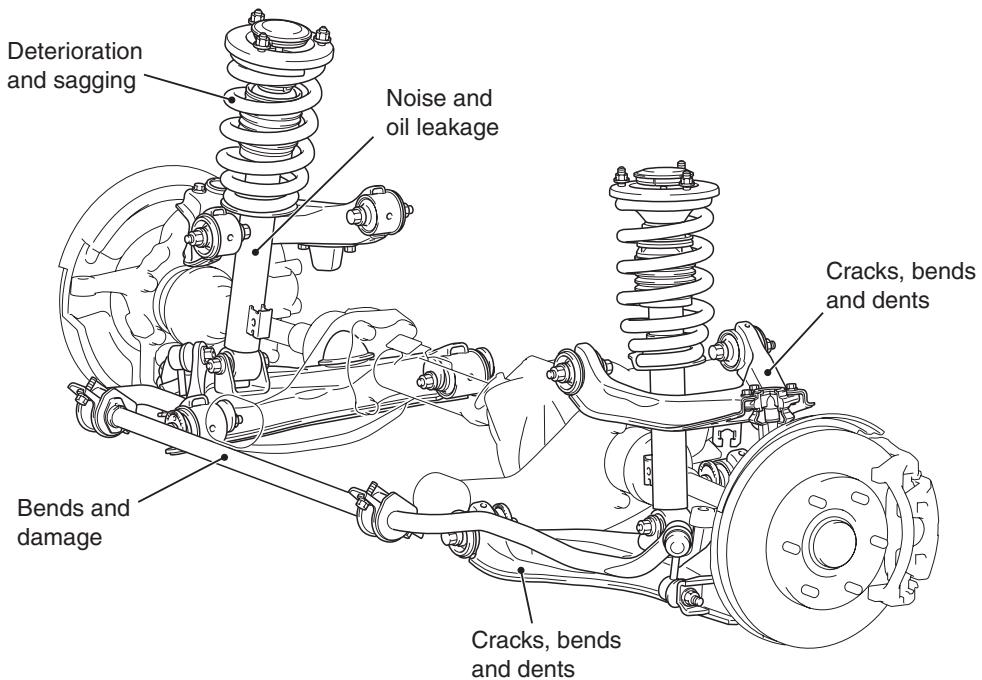

REAR SUSPENSION

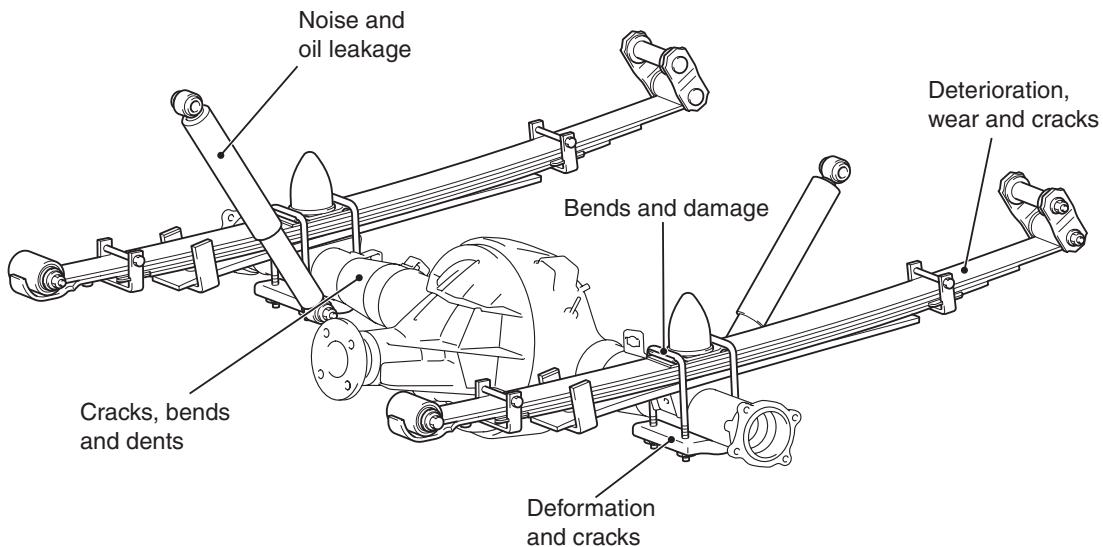


AC508512AB

B2. CHECK SUSPENSION ARM BALL JOINTS FOR PLAY, AND DUST COVERS FOR DAMAGE


BALL JOINTS FOR PLAY

M6020300200190

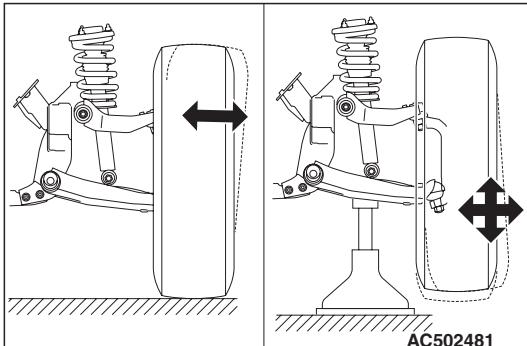

1. With the vehicle unladen, check the top end of tyre for the amount of movement.
2. Jack up the lower arm and move the bottom of tyre to check the amount of movement.

DUST COVERS FOR DAMAGE

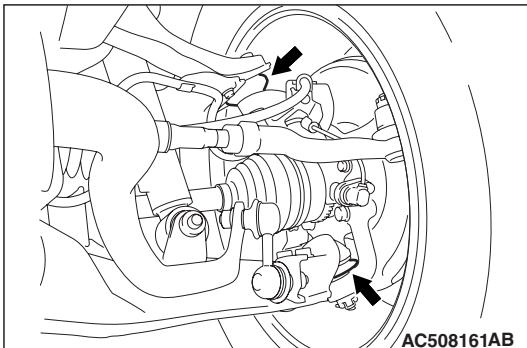

1. Press the lower arm ball joint cover with your finger to check that there are no cracks or damage in the lower arm ball joint cover.
2. If the lower arm ball joint cover is cracked or damaged, replace the lower arm ball joint assembly.


NOTE: If the lower arm ball joint cover is cracked or damaged, it is possible that there may also be damage to the ball joint.

3. Press the upper arm ball joint cover with your finger to check that there are no cracks or damage in the upper arm ball joint cover.
4. If the upper arm ball joint cover is cracked or damaged, replace the upper arm ball joint assembly.

NOTE: If the upper arm ball joint cover is cracked or damaged, it is possible that there may also be damage to the ball joint.

B3. LUBRICATE PROPELLER SHAFT WITH GREASE FITTING


M6020301300048

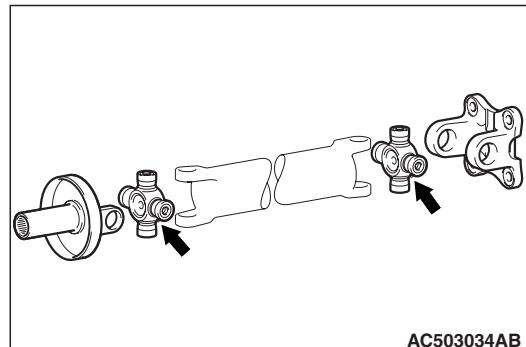

Fill the multi-purpose grease fitting of the propeller shaft joints.

B4. CHECK DRIVESHAFT BOOTS FOR DAMAGE


M6020300400183

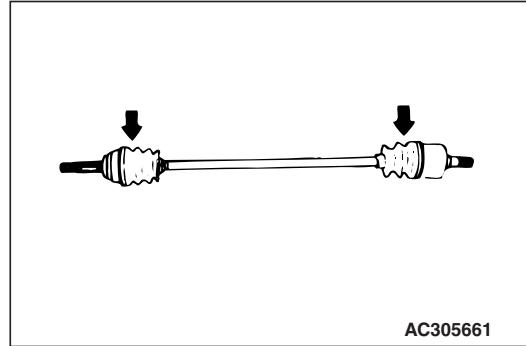


Check the driveshaft boots for damage.

B5. CHECK STEERING LINKAGE FOR DAMAGE AND LOOSE CONNECTIONS (INCLUDING SEALS AND BOOTS)

M6020300500191

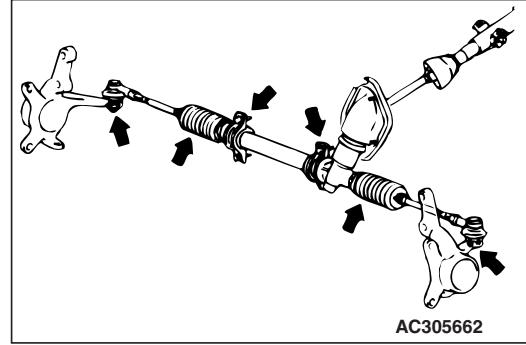

1. Move the steering wheel bit by bit to the left or right, and check to be sure that there is no play or looseness in the linkage coupling, that the installation is not loose, and that the rod or arm is not bent or damaged.

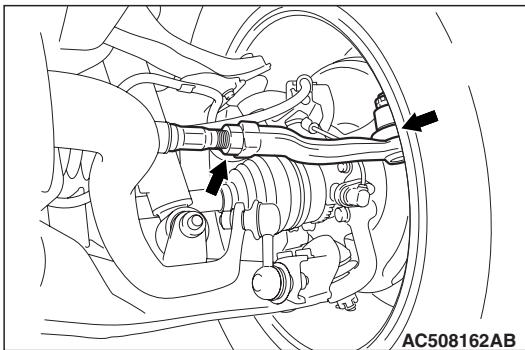


2. Check to be sure that the seal and boot of the ball joint are correctly installed (in the correct position), and that they are not damaged.
3. Check tie-rod end lock nut for looseness. If lock nut is loose, adjust toe-in and then tighten lock nut to the specified torque.

Tightening torque: $93 \pm 15 \text{ N}\cdot\text{m}$

B6. CHECK GEAR OIL LEVEL IN MANUAL TRANSMISSION

M6020300600110

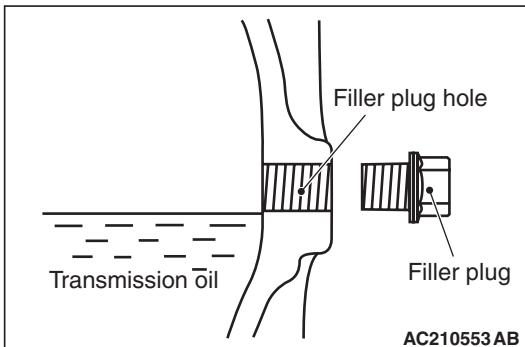


1. Remove the filler plug of the transmission case.
2. Check that the oil level is up to the lower edge of the filler plug hole.
3. Check that the transmission oil is not noticeably dirty, and that it has a suitable viscosity.
4. Tighten the filler plug to the specified torque.

Tightening torque: $37 \pm 11 \text{ N}\cdot\text{m}$

B7. CHECK GEAR OIL LEVEL IN TRANSFER CASE (4WD)

M6020300700117

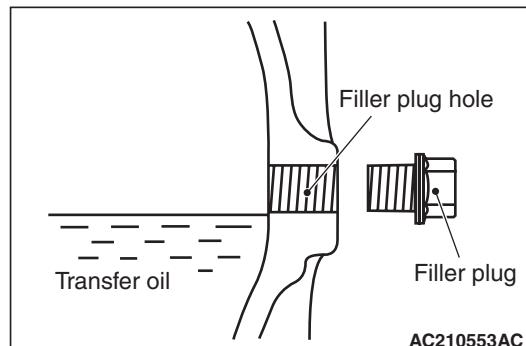


1. Remove the filler plug of the transfer case.
2. Check that the oil level is up to the lower edge of the filler plug hole.
3. Check that the transfer oil is not noticeably dirty, and that it has a suitable viscosity.
4. Tighten the filler plug to the specified torque.

Tightening torque: $32 \pm 2 \text{ N}\cdot\text{m}$

B8. CHANGE GEAR OIL IN MANUAL TRANSMISSION

M6020300800158

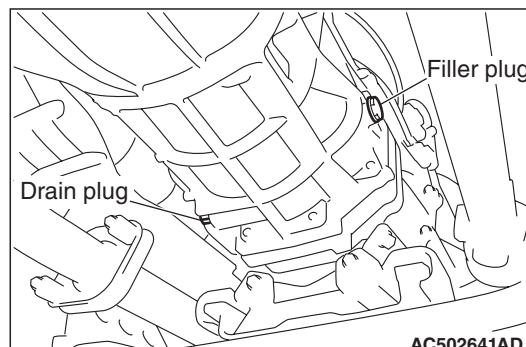

1. Remove oil filler plug and oil drain plug.
2. Drain the gear oil.
3. Before installing the plug, remove iron powder attached to the magnet of the drain plug. Tighten the oil drain plug to the specified torque.

Tightening torque: $37 \pm 11 \text{ N}\cdot\text{m}$

4. Fill the transmission fresh oil by using a lubricator.
5. Fill with specified oil till the level comes to the lower portion of oil filler plug hole.


Specified transmission oil: Gear oil API classification GL-3 SAE 75W-85W

Quantity: 3.4L


6. Tighten the oil filler plug to the specified torque.

Tightening torque: $37 \pm 11 \text{ N}\cdot\text{m}$

B9. CHANGE GEAR OIL IN TRANSFER CASE (4WD)

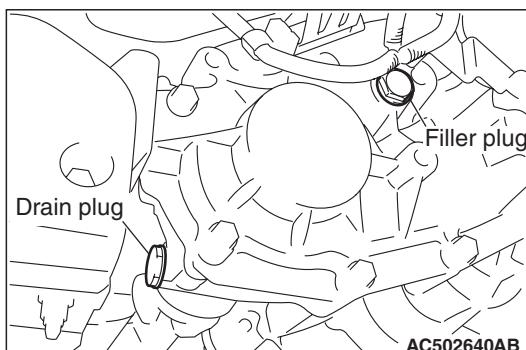

M6020300900133

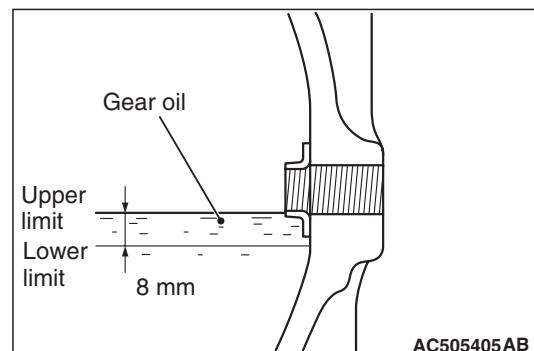

AC505405AB

1. Remove oil filler plug and oil drain plug.
2. Drain the gear oil.
3. Before installing the plug, remove iron powder attached to the magnet of the drain plug.

Tighten the oil drain plug to the specified torque.

Tightening torque: $32 \pm 2 \text{ N}\cdot\text{m}$

4. Fill the transfer case fresh oil by using a lubricator.
5. Fill with specified oil till the level comes to the lower portion of oil filler plug hole.

Specified transfer oil: Gear oil API classification GL-3 SAE 75W-85W


Quantity: 2.5 L

6. Tighten the oil filler plug to the specified torque.

Tightening torque: $32 \pm 2 \text{ N}\cdot\text{m}$

B10. CHECK GEAR OIL LEVEL IN FRONT AND REAR DIFFERENTIAL

M6020301000155

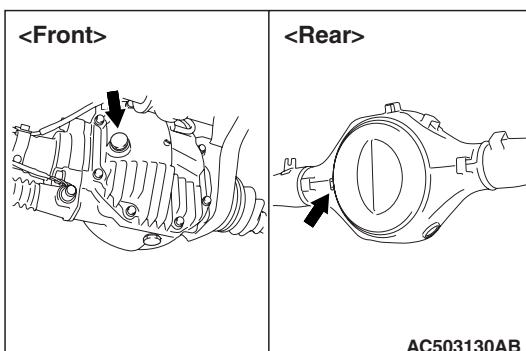

<Front>

<Rear>

AC503130AB


1. Remove the filler plug.

2. Check that the gear oil level is not 8mm below the bottom of the filler plug hole.
3. Fit the filler plug and tighten it to the specified torque.

Tightening torque: $50 \pm 10 \text{ N}\cdot\text{m}$

B11. CHANGE GEAR OIL IN FRONT AND REAR DIFFERENTIAL

M6020301100185

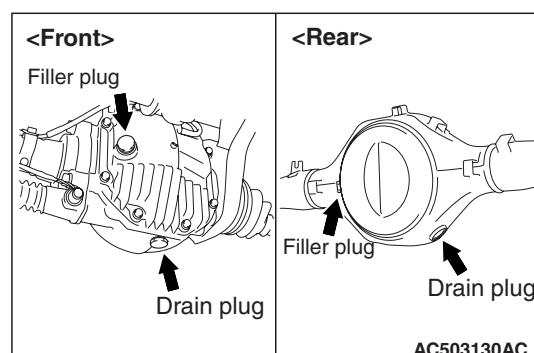

FRONT DIFFERENTIAL

1. Remove the under cover and filler plug.
2. Remove the drain plug and drain oil.
3. Tighten the drain plug to the specified torque.

Tightening torque: $65 \pm 5 \text{ N}\cdot\text{m}$

4. Add the oil until the level comes to the lower portion of the filter plug hole.

Specified gear oil:

Gear oil API classification GL-5 or higher

Above 10°C SAE 90

Below 10°C SAE 80W

Quantity: 1.2L

5. Tighten the filler plug to the specified torque.

Tightening torque: $50 \pm 10 \text{ N}\cdot\text{m}$

REAR DIFFERENTIAL

1. Remove the filler plug.
2. Remove the drain plug and drain oil.
3. Tighten the drain plug to the specified torque.

Tightening torque: $60 \pm 10 \text{ N}\cdot\text{m}$

4. Add the oil until the level comes to the lower portion of the filler plug hole.

Specified gear oil:

Gear oil API classification GL-5 or higher

Above 10°C SAE 90

Below 10°C SAE 80W

Quantity: 2.6L

5. Tighten the filler plug to the specified torque.

Tightening torque: $50 \pm 10 \text{ N}\cdot\text{m}$

B12. CHECK EXHAUST PIPE CONNECTIONS FOR GAS LEAKAGE, AND CHECK PIPE INSTALLATION

M6020301200171


1. Confirm that the exhaust pipe does not interfere with any body components.
2. Check the exhaust pipe for damage by stones, etc.
3. Start the engine and check for gas leaks from the exhaust pipe connections.

OPERATIONS INSIDE THE VEHICLE

C1. CHECK BRAKE PEDAL AND CLUTCH PEDAL FOR FREE PLAY

M6020400100190

BRAKE PEDAL FREE PLAY

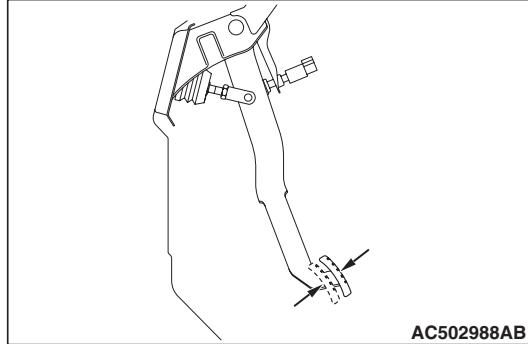


1. Turn the ignition switch to the "LOCK" (OFF) position, depress the brake pedal two or three times. After eliminating the vacuum in the brake booster, press the pedal down by hand, and confirm that the amount of movement before resistance is met (free play) is within the standard value range.

Standard value: 3 – 8 mm

2. If the brake pedal play is not within the standard value, check the following, and adjust or replace if necessary:
 - Excessive play between the brake pedal and the clevis pin, or between the clevis pin and the brake booster operating rod
 - Brake pedal height
 - Installation position of the stop lamp switch, etc.

CLEARANCE BETWEEN BRAKE PEDAL AND DASH PANEL

1. Turn up the carpet, etc. under the brake pedal.

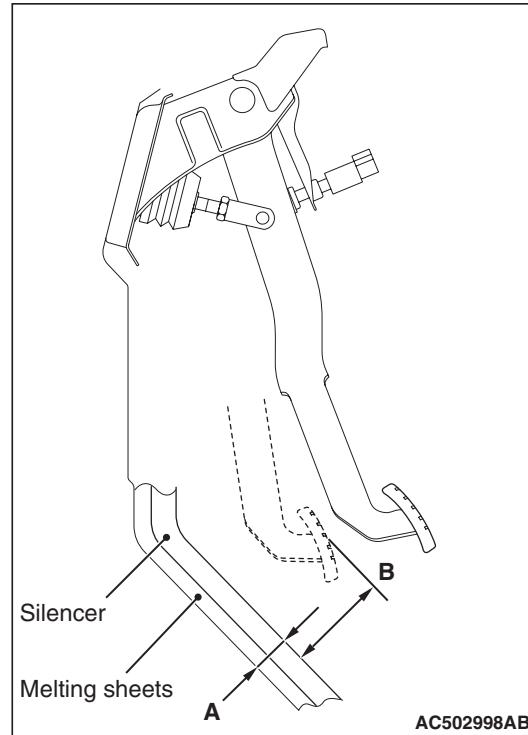

2. Pierce a needle or similar material to the silencer and melting sheets, and measure the thickness of "A" shown in the figure.
3. Start the engine, depress the brake pedal with approximately 490 N of force, and measure the distance "B" between the silencer and brake pedal shown in the figure.
4. Check that the total value of "A" and "B" measured in the previous items 2 and 3 is within the standard value.


Standard value (A + B): 75 mm or more

[From the surface of dash panel to the face of pedal pad]

- If the clearance is outside the standard value, check for air trapped in the brake line, thickness of the disc brake pad, clearance between the lining and the drum and dragging in the parking brake. And then adjust and replace defective parts as required.
- Return the carpet etc. to its original position.

CLUTCH PEDAL CHECK AND ADJUSTMENT

- Turn back the carpet etc. under the clutch pedal.

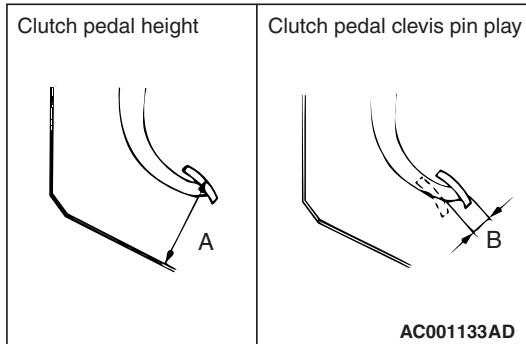


- Measure the clutch pedal height. If the height is outside the standard value, go to step 4.

Standard value (A):

178.5 – 181.5 mm <R.H.drive vehicles>
183.5 – 186.5 mm <L.H.drive vehicles>

- Measure the clutch pedal clevis pin play. If the play is outside the standard value, go to Step 5.

Standard value (B): 1 – 3 mm

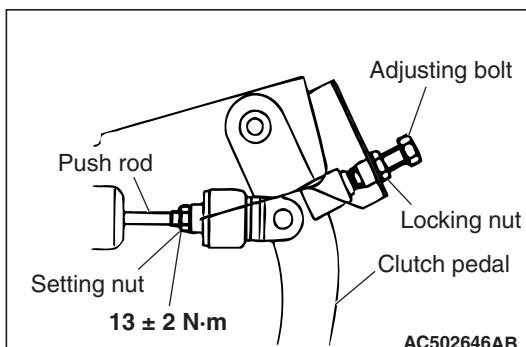


- If the clutch pedal height is not within the standard value, loosen the setting nut and the locking nut to adjust the clutch pedal height to the standard value and move the push rod and the adjusting bolt.

CAUTION

Do not push in the master cylinder pushrod at this time, otherwise the clutch will not operate properly.

- If the clutch pedal clevis pin play is not within the standard value, loosen the setting nut and move the push rod to adjust.

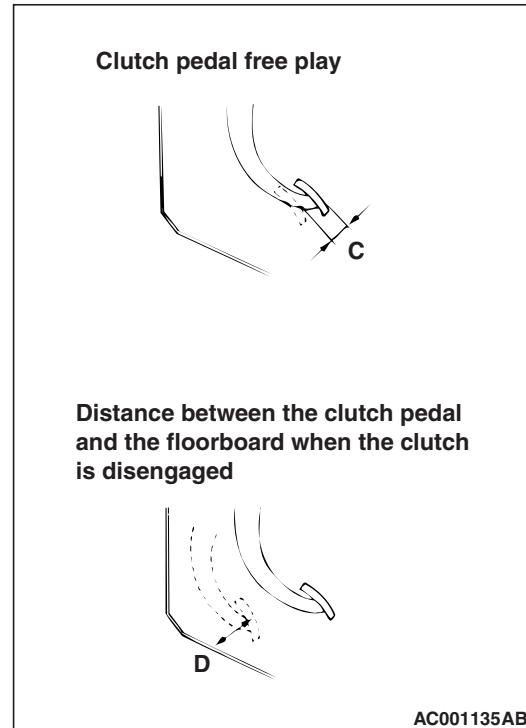

- After the adjustments, confirm that the clutch pedal free play (measured at the face of the pedal pad) and the distance between the clutch pedal (the face of the pedal pad) and the floorboard when the clutch is disengaged are within the standard value ranges.

Standard value (C): 4 – 13 mm

Standard value (D):

**86 mm or more <R.H.drive vehicles>
91 mm or more <L.H.drive vehicles>**

- If the measured free play and distance do not agree with the standard value ranges, it is probably the result of either air in the hydraulic system or a faulty master cylinder or clutch. Bleed the air, or disassemble and inspect the master cylinder or clutch.

- Reinstall the carpet, etc.


C2. CHECK PARKING BRAKE LEVER
STROKE AND PLAY

<LEVER TYPE>

- Pull the parking brake lever with a force of approximately 200 N and count the number of notches.

Standard value: 6 – 7 notches

- If the parking brake lever stroke is not the standard value, adjust as described below.
- (1) Remove the rear floor console cover.

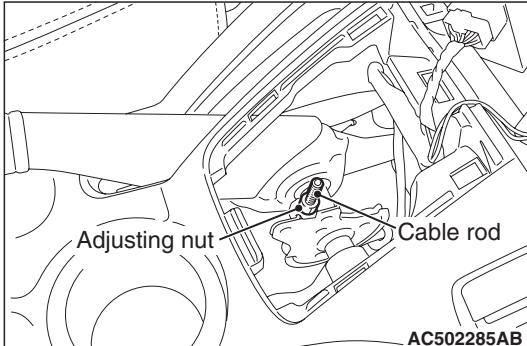

AC502285AB

- (2) Loosen the adjusting nut to move it to the cable rod end so that the cable will be free.
- (3) Depress the brake pedal repeatedly until the brake pedal has no change in its stroke.

NOTE: Depressing the brake pedal repeatedly adjusts shoe clearance correctly.

- (4) Turn the adjusting nut to adjust the parking brake lever stroke to the standard value. After adjusting, check that there is no space between the adjusting nut and the parking brake lever. Check that the adjusting nut is secured with the nut holder.


⚠ CAUTION

If the parking brake lever stroke is below the standard value and the braking is too firm, the rear brakes may drag.

- (5) After adjusting the parking brake lever stroke, jack up the rear end of the vehicle, and then release the parking brake and turn the rear wheels to check that the rear brakes are not dragging.

<STICK TYPE>

M6020400200238

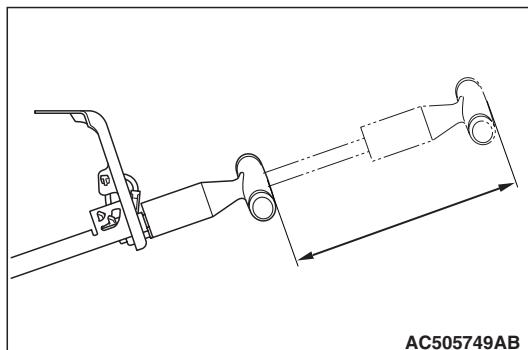


AC505749AB

- Pull the parking brake pull rod with a force of approximately 200 N and count the number of notches.

Standard value: 11 – 13 notches

- If the parking brake pull rod stroke is not the standard value, adjust as described below.

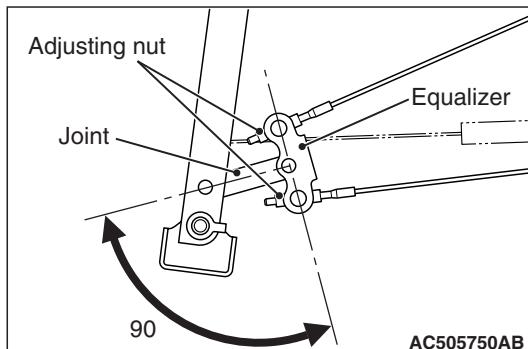

AC505750AB

- (1) Loosen the adjusting nut to move it to the cable rod end so that the cable will be free.
- (2) Depress the brake pedal repeatedly until the brake pedal has no change in its stroke.

NOTE: Depressing the brake pedal repeatedly adjusts shoe clearance correctly.

- (3) Adjust with the adjusting nut so that the joint and the equalizer are vertical as shown in figure.

⚠ CAUTION

If the parking brake pull rod stroke is below the standard value and the braking is too firm, the rear brakes may drag.

- (4) After adjusting the parking brake pull rod stroke, jack up the rear end of the vehicle, and then release the parking brake and turn the rear wheels to check that the rear brakes are not dragging.


OPERATIONS OUTSIDE THE VEHICLE

D1. CHECK UNEVEN TYRE WEAR

M6020500700025

Check the entire periphery of the tyres for uneven wear. If any tyre shows uneven wear, check the toe-in and toe-out, and adjust if necessary.

TOE-IN

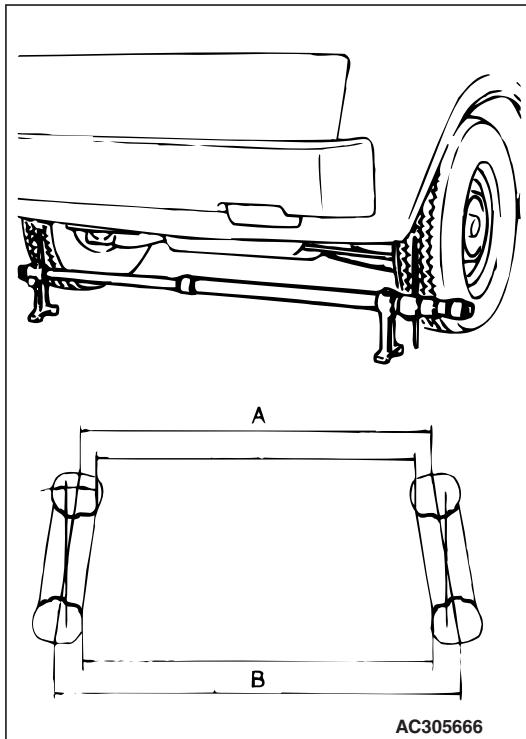


Using a toe-in gauge, measure toe-in.

Toe-in = B - A

Standard value:

At the centre of tyre tread: 0 – 5 mm
Toe angle (per wheel): 0°00' – 0°12'

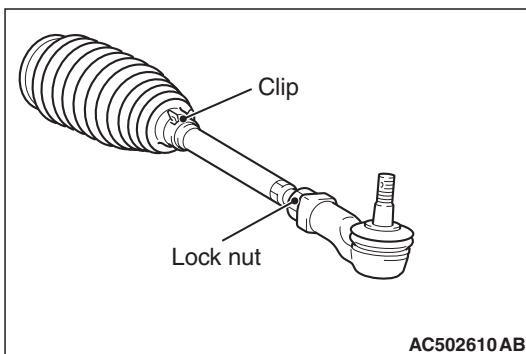


1. Adjust the toe-in by undoing the clip and lock nut, and turning the left and right tie rod turnbuckles by the same amount (in opposite directions).

NOTE: The toe will move out as the left turnbuckle is turned toward the front of the vehicle and the right turnbuckle is turned toward the rear of the vehicle.

2. Install the clip and tighten the lock nut to the specified torque.

Tightening torque: 93 ± 15 N·m

3. Confirm that the toe-in is at the standard value.

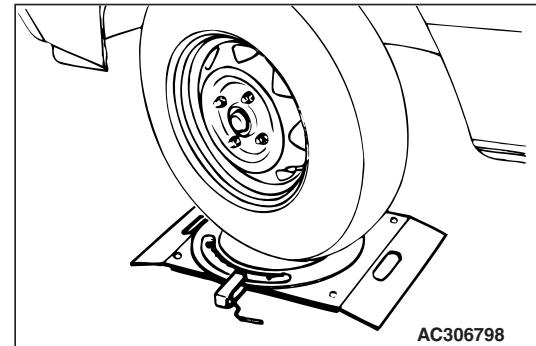


4. Use a turning radius gauge to check that the steering angle is at the standard value.

Standard value:

Inner wheels	36°50' ± 2°00'
Outer wheels (for reference)	32°40'

CAMBER, CASTER AND KINGPIN INCLINATION

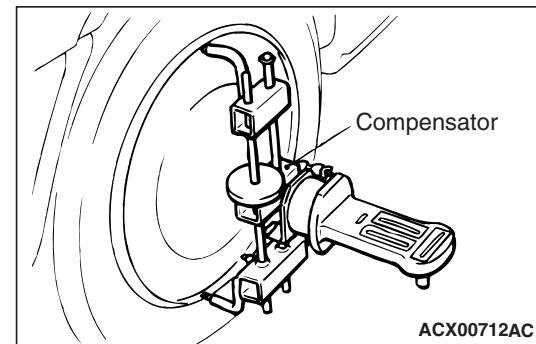


Standard value:

Item	Specifications
Camber	0°00' ± 0°30'*
Caster	3°48' ± 1°00'*
Kingpin inclination	12°45'


*NOTE: The * Difference between right and left wheels must be less than 30'*

CAMBER AND CASTER REFERENCE TABLE

1. Adjust the camber and caster until they meet the standard value by turning the lower arm camber adjusting bolt.

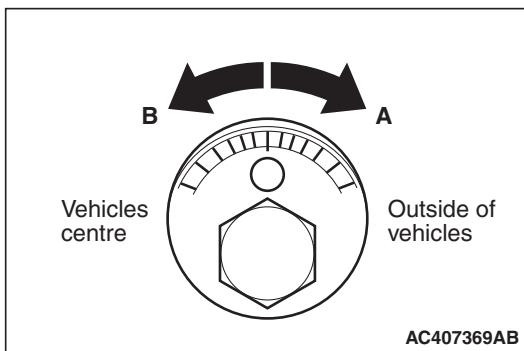

2. How to read this table (example). If the camber difference $-0^{\circ}35'$ and the caster difference is $0^{\circ}17'$ by comparing the measurement value with the standard value, rotate the front adjusting cam by 1.5 graduations and the rear adjusting cam by 2.5 graduations to the opposite direction against the "A" direction.

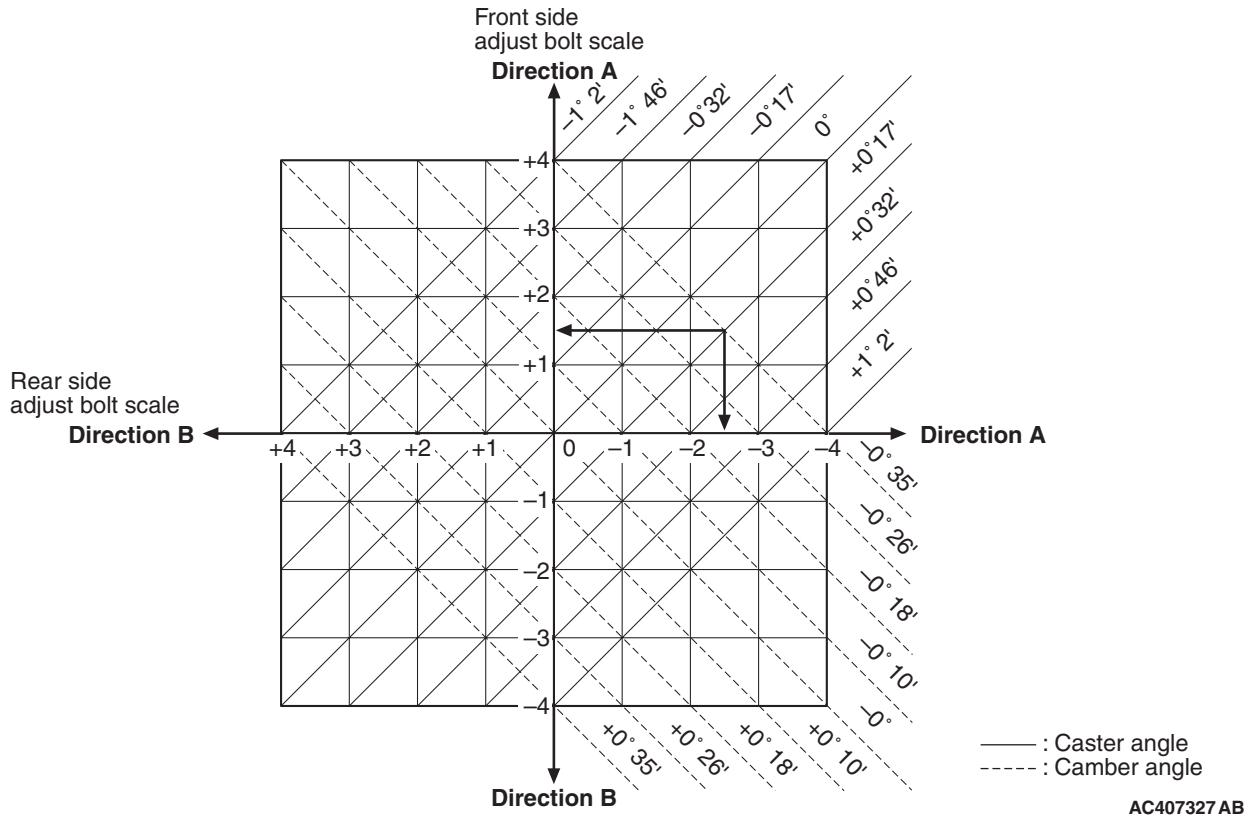


NOTE: Solid lines show caster, broken lines show camber.

D2. CHECK FRONT WHEEL BEARINGS FOR PLAY

M6020500200138


1. Remove the disc brake caliper and suspend it with a wire.
2. Remove the brake disc from the front hub.

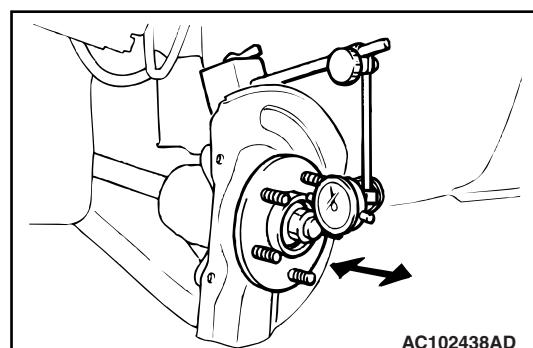

3. Attach a dial gauge as shown in the illustration, and then measure the axial play while moving the hub in the axial direction.
Limit: 0 mm
4. If axial play exceeds the limit, replace the front hub assembly.

D3. CHECK BRAKE HOSES AND PIPES FOR LEAKAGE


M6020500300209

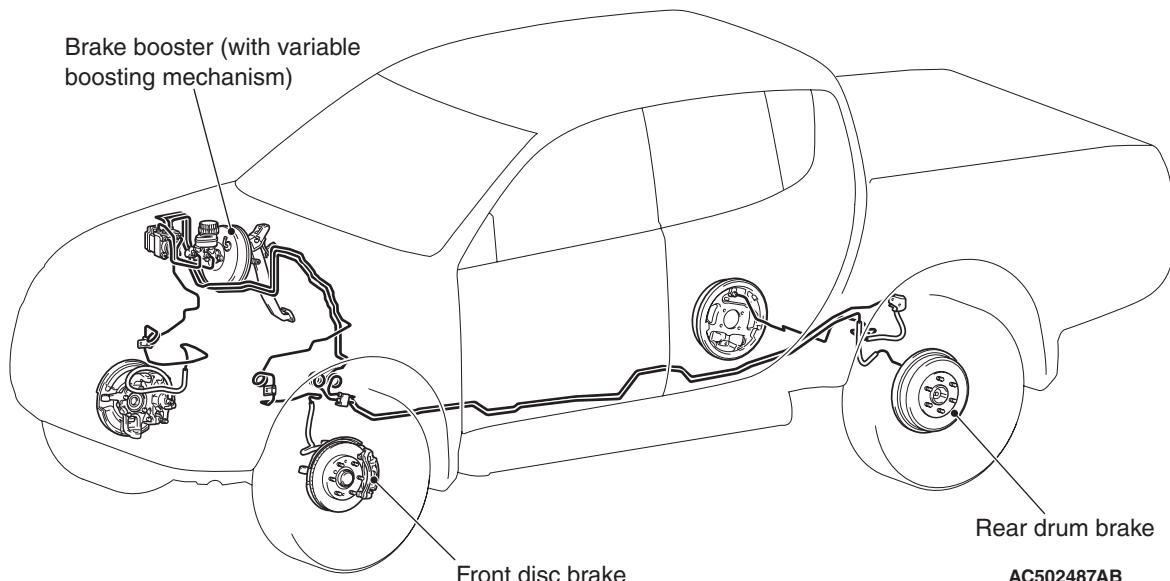

1. Check entire circumference and length of hoses and pipes.
2. Check all clamps for tightness and connections for leakage.

D4. CHECK BRAKE PADS AND DISCS FOR WEAR


M6020500400217

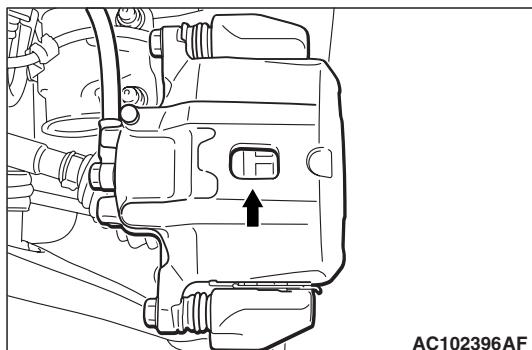

1. Check the brake pad thickness through the caliper body check port.

Standard value: 9.5 mm

Limit: 1.5 mm

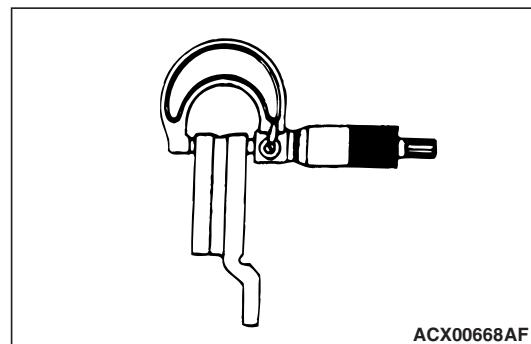

2. When the thickness is less than the limit, always replace the pads at an axle set.
3. Using a micrometer, measure disc thickness at eight positions, approximately 45° apart and 10 mm in from the outer edge of the disc.


Standard value: 28.0 mm

Limit: 26.4 mm

4. If the disc thickness is less than the limits, replace it with a new one.

BRAKE DISC RUN-OUT CHECK

1. Remove the brake assembly, and then hold it with wire.
2. Temporarily install the disc with the hub nut.

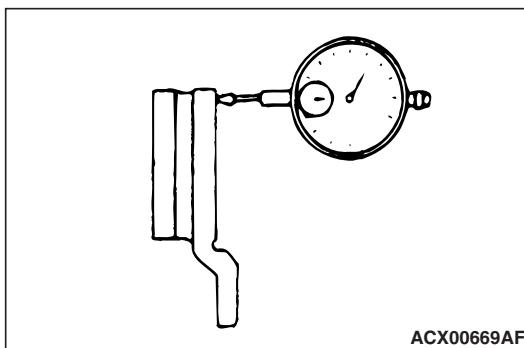


3. Place a dial gauge approximately 5 mm from the outer circumference of the brake disc, and measure the run-out of the disc.

Limit: 0.06 mm

D5. CHECK BRAKE SHOE LININGS AND DRUMS FOR WEAR**BRAKE LINING THICKNESS CHECK**

1. Remove the brake drum.

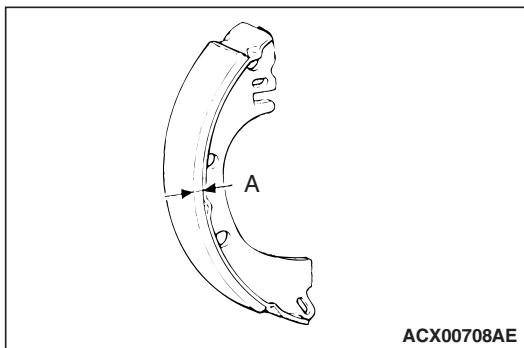

2. Measure the thickness of the brake lining at several places.


Standard value (A): 5.0 mm

Limit (A): 1.0 mm

3. If the thickness of the brake lining is below the limit, replace the shoe and lining assemblies on both sides of the vehicle. Never replace only one side.

BRAKE DRUM INSIDE DIAMETER CHECK

1. Remove the brake drum.

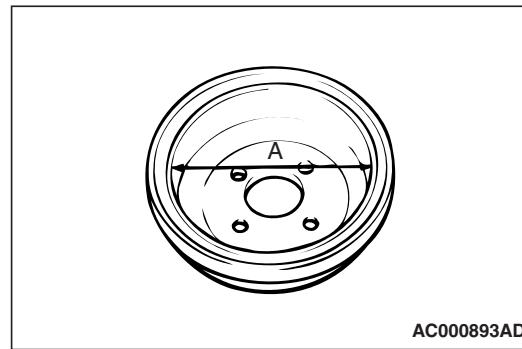

2. Measure the inside diameter of the brake drum in two places or more.


Standard value (A): 295 mm

Limit (A): 297 mm

3. If the inside diameter exceeds the limit, or if it is excessively worn or one side, replace the brake drum.

D6. CHECK FUEL HOSES AND PIPES FOR LEAKAGE OR DETERIORATION

M6020500600200

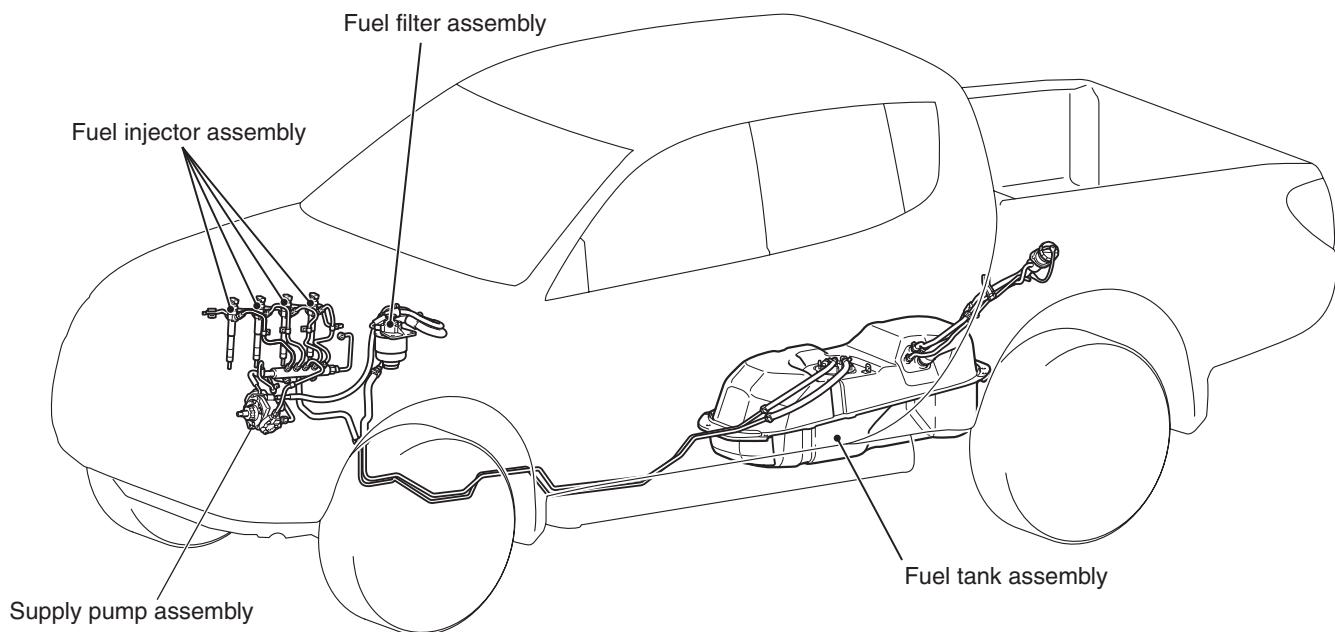

AC501365AD

1. Check entire circumference and length of hoses and pipes.
2. Check all clamps for tightness and connections for leakage.


OPERATIONS AFTER ENGINE IS WARMED UP

E1. CHECK FLUID LEVEL IN AUTOMATIC TRANSMISSION

M6020600100213

1. Drive the vehicle until the A/T fluid temperature reaches the normal temperature (70 – 80°C).



NOTE: Measure A/T fluid temperature using M.U.T.-III.

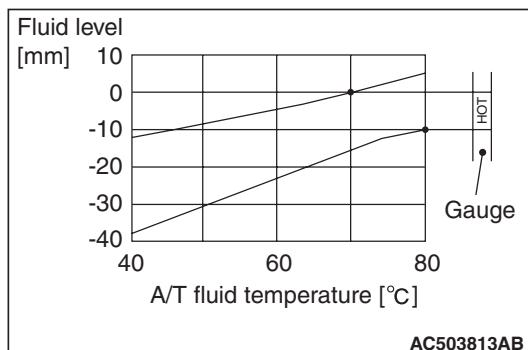

NOTE: Check the fluid level referring to the characteristics chart if it takes some time to reach the normal operation temperature of A/T fluid (70 – 80°C.)

2. Park the vehicle on a level surface.
3. Move the selector lever to all positions to fully charge the torque converter and the fluid lines with A/T fluid, and then move the selector lever to the N position.
4. After wiping away any dirt from around the oil level gauge, pull out the oil level gauge and check the level of A/T fluid.

NOTE: If the A/T fluid has a burnt smell, or if it has become very contaminated or dirty, it means that the A/T fluid has become contaminated by minute particles from bushings (metal) or worn parts. In such a case, the transmission needs to be overhauled and the A/T fluid cooler line needs to be flushed out.

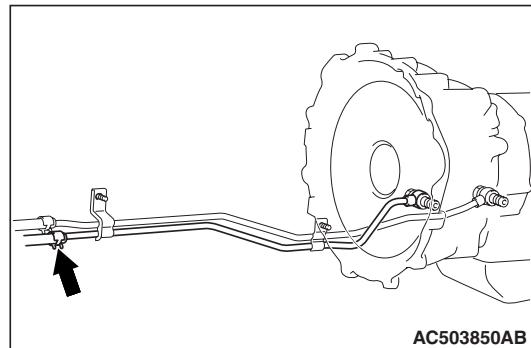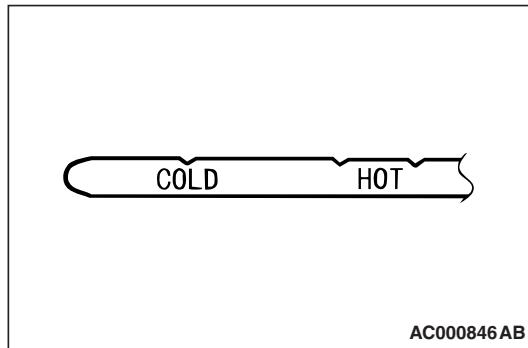

- Check that the A/T fluid level is between the HOT marks on the oil level gauge. If the A/T fluid level is too low, add more A/T fluid until the level reaches between the HOT marks.

Automatic transmission fluid: DIA QUEEN ATF SP III

NOTE: If the A/T fluid level is too low, the oil pump draws air into the system along with the A/T fluid, and air bubbles will thus form in the fluid circuit.

This will cause a drop in fluid pressure and cause the shift points to change and the clutches and brakes to slip. If the A/T fluid level is too high, the gear will churn the A/T fluid and cause bubbles to develop, which can then cause the same problems as when the A/T fluid is too low. In either case, the air bubbles can cause overheating and oxidation of the A/T fluid, and also prevent the valves, clutches and brakes from operating normally. In addition, if bubbles develop in the A/T fluid, the A/T fluid can overflow from the transmission vent holes and be mistaken for leaks.

- Securely re-insert the oil level gauge.

E2. CHANGE AUTOMATIC TRANSMISSION FLUID

M6020600200265

SPECIFICATIONS

Automatic transmission fluid	Quantity	Remark
DIA QUEEN ATF SP III	9.7 L	V4A5A

CHANGE PROCEDURE

If you have an A/T fluid changer, use the A/T fluid changer to flush the A/T fluid. If you do not have an A/T fluid changer, follow the procedure given below.


- Remove the hose shown in the illustration which allows the A/T fluid to flow from the A/T fluid cooler to the transmission.
- Start the engine and discharge the A/T fluid.

Driving conditions: N range, idling

CAUTION

The engine should be stopped within one minute of it being started. If the A/T fluid has all been discharged before this, stop the engine at that point.

Discharge amount: Approx. 3.5 L

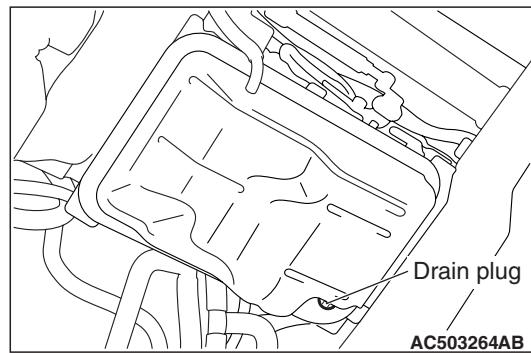

- Remove the drain plug at the bottom of the transmission case to drain out the remaining A/T fluid.

Discharge amount: Approx. 2.0 L

- Install the drain plug with a gasket in between, and tighten it to the specified torque.

Tightening torque: $32 \pm 2 \text{ N}\cdot\text{m}$

- Pour in new A/T fluid through the oil filler tube.

Amount to add: Approx. 5.5 L

CAUTION


Stop pouring in the A/T fluid once 5.5 L has been poured in.

- Repeat the operation in step 2.


- Pour in new A/T fluid through the oil filler tube.

Amount to add: Approx. 3.5 L

NOTE: Carry out steps 2 and 7 so that at least 8.0 L has been discharged from the cooler hose. After this, discharge a small quantity of A/T fluid and check for contamination. If the A/T fluid is contaminated, repeat steps 6 and 7.

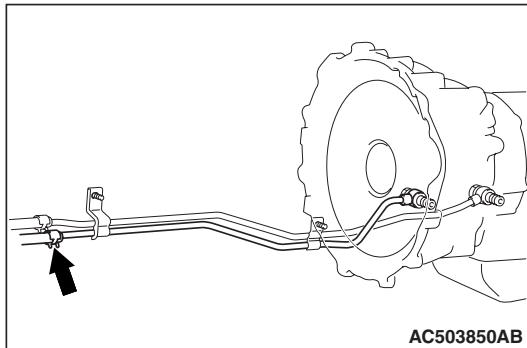


8. Connect the hose which was disconnected in step 1, and then securely re-insert the oil level gauge.
9. Start the engine, and let it run at idle for 1 – 2 minutes.
10. Move the selector lever to all positions once, and then return it to the N position.
11. Check that the A/T fluid level on the oil level gauge is at the COLD mark. If it is not up to this mark, add more A/T fluid.

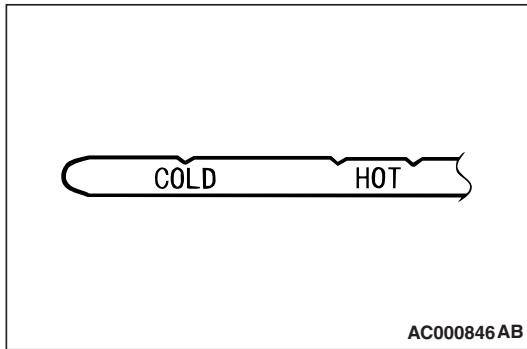

12. Drive the vehicle until the A/T fluid temperature reaches the normal temperature (70 – 80°C), and then re-check the A/T fluid level.

NOTE: The COLD mark is for reference only; the HOT marks should be used as the standard for judgment.


NOTE: Measure A/T fluid temperature using M.U.T.-III.

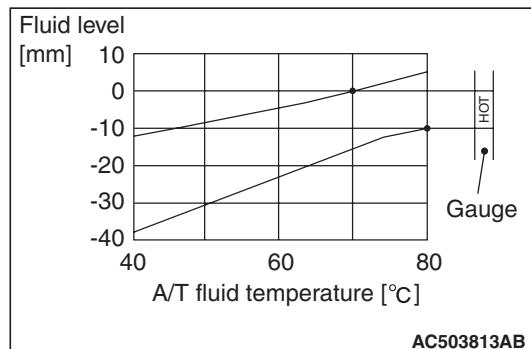

NOTE: Check the fluid level referring to the characteristics chart if it takes some time to reach the normal operation temperature of A/T fluid (70 – 80°C).

13. When A/T fluid is under the specified level, top up A/T fluid. When A/T fluid is over the specified level, drain the excessive A/T fluid from the drain plug to adjust A/T fluid level to the specified level.
14. Securely insert the oil level gauge into the oil filler tube.

AUTOMATIC TRANSMISSION FLUID COOLER LINE FLUSHING

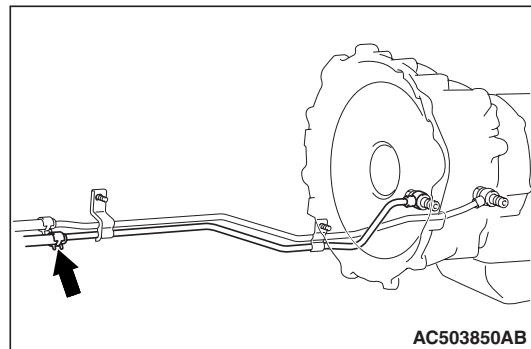

1. Remove the hose shown in the illustration which allows the A/T fluid to flow from the A/T fluid cooler to the transmission.
2. Start the engine and discharge the A/T fluid. Driving conditions: N range, idling

CAUTION

The engine should be stopped within one minute of it being started. If the A/T fluid has all been discharged before this, stop the engine at that point.

Discharge amount: Approx. 3.5 L

3. Pour in new A/T fluid through the oil filler tube.

Amount to add: Approx. 3.5 L

⚠ CAUTION

Stop pouring in the A/T fluid once 3.5 L has been poured in.

4. Repeat the operation in steps 2 and 3.

NOTE: Carry out steps 2 and 3 so that at least 8.0 L has been discharged from the cooler hose. After this, discharge a small quantity of A/T fluid and check for contamination. If the A/T fluid is contaminated, repeat steps 2 and 3.

5. Carry out the procedure in "CHANGE PROCEDURE" from step 2 onwards.


E3. CHANGE ENGINE OIL

M6020600300284

1. Start the engine and allow it to warm up until the temperature of the coolant reaches 80 °C to 90 °C.
2. Remove the engine oil filler cap.
3. Remove the engine oil pan drain plug to drain engine oil.


⚠ CAUTION

Use care as engine oil could be hot.

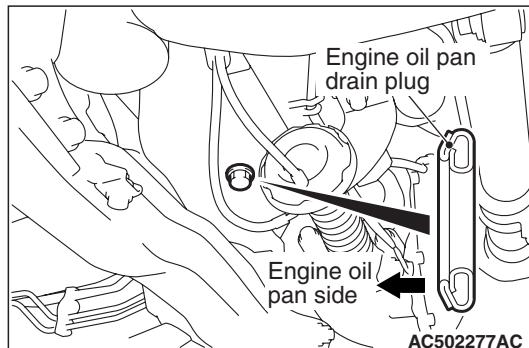

4. Install a new engine oil pan drain plug gasket and then tighten the engine oil pan drain plug to the specified torque.

Tightening torque: $39 \pm 5 \text{ N}\cdot\text{m}$

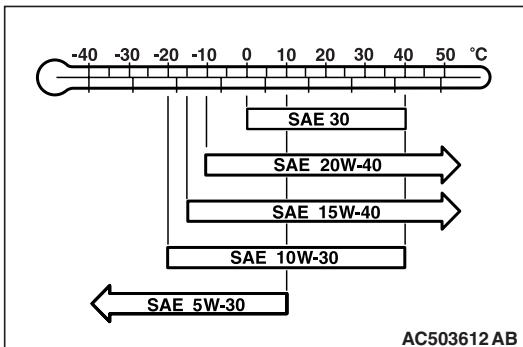

5. Refill with specified quantity of engine oil.

Specified Engine Oil

- ACEA classification: "FOR SERVICE A3/B3 or A3/B4"

- API classification: "FOR SERVICE CF-4"

Total quantity (Includes volume inside oil filter and oil cooler): 7.4 L

6. Install the engine oil filler cap.

7. Check engine oil level.


E4. REPLACE ENGINE OIL FILTER

M6020600400184


1. Start the engine and allow it to warm up until the temperature of the coolant reaches 80 °C to 90 °C.
2. Stop the engine.
3. Remove the engine oil filler cap.
4. Remove the engine oil pan drain plug to drain engine oil.

⚠ CAUTION

Use care as engine oil could be hot.

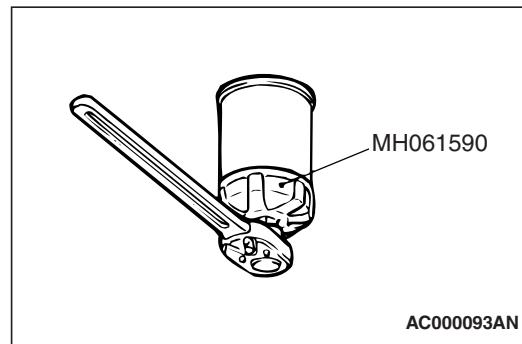

5. Use the special tool oil filter wrench (MH061590) to remove the engine oil filter.
6. Clean the filter bracket side mounting surface.

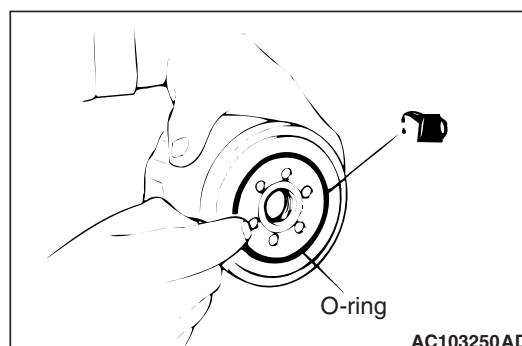

7. Apply a small amount of engine oil to the O-ring of the new engine oil filter.

Oil filter number: 1230A045

8. Once the O-ring of the oil filter is touching the flange, use the special tool oil filter wrench (MH061590) to tighten to the specified torque.


Tightening torque: Approximately 3/4 turn ($22 \pm 2 \text{ N}\cdot\text{m}$)

9. Install the engine oil pan drain plug and refill the engine oil.
10. Race the engine 2–3 times, and check to be sure that no engine oil leaks from installation section of the engine oil filter.

E5. CHECK ENGINE IDLING SPEED

M6020600500299

1. Set the vehicle to the pre-inspection condition.

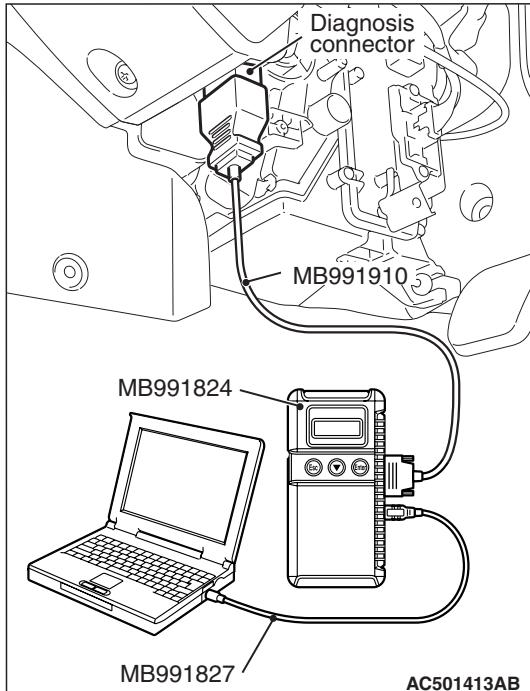

2. Turn the ignition switch to "LOOK" (OFF) position, and connect the diagnosis connector to the M.U.T.-III.
3. Start the engine, and let it run at idle.
4. Check the idle speed.


Standard value: $700 \pm 30 \text{ r/min}$

5. If the idle speed is not within the standard value, inspect the diesel system (Refer to WORKSHOP MANUAL GROUP 13).
6. Turn the ignition switch to "LOOK" (OFF) position and then remove the M.U.T.-III.

E6. CHECK EXHAUST GAS RECIRCULATION (EGR) SYSTEM


M6020600800234

EGR VALVE (DC MOTOR) CHECK SYSTEM CHECK

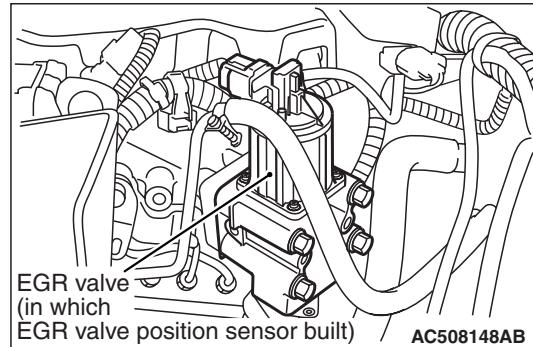


1. Connect the M.U.T.-III to the diagnosis connector to check for date list item No.16.
2. Start the engine, and warm up the engine.
3. Raise the engine speed gradually, and make sure that the valve open degree changes from 0% to 100%.

OPERATION CHECK

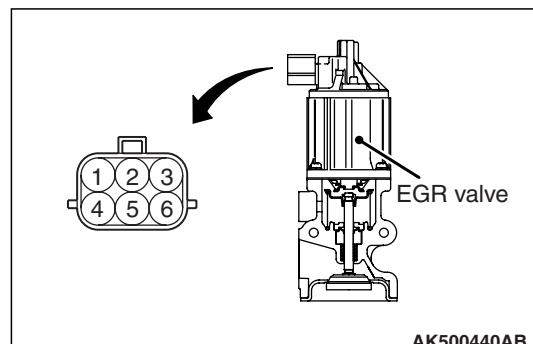


1. Remove the EGR valve.

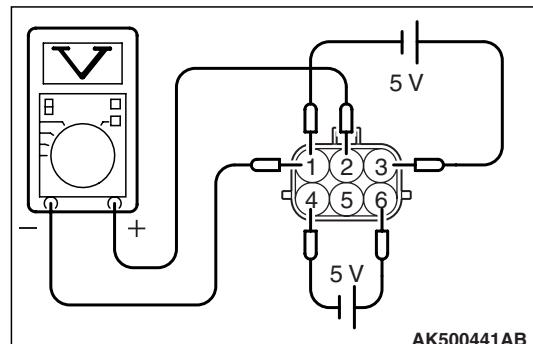

2. Connect the terminal (+) of the sensor power supply (5V) with the terminal No.3 of the EGR valve connector, and connect the terminal (-) of the sensor power supply (5V) with the terminal No. 2.

3. A tester is to be connected between the terminal No.1 and No. 2.
4. Connect the terminal (+) of the power supply with the terminal No. 6 of the EGR valve connector, and connect the terminal (-) of the power supply with the terminal No. 4. Confirm the EGR valve is opened.

NOTE: At this time, the power supply voltage is to be 5V. When the valve is not opened, increase the voltage 1V by 1V. For each voltage, current is to be applied within 5 seconds. Once the valve is opened, the voltage is not to be increased any more.

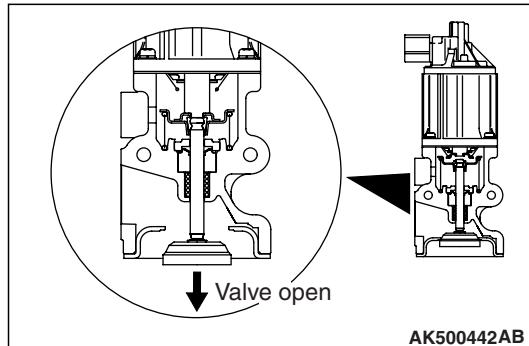

5. Confirm the voltage is changed between the terminal No. 1 and No. 2 together with the EGR valve opening movement.
6. By the voltage changed, the DC is recognized as being normal
7. Use a new gasket and tighten the installation bolt to the tightening torque.

Tightening torque: $48 \pm 6 \text{ N}\cdot\text{m}$

CLEANING THE EGR VALVE

1. Remove the EGR valve and check that the EGR valve is not stuck or clogged with carbon deposits. Use a wire brush to clean the valve if necessary.

CAUTION

Do not use a solvent or detergent, which could enter the motor and cause it to malfunction.

2. Using a new gasket, install the EGR valve by tightening its mounting bolts to the specified torque.

Tightening torque: $48 \pm 6 \text{ N}\cdot\text{m}$

E7. CHECK VALVE CLEARANCE (EXCEPT VEHICLES WITH AUTO-LASH ADJUSTER)

NOTE: The valve clearance check and adjustment should be done when the engine is cold.


1. Remove the engine air intake pipe.

2. Remove the inlet manifold.
3. Remove the injection pipe.

CAUTION

Leaked fuel on parts causes a decrease in function and burning. Therefore, place waste to absorb leaked fuel.


4. Remove the timing belt cover.
5. Remove the rocker cover.

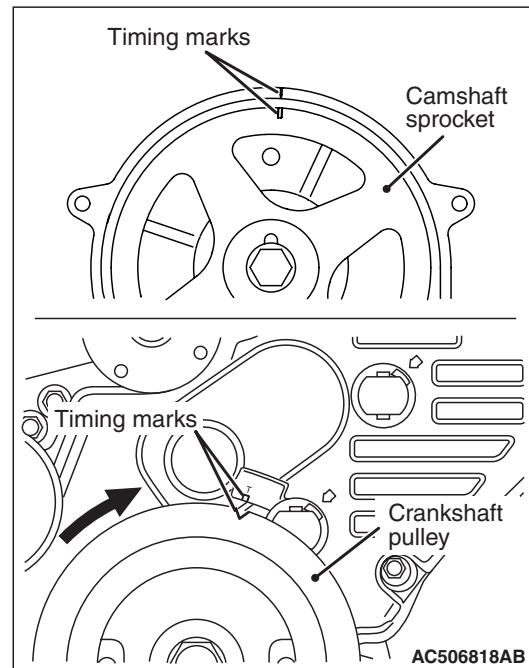

6. Align the camshaft sprocket timing marks and set the No. 1 cylinder at top dead centre.

CAUTION

The crankshaft should always be turned in a clockwise direction.

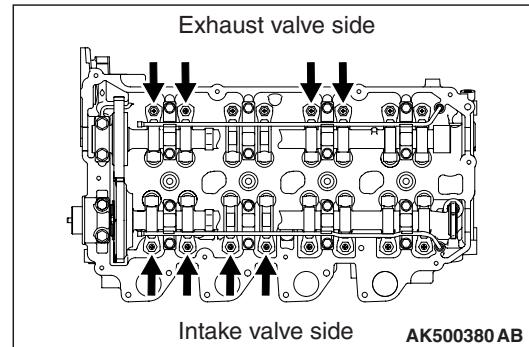


7. Measure the valve clearance. If the valve clearance is not as specified, loosen the rocker arm lock nut and adjust the clearance using a thickness gauge between the camshaft and the roller while turning the adjusting screw.

Standard value (cold engine):

Intake valve: 0.09 mm

Exhaust valve: 0.14 mm

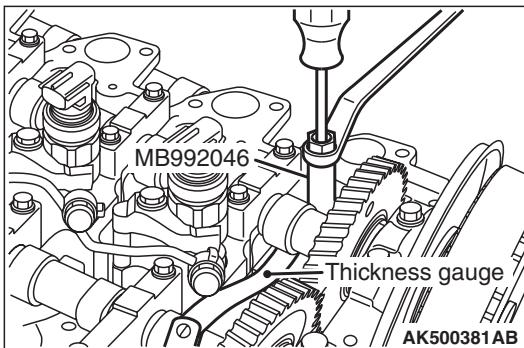


8. While holding the adjusting screw with a screwdriver to prevent it from turning, tighten the lock nut to the specified torque using a valve adjusting socket. (MB992046)

Tightening torque: $15 \pm 3 \text{ N}\cdot\text{m}$



CAUTION

Pay special attention that the tightening torque is not beyond this valve. If the tightening torque is beyond the valve, the valve stem would possibly bend.

9. Turn the crankshaft 360° clockwise to bring No. 4 cylinder to the top dead centre position.

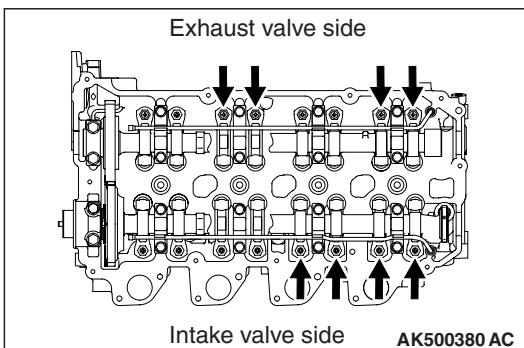

10. Measure the valve clearances at the places indicated by arrows in the illustration. If the clearance is not within the standard value, repeat steps 7 and 8 above.

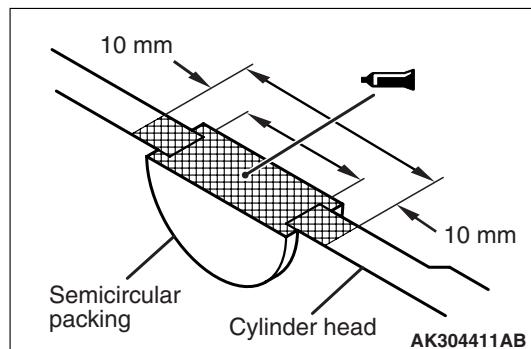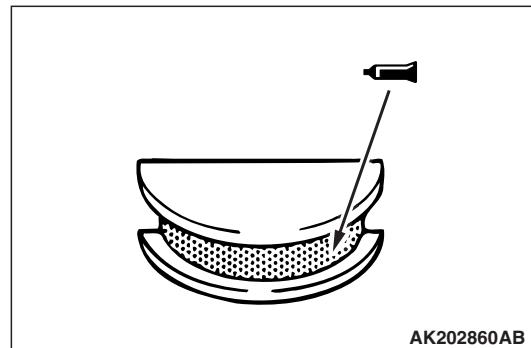

11. Apply specified sealant to the section of the semi-circular packing shown in the illustration.

Specified sealant: 3M ATD Part No. 8660 or equivalent

12. Install the rocker cover.

13. Install the timing belt cover.

14. Install the new injection pipe, the injection pipe to the specified torque.

Tightening torque: $35 \pm 5 \text{ N}\cdot\text{m}$

CAUTION

- The reinstallation histories of the removed injection pipe are up to five times. To count how many times the injection pipe is reinstalled, record the number of the reinstallation histories on the service booklet by adding this latest number of the histories, which is usually "1", to the previous one. Use a new injection pipe when the total reinstallation history numbers reach five times, or when the injector or common rail is replaced. In this case, record "a new injector pipe, the number of the reinstallation histories is zero" on the service booklet.
- When the injection pipe is reinstalled, confirm there is no foreign material on the seal surface or in the pipe and then install it not to deviate from the axis, fitting the seal surface.

15. Install the inlet manifold.

NOTE: Install a new gasket

16. Install the engine air intake pipe.

17. Start the engine and confirm there is no fuel leak from the joint for the injection pipe after carrying out the rapid racing few times.

OTHERS


F1. CHECK BODY CONDITION FOR DAMAGE

M6020700100124

1. Check underbody coating for damage.
2. Check body painting for damage.

F2. ROAD TEST

M6020700200187

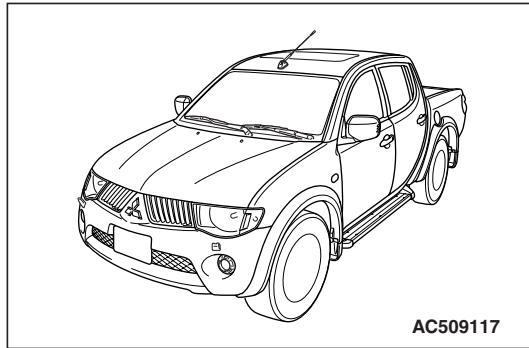

Drive the vehicle and check for conditions.

1. Check free play of steering wheel.
2. Check efficiency of service brakes and parking brakes system.
3. Check driveability of engine.
4. Check condition of instruments, gauges indicators, exterior lamps, heater and ventilators.
5. Check abnormal noise of each part.
6. Check the tyres for wear and for the correct air pressure.