

---

# GROUP 11E

# ENGINE

# MECHANICAL

## <4G69>

### CONTENTS

|                                               |        |                                       |        |
|-----------------------------------------------|--------|---------------------------------------|--------|
| SERVICE SPECIFICATIONS .....                  | 11E-2  | CAMSHAFT AND VALVE STEM<br>SEAL ..... | 11E-18 |
| SEALANTS .....                                | 11E-2  | REMOVAL AND INSTALLATION .....        | 11E-18 |
| SPECIAL TOOLS .....                           | 11E-3  | OIL PAN .....                         | 11E-23 |
| ON-VEHICLE SERVICE .....                      | 11E-7  | REMOVAL AND INSTALLATION .....        | 11E-23 |
| DRIVE BELT TENSION CHECK .....                | 11E-7  | INSPECTION .....                      | 11E-25 |
| AUTO-TENSIONER CHECK .....                    | 11E-7  | CRANKSHAFT OIL SEAL .....             | 11E-26 |
| VALVE CLEARANCE CHECK AND<br>ADJUSTMENT ..... | 11E-10 | REMOVAL AND INSTALLATION .....        | 11E-26 |
| ROCKER ARM PISTON OPERATION<br>CHECK .....    | 11E-11 | CYLINDER HEAD GASKET .....            | 11E-30 |
| IGNITION TIMING CHECK .....                   | 11E-12 | REMOVAL AND INSTALLATION .....        | 11E-30 |
| IDLE SPEED CHECK .....                        | 11E-13 | TIMING BELT .....                     | 11E-36 |
| IDLE MIXTURE CHECK .....                      | 11E-14 | REMOVAL AND INSTALLATION .....        | 11E-36 |
| COMPRESSION PRESSURE CHECK .....              | 11E-15 | INSPECTION .....                      | 11E-45 |
| MANIFOLD VACUUM CHECK .....                   | 11E-15 | ENGINE ASSEMBLY .....                 | 11E-46 |
| CRANKSHAFT PULLEY .....                       | 11E-17 | REMOVAL AND INSTALLATION .....        | 11E-46 |
| REMOVAL AND INSTALLATION .....                | 11E-17 |                                       |        |

## SERVICE SPECIFICATIONS

M1112000300278

| Item                                                    |                                       |                                  | Standard value            | Limit       |
|---------------------------------------------------------|---------------------------------------|----------------------------------|---------------------------|-------------|
| Drive belt tension                                      | Vibration frequency Hz<br>(Reference) | A/C compressor type:<br>MSC90CA  | 113 – 145                 | –           |
|                                                         |                                       | A/C compressor type:<br>MSC105CA | 120 – 154                 | –           |
|                                                         | Tension N (Reference)                 |                                  | 340 – 555                 | –           |
| Valve clearance (at hot) mm                             |                                       | Intake valve                     | 0.20                      | –           |
|                                                         |                                       | Exhaust valve                    | 0.30                      | –           |
| Basic ignition timing                                   |                                       |                                  | 5° BTDC ± 3°              | –           |
| Ignition timing                                         |                                       |                                  | Approximately<br>10° BTDC | –           |
| Idle speed r/min                                        |                                       | M/T                              | 680 ± 100                 | –           |
|                                                         |                                       | A/T                              | 750 ± 100                 | –           |
| CO contents %                                           |                                       |                                  | 0.5 or less               | –           |
| HC contents ppm                                         |                                       |                                  | 100 or less               | –           |
| Compression pressure kPa-r/min                          |                                       |                                  | 1,560 – 200               | 1,130 – 200 |
| Compression pressure difference of all cylinders kPa    |                                       |                                  | –                         | Maximum 98  |
| Intake manifold vacuum kPa                              |                                       |                                  | –                         | Minimum 60  |
| Cylinder head bolt nominal length mm                    |                                       |                                  | –                         | 99.4        |
| Balancer timing belt tension (When adjusted)            | Deflection mm                         | 5 – 7                            | –                         |             |
| Balancer timing belt tension (When replaced)            | Deflection mm                         | 5 – 7                            | –                         |             |
| Balancer timing belt tension (When checked)             | Deflection mm                         | 5 – 10                           | –                         |             |
| Timing belt tensioner adjuster rod protrusion amount mm |                                       | 3.8 – 4.5                        | –                         |             |
| Timing belt tensioner adjuster rod movement mm          |                                       | Within 1                         | –                         |             |




## SEALANTS








M1112000500294









| Item                             | Specified sealant                                 | Remark                 |
|----------------------------------|---------------------------------------------------|------------------------|
| Camshaft position sensor support | MITSUBISHI GENUINE PART MD970389 or<br>equivalent | Semi-drying<br>sealant |
| Engine upper oil pan             |                                                   |                        |
| Engine lower oil pan             |                                                   |                        |
| Taper plug                       | LOCTITE203MP                                      | Anaerobic<br>sealant   |






## SPECIAL TOOLS

M1112000601313
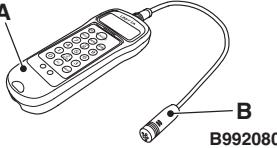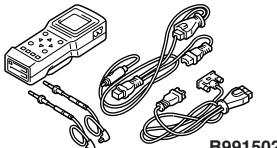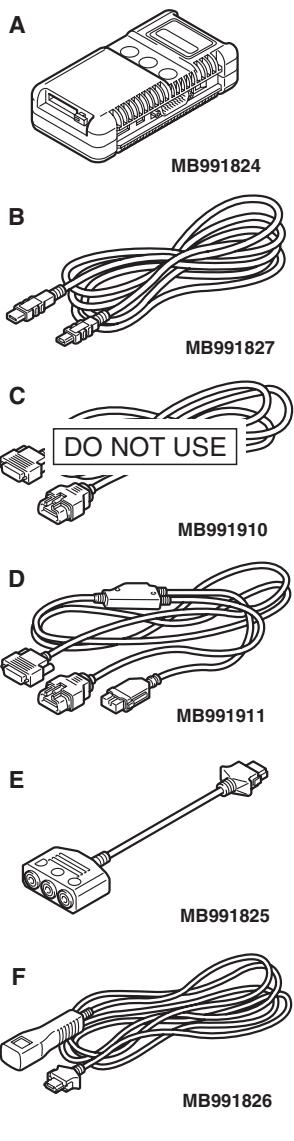
| Tool                                                                               | Number                                                                                                         | Name                                                                                                                                                                                                                                                                                                                     | Use                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|   | MB992080<br>A: MB992081<br>B: MB992082<br>B992080                                                              | Belt tension meter set<br>A: Belt tension meter<br>B: Microphone assembly                                                                                                                                                                                                                                                | Drive belt tension check                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|   | MB991502                                                                                                       | M.U.T.-II sub assembly                                                                                                                                                                                                                                                                                                   | <ul style="list-style-type: none"> <li>• Drive belt tension check</li> <li>• Checking the ignition timing</li> <li>• Checking the idle speed</li> </ul>                                                                                                                                                                                                                                                                                                                           |
|  | MB991955<br>A: MB991824<br>B: MB991827<br>C: MB991910<br>D: MB991911<br>E: MB991825<br>F: MB991826<br>MB991955 | M.U.T.-III sub assembly<br>A: Vehicle communication interface (V.C.I.)<br>B: M.U.T.-III USB cable<br>C: M.U.T.-III main harness A (Vehicles with CAN communication system)<br>D: M.U.T.-III main harness B (Vehicles without CAN communication system)<br>E: M.U.T.-III adapter harness<br>F: M.U.T.-III trigger harness | <p><b>CAUTION</b></p> <p>If you connect M.U.T.-III main harness A to a vehicle without CAN communication system to use the M.U.T.-III, a pulse signal may interfere with the simulated vehicle speed lines, thus causing the M.U.T.-III inoperative. Therefore, use the M.U.T.-III main harness B (MB991911) instead.</p> <ul style="list-style-type: none"> <li>• Drive belt tension check</li> <li>• Checking the ignition timing</li> <li>• Checking the idle speed</li> </ul> |
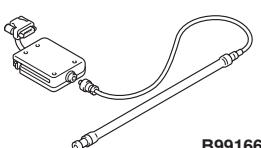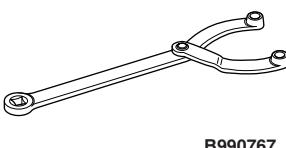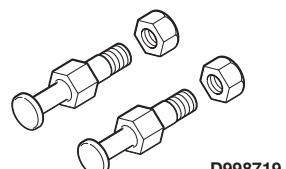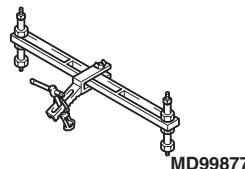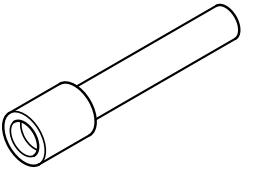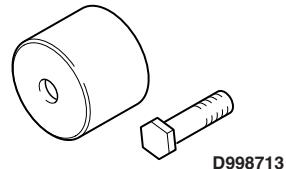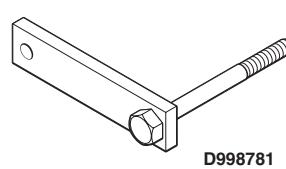
| Tool                                                                                           | Number   | Name                             | Use                                                                                                                                                    |
|------------------------------------------------------------------------------------------------|----------|----------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|
| <br>B991668   | MB991668 | Belt tension meter set           | Drive belt tension check (used together with M.U.T.-II or M.U.T.-III)                                                                                  |
| <br>B990767   | MB990767 | Front hub and flange yoke holder | Holding the camshaft sprocket                                                                                                                          |
| <br>D998719   | MD998719 | Pin                              |                                                                                                                                                        |
| <br>MD998772  | MD998772 | Valve spring compressor          | Compressing valve spring                                                                                                                               |
|             | MB991999 | Valve stem seal installer        | Valve stem seal installation                                                                                                                           |
| <br>D998713 | MD998713 | Camshaft oil seal installer      | Camshaft oil seal installation                                                                                                                         |
| <br>D998781 | MD998781 | Flywheel stopper                 | <ul style="list-style-type: none"> <li>• Supporting the flywheel assembly &lt;M/T&gt;</li> <li>• Supporting the A/T drive plate &lt;A/T&gt;</li> </ul> |
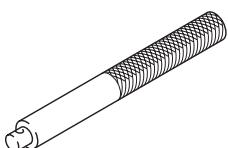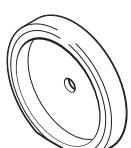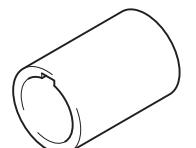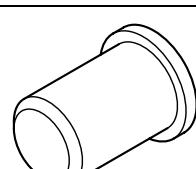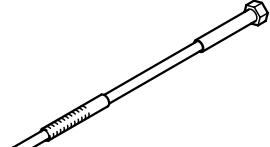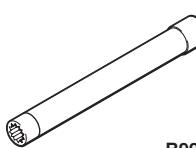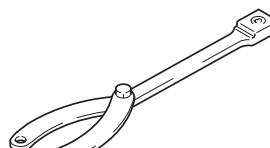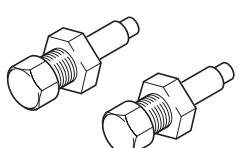
| Tool                                                                                           | Number   | Name                                | Use                                                                         |
|------------------------------------------------------------------------------------------------|----------|-------------------------------------|-----------------------------------------------------------------------------|
|               | MB990938 | Installer bar                       | Crankshaft rear oil seal installation                                       |
| <br>D998776   | MD998776 | Crankshaft rear oil seal installer  |                                                                             |
| <br>D998285   | MD998285 | Crankshaft front oil seal guide     | Crankshaft front oil seal installation                                      |
|               | MD998375 | Crankshaft front oil seal installer |                                                                             |
| <br>D998738 | MD998738 | Adjusting bolt                      | Supporting the timing belt tensioner arm and timing belt tensioner adjuster |
| <br>B991654 | MB991654 | Cylinder head bolt wrench (12)      | Removal and installation of cylinder head bolt                              |
| <br>B991367 | MB991367 | Special spanner                     | Holding the crankshaft camshaft drive sprocket                              |
| <br>B991385 | MB991385 | Pin                                 |                                                                             |
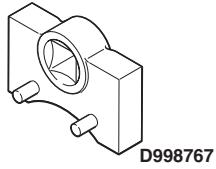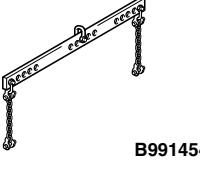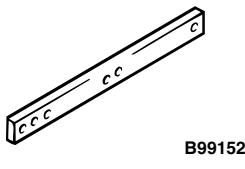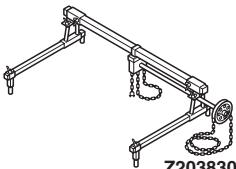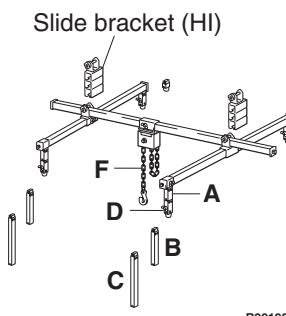
| Tool                                                                                | Number                                                                                             | Name                                                                                                                                                         | Use                                                                                                                                                                                                                   |
|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | MD998767                                                                                           | Tensioner wrench                                                                                                                                             | Valve timing belt tension adjustment                                                                                                                                                                                  |
|    | MB991454                                                                                           | Engine hanger balancer                                                                                                                                       | When the engine hanger is used: Supporting the engine assembly during removal and installation of the transmission assembly<br><i>NOTE: Special tool MB991454 is a part of engine hanger attachment set MB991453.</i> |
|    | MB991527                                                                                           | Hanger                                                                                                                                                       |                                                                                                                                                                                                                       |
|    | MB991895                                                                                           | Engine hanger                                                                                                                                                |                                                                                                                                                                                                                       |
|  | MB991928<br>A: MB991929<br>B: MB991930<br>C: MB991931<br>D: MB991932<br>E: MB991933<br>F: MB991934 | Engine hanger<br>A: Joint (50) x 2<br>B: Joint (90) x 2<br>C: Joint (140) x 2<br>D: Foot (standard) x 4<br>E: Foot (short) x 2<br>F: Chain and hook assembly |                                                                                                                                                                                                                       |


## ON-VEHICLE SERVICE

## DRIVE BELT TENSION CHECK

M1111003100548

**CAUTION**

Check the drive belt tension after turning the crankshaft clockwise one turn or more.

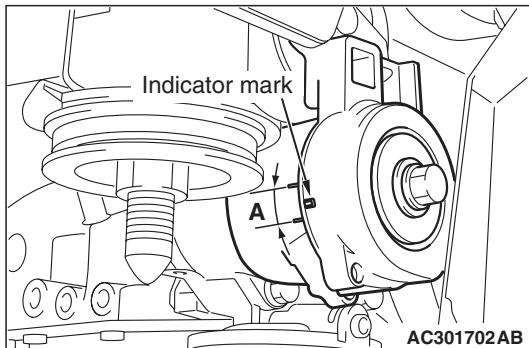

1. Make sure that the indicator mark is within the area marked with A in the illustration.
2. If the mark is out of the area, replace the drive belt. (Refer to P.11E-17).


*NOTE: The drive belt tension check is not necessary as auto-tensioner is adopted.*

## AUTO-TENSIONER CHECK

M1111003000905

## OPERATION CHECK

1. Turn OFF the engine from the idle state then check to see that the drive belt is not protruding from the pulley width of the auto-tensioner.
2. Remove the drive belt.(Refer to P.11E-17).

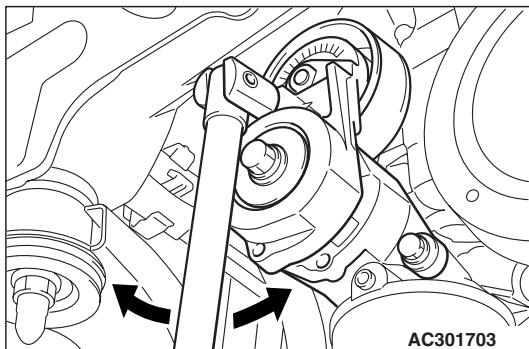


3. Securely insert the spindle handle or ratchet handle with a 12.7 mm insertion angle into the jig hole of the auto tensioner. Turn the auto-tensioner to the left and right to check and see that there is no threading.
4. If there are any problems in the procedure 1 or 3, replace the auto-tensioner.(Refer to P.11E-36).
5. Install the drive belt.(Refer to P.11E-17).

## FUNCTION CHECK

The auto-tensioner can be checked whether it is in good condition by checking its tension.

**When the vibration frequency is measured (Belt tension meter set is used): Recommendation**

1. Check the drive belt tension (Refer to P.11E-7).
2. Measure the drive belt tension vibration frequency by the following procedures:

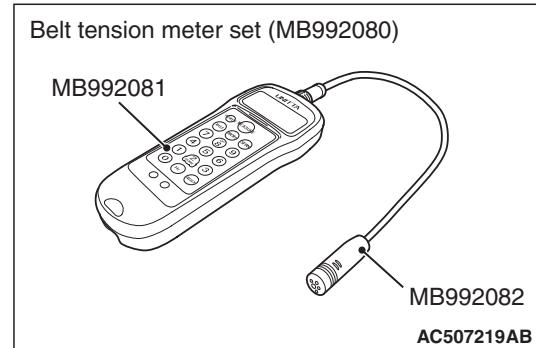


- (1) Connect special tool microphone assembly (MB992082) to special tool belt tension meter (MB992081) of special tool belt tension meter set (MB992080).
- (2) Press the "POWER" button to turn on the power supply.
- (3) Press the numeral key of "1" and check that "No. 1" appears on the upper left of the display.

*NOTE: This operation is to temporarily set the preset data such as the belt specifications, because if the measurement is taken without input of the belt specifications, conversion to tension value (N) cannot be made, resulting in judgement of error.*

- (4) Press "Hz" button twice to change the display to the frequency display (Hz).

**⚠ CAUTION**

- The temperature of the surface of the belt should be as close to normal temperature as possible.
- Do not allow any contaminants such as water or oil to get onto the microphone.
- If strong gusts of wind blow against the microphone or if there are any loud sources of noise nearby, the values measured by the microphone may not correspond to actual values.
- If the microphone is touching the belt while the measurement is being made, the values measured by the microphone may not correspond to actual values.
- Do not take the measurement while the vehicle's engine is running.

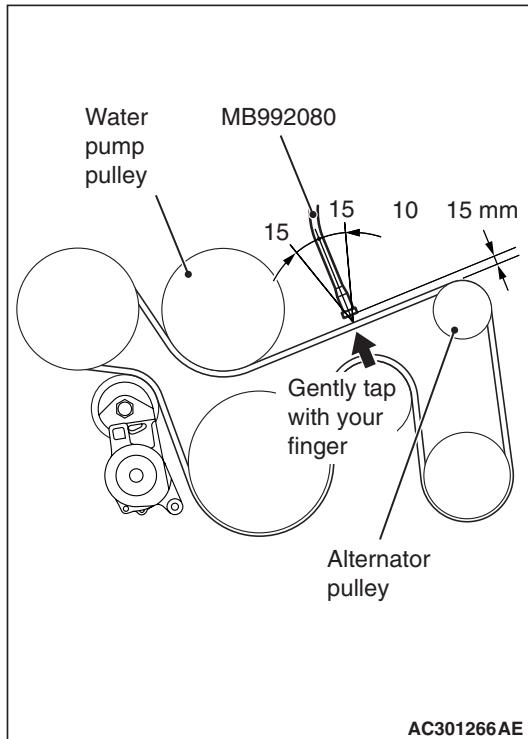

(5) Hold special tool MB992080 to the middle of the belt between the pulleys (at the place indicated by arrow) where it does not contact the belt (approximately 10 – 15 mm away from the rear surface of the belt) so that it is perpendicular to the belt (within an angle of  $\pm 15^\circ$ ).

(6) Press the "MEASURE" button.

(7) Gently tap the middle of the belt between the pulleys (the place indicated by the arrow) with your finger as shown in the illustration, and check that the vibration frequency of the belt is within the standard value.

Standard value:

<A/C compressor type: MSC90CA> 113 – 145 Hz  
<A/C compressor type: MSC105CA> 120 – 154 Hz


*NOTE: To take the measurement repeatedly, fillip the belt again.*

- (8) Press and hold the "POWER" button to turn off the power supply.
3. If not within the standard value, replace the auto-tensioner (Refer to P.11E-36).

### When the vibration frequency is measured (M.U.T.-II is used):

#### Recommendation

1. Check the drive belt tension. (Refer to P.11E-7).
2. Measure the drive belt tension vibration frequency by the following procedures:

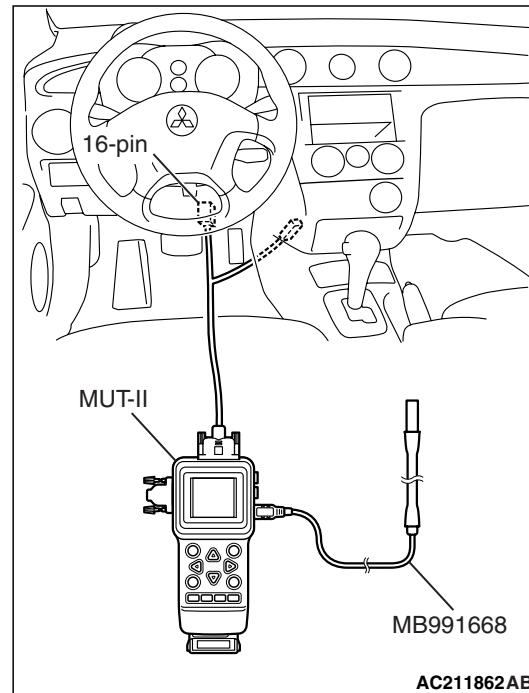
**⚠ CAUTION**

To prevent damage to M.U.T.-II, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting M.U.T.-II.

- (1) Connect special tool belt tension meter set (MB991668) to the M.U.T.-II.
- (2) Connect the M.U.T.-II to the diagnosis connector.
- (3) Turn the ignition switch to "ON" position, and select "BELT TENSION" on the menu screen.

**⚠ CAUTION**

- The temperature of the surface of the belt should be as close to normal temperature as possible.
- Do not allow any contaminants such as water or oil to get onto the microphone.
- If strong gusts of wind blow against the microphone or if there are any loud sources of noise nearby, the values measured by the microphone may not correspond to actual values.
- If the microphone is touching the belt while the measurement is being made, the values measured by the microphone may not correspond to actual values.
- Do not take the measurement while the vehicle's engine is running.

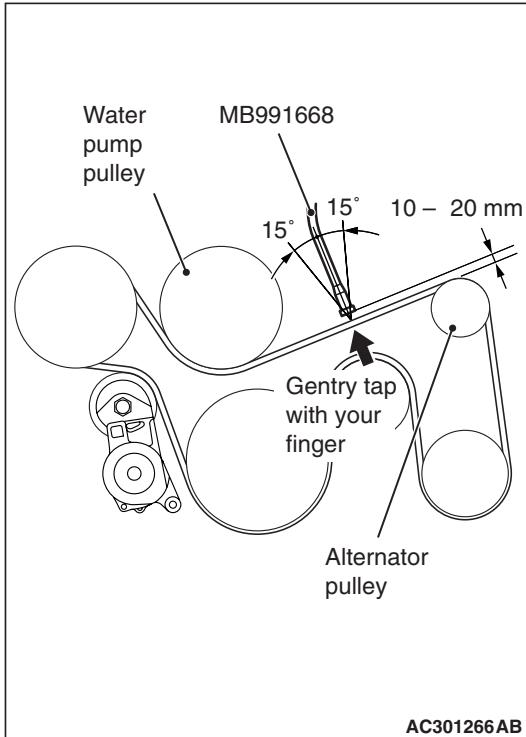

- (4) Hold special tool belt tension meter set (MB991668) to the middle of the drive belt between the pulleys (at the place indicated by arrow), approximately 10 – 20 mm away from the rear surface of the belt so that it is perpendicular to the belt (within an angle of ± 15 degree).
- (5) Gently tap the middle of the belt between the pulleys (the place indicated by the arrow) with your finger as shown in the illustration, and measure that the vibration frequency of the belt is within the standard value.

Standard value:

<A/C compressor type: MSC90CA> 113 – 145 Hz  
<A/C compressor type: MSC105CA> 120 – 154 Hz


3. If not within the standard value, replace the auto-tensioner. (Refer to [P.11E-36](#)).

**When the vibration frequency is measured (V.C.I. is used):**

**Recommendation**

1. Check the drive belt tension. (Refer to [P.11E-7](#)).
2. Measure the drive belt tension vibration frequency by the following procedures:

**⚠ CAUTION**

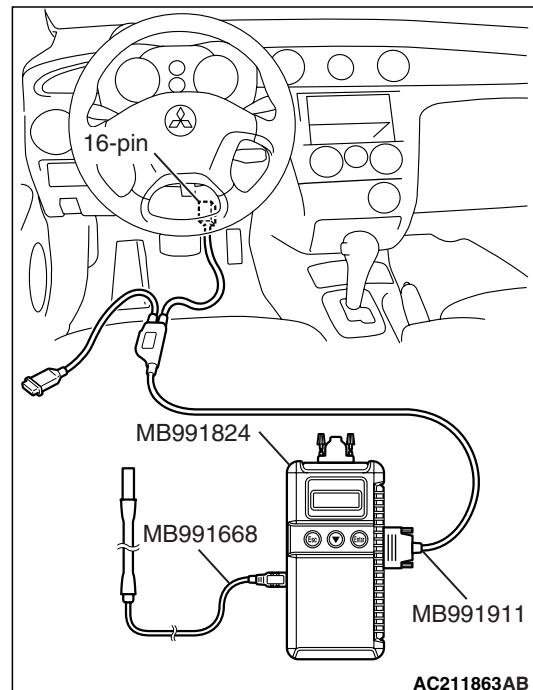


**To prevent damage to special tool V.C.I. (MB991824), always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting special tool V.C.I. (MB991824).**

- (1) Connect special tool belt tension meter set (MB991668) to special tool V.C.I. (MB991824).
- (2) Connect special tool M.U.T.-III main harness B (MB991911) to special tool V.C.I. (MB991824).
- (3) Connect special tool M.U.T.-III main harness B (MB991911) to the diagnosis connector.
- (4) Turn the ignition switch to "ON" position, and select "Belt Tension" on the menu screen.

**⚠ CAUTION**

- The temperature of the surface of the belt should be as close to normal temperature as possible.
- Do not allow any contaminants such as water or oil to get onto the microphone.
- If strong gusts of wind blow against the microphone or if there are any loud sources of noise nearby, the values measured by the microphone may not correspond to actual values.
- If the microphone is touching the belt while the measurement is being made, the values measured by the microphone may not correspond to actual values.
- Do not take the measurement while the vehicle's engine is running.

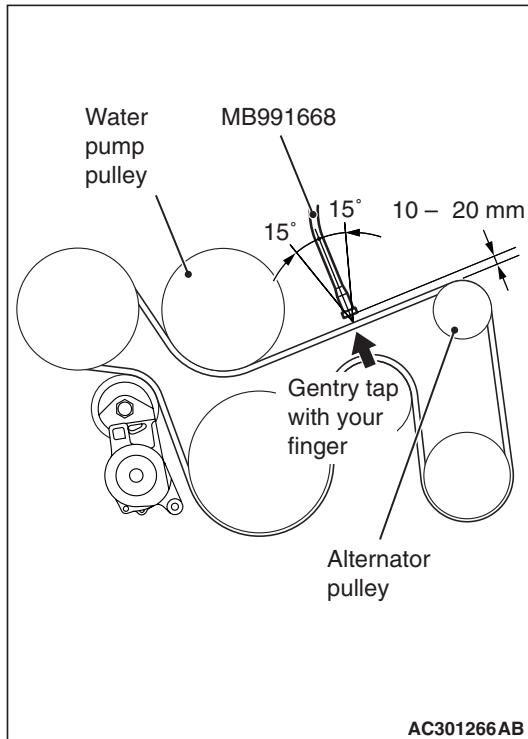

(5) Hold special tool belt tension meter set (MB991668) to the middle of the drive belt between the pulleys (at the place indicated by arrow), approximately 10 – 20 mm away from the rear surface of the belt so that it is perpendicular to the belt (within an angle of  $\pm$  15 degree).

(6) Gently tap the middle of the belt between the pulleys (the place indicated by the arrow) with your finger as shown in the illustration, and measure that the vibration frequency of the belt is within the standard value.


**Standard value:**

<A/C compressor type: MSC90CA> 113 – 145 Hz  
<A/C compressor type: MSC105CA> 120 – 154 Hz

3. If not within the standard value, replace the alternator drive belt auto tensioner. (Refer to [P.11E-36](#)).

**When the tension is measured**

1. Check the drive belt tension. (Refer to [P.11E-7](#)).

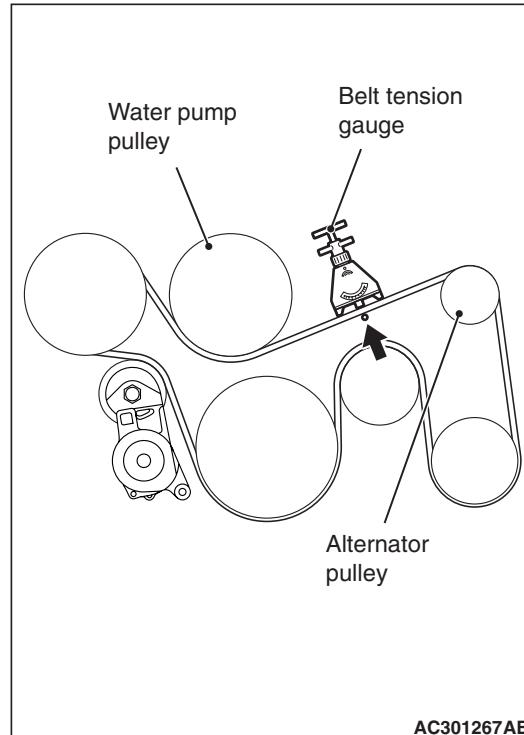

2. Use a belt tension gauge in the middle of the belt between the pulleys (at the place indicated by the arrow) to measure that the belt tension is within the standard value.

**Standard value: 340 – 555 N**


3. If not within the standard value, replace the auto-tensioner. (Refer to [P.11E-36](#)).

**VALVE CLEARANCE CHECK AND ADJUSTMENT**

M1111001500131

1. Start the engine and allow it to warm up until the engine coolant temperature reaches 80 – 95°C.
2. Turn the ignition switch to the "LOCK" (OFF) position.
3. Remove all ignition coils.
4. Remove all spark plugs from the cylinder head for easy inspection.
5. Remove the rocker cover.

6. Turn the crankshaft clockwise until the notch on the pulley is lined up with the "T" mark on the timing indicator.
7. Move the rocker arms on the No.1 and No.4 cylinders up and down by hand to determine which cylinder has its piston at the top dead center on the compression stroke. If both intake and exhaust valve rocker arms have a valve lash, the piston in the cylinder corresponding to these rocker arms is at the top dead center on the compression stroke.

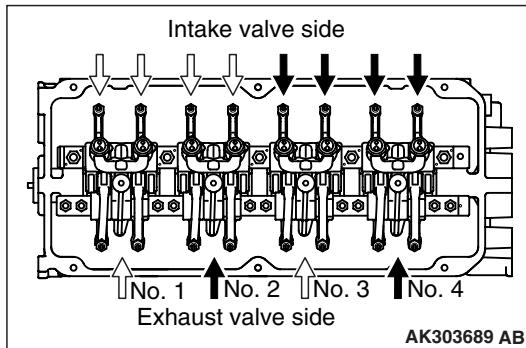

8. Valve clearance inspection and adjustment can be performed on rocker arms indicated by white arrow mark when the No.1 cylinder piston is at the top dead centre on the compression stroke, and on rocker arms indicated by black arrow mark when the No.4 cylinder piston is at the top dead centre on the compression stroke.
9. Measure the valve clearance.

If the valve clearance is not as specified, loosen the rocker arm lock nut and adjust the clearance using a thickness gauge while turning the adjusting screw.

**Standard value (hot engine):**

**Intake valve: 0.20 mm**

**Exhaust valve: 0.30 mm**

10. While holding the adjusting screw with a screwdriver to prevent it from turning, tighten the lock nut to the specified torque.

**Tightening torque:  $9 \pm 1 \text{ N}\cdot\text{m}$**

11. Turn the crankshaft through  $360^\circ$  to line up the notch on the crankshaft pulley with the "T" mark on the timing indicator.
12. Repeat steps (9) and (10) on other valves for clearance adjustment.
13. Install the rocker cover.


14. Install the spark plugs and tighten to the specified torque.

**Tightening torque:  $25 \pm 4 \text{ N}\cdot\text{m}$**

15. Install the ignition coils.


## ROCKER ARM PISTON OPERATION CHECK

M1111051000023

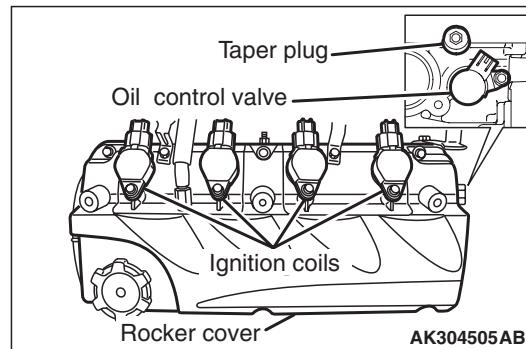


1. Remove all of the ignition coils.
2. Remove the rocker cover.
3. Remove the oil control valve.
4. Remove the taper plug.
5. Turn the crankshaft clockwise until the notch on the crankshaft pulley is lined up with "T" mark on the lower cover of timing belt.
6. Move the rocker arms on the No.1 and No.4 cylinders up and down by hand to determine which cylinder has its piston at the top dead centre on the compression stroke.

**NOTE:**

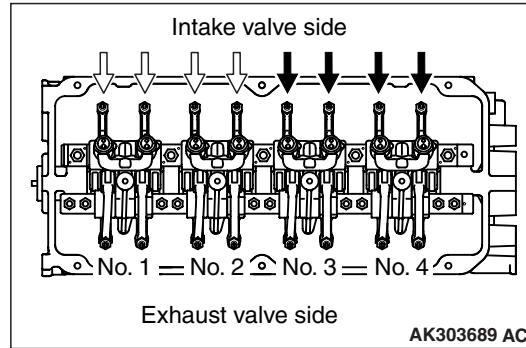

*The rocker arm piston operation check can be performed on rocker arms indicated by white arrow mark when the No.1 cylinder piston is at the top dead centre on the compression stroke, and on rocker arms indicated by black arrow mark when the No.4 cylinder piston is at the top dead centre on the compression stroke.*

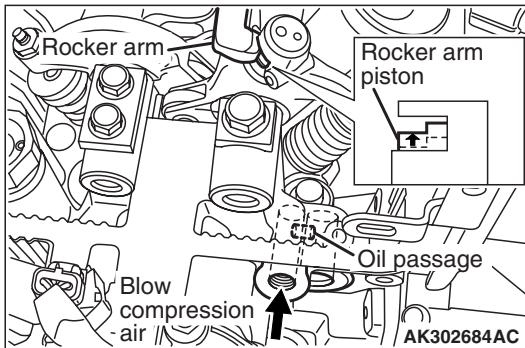

7. While shutting up the oil passage hole at the depth of the oil control valve's installation hole by finger not to leak air, blow compression air into the taper plug's installation hole by air blowgun. At this time, confirm that the rocker arm piston can operate.

*NOTE: To fully confirm the check, prevent the compression air from leaking as much as possible by installing the O-ring to the end of air blowgun.*

8. Turn the crankshaft clockwise until the notch on the crankshaft pulley is lined up with "T" mark on the lower cover of timing belt.
9. Confirm the rest of the rocker arm pistons under the procedure 7.
10. When the rocker arm piston does not operate, replace the rocker arm assy.
11. Apply sealant to threaded portion.

**Specified sealant: LOCTITE203MP**

**CAUTION**

**Do not start the engine within one hour after the engine taper plug has been installed.**



12. Install the taper plug and tighten to the specified torque.

**Tightening torque:  $10 \pm 2 \text{ N}\cdot\text{m}$**

13. Install the oil control valve. (Refer to Camshaft and Valve Stem Seal – Removal and Installation P.11E-18.)
14. Install all of the ignition coils.
15. Install the rocker cover.

## IGNITION TIMING CHECK

M1111001700997

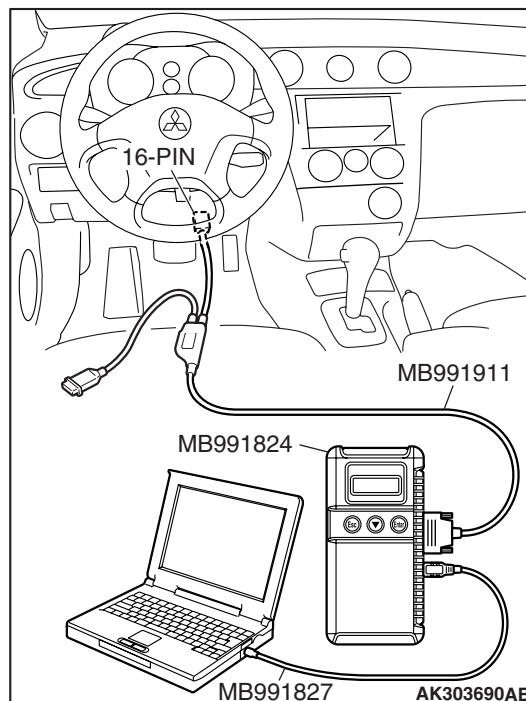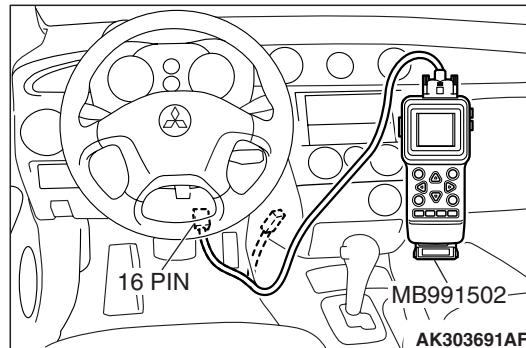

1. Before inspection, set the vehicle to the pre-inspection condition.
2. Turn the ignition switch to the "LOCK" (OFF) position and then connect the M.U.T.-II/III to the diagnosis connector.
3. Connect a timing light.
4. Start the engine and let it run at idle.
5. Use the M.U.T.-II/III to measure engine idle speed and check that it is within the standard value.

**Standard value**

:  $680 \pm 100 \text{ r/min}$  <M/T>

:  $750 \pm 100 \text{ r/min}$  <A/T>

6. Select No. 17 of the M.U.T.-II/III Actuator test.
7. Check that basic ignition timing is within the standard value.

**Standard value:  $5^\circ \text{ BTDC} \pm 3^\circ$**

8. If the basic ignition timing is outside the standard value, inspect the MPI system (Refer to P.13C-21, GROUP 13C – Troubleshooting – Inspection chart for diagnosis code).

**CAUTION**

If the test is not cancelled, a forced driving will continue for 27 minutes. Driving under this condition may damage the engine.

9. Press the M.U.T.-II/III clear key (Select a forced driving cancel mode) to release the Actuator test.  
10. Check that ignition timing is at the standard value.

**Standard value: approximately 10° BTDC**



**NOTE:**

- The ignition timing may fluctuate within  $\pm 7^\circ$  BTDC. This is normal.
- In higher altitude, the ignition timing is more advanced than the standard value by approximately  $5^\circ$ .

11. Remove the timing light.  
12. Turn the ignition switch to the "LOCK" (OFF) position and then remove the M.U.T.-II/III.

**IDLE SPEED CHECK**

M1111003500911

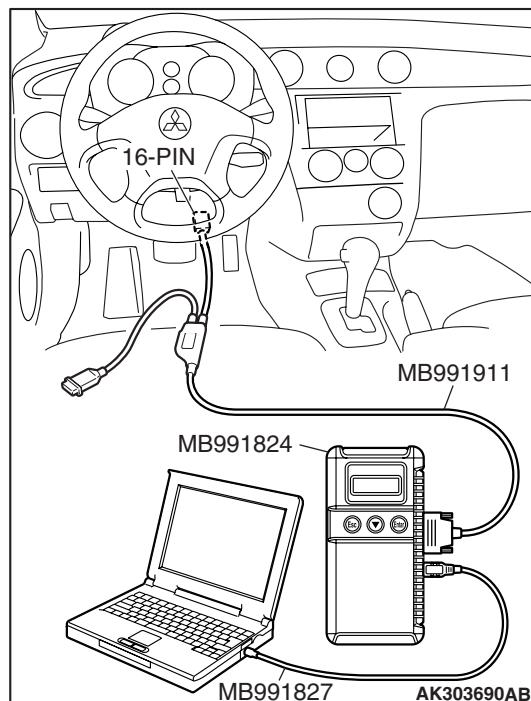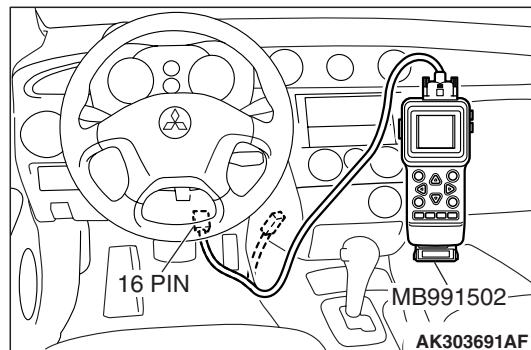

1. Before inspection, set the vehicle to the pre-inspection condition.
2. Turn the ignition switch to the "LOCK" (OFF) position and then connect the M.U.T.-II/III to the diagnosis connector.
3. Connect a timing light.
4. Start the engine and let it run at idle.
5. Check that ignition timing is at the standard value.

**Standard value: approximately 10° BTDC**

6. Check the idle speed.

**Standard value**

:  $680 \pm 100$  r/min <M/T>  
:  $750 \pm 100$  r/min <A/T>



**NOTE:**

- The idle speed is controlled automatically by the idle speed control system.
- When using the M.U.T.-II/III, select item No. 22 and take a reading of the idle speed.

7. If the idle speed is outside the standard value, inspect the MPI system (Refer to [P.13C-21](#), GROUP 13C – Troubleshooting – Inspection chart for diagnosis code).
8. Turn the ignition switch to the "LOCK" (OFF) position and then remove the M.U.T.-II/III.

## IDLE MIXTURE CHECK

M1111002100426

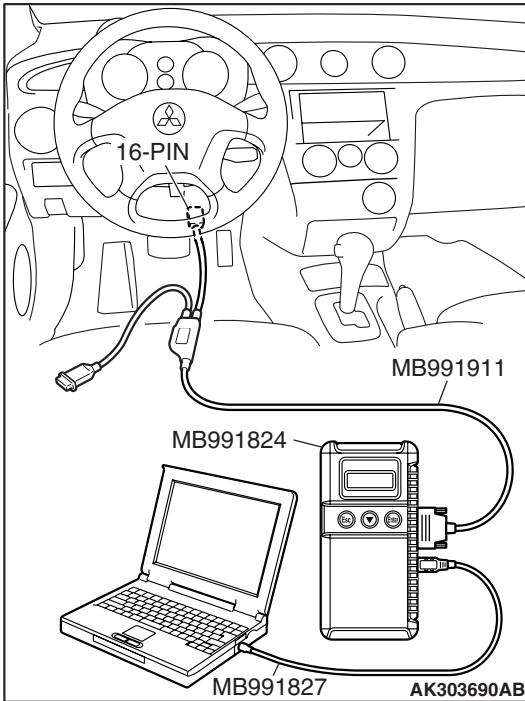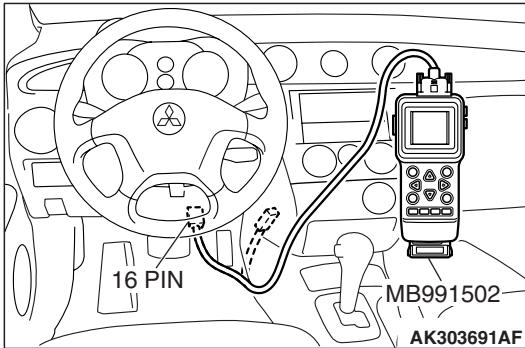

1. Before inspection, set the vehicle to the pre-inspection condition.
2. Turn the ignition switch to the "LOCK" (OFF) position and then connect the M.U.T.-II/III to the diagnosis connector.

3. Connect a timing light.

4. Start the engine and let it run at idle.

5. Check that ignition timing is at the standard value.

**Standard value: approximately 10° BTDC**

6. Run the engine at 2,500 r/min for 2 minutes.

7. Set the CO, HC tester.

8. Check the CO contents and the HC contents at idle.

**Standard value**

**CO contents: 0.5 % or less**

**HC contents: 100 ppm or less**

9. If there is a deviation from the standard value, check the following items:


- Diagnosis output
- Fuel pressure
- Injector
- Ignition coil, spark plug
- EGR control system
- Evaporative emission control system
- Compression pressure

*NOTE: Replace the three way catalyst when the CO and HC contents are not within the standard value, even though the result of the inspection is normal on all items.*

10. Turn the ignition switch to the "LOCK" (OFF) position and then remove the M.U.T.-II/III.

## COMPRESSION PRESSURE CHECK

M1111002600636

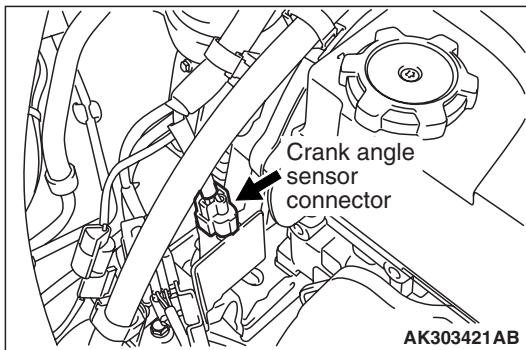

1. Before inspection, set the vehicle to the pre-inspection condition.
2. Remove all of the ignition coils and spark plugs.
3. Disconnect the crank angle sensor connector.

*NOTE: Doing this will prevent the engine-ECU<M/T> or engine-A/T-ECU<A/T> from carrying out ignition and fuel injection.*

### CAUTION

- Keep away from the spark plug hole when cranking.
- If compression is measured with water, oil, fuel, etc., that has come from cracks inside the cylinder, these materials will become heated and will gush out from the spark plug hole, which is dangerous.

4. Cover the spark plug hole with a shop towel etc., and after the engine has been cranked, check that no foreign material is adhering to the shop towel.
5. Set compression gauge to one of the spark plug holes.
6. Crank the engine with the throttle valve fully open and measure the compression pressure.

**Standard value (at engine speed of 200 r/min):**

**1,560 kPa**

**Limit (at engine speed of 200 r/min):**

**Minimum 1130 kPa**

7. Measure the compression pressure for all the cylinders, and check that the pressure differences of the cylinders are below the limit.

**Limit: Maximum 98 kPa**

8. If there is a cylinder with compression or a compression difference that is outside the limit, pour a small amount of engine oil through the spark plug hole, and repeat the operations in steps from (5) to (7).

(1) If the compression increases after oil is added, the cause of the malfunction is a worn or damaged piston ring and/or cylinder inner surface.

(2) If the compression dose not rise after oil is added, the cause is a burnt or defective valve seat, or pressure is leaking from the gasket.

9. Connect the crank angle sensor connector.
10. Install the spark plugs and tighten to the specified torque.

**Tightening torque:  $25 \pm 4 \text{ N}\cdot\text{m}$**



11. Install the ignition coils.

12. Use the M.U.T.-II/III to erase the diagnosis codes.

*NOTE: This will erase the diagnosis code resulting from the crank angle sensor connector being disconnected.*


## MANIFOLD VACUUM CHECK

M1111002700569

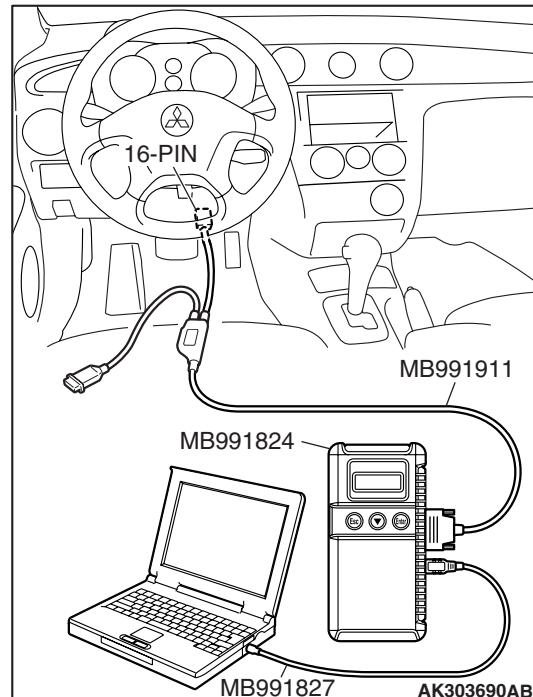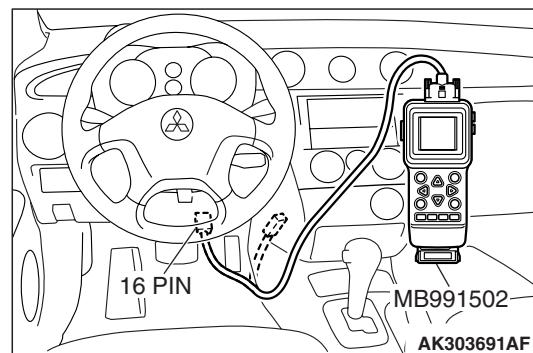

1. Before inspection, set the vehicle to the pre-inspection condition.

2. Turn the ignition switch to the "LOCK" (OFF) position and then connect the M.U.T.-II/III to the diagnosis connector.

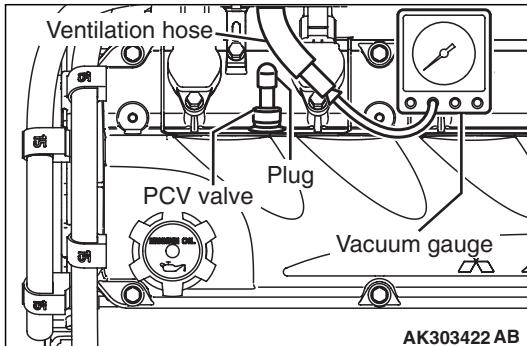

3. Disconnect the ventilation hose from the PCV valve, and connect a vacuum gauge to the ventilation hose.

4. Plug the PCV valve.  
5. Start the engine and check that idle speed is within the standard valve.

**Standard value**

:  $680 \pm 100$  r/min <M/T>

:  $750 \pm 100$  r/min <A/T>

6. Check the intake manifold vacuum.  
**Limit: Minimum 60 kPa**  
7. Turn off the ignition switch.  
8. Remove the vacuum gauge and then connect the ventilation hose.  
9. Turn the ignition switch to the "LOCK" (OFF) position and then remove the M.U.T.-II/III.

## CRANKSHAFT PULLEY

## REMOVAL AND INSTALLATION


M1112001600539

## Pre-removal Operation

- Under Cover Removal (Refer to GROUP 51, Under Cover P.51-31).

## Post-installation Operation

- Drive Belt Tension Check (Refer to P.11E-7).
- Under Cover Installation (Refer to GROUP 51, Under Cover P.51-31).

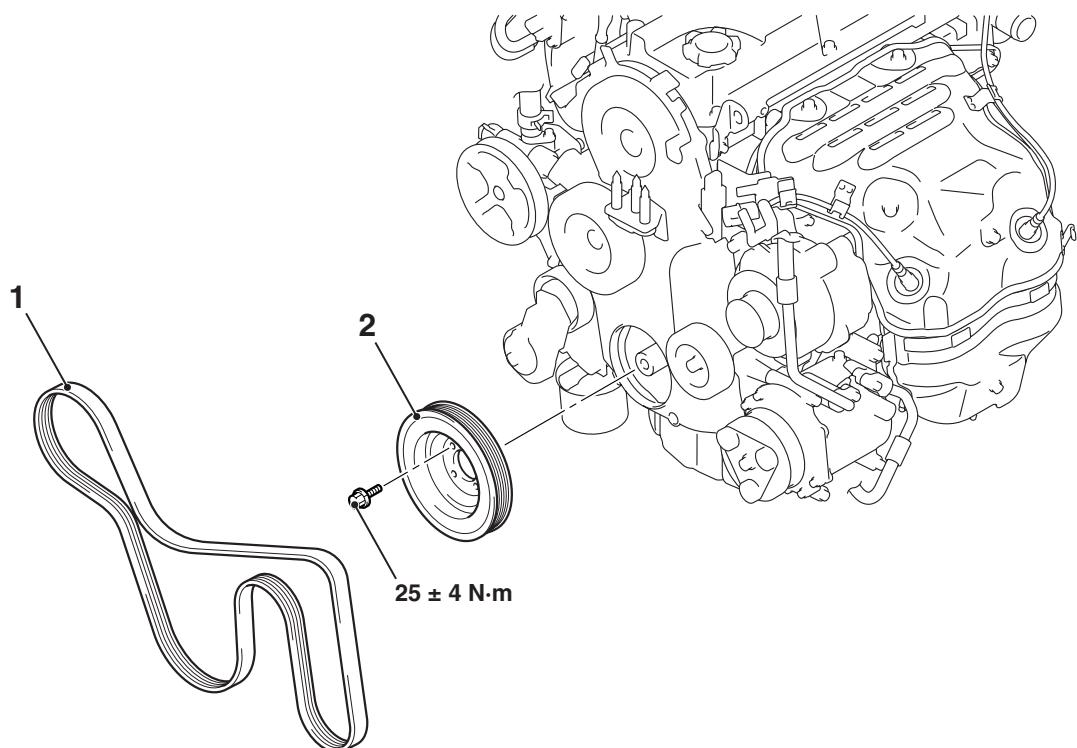

AC308973AB

&lt;&lt;A&gt;&gt;


## Removal steps

1. Drive belt
2. Crank shaft damper pulley

## REMOVAL SERVICE POINT

## &lt;&lt;A&gt;&gt; DRIVE BELT REMOVAL


The following operations will be needed due to the introduction of the serpentine drive system with the drive belt auto-tensioner.

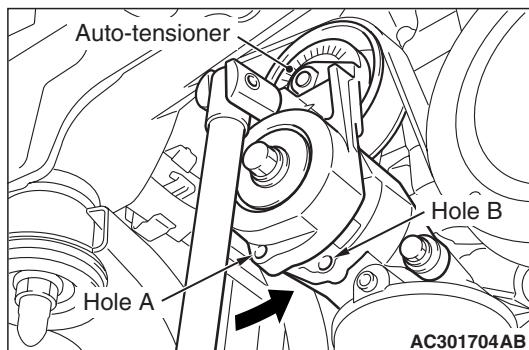

1. Securely insert the spindle handle or ratchet handle with a 12.7 mm insertion angle into the jig hole of the auto-tensioner.
2. Rotate the auto-tensioner anti-clockwise and align hole A with hole B.

## CAUTION

To reuse the drive belt, draw an arrow indicating the rotating direction (clockwise) on the back of the belt using chalk, etc.

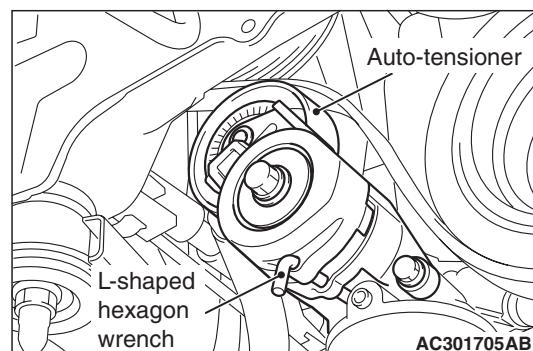

3. Insert an L-shaped hexagon wrench, etc. into the hole to fix and then remove the drive belt.

## CAMSHAFT AND VALVE STEM SEAL

## REMOVAL AND INSTALLATION

M1112006600501

**CAUTION**


\* Remove and assemble the marked parts in each cylinder unit.

**Pre-removal Operation**

- Air Cleaner Removal (Refer to GROUP 15, Air Cleaner P.15-8).
- Ignition Coils Removal (Refer to GROUP 16, Ignition System – Ignition Coil P.16-47).
- Timing Belt Upper Cover Removal (Refer to P.11E-36).

**Post-installation Operation**

- Timing Belt Upper Cover Installation (Refer to P.11E-36).
- Ignition Coils Installation (Refer to GROUP 16, Ignition System – Ignition Coil P.16-47).
- Air Cleaner Installation (Refer to GROUP 15, Air Cleaner P.15-8).
- Drive Belt Tension Check (Refer to P.11E-7).
- Valve Clearance Check and Adjustment (Refer to P.11E-10).

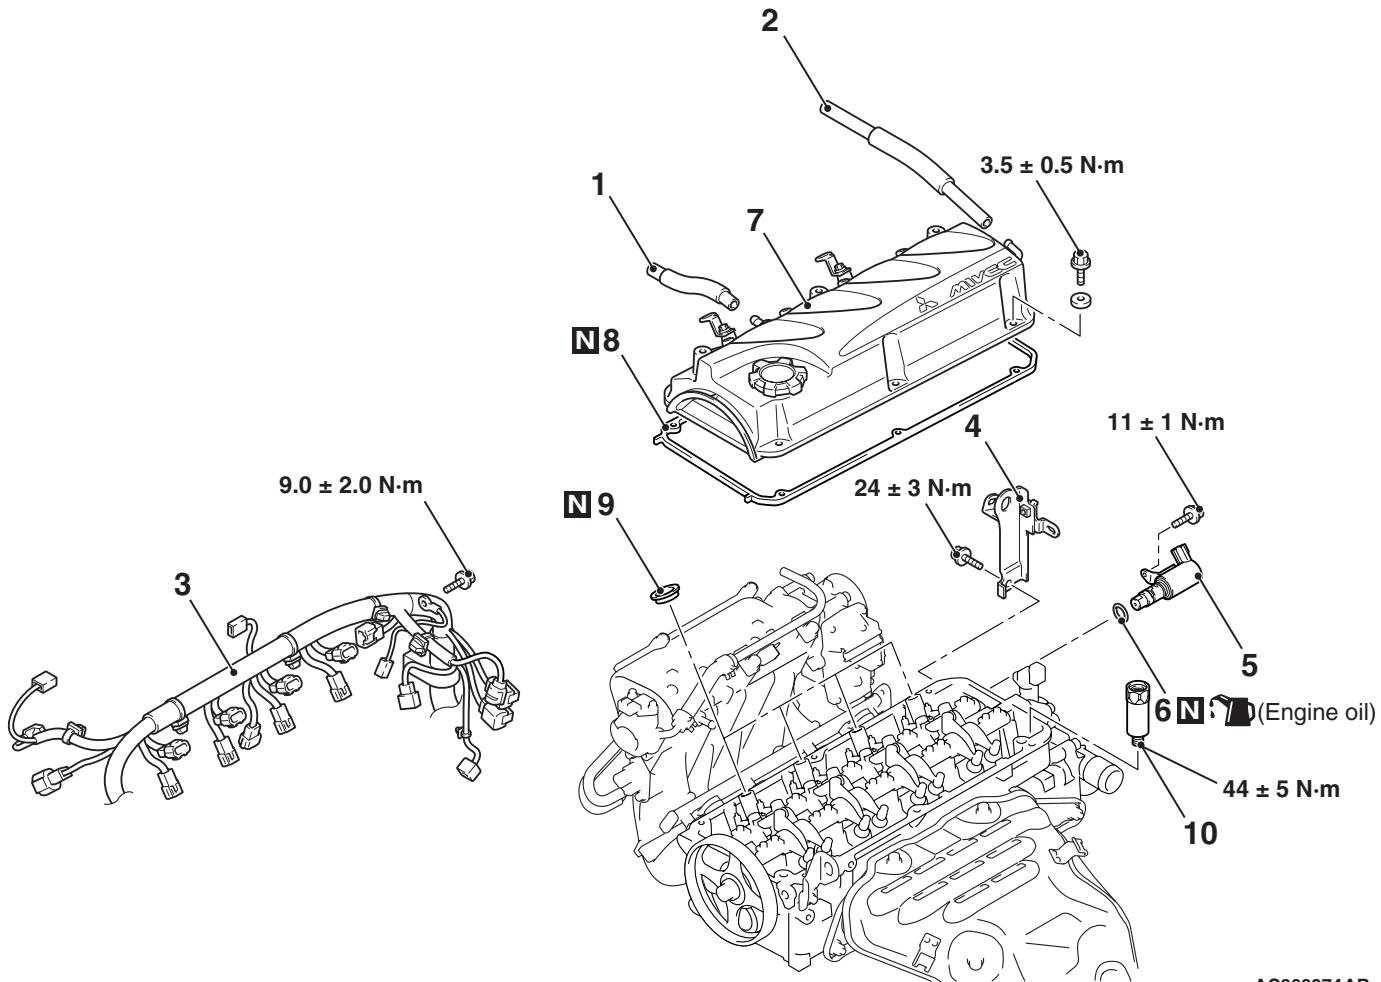**Camshaft removal steps**


1. Rocker cover PCV hose connection
2. Rocker cover breather hose connection
3. Control wiring harness connection
4. Engine hanger
5. Oil control valve
6. O-ring

>>J<<      >>J<<

**Camshaft removal steps**

7. Rocker cover assembly
8. Rocker cover gasket
9. Spark plug guide oil seals
10. Accumulator assembly
- Valve timing belt (Refer to P.11E-36).

Apply engine oil to all moving parts before installation.

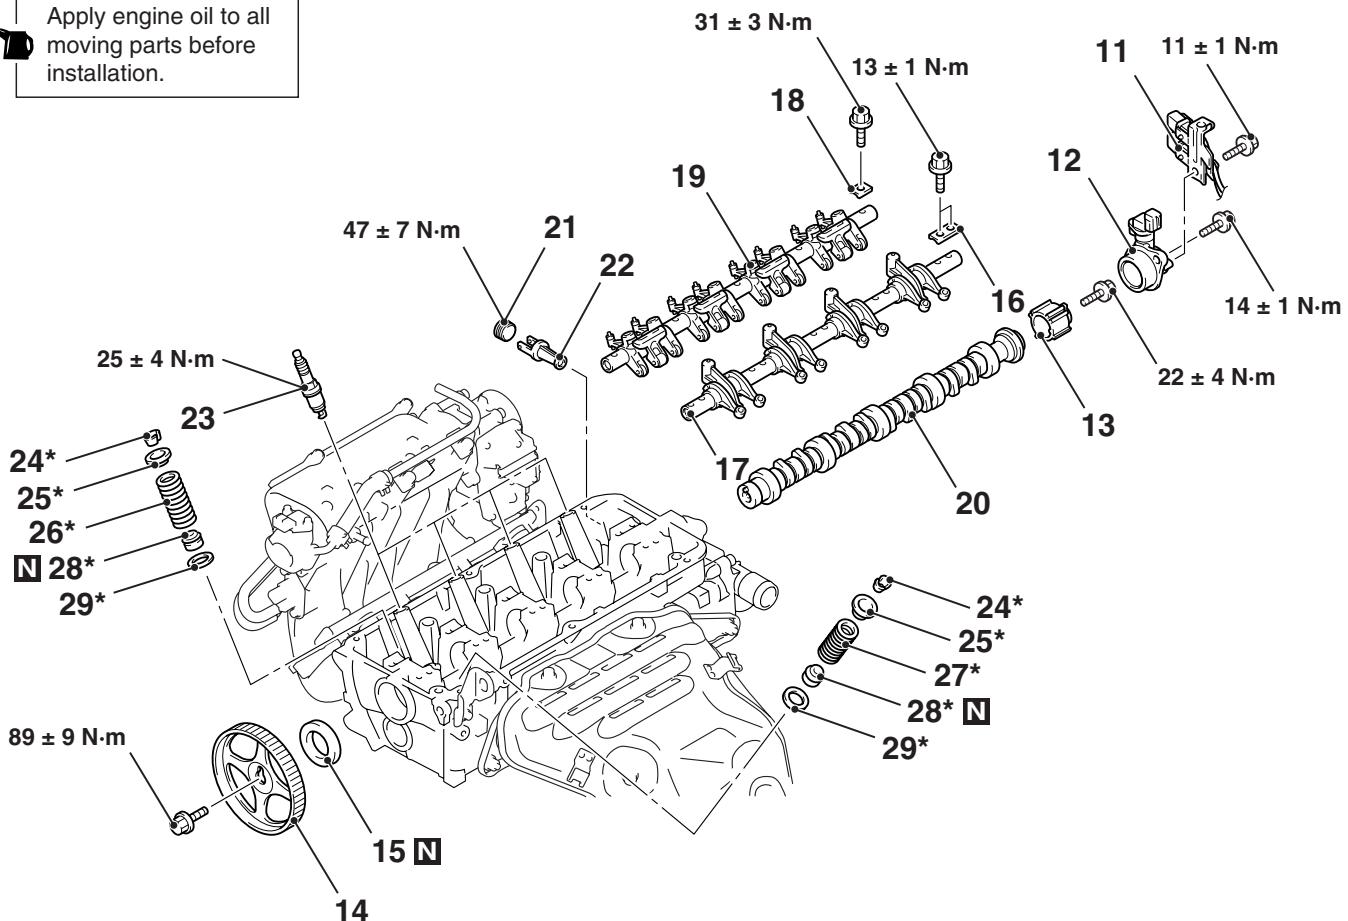

AC308975AB


#### Camshaft removal steps

- 11. Connector bracket
- >>I<< 12. Camshaft position sensor support
- 13. Camshaft position sensing cylinder
- <<A>> >>H<< 14. Camshaft sprocket
- >>G<< 15. Camshaft oil seal
- >>F<< 16. Exhaust rocker arm shaft caps
- <<B>> >>F<< 17. Exhaust rocker arm and shaft assembly
- >>E<< 18. Inlet rocker arm shaft caps
- <<B>> >>E<< 19. Inlet rocker arm and shaft assembly
- >>D<< 20. Camshaft
  - Water inlet fitting and thermostat case assembly (Refer to GROUP 14, Water Hose and Water Pipe P.14-32).
- 21. Cylinder head plug
- 22. Oil control valve filter

#### Valve stem seal removal steps

- 1. Rocker cover PCV hose connection
- 2. Rocker cover breather hose connection
- 3. Control wiring harness connection
- 4. Engine hanger
- 7. Rocker cover assembly
- 8. Rocker cover gasket
- 9. Spark plug guide oil seals
- 16. Exhaust rocker arm shaft caps
- 17. Exhaust rocker arm and shaft assembly
- >>F<< 18. Inlet rocker arm shaft caps
- <<B>> >>F<< 19. Inlet rocker arm and shaft assembly
- 23. Spark plugs
- 24. Valve spring retainer locks
- 25. Valve spring retainers
- >>B<< 26. Inlet valve springs
- >>B<< 27. Exhaust valve springs
- >>A<< 28. Valve stem seals
- 29. Valve spring seats

## REMOVAL SERVICE POINTS
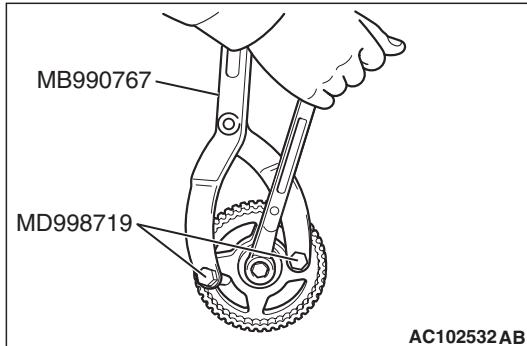
<<A>> CAMSHAFT SPROCKET  
REMOVAL


1. Use the following special tools to hold the camshaft sprocket.
  - Front hub and flange yoke holder (MB990767)
  - Pin (MD998719)
2. Loosen the camshaft sprocket mounting bolt and remove the camshaft sprocket.

<<B>> EXHAUST ROCKER ARM AND  
SHAFT ASSEMBLY/INLET ROCKER ARM  
AND SHAFT ASSEMBLY REMOVAL**CAUTION**

Never disassemble the exhaust rocker arm and shaft assembly, and inlet rocker arm and shaft assembly.

<<C>> VALVE SPRING RETAINER LOCKS  
REMOVAL**CAUTION**

When removing valve spring retainer locks, leave the piston of each cylinder in the TDC (Top Dead Centre) position. The valve may fall into the cylinder if the piston is not properly in the TDC position.

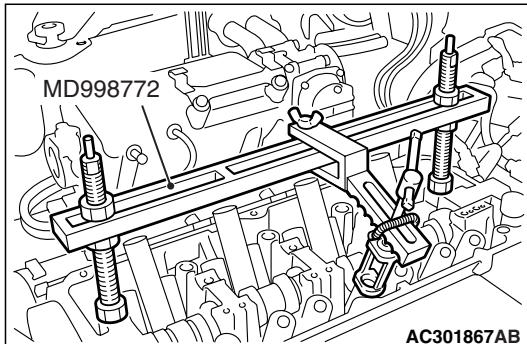

Use special tool valve spring compressor (MD998772) to compress the valve spring and then remove the valve spring retainer lock.


## INSTALLATION SERVICE POINTS

>>A<< VALVE STEM SEALS INSTALLA-  
TION


1. Apply a small amount of engine oil to the valve stem seals.

**CAUTION**

- Do not re-use the valve stem seal.
- Special tool valve stem seal installer (MB991999) must be used to install the valve stem seal. Improper installation could result in oil leaking past the valve guide.

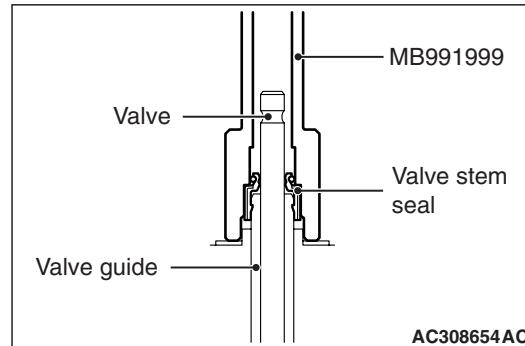


2. Use the special tool to fill a new valve stem seal in the valve guide using the valve stem area as a guide.
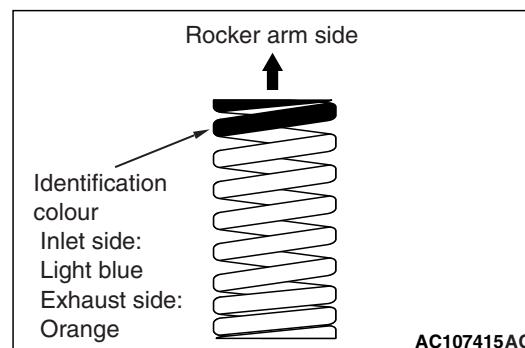
>>B<< EXHAUST VALVE SPRINGS/INLET  
VALVE SPRINGS INSTALLATION


Install the valve springs with its identification colour painted end facing the locker arm.

>>C<< VALVE SPRING RETAINER LOCKS  
INSTALLATION

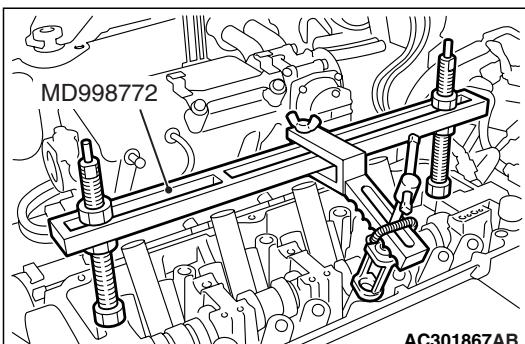


Use special tool valve spring compressor (MD998772) to compress the valve spring and then install the valve spring retainer lock in the same manner as removal.

>>D<< CAMSHAFT INSTALLATION

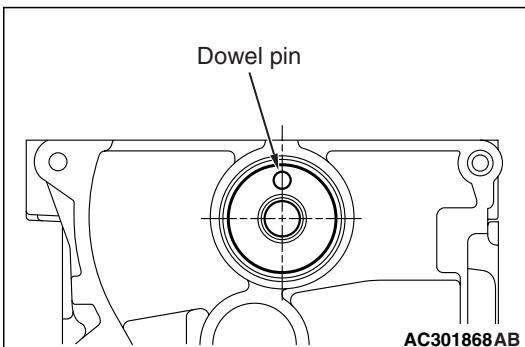

Set the dowel pin of the camshaft in the position shown in the figure.


>>E<< INLET ROCKER ARM AND SHAFT  
ASSEMBLY/INLET ROCKER ARM SHAFT  
CAPS INSTALLATION

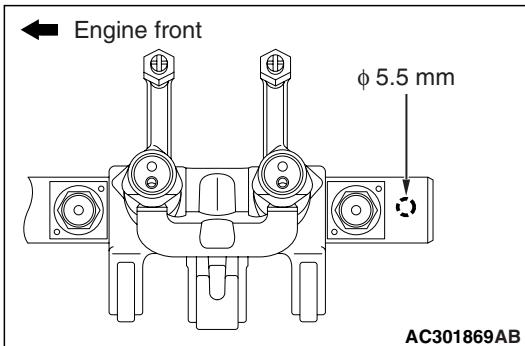

1. Place the inlet rocker shaft so that its 5.5 mm hole faces toward the cylinder head.
2. Install the inlet rocker arm shaft caps.
3. Tighten the inlet rocker shaft mounting bolts to the specified torque.

**Tightening torque:  $31 \pm 3 \text{ N}\cdot\text{m}$**


>>F<< EXHAUST ROCKER ARM AND  
SHAFT ASSEMBLY/EXHAUST ROCKER  
ARM SHAFT CAPS INSTALLATION

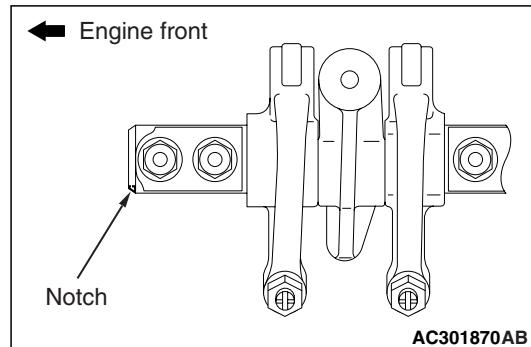


1. Install the exhaust rocker shaft so that its notch is positioned as shown.
2. Install the exhaust rocker arm shaft caps.
3. Tighten the exhaust rocker shaft mounting bolts to the specified torque.

**Tightening torque:  $13 \pm 1 \text{ N}\cdot\text{m}$**

>>G<< CAMSHAFT OIL SEAL  
INSTALLATION

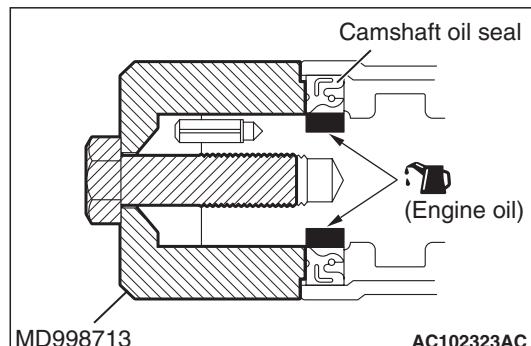

1. Apply engine oil to the entire inner diameter of the oil seal lip.
2. Use special tool camshaft oil seal installer (MD998713) to press-fit the oil seal as shown.

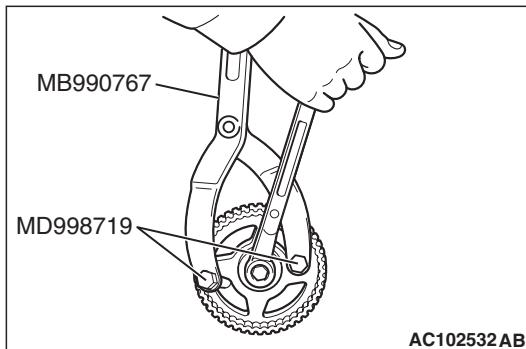
>>H<< CAMSHAFT SPROCKET  
INSTALLATION

1. Use the following special tool as during removal to hold the camshaft sprocket.
  - Front hub and flange yoke holder (MB990767)
  - Pin (MD998719)
2. Tighten the camshaft sprocket mounting bolt to the specified torque.

**Tightening torque:  $89 \pm 9 \text{ N}\cdot\text{m}$**

>>I<< CAMSHAFT POSITION SENSOR  
SUPPORT INSTALLATION

1. Remove sealant from the camshaft position sensor support and cylinder head surfaces.

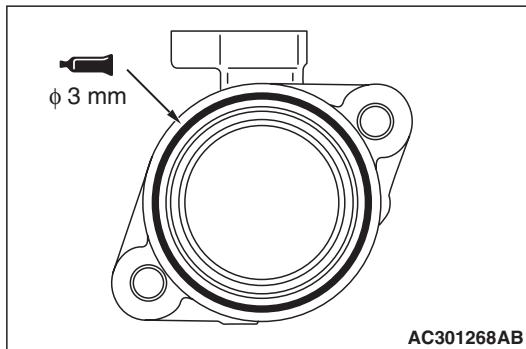

2. Apply the sealant to the camshaft position sensor support flange in a continuous bead as shown in the illustration.

**Specified sealant: MITSUBISHI GENUINE  
PART MD970389 or equivalent**

**NOTE: Install the camshaft position sensor support within 15 minutes after applying the sealant.**

3. Install the camshaft position sensor support to the cylinder head.

**⚠ CAUTION**

**Wait at least one hour. Never start the engine or let engine oil or coolant touch the adhesion surface during that time.**


4. Tighten the camshaft position sensor support mounting bolts to the specified torque.

**Tightening torque:  $14 \pm 1 \text{ N}\cdot\text{m}$**

>>J<< O-RING/OIL CONTROL VALVE  
INSTALLATION

**⚠ CAUTION**

- Never re-use the O-ring.

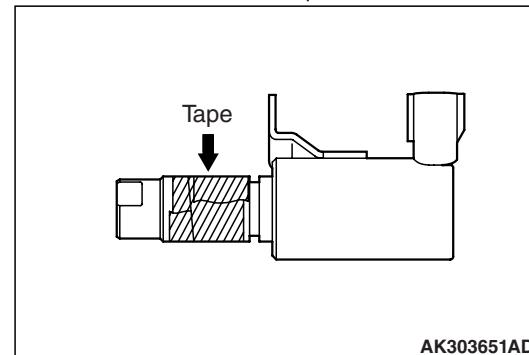

**Before installing O-ring, wind the tape with the soft adhesion (sealing tape) around the oil passages cut-out area of engine oil control valve to prevent the damage. If the O-ring is damaged, it can be the cause of oil leak.**

1. Apply a small amount of engine oil to the O-ring and then install it to the oil control valve.
2. Assemble the oil control valve to the cylinder head.
3. Tighten the oil control valve mounting bolt to the specified torque.

**Tightening torque:  $11 \pm 1 \text{ N}\cdot\text{m}$**

## OIL PAN

## REMOVAL AND INSTALLATION


M1112002800763

## Pre-removal Operation

- Under Cover Removal (Refer to GROUP 51, Under Cover P.51-31).
- Engine Oil Draining (Refer to GROUP 12, On-vehicle Service – Engine Oil Replacement P.12-4).
- Front Exhaust Pipe Removal (Refer to GROUP 15, Exhaust Pipe and Main Muffler P.15-25).
- Centre Member Removal (Refer to GROUP 32, Engine Roll Stopper and Centre Member P.32-13).

## Post-installation Operation

- Centre Member Installation (Refer to GROUP 32, Engine Roll Stopper and Centre Member P.32-13).
- Front Exhaust Pipe Installation (Refer to GROUP 15, Exhaust Pipe and Main Muffler P.15-25).
- Engine Oil Refilling (Refer to GROUP 12, On-vehicle Service – Engine Oil Replacement P.12-4).
- Under Cover Installation (Refer to GROUP 51, Under Cover P.51-31).

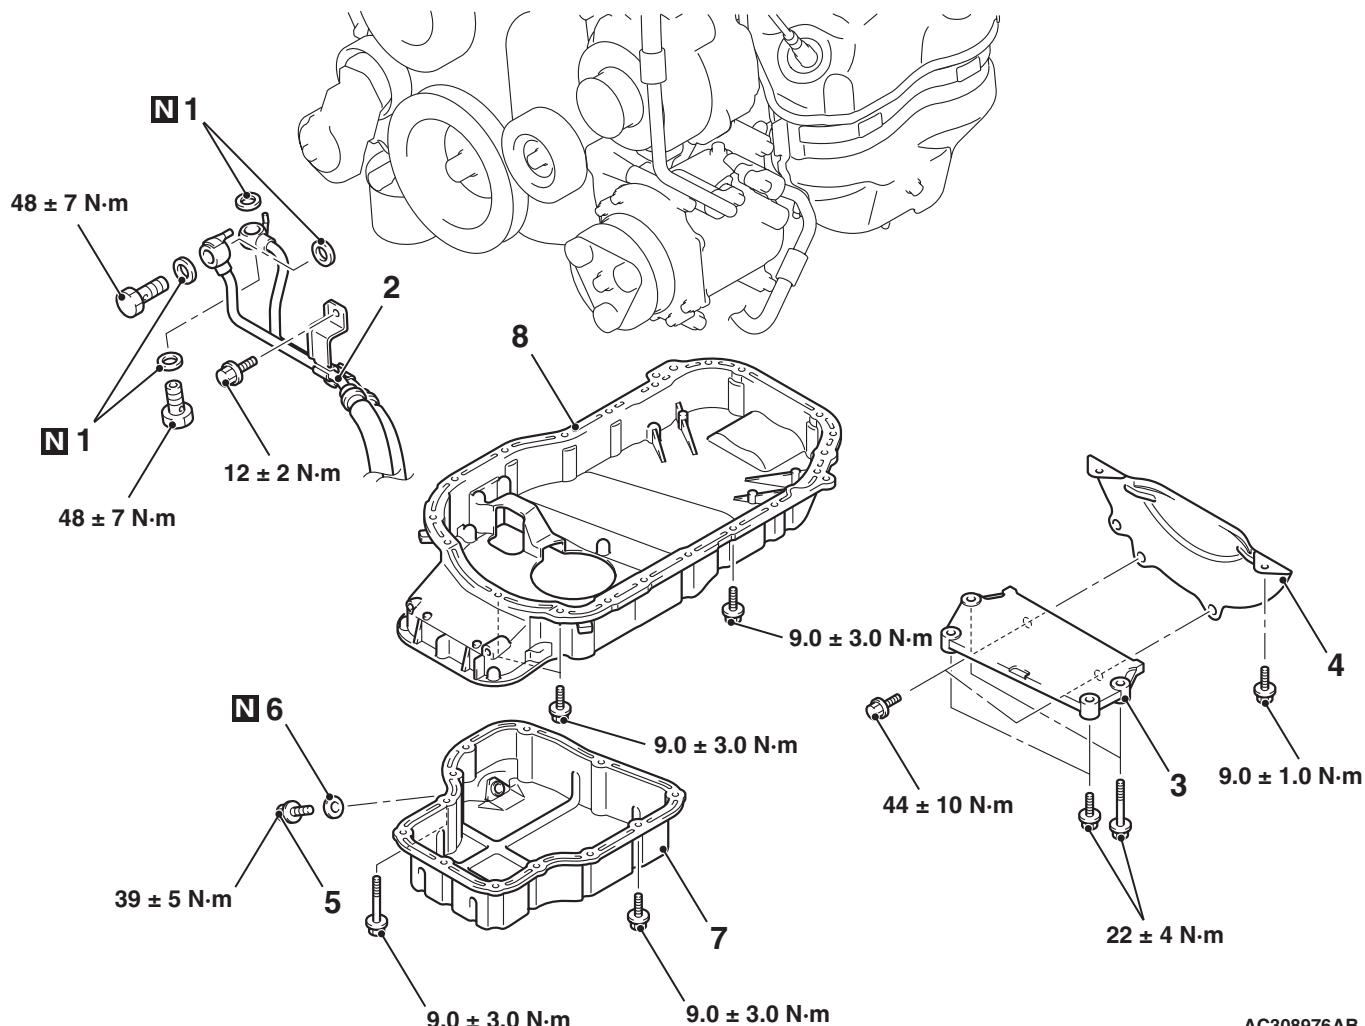

AC308976AB

## Removal steps

1. Engine oil cooler tube gaskets <M/T>
2. Engine oil cooler hose and bracket assembly <M/T>
- >>D<< 3. Transmission housing front lower cover stay

## Removal steps (Continued)

4. Flywheel housing front lower cover <M/T> or torque converter housing front lower cover <A/T>
5. Engine oil pan drain plug
- >>C<< 6. Engine oil pan drain plug gasket
- <<A>> >>B<< 7. Engine lower oil pan
- <<B>> >>A<< 8. Engine upper oil pan

## REMOVAL SERVICE POINTS


## &lt;&lt;A&gt;&gt; ENGINE LOWER OIL PAN

## REMOVAL

1. Remove the engine lower oil pan mounting bolts.

**CAUTION**

**Do not use special tool oil pan FIPG cutter (MD998727). The engine upper oil pan is made of aluminium and this tool will damage it.**

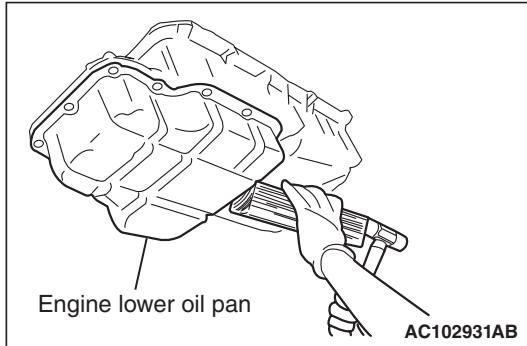

2. Apply a piece of wood to the lower oil pan and strike it with a hammer to remove the engine lower oil pan.


## &lt;&lt;B&gt;&gt; ENGINE UPPER OIL PAN

## REMOVAL

1. Remove the engine upper oil pan mounting bolts.

**CAUTION**

**Do not use special tool oil pan FIPG cutter (MD998727). The engine upper oil pan is made of aluminium and this tool will damage it.**

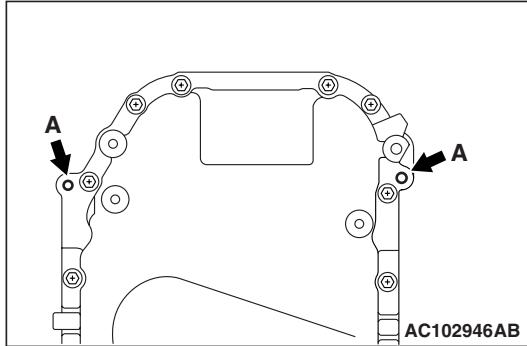


2. Screw in the bolt into bolt hole A in the location shown. Then lift the upper oil pan and remove it.

## INSTALLATION SERVICE POINTS

## &gt;&gt;A&lt;&lt; ENGINE UPPER OIL PAN INSTALLATION

1. Remove sealant from the engine upper oil pan and cylinder block surfaces.

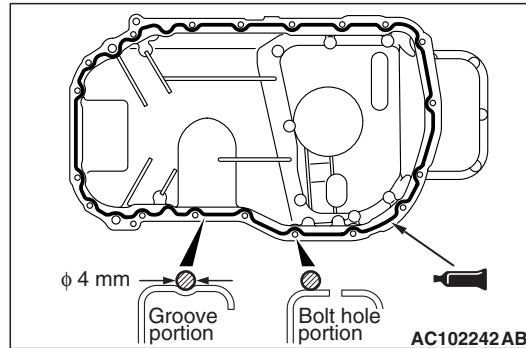

2. Apply a bead of the sealant to the mating surface of the engine upper oil pan as shown.


**Specified sealant: MITSUBISHI GENUINE PART MD970389 or equivalent**

*NOTE: Install the engine upper oil pan within 15 minutes after applying sealant.*

3. Assemble the engine upper oil pan to the cylinder block.

**CAUTION**

**Then wait at least one hour. Never start the engine or let engine oil or coolant touch the sealant surface during that time.**

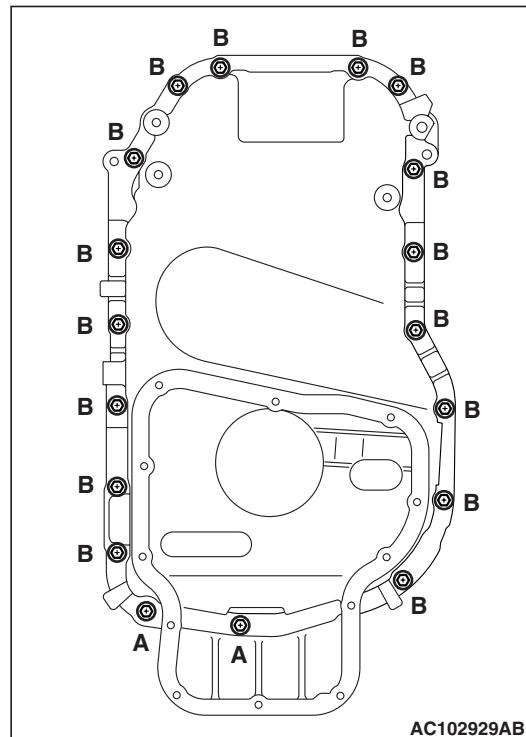

4. Insert the bolts to the engine upper oil pan as shown, and tighten them to the specified torque.


| Name        | Symbol | Quantity | Size mm<br>(D × L) |
|-------------|--------|----------|--------------------|
| Flange bolt | A      | 2        | M6 × 16            |
|             | B      | 16       | M6 × 18            |

NOTE: D: Nominal diameter, L: Nominal length

Tightening torque:  $9.0 \pm 3.0$  N·m

## >>B<< ENGINE LOWER OIL PAN INSTALLATION

1. Remove sealant from the engine lower oil pan and engine upper oil pan.

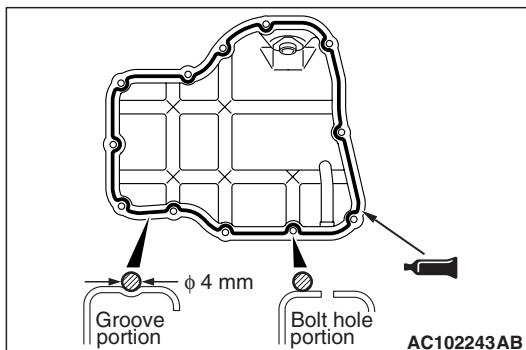

2. Apply a bead of the sealant to the mating surface of the engine lower oil pan as shown.


**Specified sealant: MITSUBISHI GENUINE  
PART MD970389 or equivalent**

NOTE: Install the engine lower oil pan within 15 minutes after applying sealant.

3. Assemble the engine lower oil pan to the engine upper oil pan.

### CAUTION

Then wait at least one hour. Never start the engine or let engine oil or coolant touch the sealant surface during that time.

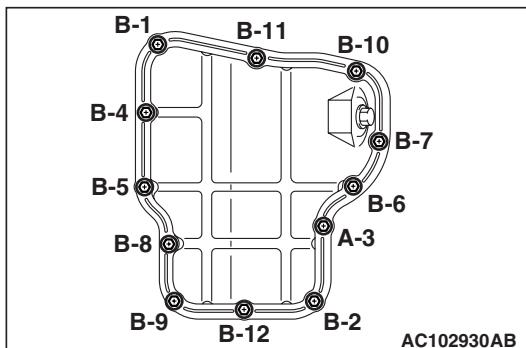


4. Insert the bolts to the engine lower oil pan as shown, and tighten them to the specified torque in the order shown.

| Name        | Symbol | Quantity | Size mm<br>(D × L) |
|-------------|--------|----------|--------------------|
| Flange bolt | A      | 1        | M6 × 75            |
|             | B      | 11       | M6 × 10            |

NOTE: D: Nominal diameter, L: Nominal length

Tightening torque:  $9.0 \pm 3.0$  N·m

## >>C<< ENGINE OIL PAN DRAIN PLUG GASKET INSTALLATION

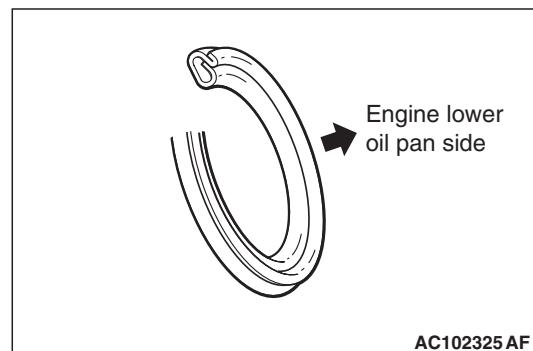

Replace the gasket with a new one. Install the new gasket in the direction shown in the illustration.

## >>D<< TRANSMISSION HOUSING FRONT LOWER COVER STAY INSTALLATION

Install the transmission housing front lower cover stay in the following order.

1. Tighten the engine side four mounting bolts to the specified torque.

**Tightening torque:  $22 \pm 4$  N·m**

2. Tighten the transmission side two mounting bolts to the specified torque.

**Tightening torque:  $44 \pm 10$  N·m**

## INSPECTION

M1112002900254


- Check the oil pan for cracks.
- Check the oil pan sealant-coated surface for damage and deformation.

## CRANKSHAFT OIL SEAL

## REMOVAL AND INSTALLATION

M1112003101061

&lt;M/T&gt;

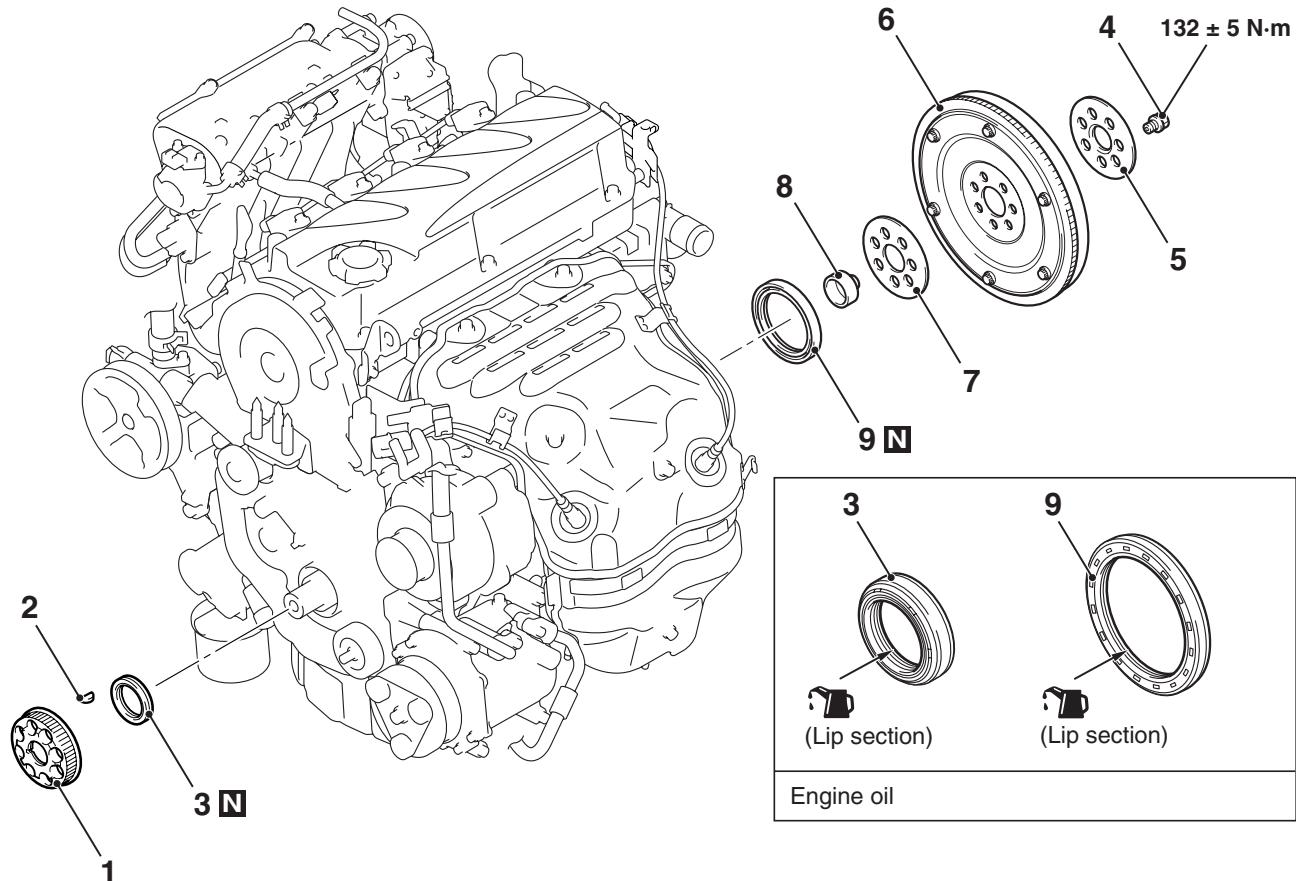

AC308977AB


## Crankshaft front oil seal removal steps

- Valve timing belt, balancer timing belt (Refer to P.11E-36). <<A>>
- >>D<< 1. Crankshaft balancer shaft drive sprocket <<B>> >>B<<
- >>C<< 2. Crankshaft key
- 3. Crankshaft front oil seal

## Crankshaft rear oil seal removal steps

- Transmission assembly
- Clutch cover and clutch disc (Refer to GROUP 21B, Clutch P.21B-3).
- 4. Flywheel bolts
- 5. Flywheel adapter plate
- 6. Flywheel assembly
- 7. Flywheel adapter plate
- 8. Crankshaft bush
- >>A<< 9. Crankshaft rear oil seal

<A/T>

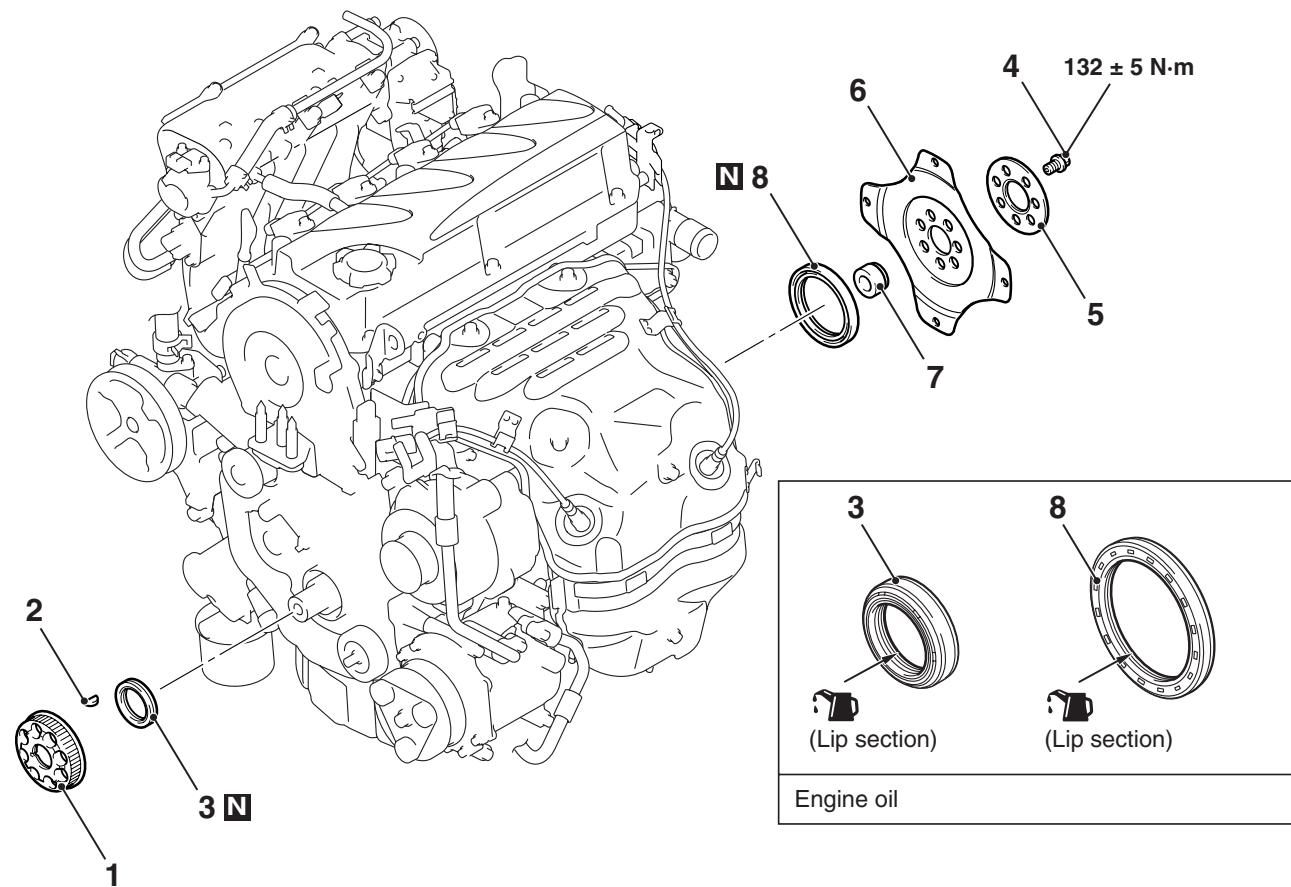

AC308978AB

**Crankshaft front oil seal removal steps**

- Valve timing belt, balancer timing belt (Refer to [P.11E-36](#)).

>>D<< 1. Crankshaft balancer shaft drive sprocket

>>C<< 2. Crankshaft key

>>C<< 3. Crankshaft front oil seal

**Crankshaft rear oil seal removal steps**

- Transmission assembly (Refer to GROUP 23A, Transmission Assembly [P.23A-147](#)).

<<B>> >>B<< 4. A/T drive plate bolts


5. A/T drive plate adapter plate

6. A/T drive plate

7. Crankshaft bush

>>A<< 8. Crankshaft rear oil seal


## REMOVAL SERVICE POINTS
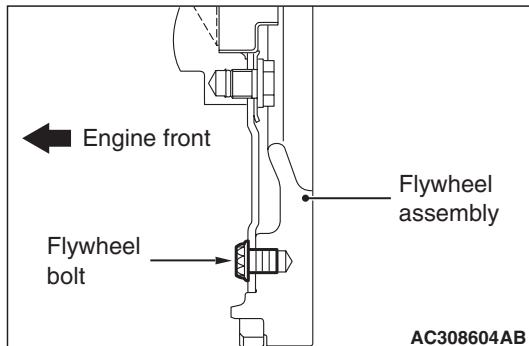
<<A>> TRANSMISSION ASSEMBLY  
REMOVAL**CAUTION**

**Do not remove the flywheel bolt. If this bolt is removed, the flywheel assembly will become out of balance and damaged.**


Refer to GROUP 22A, Transmission Assembly P.22A-14.

## &lt;&lt;B&gt;&gt; FLYWHEEL BOLTS/A/T DRIVE PLATE BOLTS REMOVAL

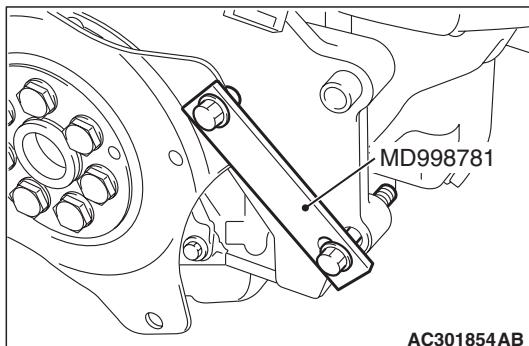


1. Use special tool flywheel stopper (MD998781) to secure the flywheel assembly or A/T drive plate.
2. Remove the flywheel bolts or A/T drive plate bolts.

## INSTALLATION SERVICE POINTS
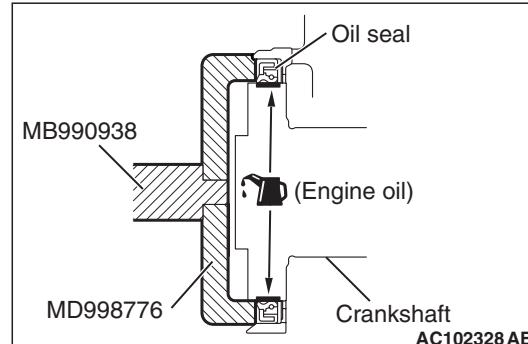
>>A<< CRANKSHAFT REAR OIL SEAL  
INSTALLATION

1. Apply a small amount of engine oil to the entire inner diameter of the oil seal lip.
2. Use the following special tools to press-fit the oil seal.
  - Installer bar (MB990938)
  - Crankshaft rear oil seal installer (MD998776)


## &gt;&gt;B&lt;&lt; FLYWHEEL BOLTS/A/T DRIVE PLATE BOLTS INSTALLATION

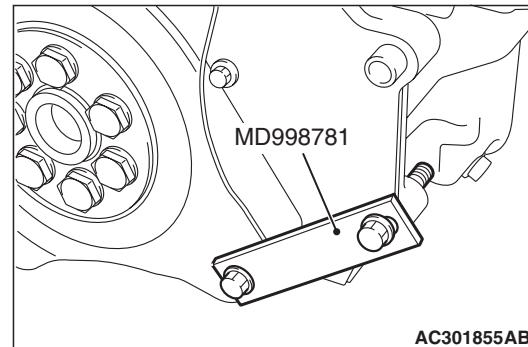

1. Use special tool flywheel stopper (MD998781) to secure the flywheel assembly or A/T drive plate in the same manner as removal.
2. Tighten the flywheel bolts or A/T drive plate bolts to the specified torque.


**Tightening torque:  $132 \pm 5 \text{ N}\cdot\text{m}$**

>>C<< CRANKSHAFT FRONT OIL SEAL  
INSTALLATION

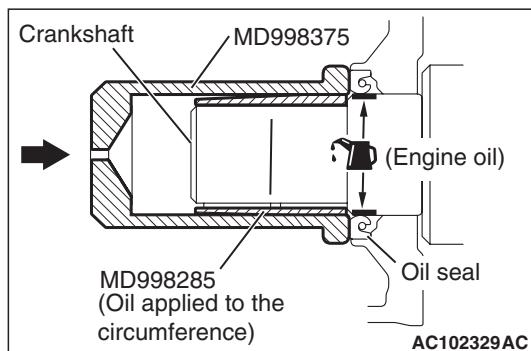

1. Apply a small amount of engine oil to the outer diameter of special tool crankshaft front oil seal guide (MD998285) and install it to the crankshaft.
2. Apply a small amount of engine oil to the entire inner diameter of the oil seal lip.
3. Use special tool crankshaft front oil seal installer (MD998375) to press-fit the oil seal.

>>D<< CRANKSHAFT BALANCER SHAFT  
DRIVE SPROCKET INSTALLATION

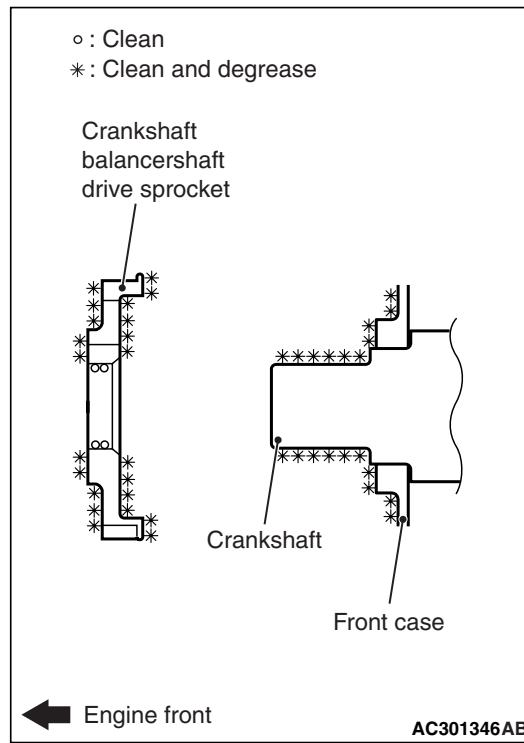

1. Clean or degrease the front case, the crankshaft and the crankshaft balancer shaft drive sprocket as shown.  
*NOTE: Also clean the degreased surfaces.*
2. Install the crankshaft balancer shaft drive sprocket in the direction shown in the illustration.

## CYLINDER HEAD GASKET

## REMOVAL AND INSTALLATION


M1112004001272

## Pre-removal Operation

- Fuel Line Pressure Reduction [Refer to GROUP 13C, On-vehicle Service – Fuel Pump Connector Disconnection (How to Reduce Pressurized Fuel Lines) [P.13C-428](#)].
- Engine Coolant Draining (Refer to GROUP 14, On-vehicle Service – Engine Coolant Replacement [P.14-17](#)).
- Air Cleaner Removal (Refer to GROUP 15, Air Cleaner [P.15-8](#)).
- Accelerator Cable Removal (Refer to GROUP 17, Accelerator Cable and Pedal [P.17-7](#)).

## Post-installation Operation

- Accelerator Cable Installation (Refer to GROUP 17, Accelerator Cable and Pedal [P.17-7](#)).
- Air Cleaner Installation (Refer to GROUP 15, Air Cleaner [P.15-8](#)).
- Engine Coolant Refilling (Refer to GROUP 14, On-vehicle Service – Engine Coolant Replacement [P.14-17](#)).
- Accelerator Cable Adjustment (Refer to GROUP 17, On-vehicle Service – Accelerator Cable Check and Adjustment [P.17-6](#)).
- Fuel Leak Check

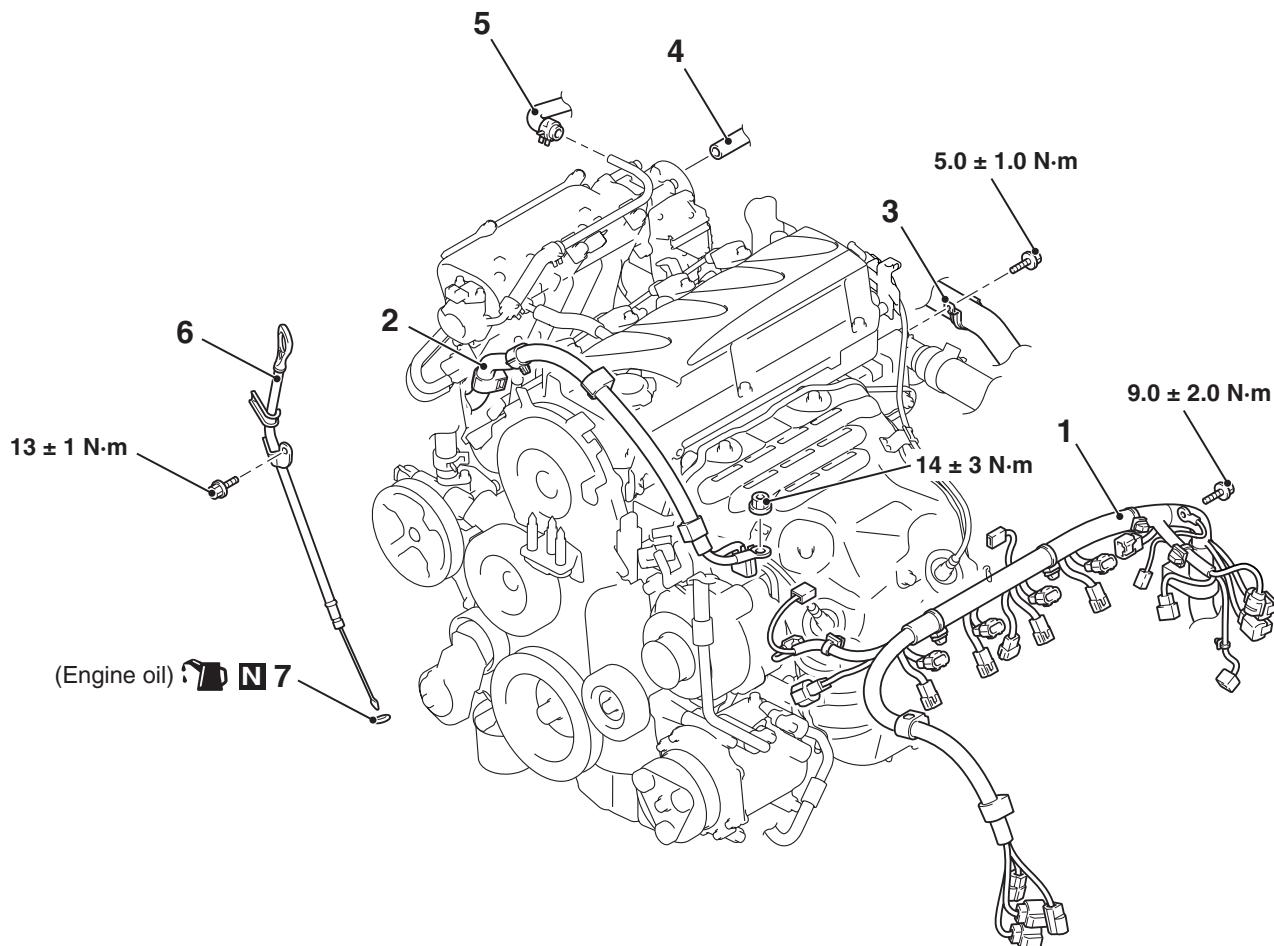


AC308979AB

## Removal steps

1. Control wiring harness connection
2. Battery wiring harness connection
3. Radiator lower hose clamp
4. Canister vacuum hose connection

## Removal steps (Continued)

5. Brake booster vacuum hose connection
6. Engine oil level gauge and guide assembly
7. O-ring

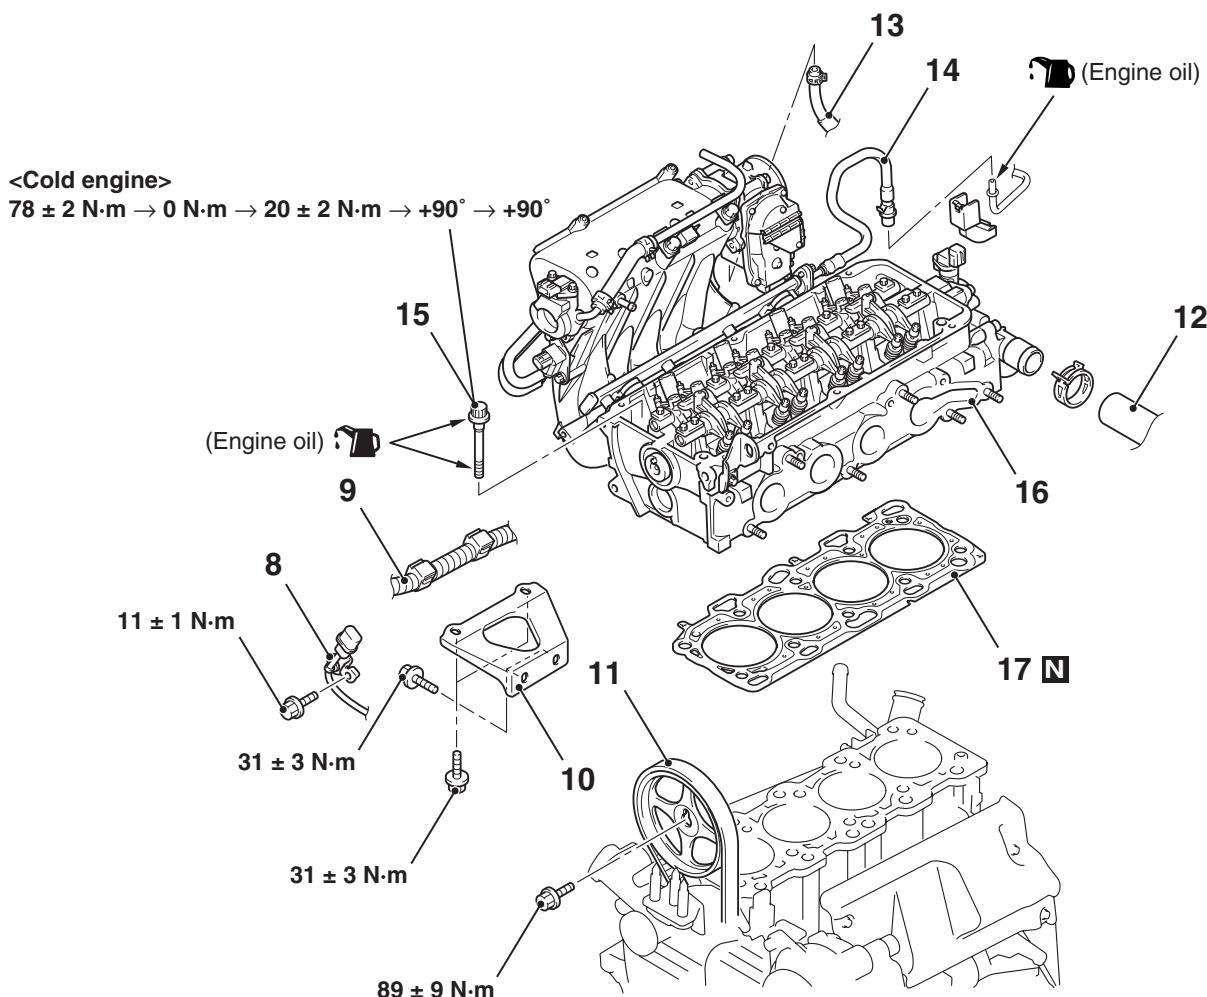

AC308980AB

**Removal steps**

- 8. Detonation sensor connection
- 9. Battery wiring harness connection
- 10. Inlet manifold stay
- Exhaust manifold (Refer to GROUP 15, Exhaust Manifold [P.15-20](#)).
- Timing belt upper cover (Refer to [P.11E-36](#)).

<<A>> >>E<< 11. Camshaft sprocket

<<B>> >>D<< 12. Radiator upper hose connection

13. Water hose connection

**Removal steps (Continued)**

- Water inlet fitting and thermostat case assembly (Refer to GROUP 14, Water Hose and Water Pipe [P.14-32](#)).
- Fuel high-pressure hose connection
- Rocker cover assembly (Refer to [P.11E-18](#)).

<<C>> >>C<< 14. Fuel high-pressure hose connection

<<D>> >>B<< 15. Cylinder head bolts

>>A<< 16. Cylinder head assembly

17. Cylinder head gasket


## REMOVAL SERVICE POINTS

## &lt;&lt;A&gt;&gt; CAMSHAFT SPROCKET


## REMOVAL

**CAUTION**


Never turn the crankshaft anti-clockwise.

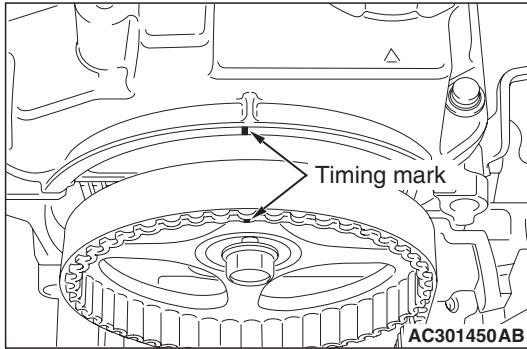


1. Turn the crankshaft clockwise, align the timing marks on the camshaft sprocket to set No.1 cylinder to TDC of its compression stroke.

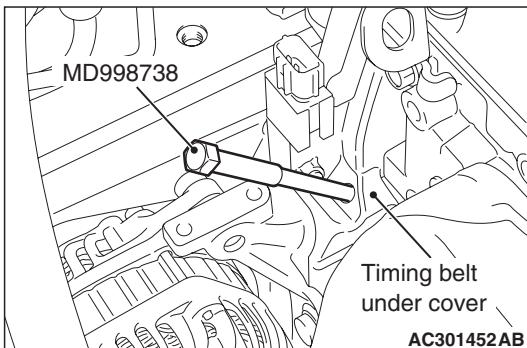


2. Remove the timing belt under cover rubber plug and then set special tool adjusting bolt (MD998738).

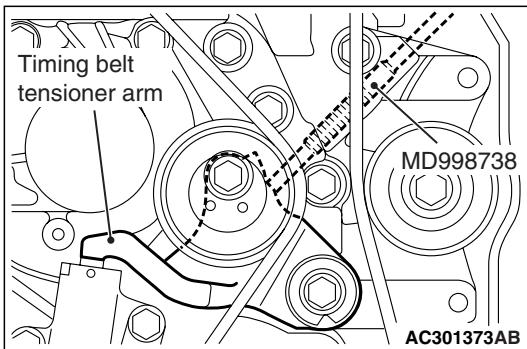

3. Screw in the special tool until it comes in contact with the timing belt tensioner arm.

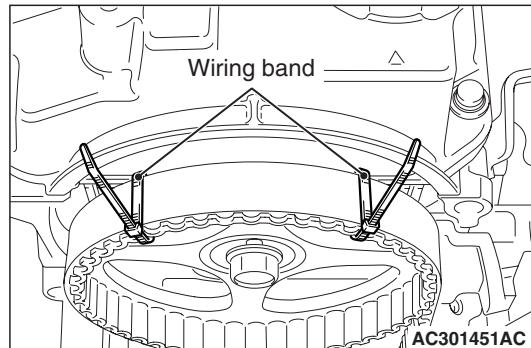

4. Secure the camshaft sprocket and valve timing belt with wiring bands and so on to prevent slippage between the camshaft sprocket and valve timing belt.

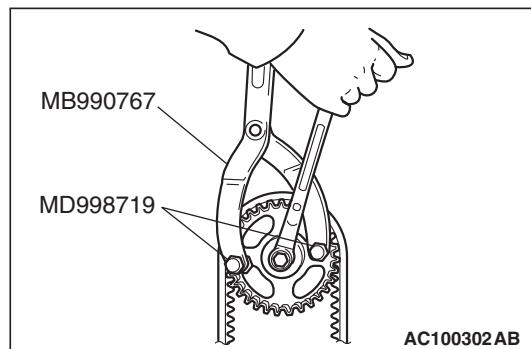


5. Use the following special tools to hold the camshaft sprocket.

- Front hub and flange yoke holder (MB990767)
- Pin (MD998719)

**CAUTION**


Do not rotate the crankshaft after camshaft sprocket removal.

6. Remove the camshaft sprocket with the valve timing belt and place it on the timing belt lower cover.

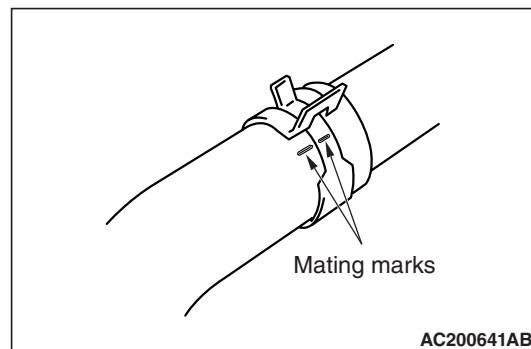
<<B>> RADIATOR UPPER HOSE  
DISCONNECTION

Make mating marks on the radiator upper hose and the hose clamp. Disconnect the radiator upper hose.

<<C>> FUEL HIGH-PRESSURE HOSE DISCONNECTION

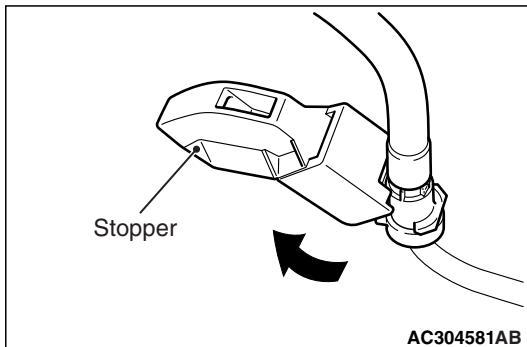



1. Remove the fuel high-pressure hose stopper.

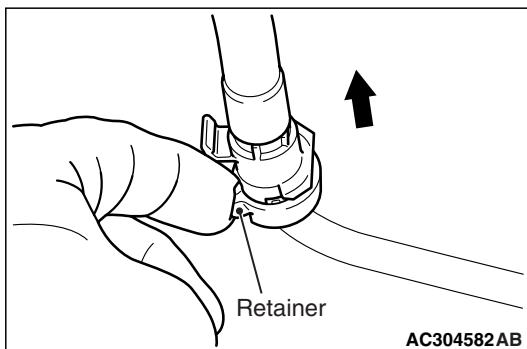

2. Remove the fuel high-pressure hose in the direction shown in the figure while the retainer is pulled up.

*NOTE: If the retainer is released, install it after removing the fuel high-pressure hose.*

<<D>> CYLINDER HEAD BOLTS REMOVAL

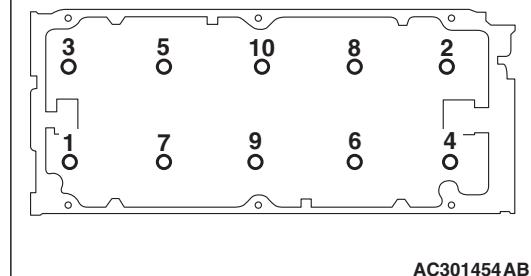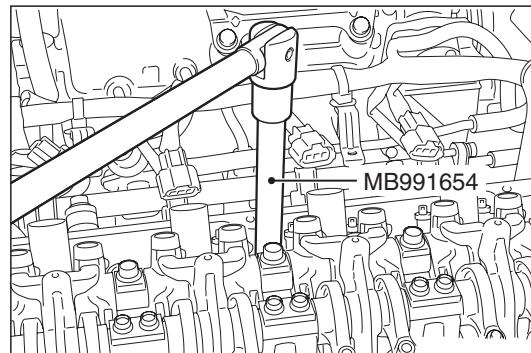

Use special tool cylinder head bolt wrench (MB991654) to loosen the cylinder head bolts in two or three steps in the order of the numbers shown in the illustration. If the cylinder head bolts cannot be pulled out due to the washer being trapped in the valve spring, raise the bolt slightly, then remove it while holding it by using a magnet.


INSTALLATION SERVICE POINTS

>>A<< CYLINDER HEAD GASKET INSTALLATION

**CAUTION**


Do not allow any foreign materials get into the coolant passages, oil passages and cylinder.

1. Degrease the cylinder head gasket mounting surface.

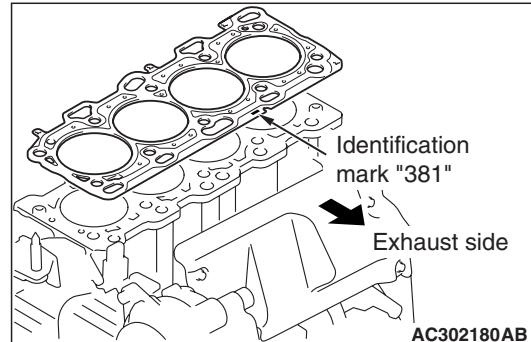

2. Assemble to the cylinder block so the cylinder head gasket identification mark of "381" is at the top surface and on the exhaust side.


### >>B<< CYLINDER HEAD BOLTS INSTALLATION

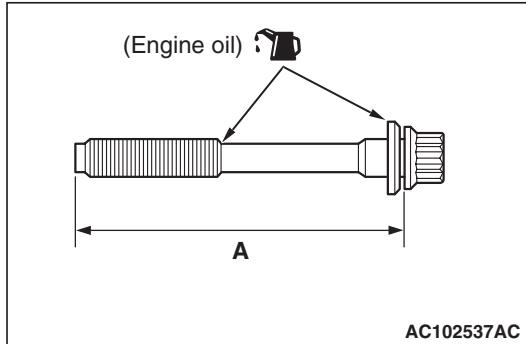

1. Check that the nominal length of each cylinder head bolt meets the limit. If it exceeds the limit, replace the bolts with a new one.


**Limit (A): 99.4 mm**

2. Apply a small amount of engine oil to the thread of the bolts and to the washers.

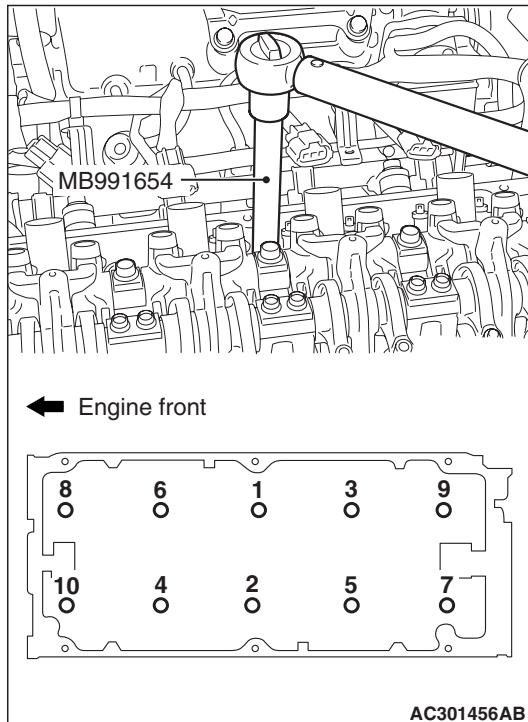

3. Use special tool cylinder head bolt wrench (MB991654) to tighten the cylinder head bolts in the following procedures.

- (1) Tighten the bolts to  $78 \pm 2$  N·m in the order shown.
- (2) Loosen the bolts fully in the reverse sequence to that shown.
- (3) Tighten the bolts to  $20 \pm 2$  N·m in the order shown.

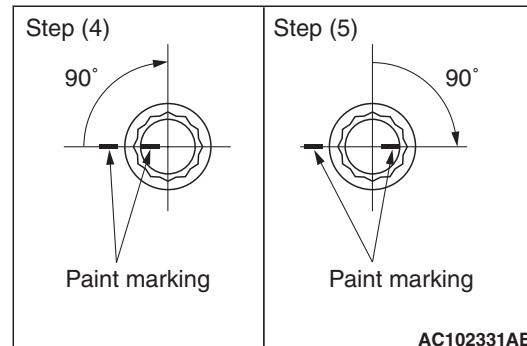



(4) Apply a paint mark to the heads of the cylinder head bolts and cylinder head, then tighten 90 degree angle as shown.

#### ⚠ CAUTION

- The bolt is not tightening sufficiently if the tightening angle is less than a 90 degree angle.
- If the tightening angle exceeds the standard specification, remove the bolt and start over from step 1.

(5) Tighten in a 90 degree angle as shown in the instructions of the figure, then check to see that the paint mark on the head of the cylinder head bolts and the paint mark on the cylinder head is on a linear line.


## &gt;&gt;C&lt;&lt; FUEL HIGH-PRESSURE HOSE CONNECTION

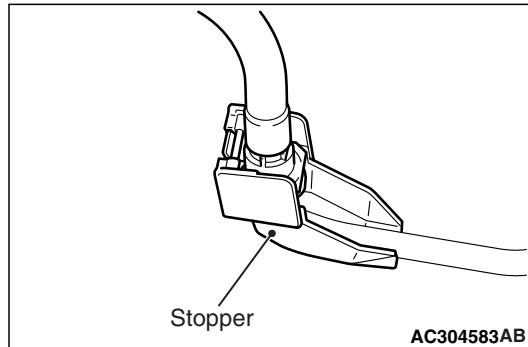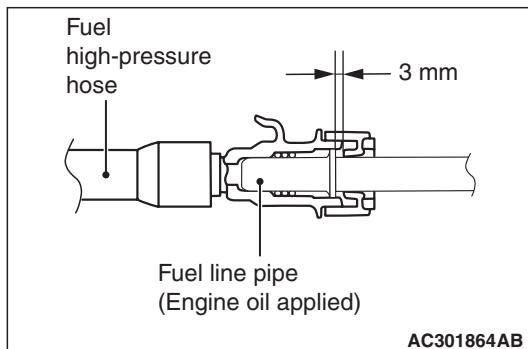**CAUTION**

**After connecting the fuel high-pressure hose, slightly pull it to ensure that it is installed securely. Also confirm that there is a play approximately 3 mm. Then install the stopper securely.**


Apply a small amount of engine oil to the fuel line pipe and then install the fuel high-pressure hose.

## &gt;&gt;D&lt;&lt; RADIATOR UPPER HOSE CONNECTION

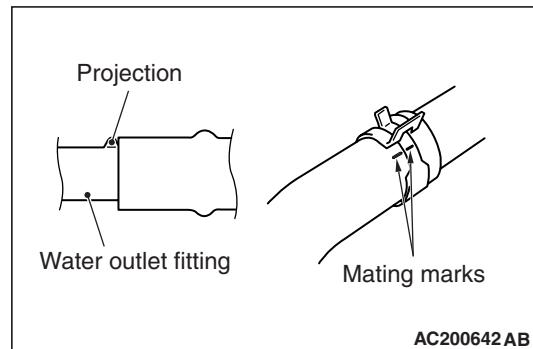

1. Insert radiator upper hose until it contacts the projection on the water outlet fitting.
2. Align the mating marks on the radiator upper hose and hose clamp, and then secure the radiator upper hose.

## &gt;&gt;E&lt;&lt; CAMSHAFT SPROCKET INSTALLATION

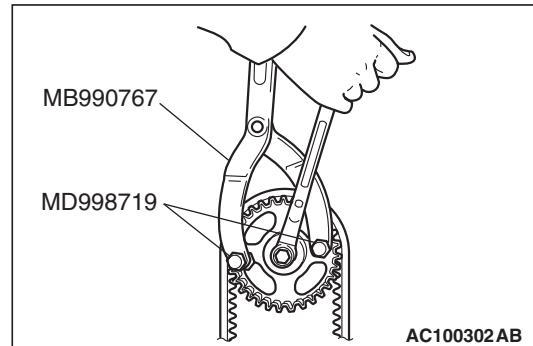

1. Use the following special tool as during removal to hold the camshaft sprocket.
  - Front hub and flange yoke holder (MB990767)
  - Pin (MD998719)
2. Tighten the camshaft sprocket mounting bolt to the specified torque.

**Tightening torque:  $89 \pm 9 \text{ N}\cdot\text{m}$**

## TIMING BELT

## REMOVAL AND INSTALLATION


M1112004301024

## Pre-removal Operation

- Under Cover Removal (Refer to GROUP 51, Under Cover P.51-31).
- Crankshaft Shaft Damper Pulley Removal (Refer to P.11E-17).

## Post-installation Operation

- Crankshaft Shaft Damper Pulley Installation (Refer to P.11E-17).
- Drive Belt Tension Check (Refer to P.11E-7).
- Under Cover Installation (Refer to GROUP 51, Under Cover P.51-31).

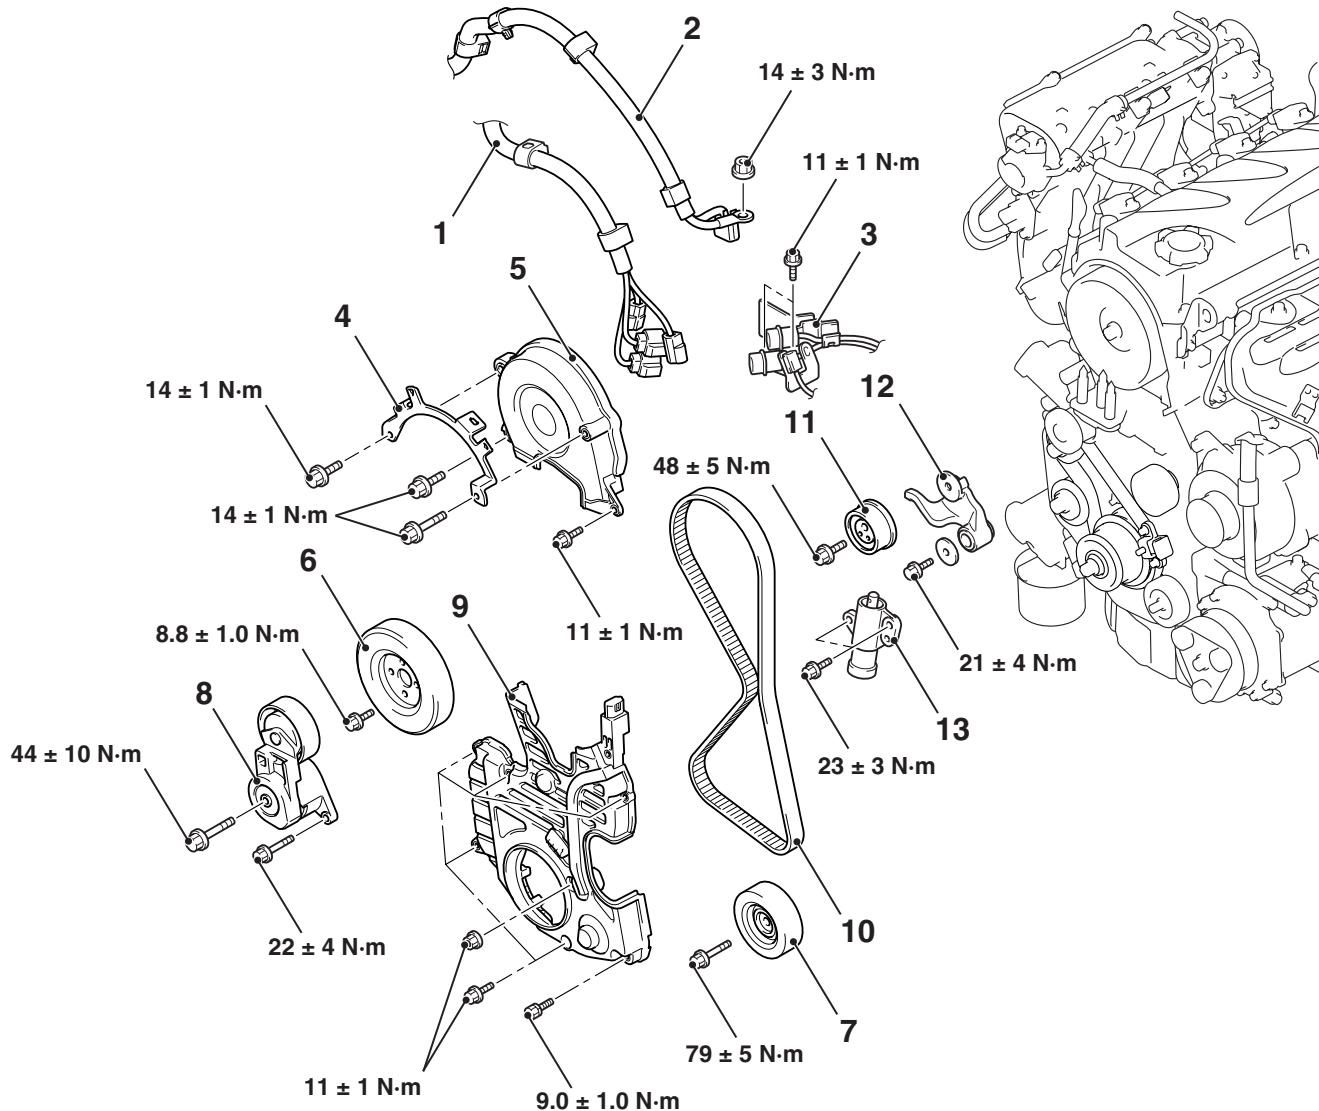

AC308981AB

## Removal steps

- Control wiring harness connection
- Battery wiring harness connection
- Connector bracket
- Engine mounting insulator (Refer to GROUP 32, Engine Mount P.32-7) <M/T>
- Engine mounting insulator (Refer to GROUP 32, Engine Mount P.32-6) <A/T>
- Harness bracket

## Removal steps (Continued)


- Timing belt upper cover
- Water pump pulley
- Idler pulley
- Auto-tensioner
- Timing belt lower cover
- Valve timing belt tension adjustment (Installation only)

>>G<<      >>F<<      10. Valve timing belt

<<A>>      >>E<<      11. Timing belt tensioner pulley

**Removal steps (Continued)**

>>D<< 12. Timing belt tensioner arm  
13. Timing belt tensioner adjuster

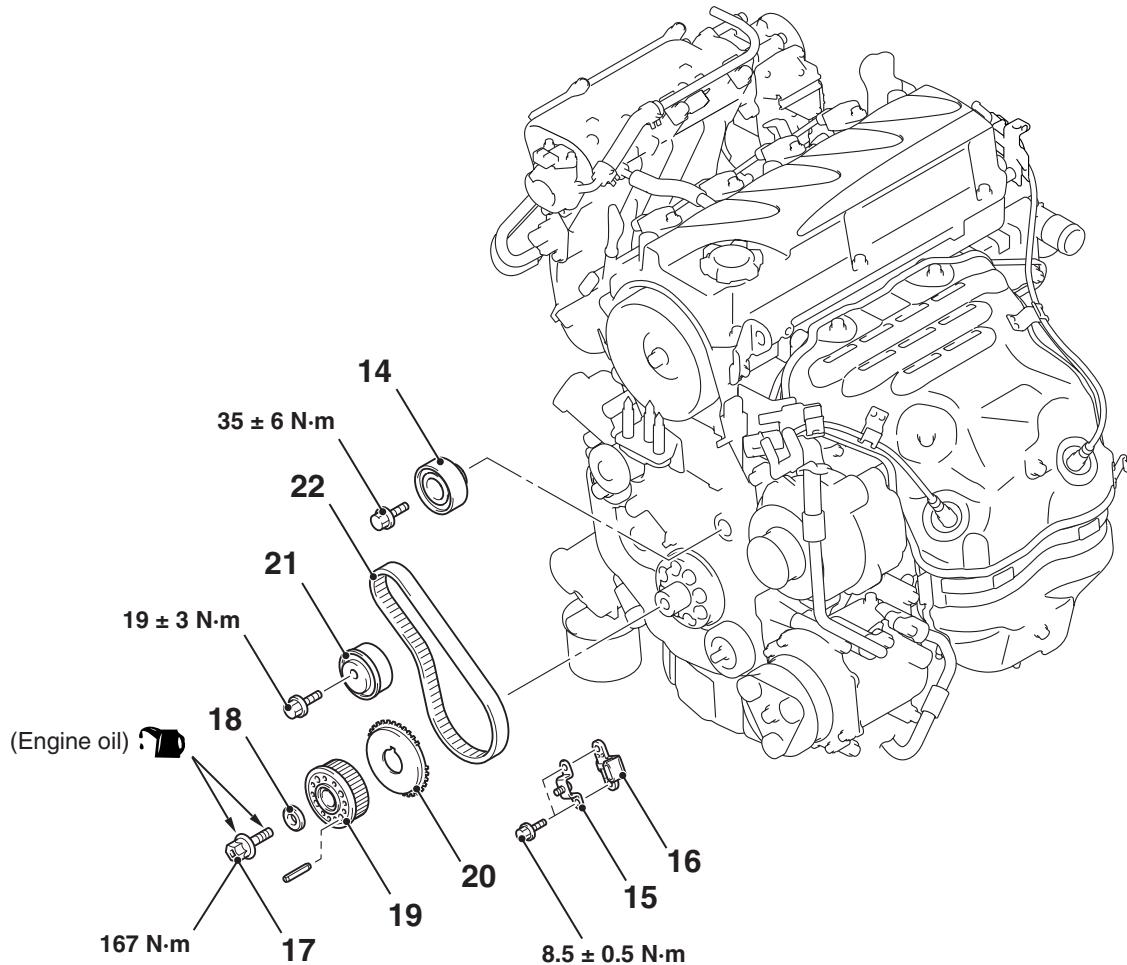

AC308982AB

**Removal steps**

14. Timing belt Idler pulley  
15. Timing belt lower cover bracket  
16. Crank angle sensor  
<<B>> >>C<< 17. Crankshaft pulley centre bolt  
<<B>> >>C<< 18. Crankshaft pulley washer  
<<B>> >>C<< 19. Crankshaft camshaft drive sprocket

**Removal steps (Continued)**


>>C<< 20. Crankshaft angle sensing blade  
>>B<< • Balancer timing belt tension adjustment (Installation only)  
<<C>> >>A<< 21. Balancer timing belt tensioner  
>>A<< 22. Balancer timing belt

## REMOVAL SERVICE POINTS


## &lt;&lt;A&gt;&gt; VALVE TIMING BELT REMOVAL

**CAUTION**


Never turn the crankshaft anti-clockwise.

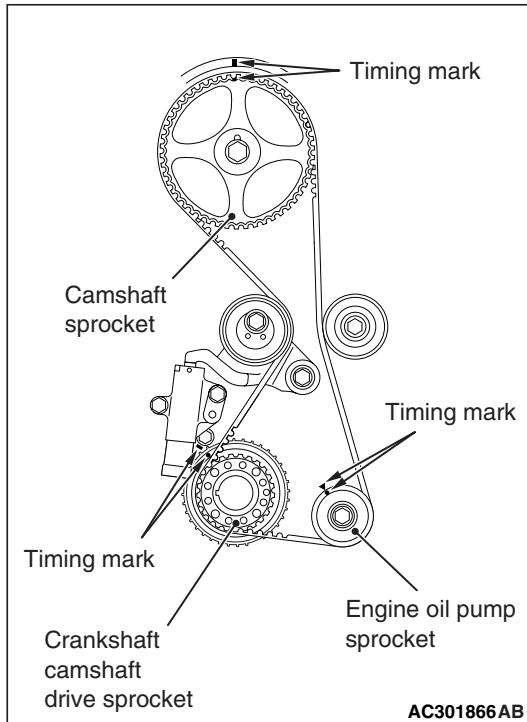

1. Turn the crankshaft clockwise, align each timing mark to set No.1 cylinder to TDC of its compression stroke.

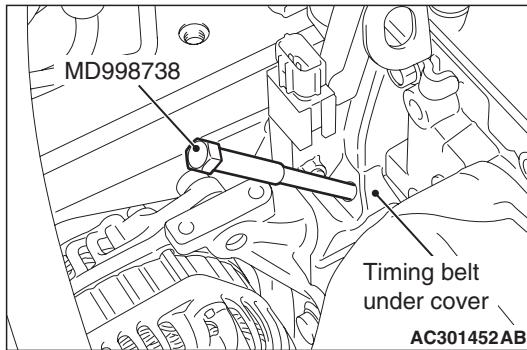


2. Remove the timing belt under cover rubber plug and then set special tool adjusting bolt (MD998738).

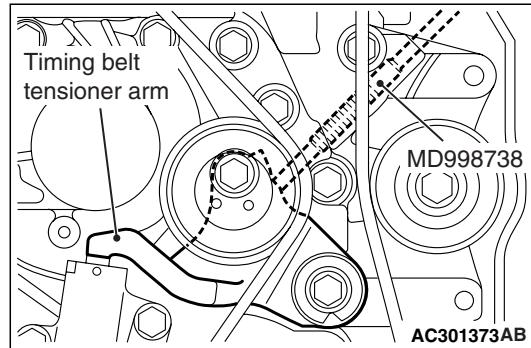


3. Screw in the special tool with hands until it contacts the timing belt tensioner arm.

**CAUTION**

The special tool can be gradually installed at a rate of a 30 degree turn per second. If it is screwed in all at once, the timing belt tensioner adjuster rod will not easily retract and the special tool may bend.

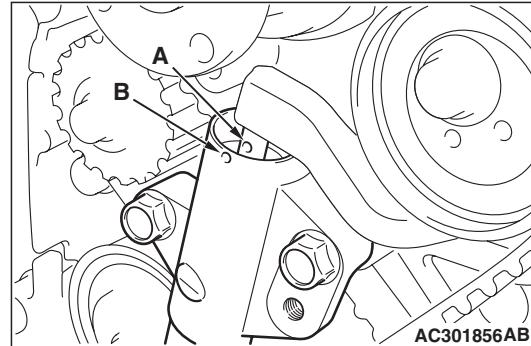

4. Gradually screw in the special tool and then align the timing belt tensioner adjuster rod set hole A with the timing belt tensioner adjuster cylinder set hole B.

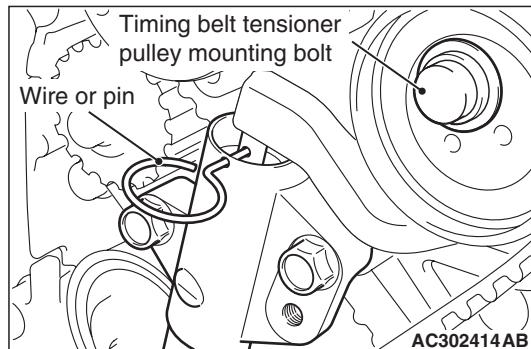


5. Insert a wire or pin in the set hole aligned.

**CAUTION**

To reuse the valve timing belt, draw an arrow indicating the rotating direction (clockwise) on the back of the belt using chalk, etc.

6. After removal of the special tool, loosen the timing belt tensioner pulley mounting bolts and remove the valve timing belt.

**<<B>> CRANKSHAFT PULLEY CENTRE BOLT/CRANKSHAFT PULLEY WASHER/CRANKSHAFT CAMSHAFT DRIVE SPROCKET REMOVAL**

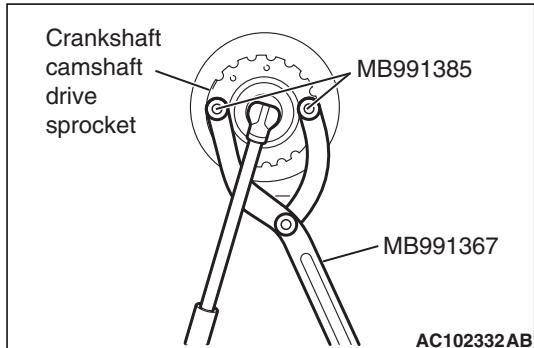

1. Use the following special tools to hold the crankshaft camshaft drive sprocket.
  - Special spanner (MB991367)
  - Pin (MB991385)
2. Loosen the crankshaft pulley centre bolt and remove the crankshaft pulley washer and crankshaft camshaft drive sprocket.


**<<C>> BALANCER TIMING BELT REMOVAL**

**CAUTION**


To reuse the balancer timing belt, draw an arrow indicating the rotating direction on the back of the belt using chalk, etc.

**INSTALLATION SERVICE POINTS**

**>>A<< BALANCER TIMING BELT/BALANCER TIMING BELT TENSIONER INSTALLATION**

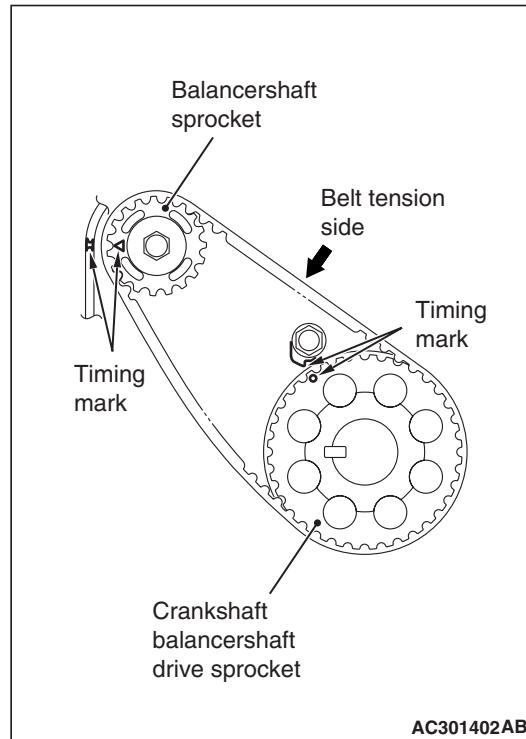


1. Ensure that the crankshaft balancer shaft drive sprocket timing marks and balancer shaft sprocket timing marks are aligned.
2. Install the balancer timing belt on the crankshaft balancer shaft drive sprocket and balancer shaft sprocket. There should be no slack on the tension side.

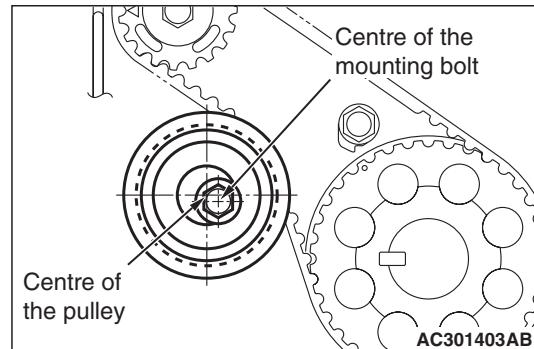


3. Assemble and temporarily fix the centre of the pulley of the balancer timing belt tensioner so that it is at the top left from the centre of the assembling bolt, and the pulley flange is at the front-side of the engine.
4. Adjust the balancer timing belt tension.

>>B<< BALANCER TIMING BELT  
TENSION ADJUSTMENT**CAUTION**

When tightening the mounting bolts, ensure that the tensioner does not rotate with the bolts. Allowing it to rotate with the bolts can cause excessive tension of the belt.

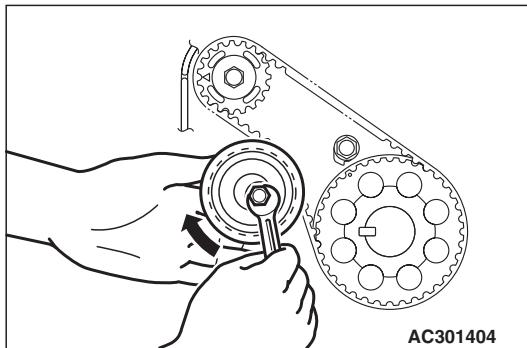


AC301404

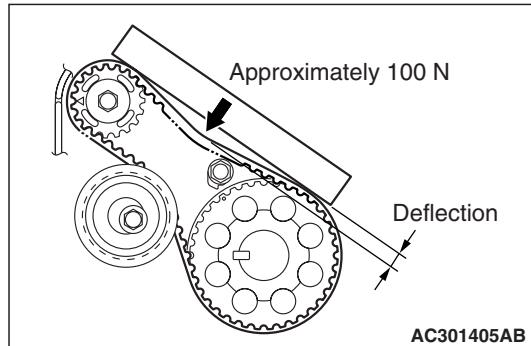

AC301405AB

1. Lift with your fingers the balancer timing belt tensioner in the direction of the arrow. Apply a tensile torque of  $3.0 \pm 0.4 \text{ N}\cdot\text{m}$  to the balancer timing belt so the belt is tense without any looseness. Tighten the assembling bolt to the specified torque in this state. Then, fix the balancer timing belt tensioner.

**Tightening torque:  $19 \pm 3 \text{ N}\cdot\text{m}$**

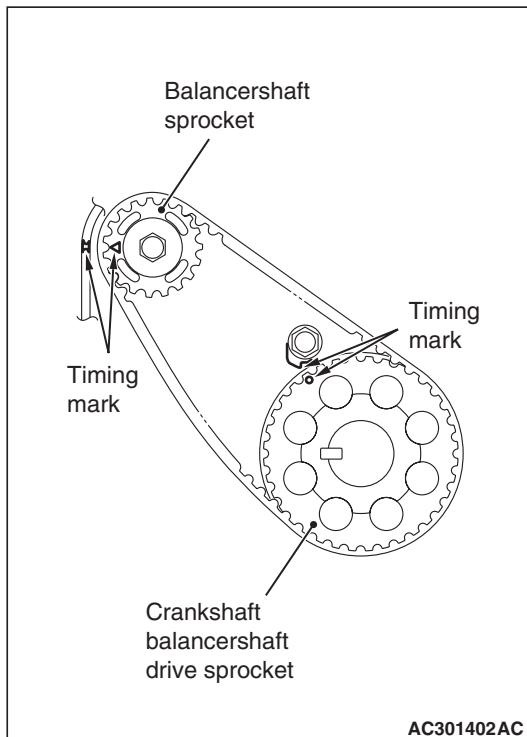

AC301402AC


2. Turn the crankshaft clockwise two turns to set No.1 cylinder to TDC of its compression stroke and check that sprocket timing marks are aligned.

3. Apply a pressure of approximately 100 N at the centre (arrow area) between the sprocket as shown in the figure, then inspect whether the belt deflection is within the standard value.

**Standard value:**

<When adjusting> 5 – 7 mm  
<When replacing> 5 – 7 mm

4. If not within the standard value, adjust the belt tension again.

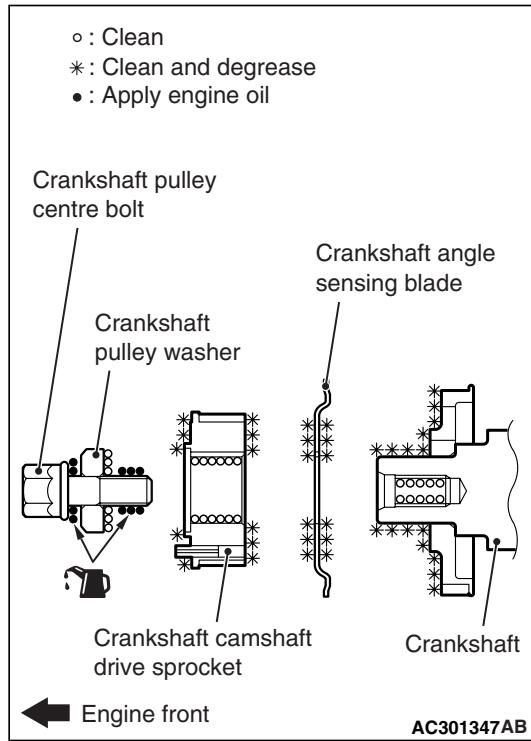
>>C<< CRANKSHAFT ANGLE SENSING  
BLADE/CRANKSHAFT CAMSHAFT  
DRIVE SPROCKET/CRANKSHAFT  
PULLEY WASHER/CRANKSHAFT  
PULLEY CENTRE BOLT INSTALLATION

AC301347AB

1. Clean or degrease the crankshaft, the crankshaft angle sensing blade, the crankshaft camshaft drive sprocket and crankshaft pulley washer as shown.

**NOTE: Also clean the degreased surfaces.**

2. Install the crankshaft angle sensing blade and crankshaft camshaft drive sprocket in the direction shown.
3. Place the larger chamfer side of the crankshaft pulley washer in the direction shown in the Figure and then assemble on the crankshaft pulley centre bolt.
4. Apply a small of engine oil to the crankshaft pulley centre bolt bearing surface and screw.

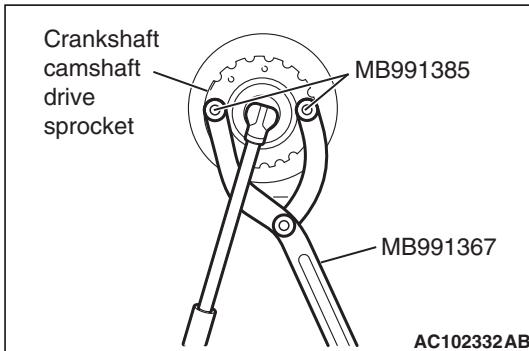

5. Use the following special tool as during removal to hold the crankshaft camshaft drive sprocket.
  - Special spanner (MB991367)
  - Pin (MB991385)
6. Tighten the crankshaft pulley centre bolt to the specified torque.


**Tightening torque: 167 N·m**

#### >>D<< TIMING BELT TENSIONER ADJUSTER INSTALLATION


1. Set according to the following procedures when the timing belt tensioner adjuster rod is fully extended.

##### **CAUTION**

If the compression is too fast the procedure may damage the rod. Make a point to slowly and thoroughly compress.

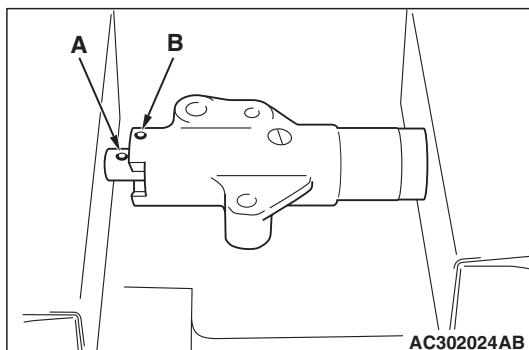

- (1) Slowly compress the timing belt tensioner adjuster rod using a press or vice, then align the set hole A of the rod with set hole B of the timing belt tensioner adjuster cylinder.

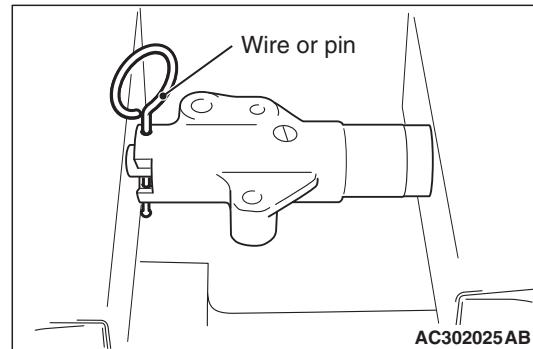


- (2) Insert a wire or pin in the set hole aligned.

*NOTE: When replacing the timing belt tensioner adjuster with new parts, the timing belt tensioner adjuster is set with a pin.*



2. Install the timing belt tensioner adjuster to the engine and then tighten the mounting bolt to the specified torque. Do not remove the wire or pin until the tension of the valve timing belt is adjusted.

**Tightening torque:  $23 \pm 3 \text{ N}\cdot\text{m}$**


#### >>E<< TIMING BELT TENSIONER PULLEY INSTALLATION

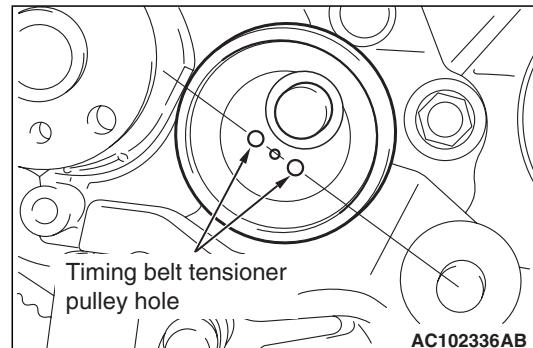

Temporarily tighten the timing belt tensioner pulley as shown.
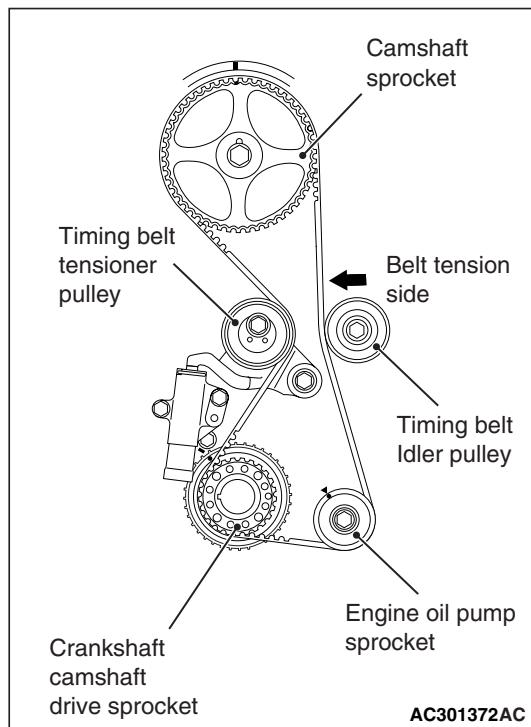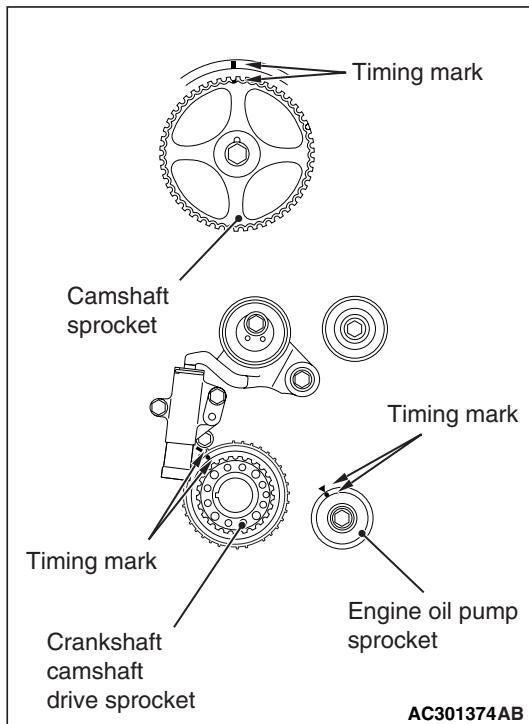
>>F<< VALVE TIMING BELT  
INSTALLATION

1. Align the timing marks on the camshaft sprocket, crankshaft camshaft drive sprocket and engine oil pump sprocket.

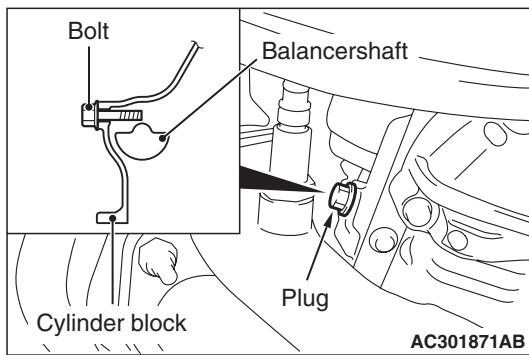

2. Adjust the timing mark of the engine oil pump sprocket. Unplug the cylinder block plug. Insert a bolt (M6, section width 10 mm, nominal length 45 mm) from the plug hole. If the bolt comes in contact with the balancer shaft, turn the engine oil sprocket one rotation. Re-adjust the timing mark and then check to see that the bolt fits. Do not remove the bolt until the valve timing belt is assembled.


3. Incorporate the valve timing belt in the following manner so that the tensile force of the belt is not lax.

- (1) Place the valve timing belt on the timing belt tensioner pulley and crankshaft camshaft driver sprocket and then support it with your left hand so it does not slide.
- (2) Place the valve timing belt on the engine oil pump sprocket while pulling it with the right hand.
- (3) Place the valve timing belt on the timing belt idler pulley.


**CAUTION**

Incorporate the valve timing belt. Then apply reverse rotation (anti-clockwise rotation) pressure to the camshaft sprocket. Re-check to see that each timing mark is aligned while the tension side of the belt is right.


- (4) Place the valve timing belt on the camshaft sprocket.

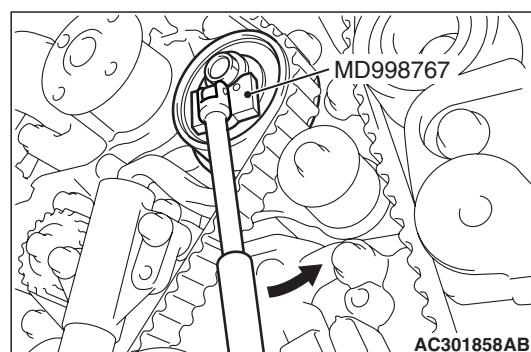

4. Turn the timing belt tensioner pulley in the direction shown in the figure using special tool tensioner wrench (MD998767) to apply tension to the valve timing belt. Then temporarily tighten and fix the timing belt tensioner pulley mounting bolt.

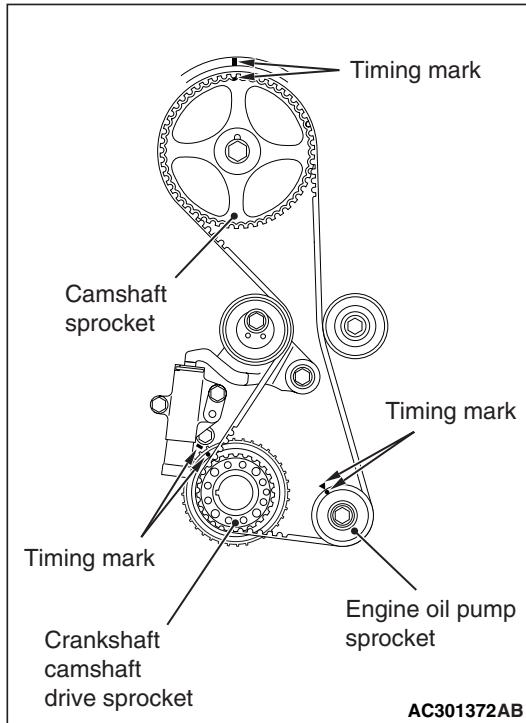

5. Check that the timing marks are aligned.

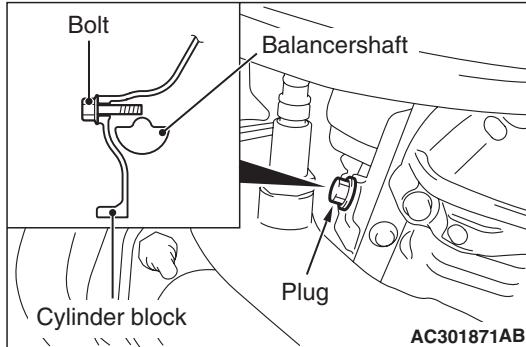


6. Remove the bolt inserted in Step 2 above, then assemble the cylinder block plug.  
7. Tighten the cylinder block plug to the specified torque.

**Tightening torque:  $30 \pm 3 \text{ N}\cdot\text{m}$**

8. Adjust the valve timing belt tension.

## >>G<< VALVE TIMING BELT TENSION ADJUSTMENT

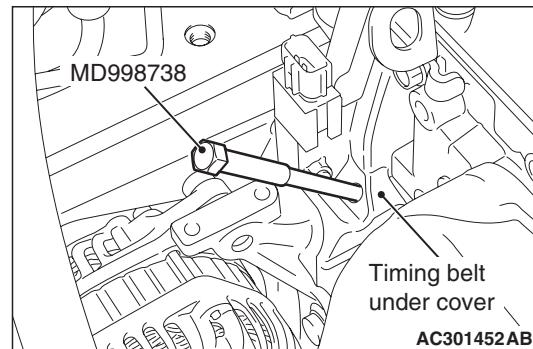


1. Set special tool adjusting bolt (MD998738) used when removing the valve timing belt.

### ⚠ CAUTION

**Always screw in the special tool in with your hands, since use of a spanner or other tools may damage the wire or pin inserted in the timing belt tensioner adjuster.**


2. Gradually screw in the special tool to a position in which the wire or pin inserted in the timing belt tensioner adjuster lightly moves.  
3. Turn the crankshaft 1/4 of a revolution in the anti-clockwise direction.

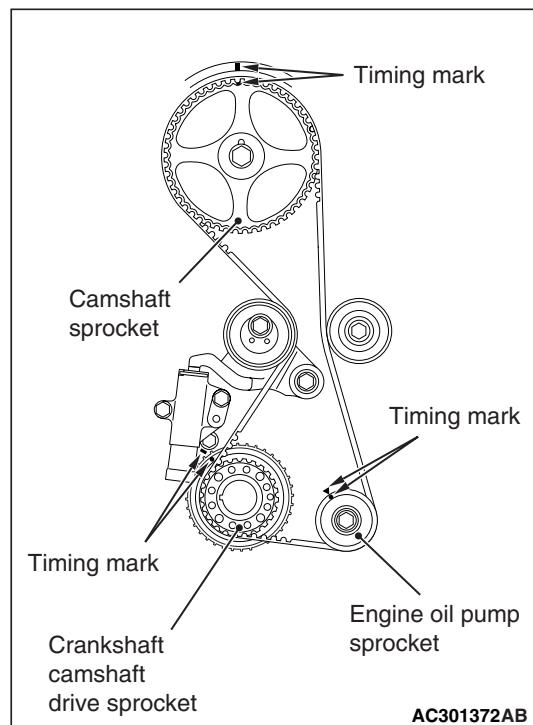

4. Turn the crankshaft in the clockwise direction, align each timing mark to set No.1 cylinder to TDC of its compression stroke.  
5. Loosen the timing belt tensioner pulley mounting bolt.


**CAUTION**

When tightening the mounting bolt, ensure that the timing belt tensioner pulley does not rotate with the bolt. Allowing it to rotate with the bolt can cause deficient tension of the belt.

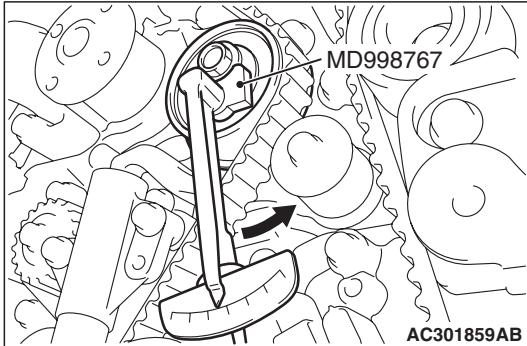


6. With special tool tensioner wrench (MD998767) and torque wrench, apply tension torque  $3.5 \text{ N}\cdot\text{m}$  to the valve timing belt, and tighten the timing belt tensioner pulley mounting bolt to the specified torque.

**Tightening torque:  $48 \pm 5 \text{ N}\cdot\text{m}$**

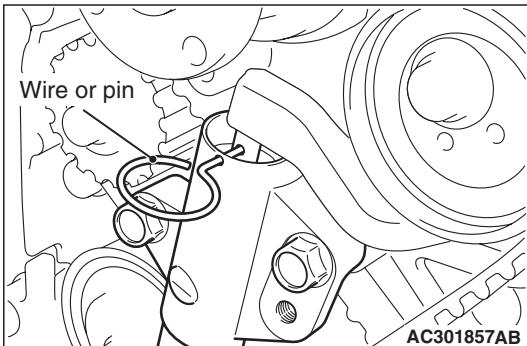


7. Remove wire or pin inserted to timing belt tensioner adjuster.

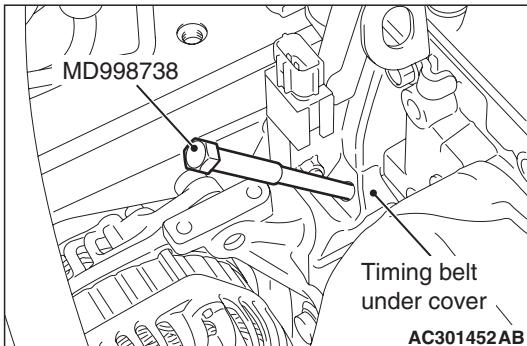


8. Remove special tool adjusting bolt (MD998738), and install the rubber plug to the timing belt under cover.

9. Rotate crankshaft clockwise two turns, and leave it for about 15 minutes.

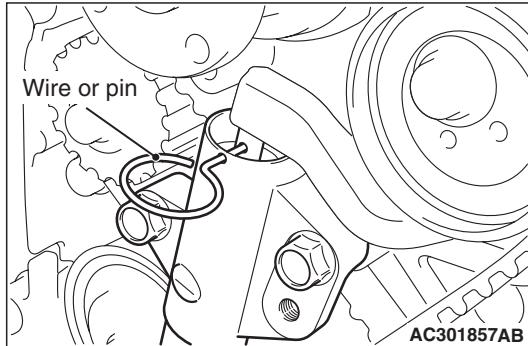

10. Insert wire or pin removed in Step 7 again, and ensure that it can be pulled out with a light load. When wire or pin can be lightly removed, appropriate tension is applied on timing belt. In this case, remove wire or pin.

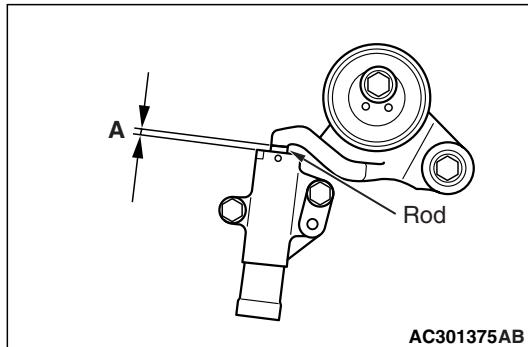


Also the projection of timing belt tensioner adjuster rod (A) is within the standard value, appropriate tension is applied.

**Standard value (A):  $3.8 - 4.5 \text{ mm}$**

11. If wire or pin cannot be easily pulled out, repeat Step 1 through Step 9 to reach proper valve timing belt tension.

**CAUTION**

Always check the tightening torque of the crank-shaft pulley centre bolt when turning the crank-shaft pulley centre bolt anti-clockwise.  
Re-tighten if it is loose.

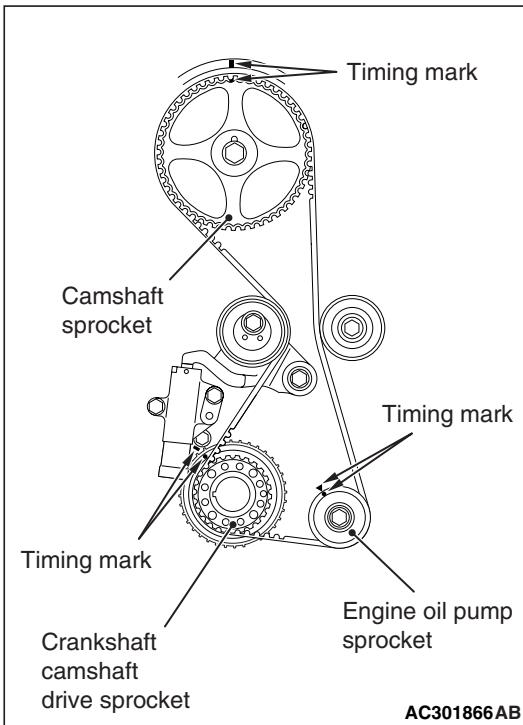


12. Check again that the timing marks on sprockets are aligned.

## INSPECTION

M1112004400460

### TIMING BELT TENSIONER ADJUSTER CHECK

1. Check for oil leak from seal, and replace it if leak is detected.
2. Check for wear or damage at the top of the rod. Replace it, if required.

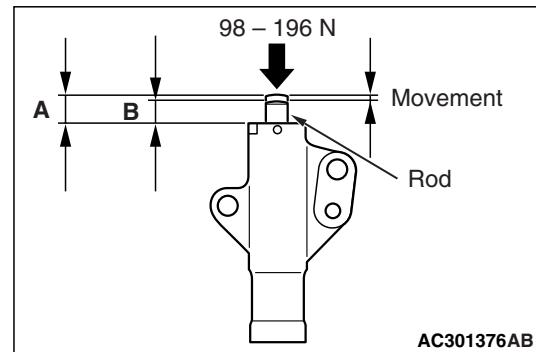

3. Hold the timing belt tensioner adjuster by hand, and press top end of the rod onto the metal (e.g. cylinder block) under a pressure of 98 – 196 N to measure the movement of the rod.

**Standard value: Within 1 mm**

**A: Length when it is free (not pressed)**


**B: Length when it is pressed**

**A – B: Movement**

4. If the measured value is out of the standard value, replace the timing belt tensioner adjuster.

## BALANCER TIMING BELT TENSION CHECK

Check the balancer timing belt tension in the following procedures.

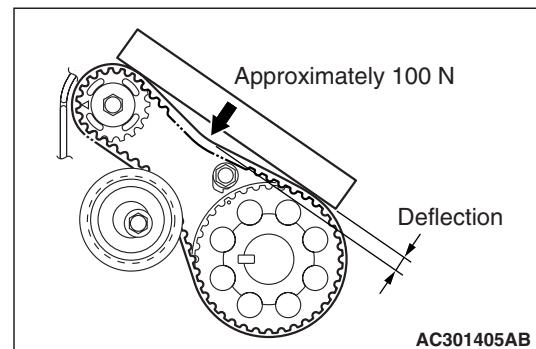

1. Apply a pressure of approximately 100 N at the centre (arrow area) between the sprocket as shown in the figure, then inspect whether the flexure is within the standard value.

**Standard value: 5 – 10 mm**

2. If not within the standard value, adjust the belt tension. (Refer to [P.11E-36](#)).

# ENGINE ASSEMBLY

## REMOVAL AND INSTALLATION

M1112001002191

&lt;M/T&gt;

### ⚠ CAUTION


- When the engine assembly replacement is performed, use the M.U.T.-II/III to initialise the learning value (Refer to GROUP 00, Precautions Before Service – Initialisation Procedure for Learning Value in MPI Engine [P.00-21](#)).
- \*: indicates parts which should be temporarily tightened, and then fully tightened with the engine weight applied on the vehicle body.

#### Pre-removal Operation

- Under Cover Removal (Refer to GROUP 51, Under Cover [P.51-31](#)).
- Fuel Line Pressure Reduction [Refer to GROUP 13C, On-vehicle Service – Fuel Pump Connector Disconnection (How to Reduce Pressurized Fuel Lines) [P.13C-428](#)].
- Engine Oil Draining (Refer to GROUP 12, On-vehicle Service – Engine Oil Replacement [P.12-4](#)).
- Engine Coolant Draining (Refer to GROUP 14, On-vehicle Service – Engine Coolant Replacement [P.14-17](#)).
- Transmission Oil Draining (Refer to GROUP 22A, On-vehicle Service – Transmission Oil Replacement [P.22A-8](#)).
- Transfer Oil Draining (Refer to GROUP 22A, On-vehicle Service – Transfer Oil Replacement [P.22A-8](#)).
- Hood Removal (Refer to GROUP 42, Hood [P.42-4](#)).
- Air Cleaner Removal (Refer to GROUP 15, Air Cleaner [P.15-8](#)).
- Battery and Battery Tray Removal
- Accelerator Cable Removal (Refer to GROUP 17, Accelerator Cable and Pedal [P.17-7](#)).
- Radiator Assembly Removal (Refer to GROUP 14, Radiator [P.14-35](#)).
- Front Exhaust Pipe Removal (Refer to GROUP 15, Exhaust Pipe and Main Muffler [P.15-25](#)).

#### Post-installation Operation

- Front Exhaust Pipe Installation (Refer to GROUP 15, Exhaust Pipe and Main Muffler [P.15-25](#)).
- Radiator Assembly Installation (Refer to GROUP 14, Radiator [P.14-35](#)).
- Accelerator Cable Installation (Refer to GROUP 17, Accelerator Cable and Pedal [P.17-7](#)).
- Battery and Battery Tray Installation
- Air Cleaner Installation (Refer to GROUP 15, Air Cleaner [P.15-8](#)).
- Hood Installation (Refer to GROUP 42, Hood [P.42-4](#)).
- Transfer Oil Refilling (Refer to GROUP 22A, On-vehicle Service – Transfer Oil Replacement [P.22A-8](#)).
- Transmission Oil Refilling (Refer to GROUP 22A, On-vehicle Service – Transmission Oil Replacement [P.22A-8](#)).
- Engine Coolant Refilling (Refer to GROUP 14, On-vehicle Service – Engine Coolant Replacement [P.14-17](#)).
- Engine Oil Refilling (Refer to GROUP 12, On-vehicle Service – Engine Oil Replacement [P.12-4](#)).
- Accelerator Cable Adjustment (Refer to GROUP 17, On-vehicle Service – Accelerator Cable Check and Adjustment [P.17-6](#)).
- Fuel Leak Check
- Drive Belt Tension Check (Refer to [P.11E-7](#)).
- Under Cover Installation (Refer to GROUP 51, Under Cover [P.51-31](#)).
- Front Wheel Alignment Check and Adjustment (Refer to GROUP 33, On-vehicle Service – Front Wheel Alignment Check and Adjustment [P.33-5](#)).

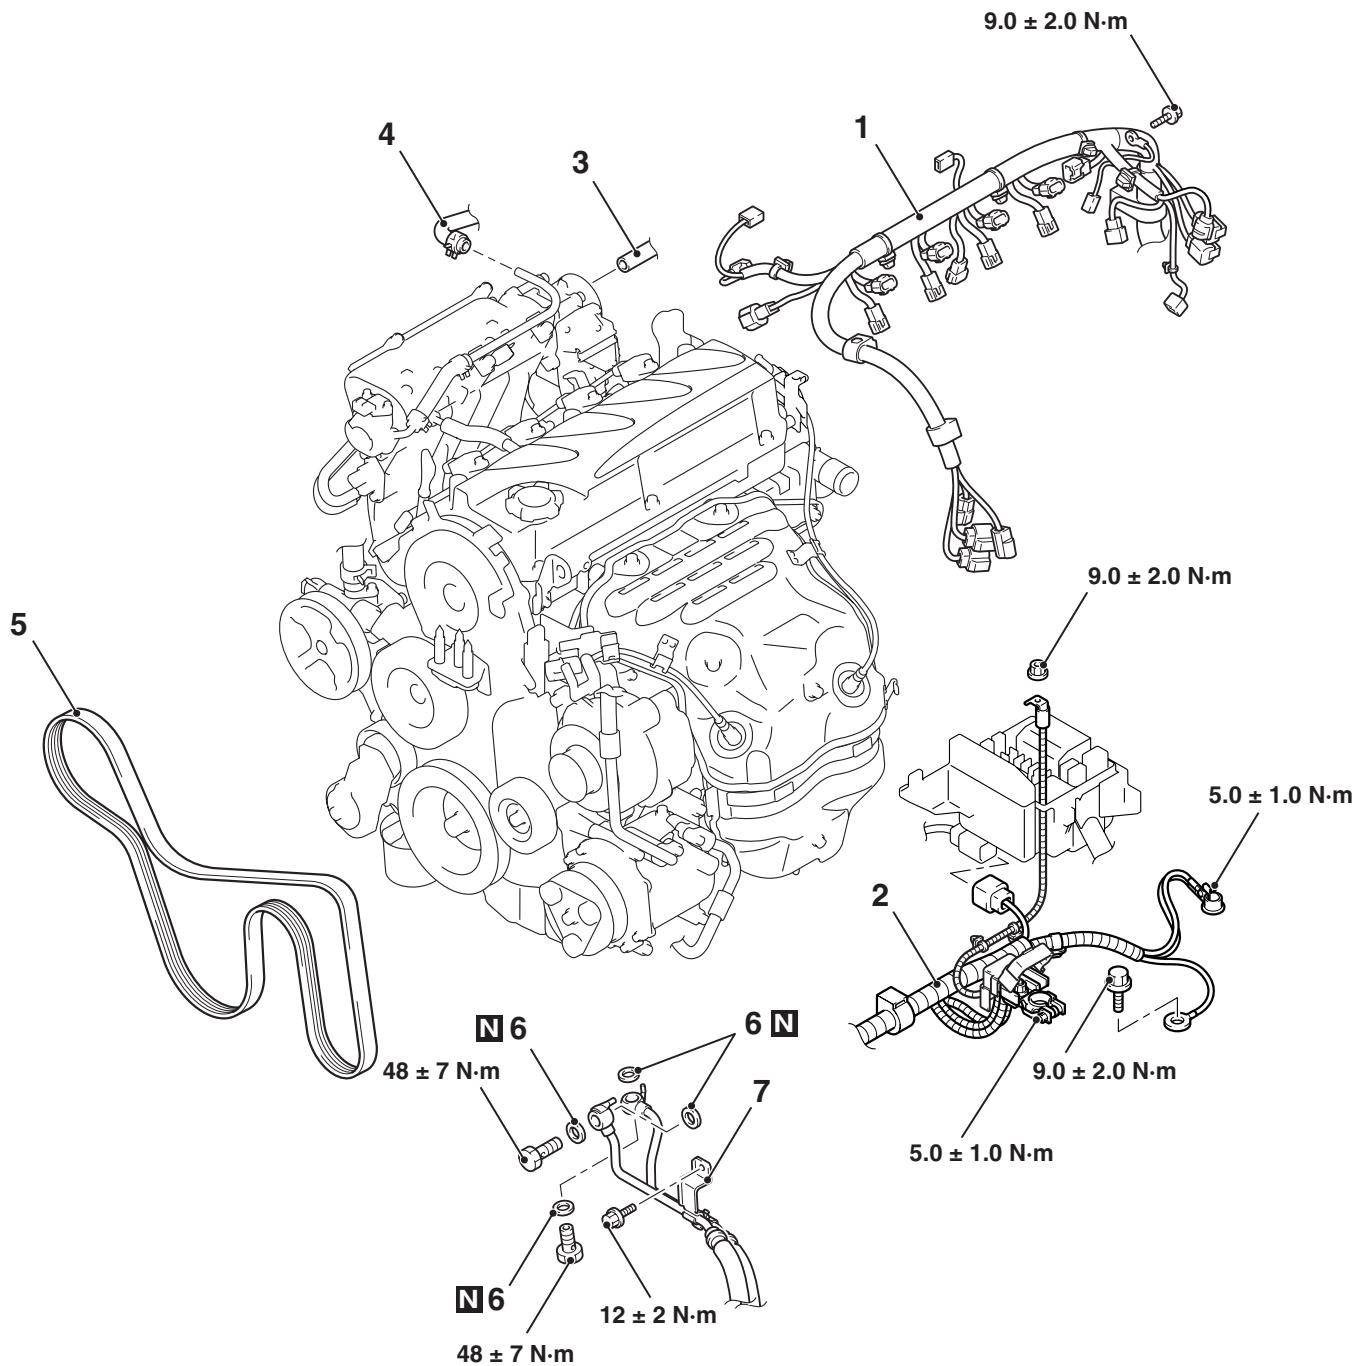


AC308983AB

**Removal steps**

1. Control wiring harness connection <<A>>
2. Battery wiring harness connection
3. Canister vacuum hose connection
4. Brake booster vacuum hose connection

**Removal steps (Continued)**

5. Drive belt
6. Engine oil cooler tube gaskets
7. Engine oil cooler hose and bracket assembly

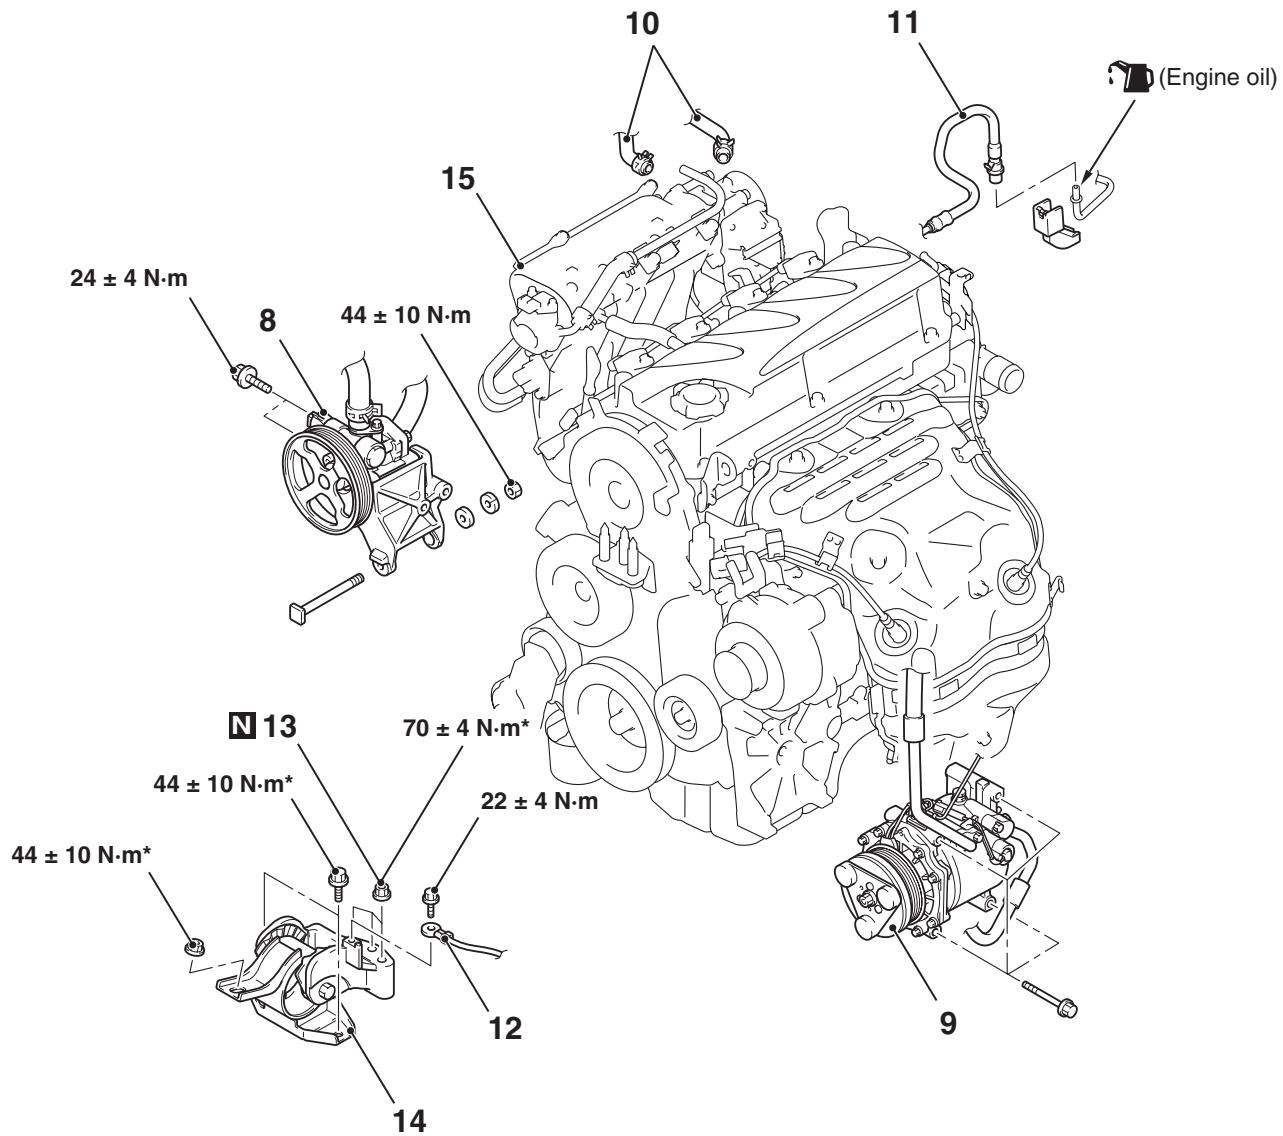

AC308984AB

|             | <b>Removal steps</b>                            |             | <b>Removal steps (Continued)</b> |
|-------------|-------------------------------------------------|-------------|----------------------------------|
| <<B>>       | 8. Power steering oil pump and bracket assembly | <<E>> >>D<< | • Transmission assembly          |
| <<C>>       | 9. A/C compressor and clutch assembly           |             | 12. Earth cable connection       |
|             | 10. Heater water hoses connection               | <<F>> >>B<< | 13. Self-locking nuts            |
| <<D>> >>E<< | 11. Fuel high-pressure hose connection          | <<G>> >>A<< | 14. Engine mounting insulator    |
|             |                                                 |             | 15. Engine assembly              |

&lt;A/T&gt;

**⚠ CAUTION**


- When the engine assembly replacement is performed, use the M.U.T.-II/III to initialise the learning value (Refer to GROUP 00, Precautions Before Service – Initialisation Procedure for Learning Value in MPI Engine [P.00-21](#)).
- \*: indicates parts which should be temporarily tightened, and then fully tightened with the engine weight applied on the vehicle body.

**Pre-removal Operation**

- Under Cover Removal (Refer to GROUP 51, Under Cover [P.51-31](#)).
- Fuel Line Pressure Reduction [Refer to GROUP 13C, On-vehicle Service – Fuel Pump Connector Disconnection (How to Reduce Pressurized Fuel Lines) [P.13C-428](#)].
- Engine Oil Draining (Refer to GROUP 12, On-vehicle Service – Engine Oil Replacement [P.12-4](#)).
- Engine Coolant Draining (Refer to GROUP 14, On-vehicle Service – Engine Coolant Replacement [P.14-17](#)).
- Transmission Fluid Draining (Refer to GROUP 23A, On-vehicle Service – Automatic Transmission Fluid Change [P.23A-124](#)).
- Transfer Oil Draining (Refer to GROUP 23A, On-vehicle Service – Transfer Oil Replacement [P.23A-128](#)).
- Hood Removal (Refer to GROUP 42, Hood [P.42-4](#)).
- Air Cleaner Removal (Refer to GROUP 15, Air Cleaner [P.15-8](#)).
- Battery and Battery Tray Removal
- Accelerator Cable Removal (Refer to GROUP 17, Accelerator Cable and Pedal [P.17-7](#)).
- Radiator Assembly Removal (Refer to GROUP 14, Radiator [P.14-35](#)).
- Front Exhaust Pipe Removal (Refer to GROUP 15, Exhaust Pipe and Main Muffler [P.15-25](#)).

**Post-installation Operation**

- Front Exhaust Pipe Installation (Refer to GROUP 15, Exhaust Pipe and Main Muffler [P.15-25](#)).
- Radiator Assembly Installation (Refer to GROUP 14, Radiator [P.14-35](#)).
- Accelerator Cable Installation (Refer to GROUP 17, Accelerator Cable and Pedal [P.17-7](#)).
- Battery and Battery Tray Installation
- Air Cleaner Installation (Refer to GROUP 15, Air Cleaner [P.15-8](#)).
- Hood Installation (Refer to GROUP 42, Hood [P.42-4](#)).
- Transfer Oil Refilling (Refer to GROUP 23A, On-vehicle Service – Transfer Oil Replacement [P.23A-128](#)).
- Transmission Fluid Refilling (Refer to GROUP 23A, On-vehicle Service – Automatic Transmission Fluid Change [P.23A-124](#)).
- Engine Coolant Refilling (Refer to GROUP 14, On-vehicle Service – Engine Coolant Replacement [P.14-17](#)).
- Engine Oil Refilling (Refer to GROUP 12, On-vehicle Service – Engine Oil Replacement [P.12-4](#)).
- Accelerator Cable Adjustment (Refer to GROUP 17, On-vehicle Service – Accelerator Cable Check and Adjustment [P.17-6](#)).
- Fuel Leak Check
- Drive Belt Tension Check (Refer to [P.11E-7](#)).
- Under Cover Installation (Refer to GROUP 51, Under Cover [P.51-31](#)).
- Front Wheel Alignment Check and Adjustment (Refer to GROUP 33, On-vehicle Service – Front Wheel Alignment Check and Adjustment [P.33-5](#)).

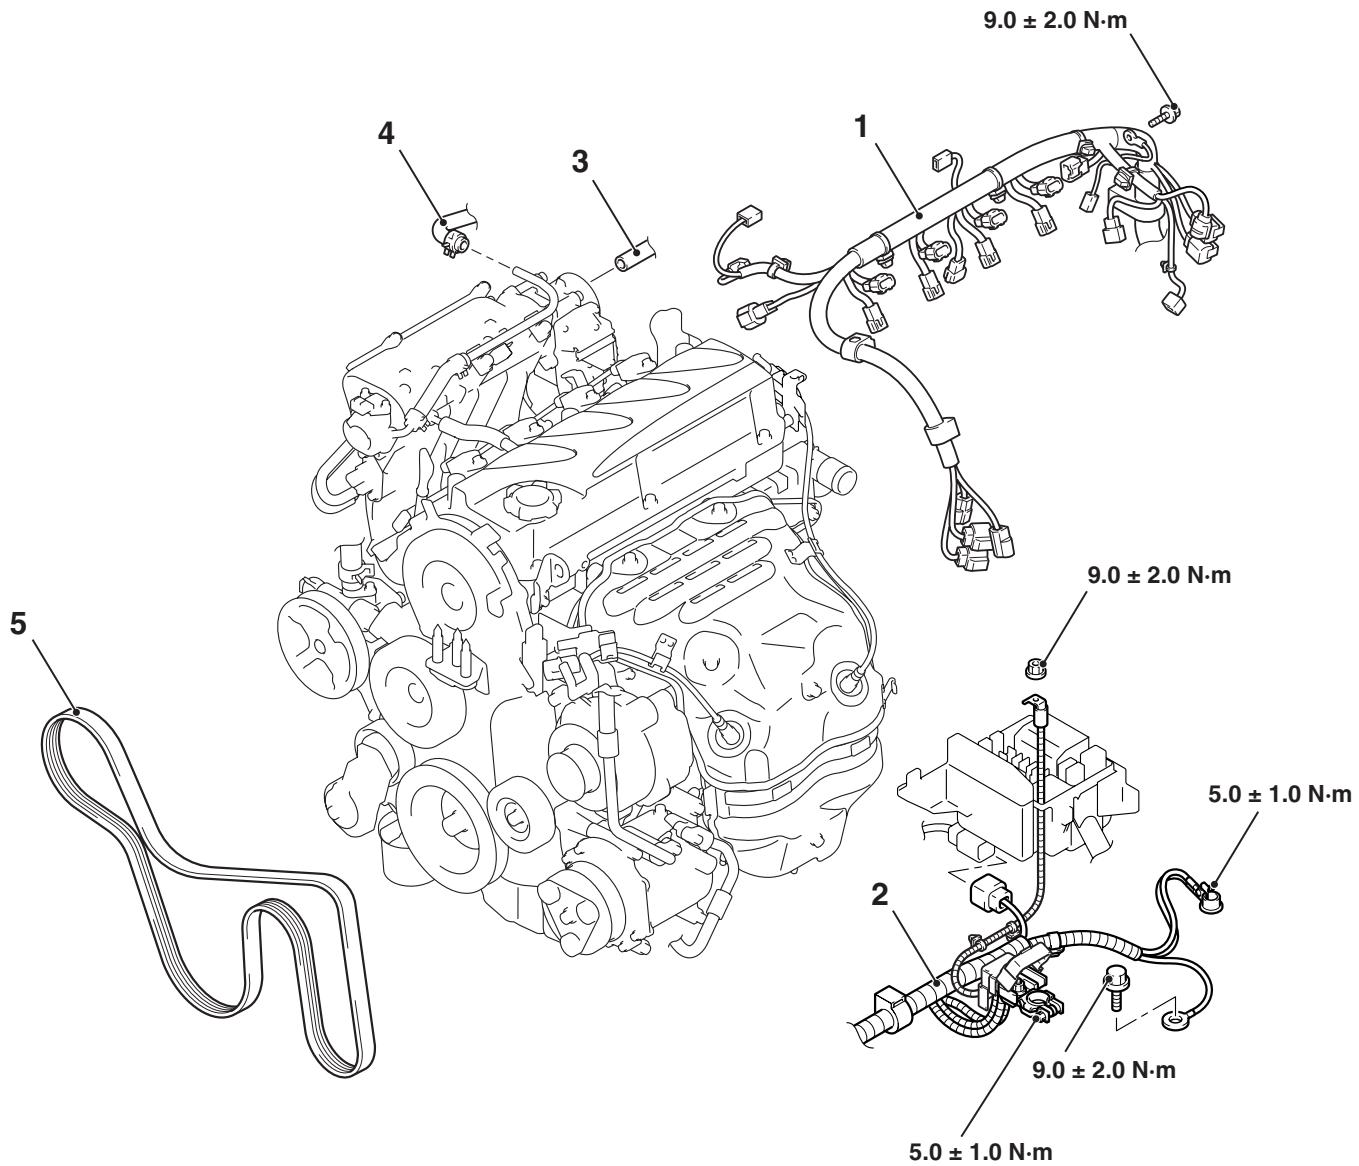

AC308985AB


**Removal steps**

1. Control wiring harness connection
2. Battery wiring harness connection
3. Canister vacuum hose connection

&lt;&lt;A&gt;&gt;

**Removal steps (Continued)**

4. Brake booster vacuum hose connection
5. Drive belt

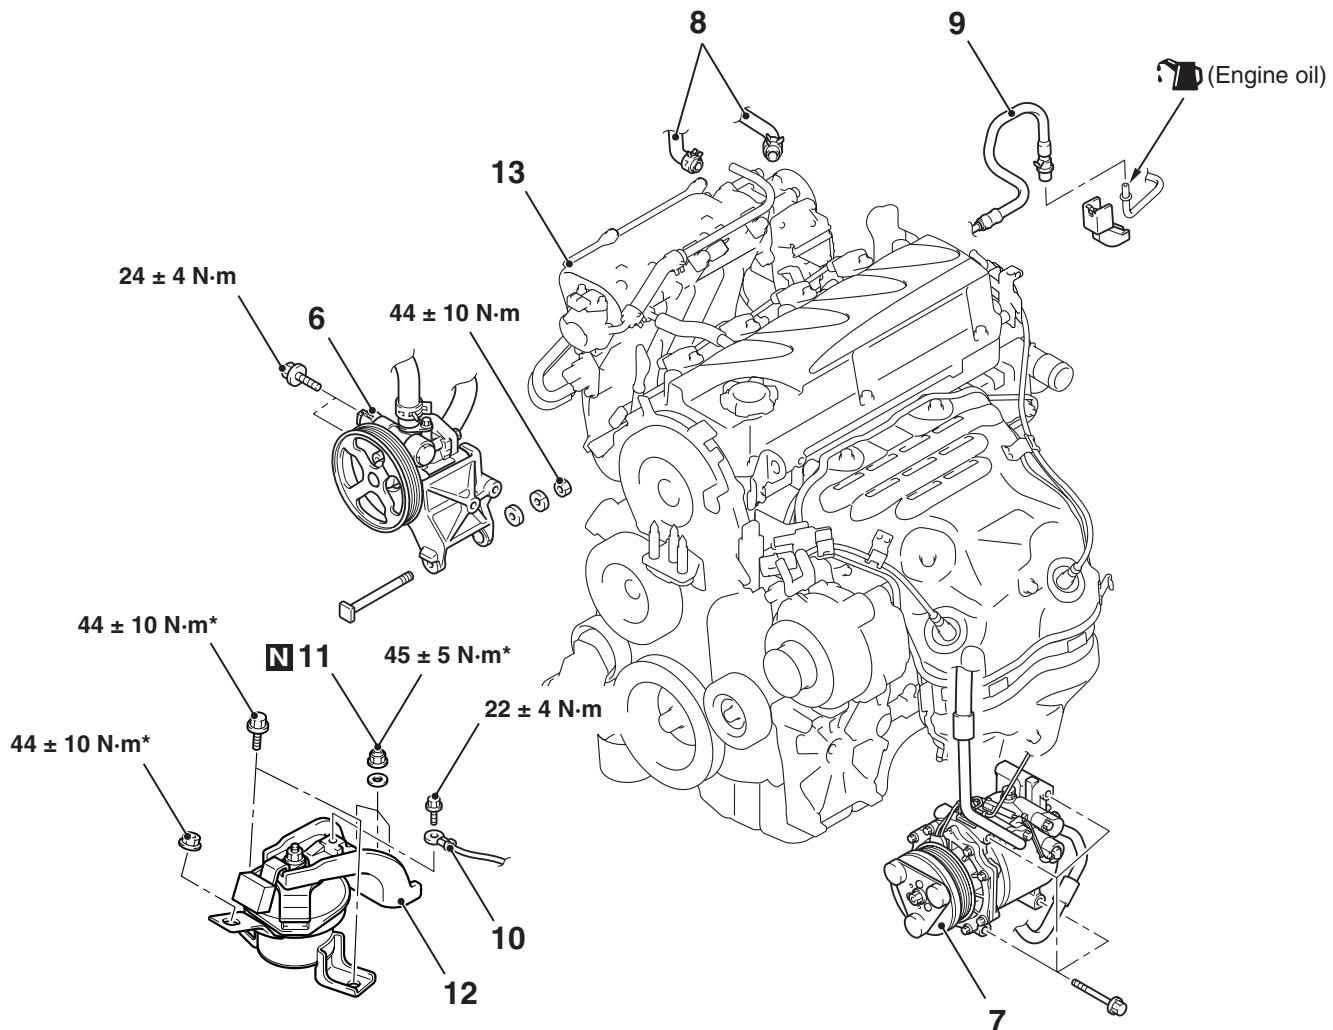

AC308986AB

**Removal steps**


- <<B>> 6. Power steering oil pump and bracket assembly
- <<C>> 7. A/C compressor and clutch assembly
- <<D>> >>E<< 8. Heater water hoses connection
- <<E>> >>D<< 9. Fuel high-pressure hose connection

**Removal steps (Continued)**

- <<E>> >>D<< • Transmission assembly
- <<F>> >>C<< 10. Earth cable connection
- <<G>> >>B<< 11. Self-locking nuts
- <<G>> >>A<< 12. Engine mounting insulator
- 13. Engine assembly

**REMOVAL SERVICE POINTS****<<A>> DRIVE BELT REMOVAL**


The following operations will be needed due to the introduction of the serpentine drive system with the drive belt auto-tensioner.

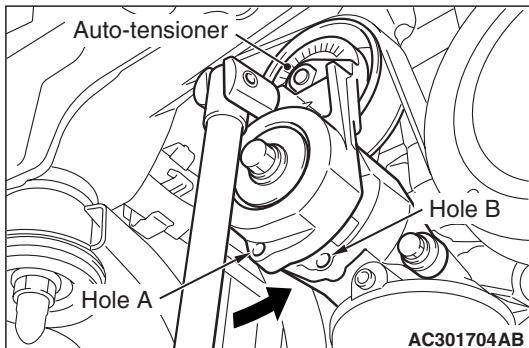

1. Securely insert the spindle handle or ratchet handle with a 12.7 mm insertion angle into the jig hole of the auto-tensioner.
2. Rotate the auto-tensioner anti-clockwise and align hole A with hole B.

**CAUTION**

To reuse the drive belt, draw an arrow indicating the rotating direction (clockwise) on the back of the belt using chalk, etc.

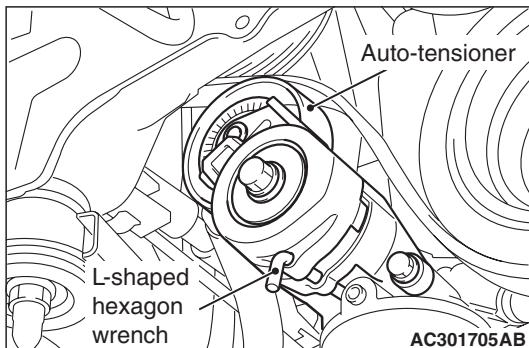

3. Insert an L-shaped hexagon wrench, etc. into the hole to fix and then remove the drive belt.

**<<B>> POWER STEERING OIL PUMP AND BRACKET ASSEMBLY REMOVAL**


With the hose installed, remove the power steering oil pump and bracket assembly from the engine assembly.

*NOTE: After removing the power steering oil pump and bracket assembly, secure it with a cord in the location where the removal and installation of the engine assembly cannot be hindered.*


**<<C>> A/C COMPRESSOR AND CLUTCH ASSEMBLY REMOVAL**

With the hose installed, remove the A/C compressor and clutch assembly from the bracket.

*NOTE: After removing the A/C compressor and clutch assembly, secure it with a cord in the location where the removal and installation of the engine assembly cannot be hindered.*

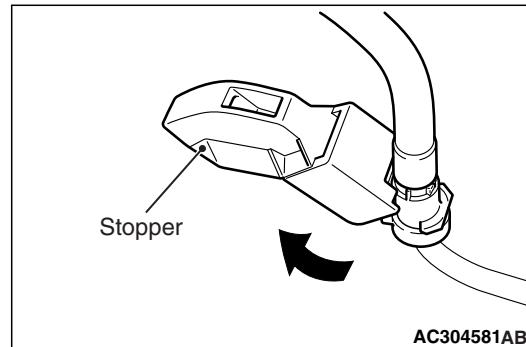**<<D>> FUEL HIGH-PRESSURE HOSE REMOVAL**


1. Remove the fuel high-pressure hose stopper.

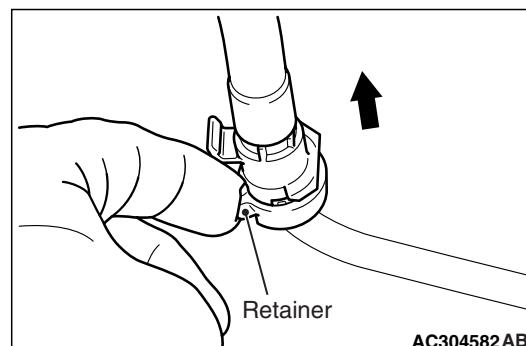

2. Remove the fuel high-pressure hose in the direction shown in the figure while the retainer is pulled up.


*NOTE: If the retainer is released, install it after removing the fuel high-pressure hose.*

**<<E>> TRANSMISSION ASSEMBLY  
REMOVAL**

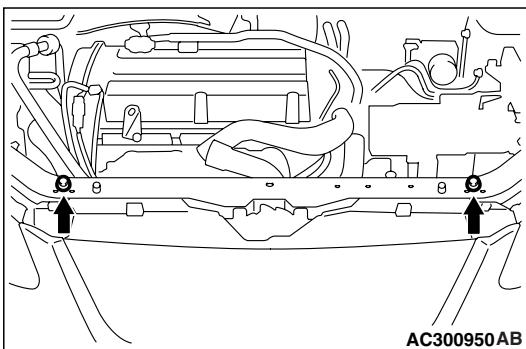

1. Pre-tighten the 2 bolts on the car to assemble the radiator support upper insulator to set special tool engine hanger MB991895 or engine hanger MB991928.

**CAUTION**

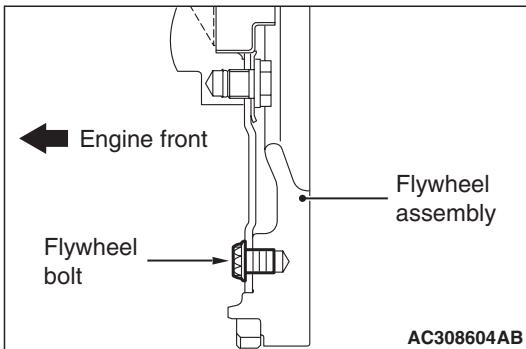


**M/T: Do not remove the flywheel bolt. If this bolt is removed, the flywheel assembly will become out of balance and damaged.**

2. Remove the transmission assembly (M/T: Refer to GROUP 22A, Transmission Assembly [P.22A-14](#), A/T: Refer to GROUP 23A, Transmission Assembly [P.23A-147](#)).


**<<F>> ENGINE MOUNTING INSULATOR  
REMOVAL**

1. Support the engine with a garage jack.
2. Remove the following special tool.

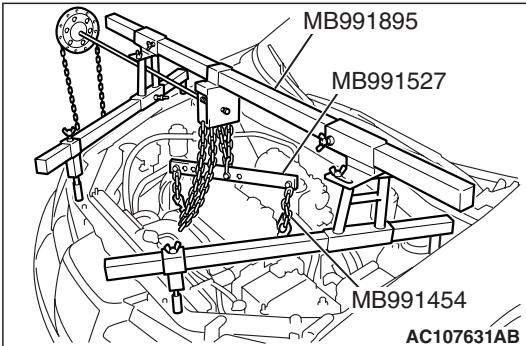


- (1) <Special tool engine hanger (MB991895) is used>

Remove special tool MB991895.

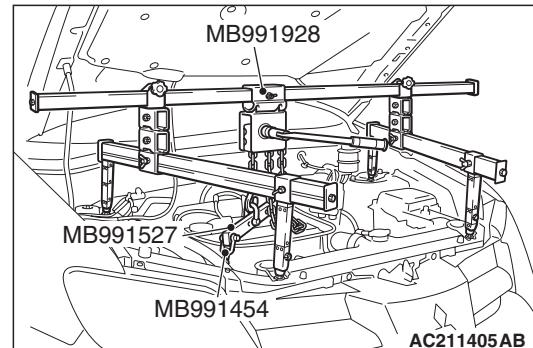

- (2) <Special tool engine hanger (MB991928) is used>

Remove special tool MB991928.

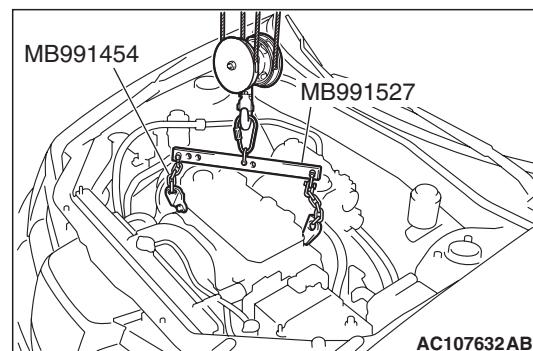


3. Hold the engine assembly with a chain block, etc.
4. Place a garage jack against the engine oil pan with a piece of wood in between so that the weight of the engine assembly is no longer being applied to the engine mounting insulator.
5. Loosen the engine mounting insulator mounting nuts and bolts, and remove the engine mounting insulator.

**<<G>> ENGINE ASSEMBLY REMOVAL**

After checking that all cables, hoses and wiring harness connectors and so on are disconnected from the engine, lift the chain block slowly to remove the engine assembly upward from the engine compartment.

## INSTALLATION SERVICE POINTS


### >>A<< ENGINE ASSEMBLY INSTALLATION

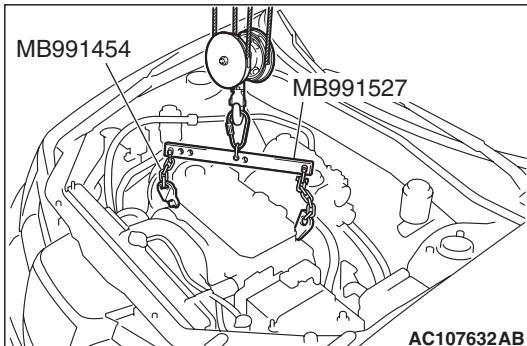

Install the engine assembly, being careful not to pinch the cables, hoses or wiring harness connectors.


### >>B<< ENGINE MOUNTING INSULATOR INSTALLATION

1. Place a garage jack against the engine oil pan with a piece of wood in between, and install the engine mounting insulator while adjusting the position of the engine.
2. Support the engine assembly with a garage jack.
3. Remove the chain block.
4. Use the following special tool as during removal to support the engine.

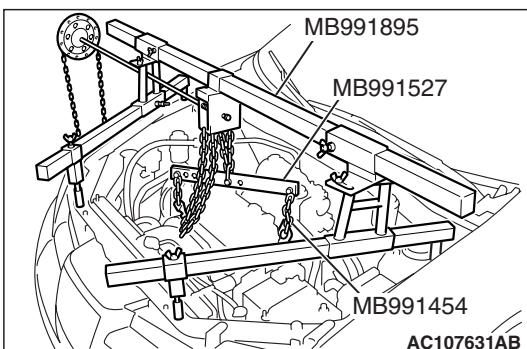

(1) <Special tool engine hanger (MB991895) is used>

Set special tool MB991895. (M/T: Refer to GROUP 22A, Transmission Assembly [P.22A-14](#), A/T: Refer to GROUP 23A, Transmission Assembly [P.23A-147](#)).

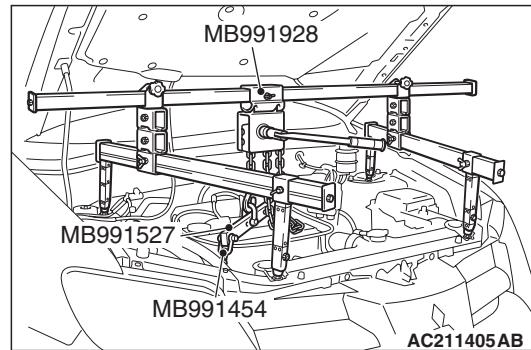

(2) <Special tool engine hanger (MB991928) is used>

Set special tool MB991928. (M/T: Refer to GROUP 22A, Transmission Assembly [P.22A-14](#), A/T: Refer to GROUP 23A, Transmission Assembly [P.23A-147](#)).

### >>C<< SELF-LOCKING NUTS INSTALLATION

#### **CAUTION**


**Do not tighten the self-locking nuts while the engine is hot.**

Tighten the self-locking nuts to the specified torque while the engine is cold.



**Tightening torque:  $45 \pm 5 \text{ N}\cdot\text{m}$**

### >>D<< TRANSMISSION ASSEMBLY INSTALLATION

1. Install the transmission assembly. (M/T: Refer to GROUP 22A, Transmission Assembly [P.22A-14](#), A/T: Refer to GROUP 23A, Transmission Assembly [P.23A-147](#)).

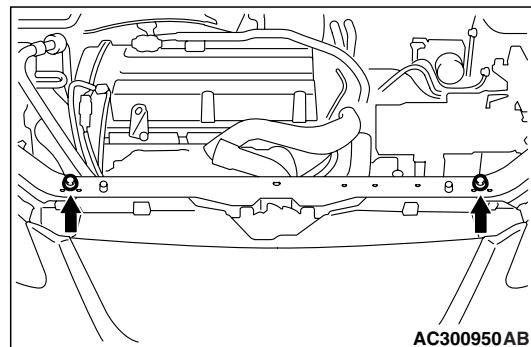

2. Remove from the car the two bolts, to assemble the radiator support upper insulator.
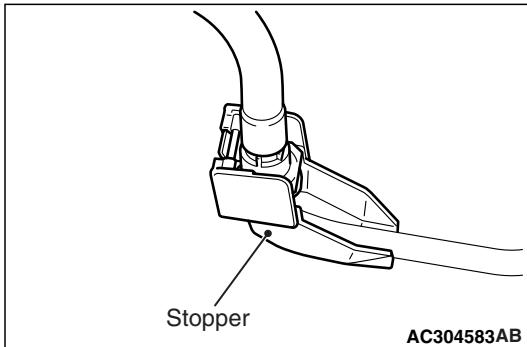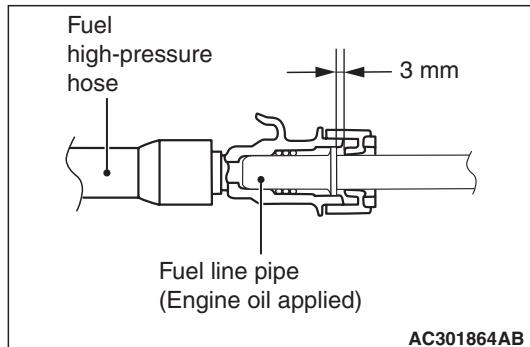
>>E<< FUEL HIGH-PRESSURE HOSE  
INSTALLATION**⚠ CAUTION**

**After connecting the fuel high-pressure hose, slightly pull it to ensure that it is installed securely. Also confirm that there is a play approximately 3 mm. Then install the stopper securely.**

Apply a small amount of engine oil to the fuel line pipe and then install the fuel high-pressure hose.

---

**NOTES**