

SECTION BF**CONTENTS**

GENERAL SERVICING (Including all clip & fastener for Z31)	BF- 2
BODY END AND DOOR (Including "Opener" and "Power window" And also including wiring diagram)	BF- 7
INSTRUMENT (Including "Center console")	BF-16
SEAT (Including "Power seat" and wiring diagram)	BF-17
SEAT BELT	BF-28
INTERIOR AND EXTERIOR	BF-29
WINDSHIELD AND WINDOWS	BF-36
T-BAR ROOF	BF-41
MIRROR (Including wiring diagram)	BF-42
REAR AIR SPOILER	BF-43
REAR COMBINATION LAMP	BF-44
BODY ALIGNMENT — Engine compartment & Underbody (Including the actual dimensions between the points and the coordinates of the points)	BF-45

- For theft warning system, refer to EL section.
- ★ For seat belts, refer to MA section.
- ★ Method of reading electrical diagram in BF section is basically the same as in the EL section.
So refer to "HOW TO READ DIAGRAM" in EL section.
- ★ For power supply routing, refer to "POWER SUPPLY" in EL section.
- Black box internal circuits in BF section are a summary of actual circuit
Use only for studying the operation.
- "Remarks" and "Connections" in electrical diagram show the terminal meaning and actual electrical flow.
- For connector Nos. in wiring diagrams in this section, refer to Harness Layout in EL section











GENERAL SERVICING

Precautions

- When removing or installing various parts, place a cloth or padding onto the vehicle body to prevent scratches
- Handle trim, molding, instruments, grille, etc carefully during removing or installation. Be careful not to soil or damage them
- Apply sealing compound where necessary while installing parts.
- When applying sealing compound, be careful that the sealing compound does not protrude from parts
- When replacing any metal parts (for example body outer panel, members, etc), be sure to take rust prevention measures














Clip and Fastener

- Clips and fasteners in BF section correspond to the following numbers and symbols

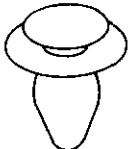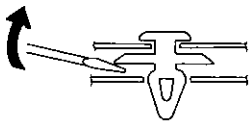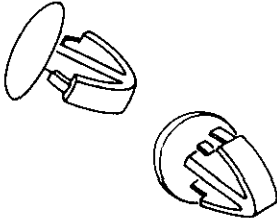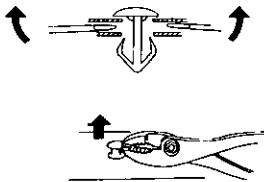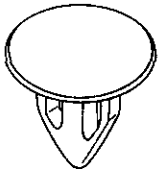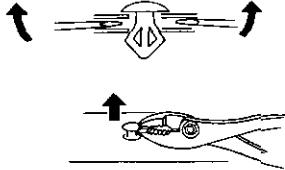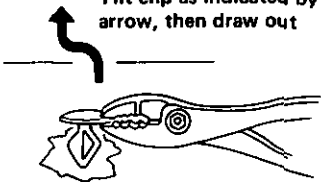No	Symbol	Shape	Removal & Installation
C101	 SBF092B	 SBF109B	Removal Remove by bending up with a flat-bladed screwdriver  SBF094B
C103	 SBF110B	 SBF111B	Removal Remove with a flat-bladed screwdrivers or plier  SBF112B
C104	 SBF358B	 SBF359B	Removal Remove with a flat-bladed screwdrivers or plier  SBF360B
C105	 SBF141B	 SBF142B	Removal Tilt clip as indicated by arrow, then draw out  SBF143B













GENERAL SERVICING

Clip and Fastener (Cont'd)

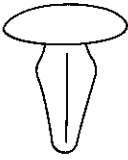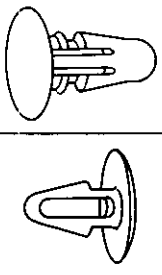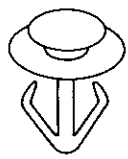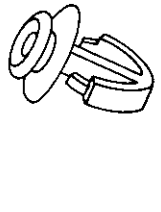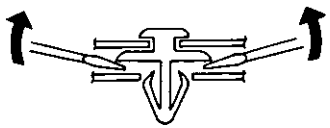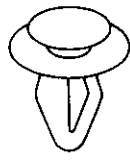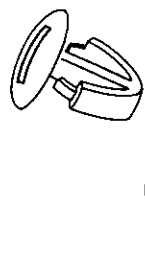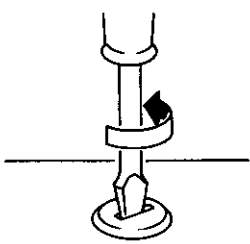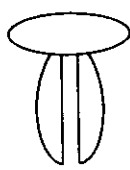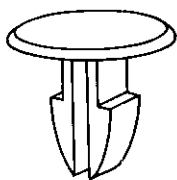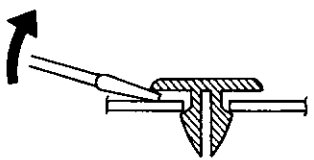No	Symbol	Shape	Removal & Installation
C106	 SBF089B	  SBF090B	Removal Remove with a flat-bladed screwdrivers or plier   SBF091B
C107	 SBF365B	 SBF366B	Removal Remove by bending up with flat-bladed screwdrivers.  SBF367B
C108	 SBF564B	 SBF565B	Removal Remove by bending up with a flat-bladed screwdriver  SBF566B
C111	 SBF605C	 SBF606C	 SBF625C
C113	 SBF583D	 SBF584D	Removal. Remove by bending up with a flat-bladed screwdriver  SBF585D











GENERAL SERVICING

Clip and Fastener (Cont'd)

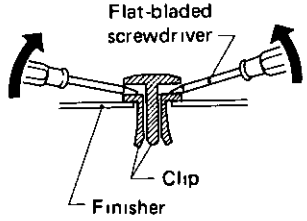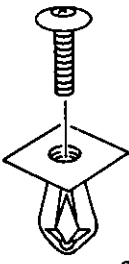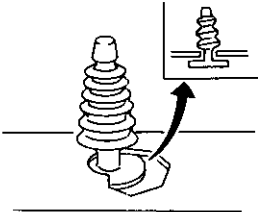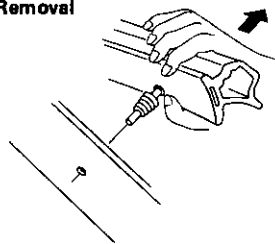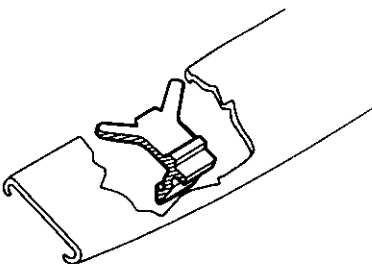No	Symbol	Shape	Removal & Installation
C205	 SBF636C	 SBF637C	Removal  SBF638C
CS102	 SBF138B	 SBF139B	Removal Screw out with a Phillips screwdriver
CS105	 SBF374B	 SBF375B	 SBF140B
CE103	 SBF103B	 SBF104B	Removal  SBF147B
CE106	 SBF653B		Removal Type 1 Clip Molding ② Then bend up ① Push SBF654B Type 2 Clip Cutter Molding Remove molding by cutting off the clip SBF914B








GENERAL SERVICING

Clip and Fastener (Cont'd)

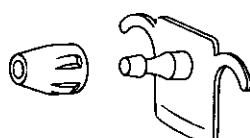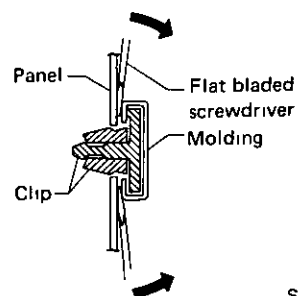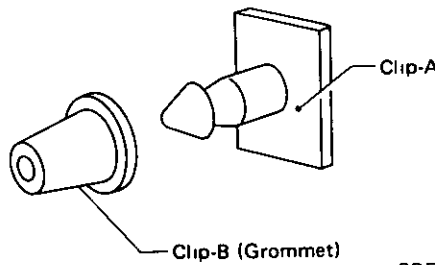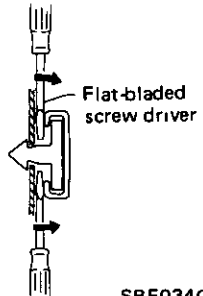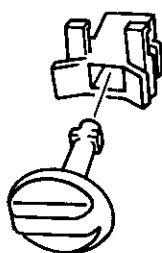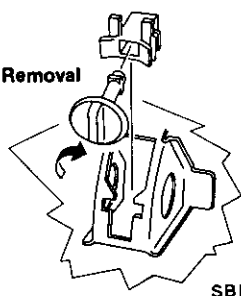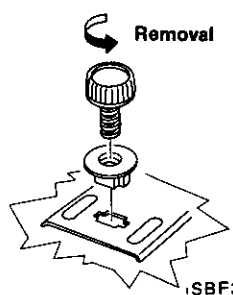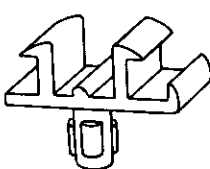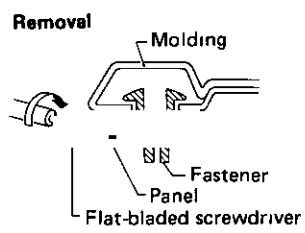No	Symbol	Shape	Removal & Installation
CE107	 SBF765B	 SBF766B	 SBF767B
CE110	 SBF032C		 SBF034C
CF104	 SBF368B	 SBF369B	 SBF370B
CF105	 SBF371B	 SBF372B	 SBF373B
CF106	 SBF411B		 SBF412B

GENERAL SERVICING

Clip and Fastener (Cont'd)

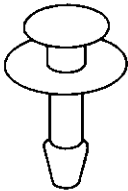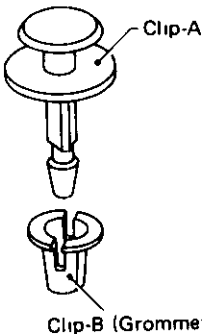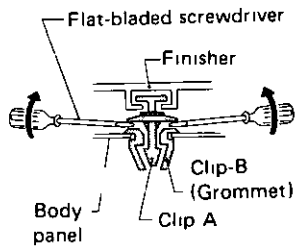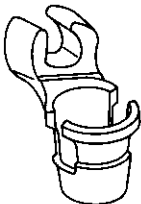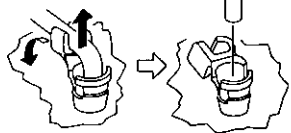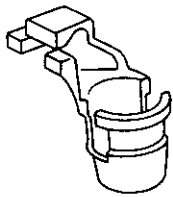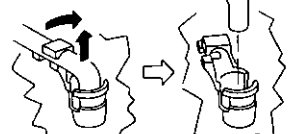No	Symbol	Shape	Removal & Installation
CF113	 SBF035C	 SBF036C Clip-A Clip-B (Grommet)	Removal  SBF652B
CR101	 SBF106B		Removal Holder portion of clip must be spread out to remove rod  SBF146B
CR103	 SBF768B		Removal Holder portion of clip must be spread out to remove rod  SBF770B

BODY END AND DOOR

- When removing and installing hood or back door, place a cloth or other padding on hood or back door corners to avoid scratching vehicle body
- When removing clip or fastener, refer to CLIP & FASTENER
- Apply sealing compound where necessary when installing parts

Front End

- Hood adjustment Adjust at hinge portion
- Hood lock adjustment After adjusting, check hood lock control operation Apply a coat of grease to hood locks engaging mechanism
- Hood opener Do not attempt to bend cable forcibly Doing so increases effort required to unlock hood
- Bumper fascia It is made of plastic, so do not use excessive force and take care to keep oil away from it
- When adjusting or removing/installing hood or removing/installing hood switch, check theft warning system operation

WARNING:

- a. Be careful not to scratch hood stay when installing hood. A scratched stay may cause gas leakage.
- b. The contents of the hood stay and bumper shock absorber are under pressure Do not take apart, puncture, apply heat or allow fire near it

Bumper shock absorber inspection

- 1 Check shock absorber for oil leakage, cracks or deformation
- 2 Function of shock absorber,
 - (1) Place vehicle in front of a wall
Apply parking brake and place tire stoppers securely
 - (2) Place a jack between bumper and wall, jack is positioned squarely with bumper directly in line with shock absorber to be checked.
 - (3) Apply pressure to compress shock absorber at least 100 mm (0.394 in)

Use a jack with capacity of more than 600 kg (1,323 lb).

- (4) Make sure bumper returns to its original position when jack is retracted Replace if necessary

CAUTION:

It is not recommended to confirm proper installation by driving into walls or other barriers as this could cause personal injury or damage to the vehicle.

When replacing shock absorbers, make sure they are of the same type and rating, and manufactured by the same maker

BODY END AND DOOR

Front End (Cont'd)


Hood lock adjustment

- Adjust lock so that hood primary lock meshes at a position where hood is 1 mm (0.039 in) lower than fender
- After hood lock adjustment, adjust bumper rubber
- When securing hood lock, ensure it does not tilt. Striker must be positioned at the center of hood primary lock
- After adjustment, ensure that hood primary and secondary lock operate properly


Bumper rubber adjustment

Deflection is approx 2 mm (0.08 in)

Bumper rubber free height 14.4 mm (0.567 in) Front
13.4 mm (0.528 in) Rear

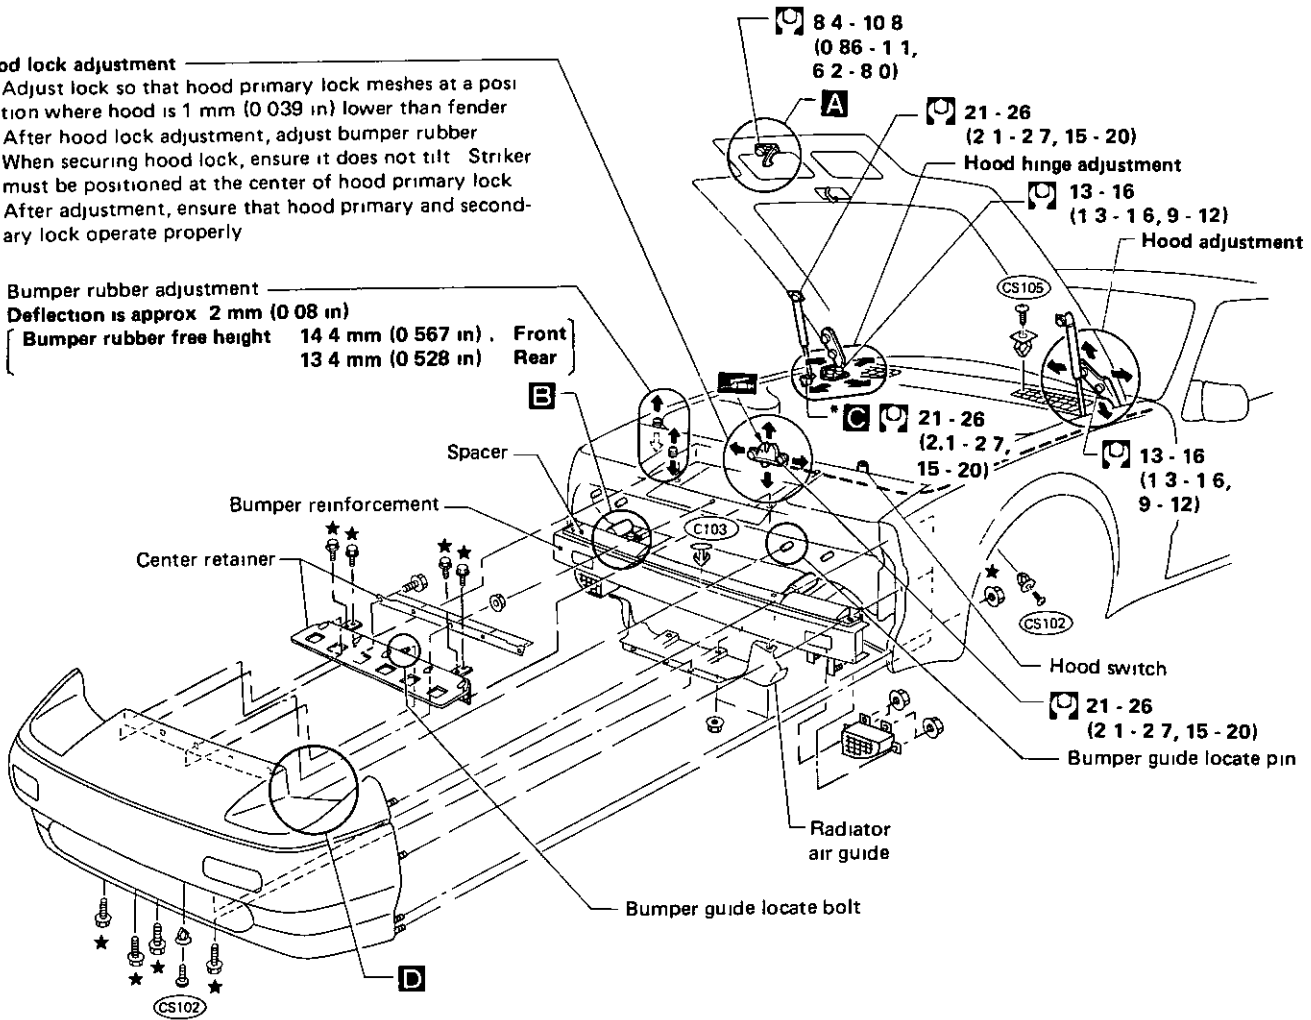


A Secondary latch hooking length

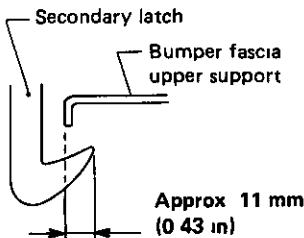


Bumper height "X"

	2 seater	2 + 2 seater
Turbocharger model	370.7 - 420.7 mm (14.59 - 16.56 in)	373.6 - 423.6 mm (14.71 - 16.68 in)
Non-turbocharger model	369.3 - 419.3 mm (14.54 - 16.51 in)	372.7 - 422.7 mm (14.67 - 16.64 in)


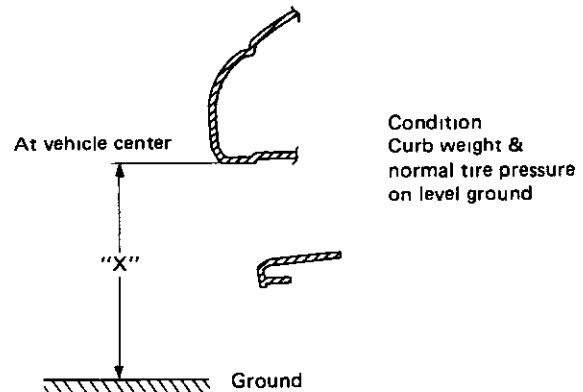


BODY END AND DOOR

Front End (Cont'd)

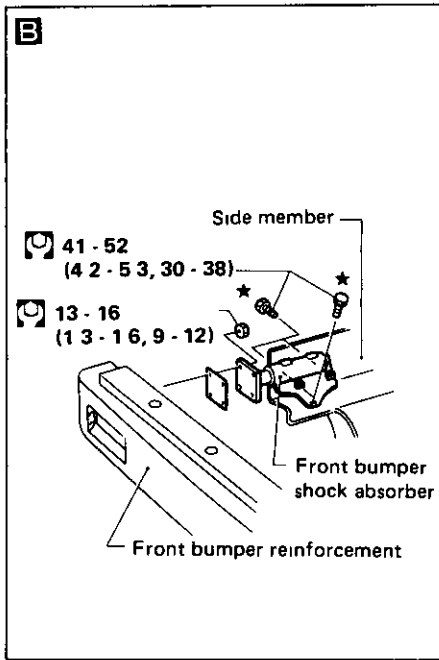

* Hood stay
When removing/installing hood stay lower mounting (at stay-body portion), be careful not to drop collar

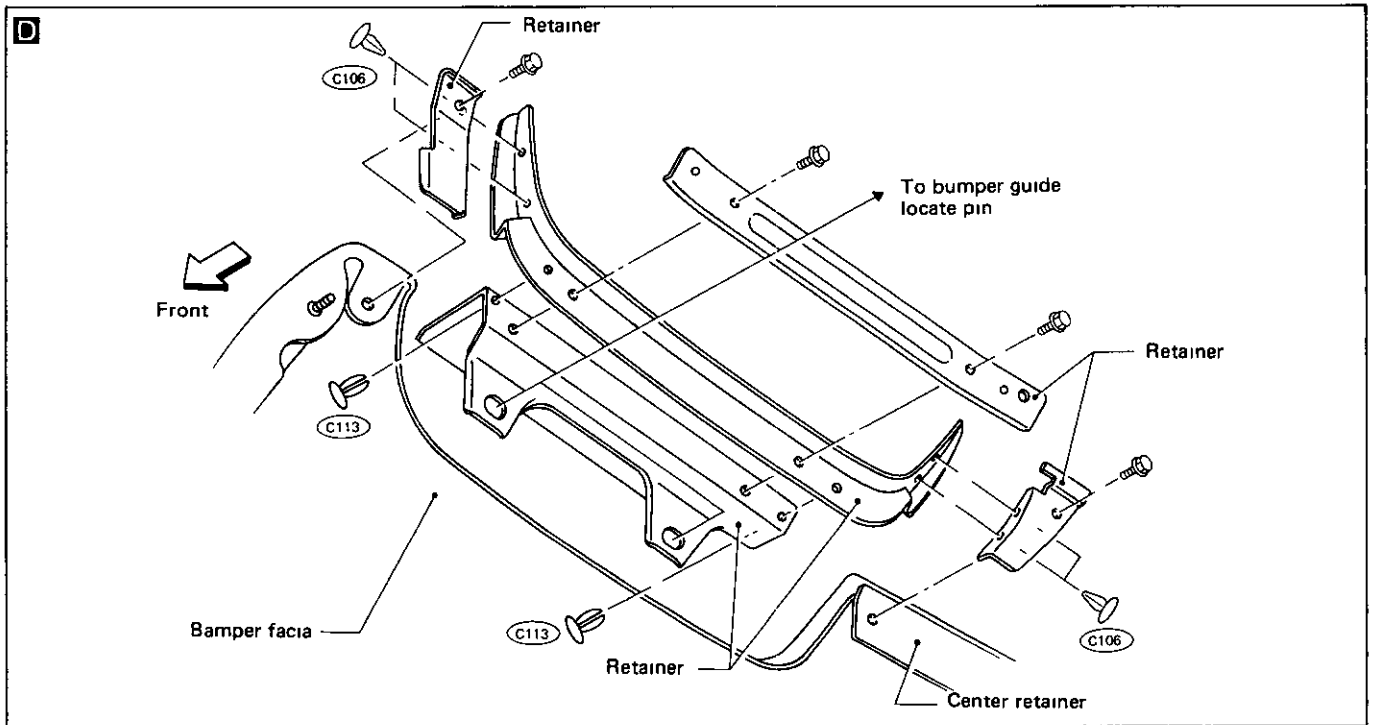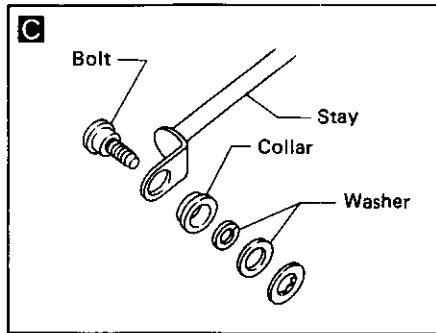

Grease-up point
N m (kg-m, ft-lb)
★ Bumper assembly mounting bolts

SBF470D


BODY END AND DOOR

Rear End

- Back door adjustment Adjust at hinge for proper back door fit
- Lock. Adjust lock so that it is in the center of the striker After adjusting, check back door lock operation.
- Bumper fascia It is made of plastic, so do not use excessive force and take care to keep oil away from it.
- When adjusting or removing/installing back door or removing/installing back door lock system, check theft warning system operation
- Bumper shock absorber inspection It's the same as front bumper Refer to "Front End"




WARNING:

- a. Be careful not to scratch back door stay when installing back door. A scratched stay may cause gas leakage.
- b. The contents of the back door stay and bumper shock absorber are under pressure. Do not take apart, puncture, apply heat or allow fire near it.

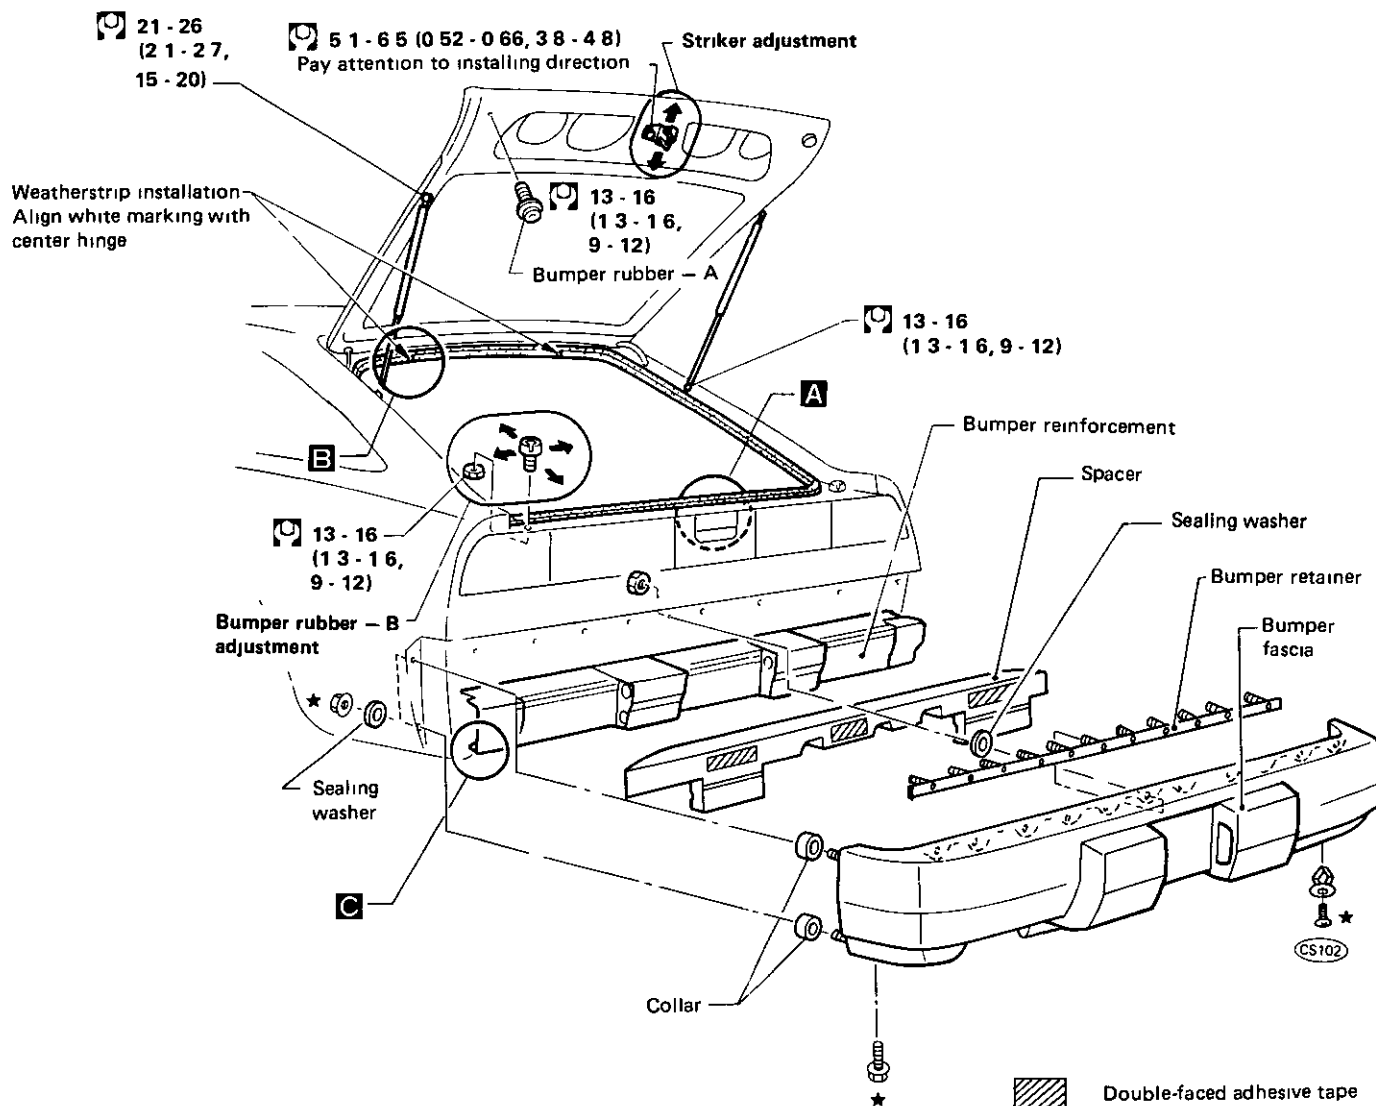


BODY END AND DOOR

Rear End (Cont'd)

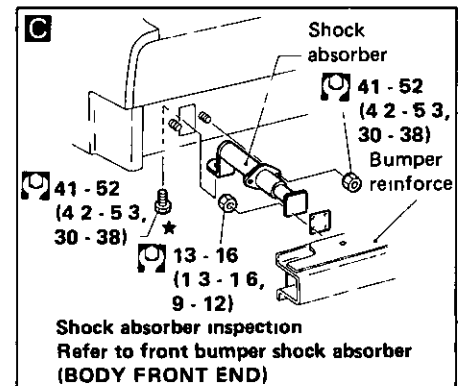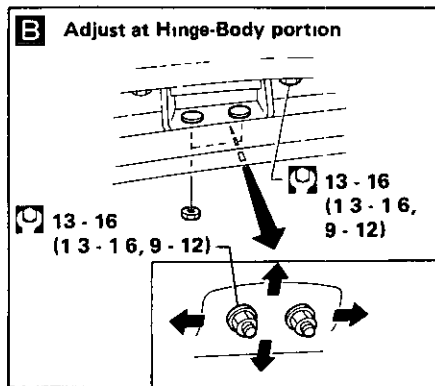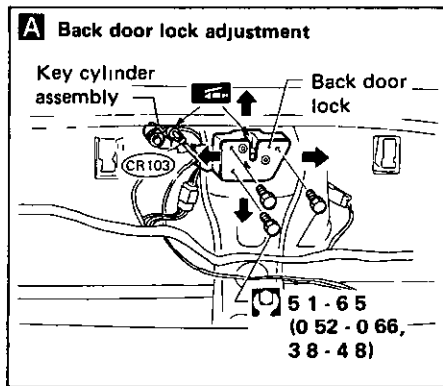

Bumper height "X"

	2 seater	2+2 seater
Turbocharger model	531 9 - 581 9 mm (20 94 - 22 91 in)	528 0 - 578 0 mm (20 79 - 22.76 in)
Non-turbocharger model	539 7 - 589 7 mm (21 25 - 23 22 in)	534 6 - 584 6 mm (21 05 - 23 02 in)

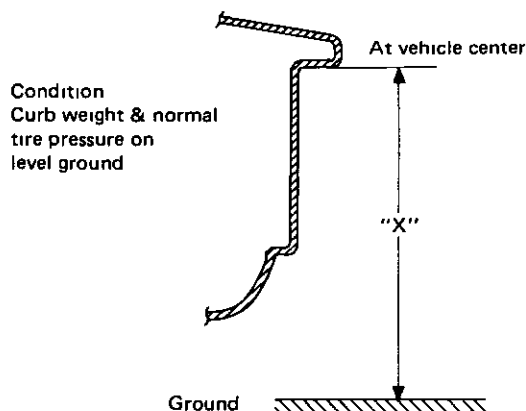






- N m (kg-m, ft-lb)
- Grease-up points
- Bumper assembly mounting bolts and nuts

SBF472D

BODY END AND DOOR

Back Door and Fuel Filler Lid Opener

- Opener cable Do not attempt to bend cable using excessive force
- After installation, make sure that back door and fuel filler lid open smoothly


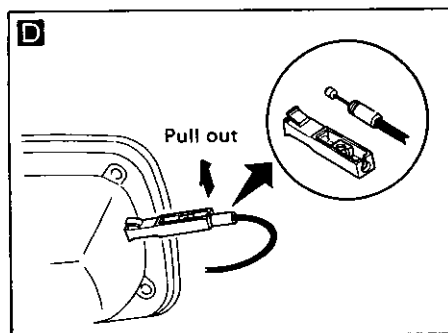
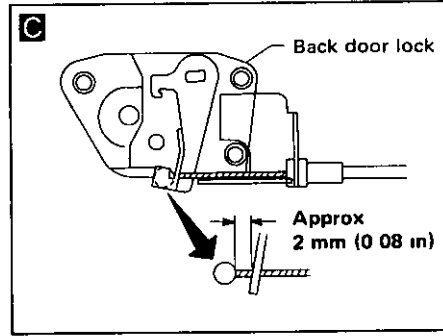
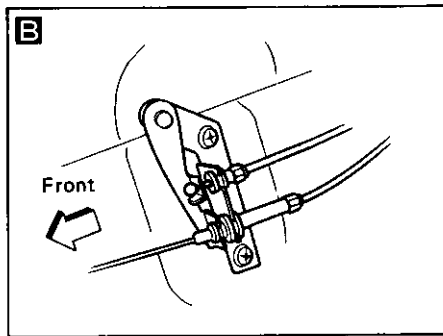
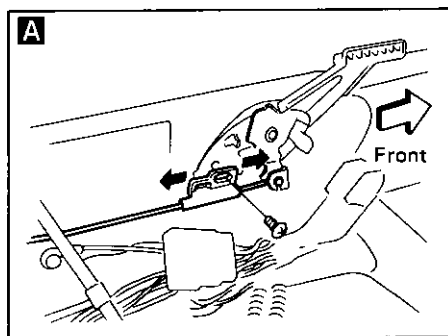
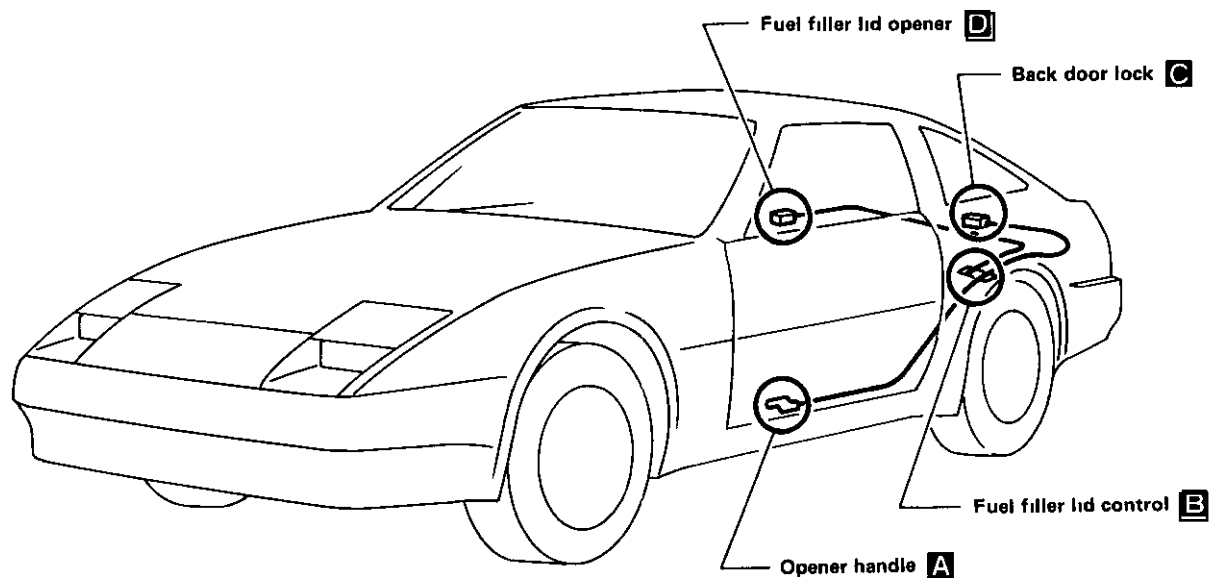


SBF474D

BODY END AND DOOR

Front Door

- After adjusting door or door lock, check door lock operation
- When adjusting or removing/installing door or removing/installing door lock system or door switch, check theft warning system operation.

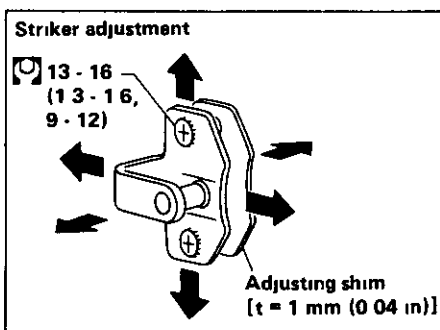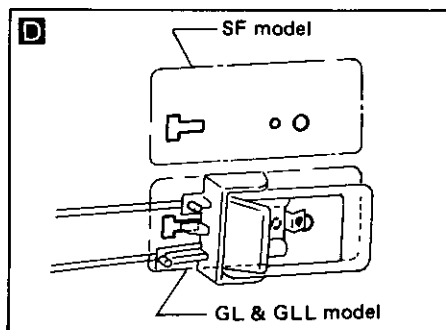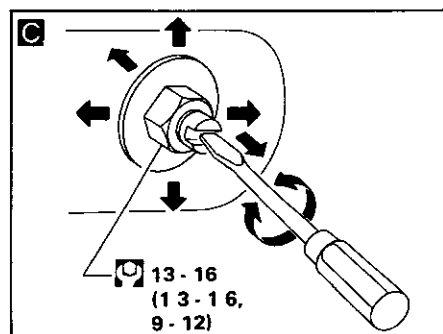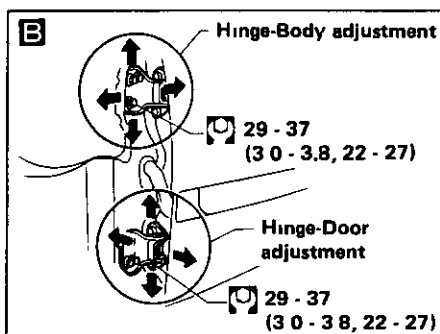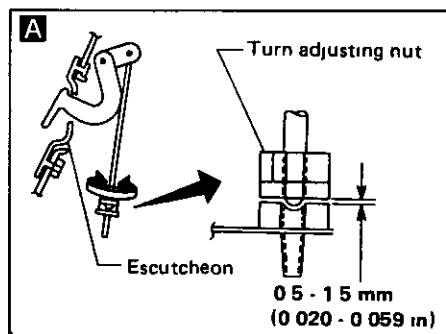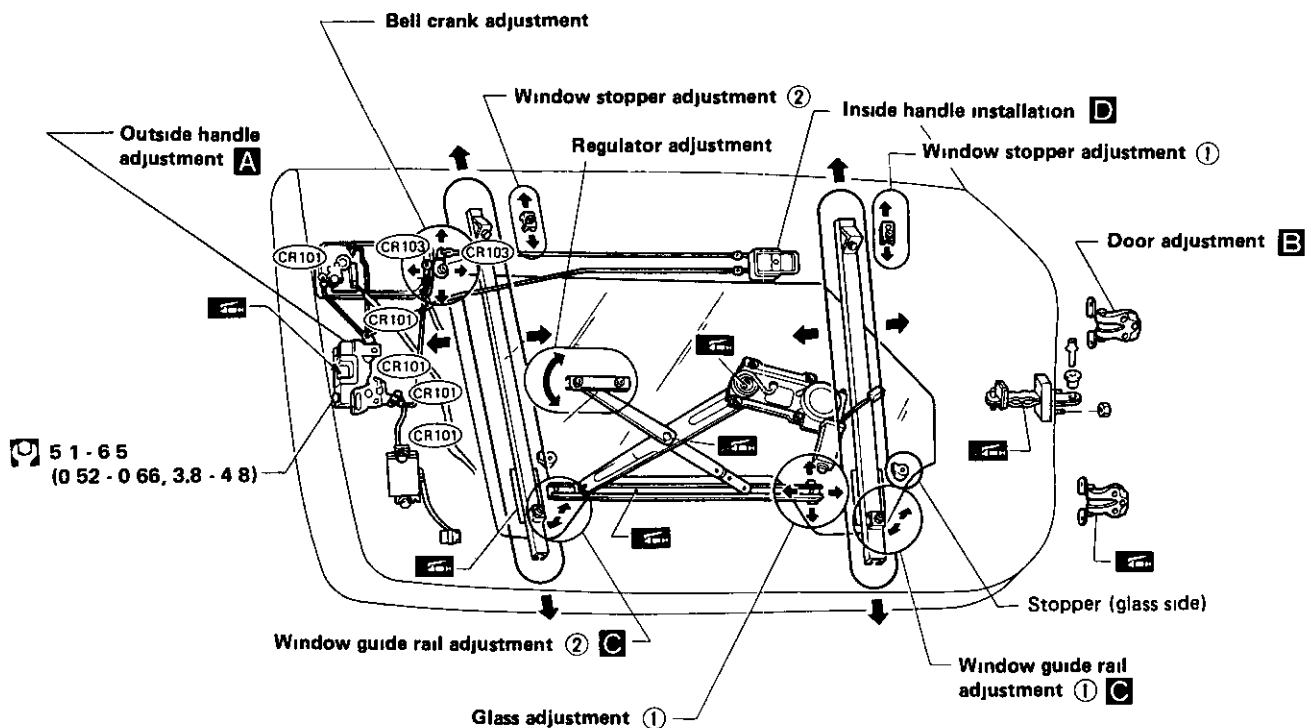

Grease-up points
N m (kg-m, ft-lb)

SBF475D


Front Door (Cont'd)

[illegible]

BODY END AND DOOR

Front Door (Cont'd)


POWER DOOR LOCK/WIRING DIAGRAM

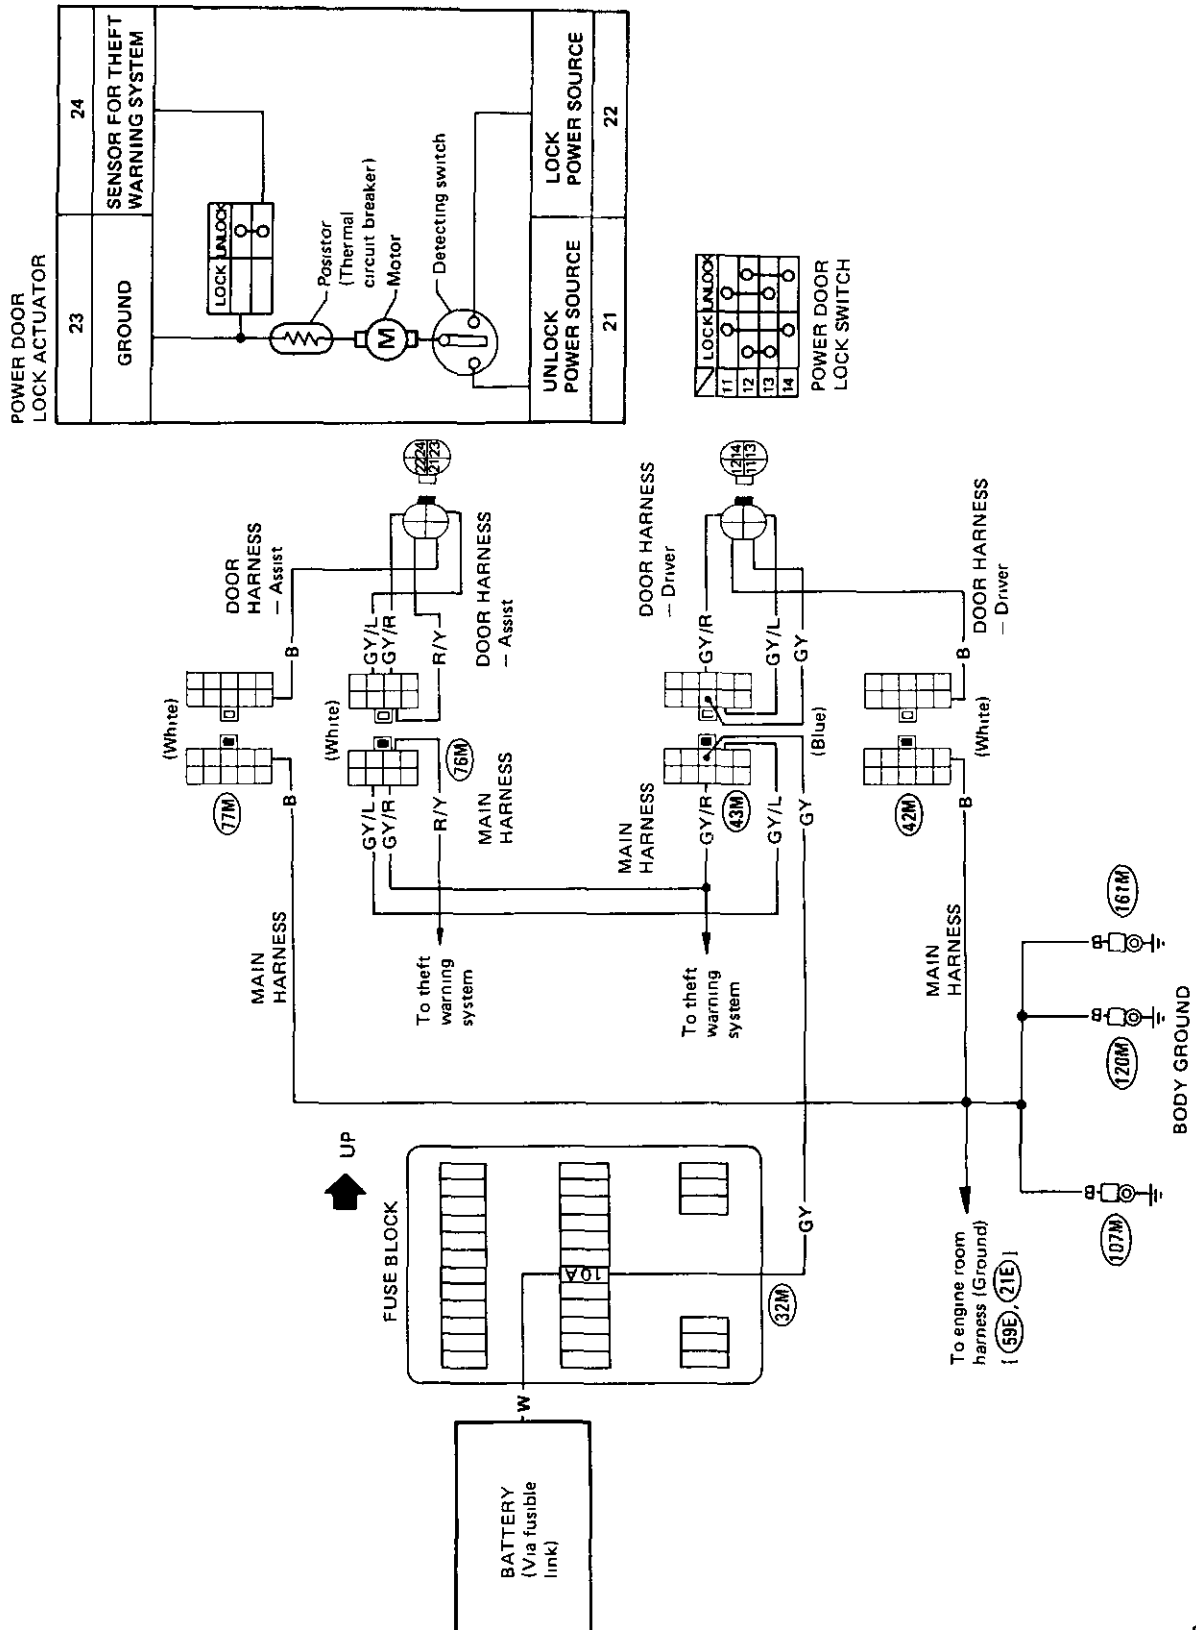


S8F536D

INSTRUMENT


- These parts are made of plastic, so do not use excessive force and be careful not to damage them.
- When you remove instrument assembly, you should remove radio, meter and defroster grille.

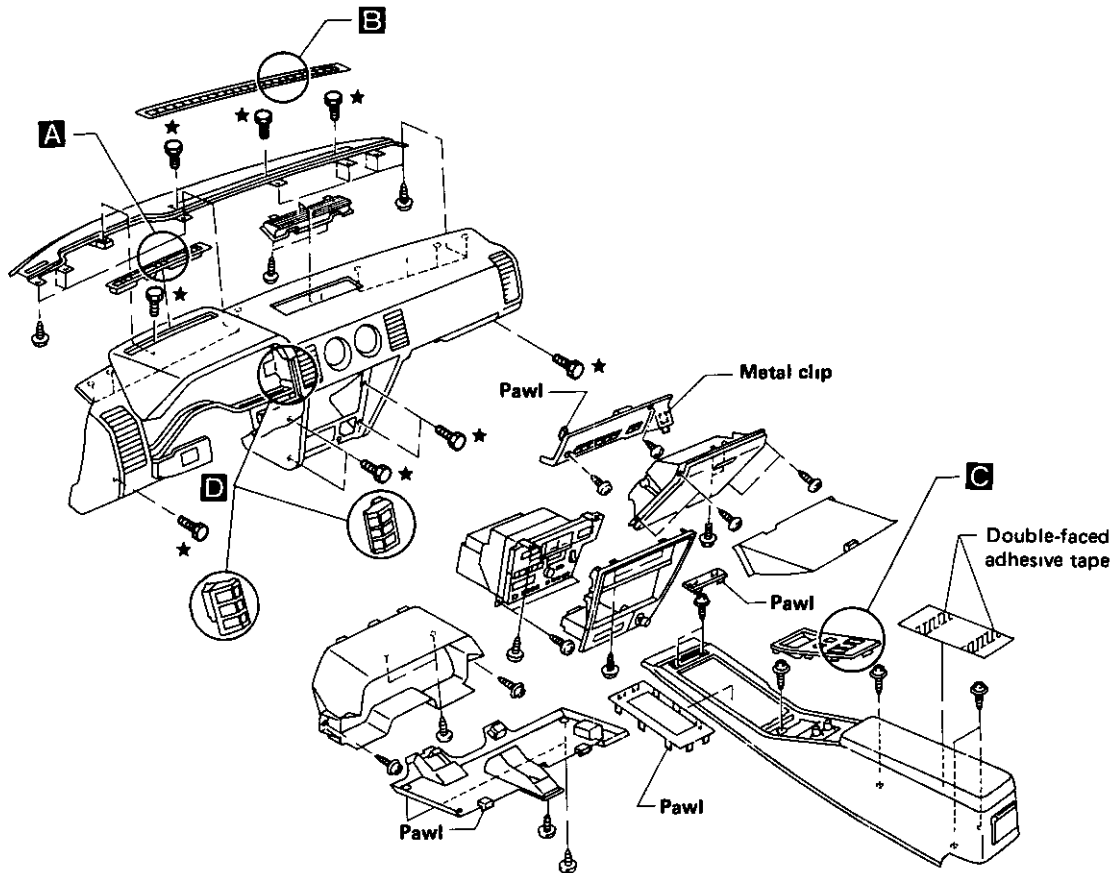


Remove grilles by raising
pawls using flat-bladed
screwdriver

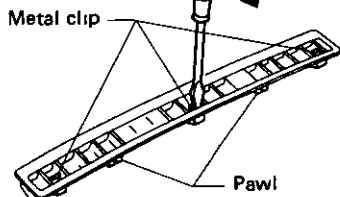


Remove grilles by raising
pawls using flat-bladed
screwdriver

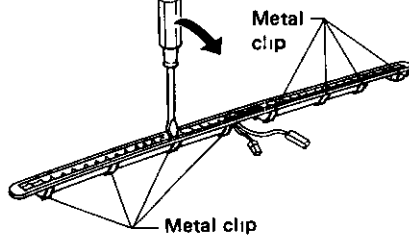

Pawl (eight places)

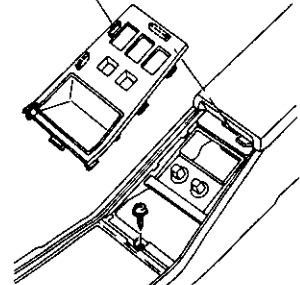

D Removal. Instrument combination switch
(When removing combination meter,
first remove combination switches.)

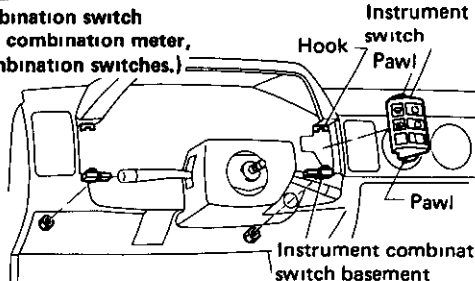

First remove nut securing instrument combination switch basement, then remove instrument combination switch. (Instrument combination switches are secured at hooks and basements.)


• Instrument assembly
mounting screw

SBF478D

SEAT



- When removing or installing the seat trim, carefully handle it to keep dirt out and avoid damage

Front Manual Driver Seat

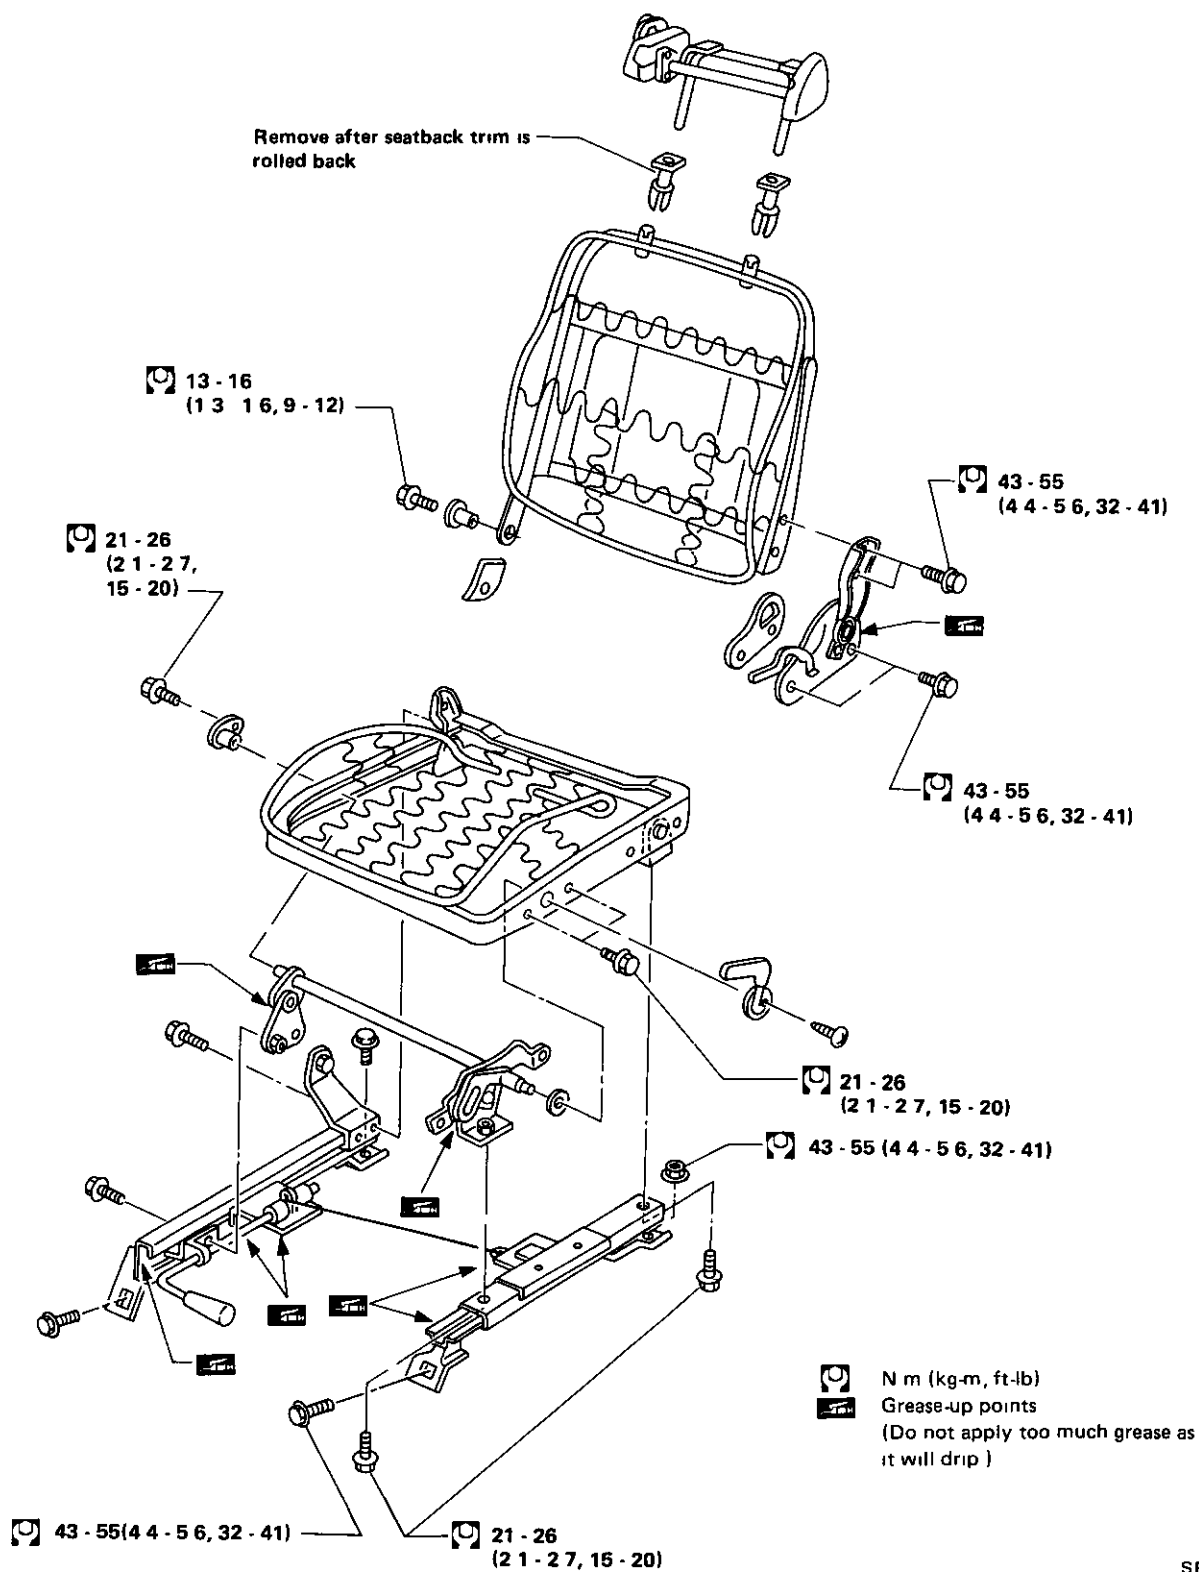**SBF527C**


SEAT

Front Semi Power Driver Seat

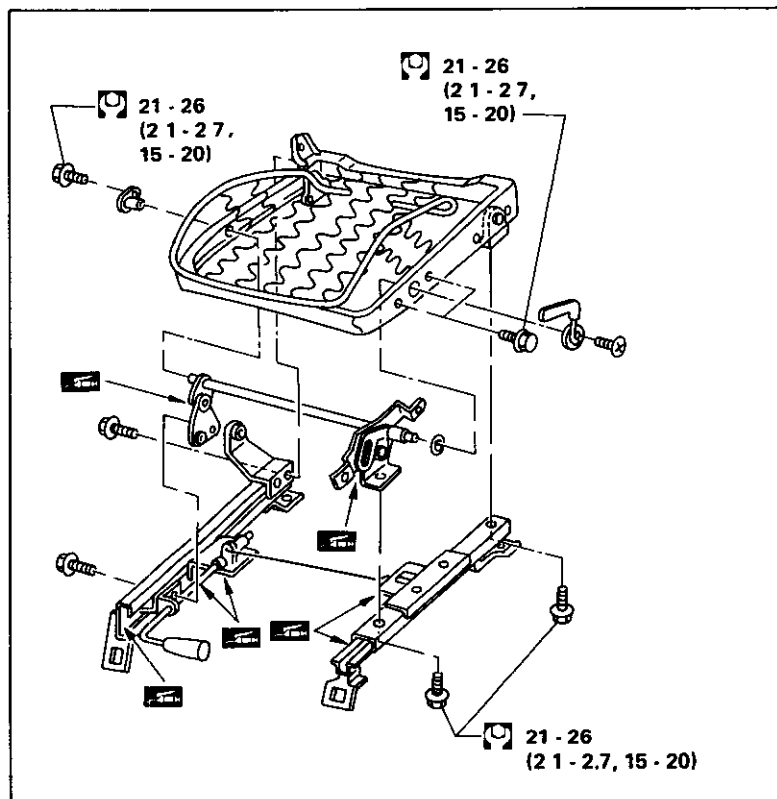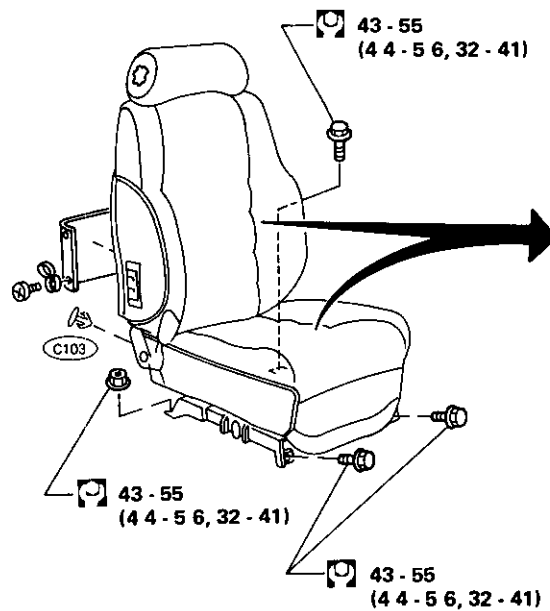

SEAT

Front Semi Power Driver Seat (Cont'd)

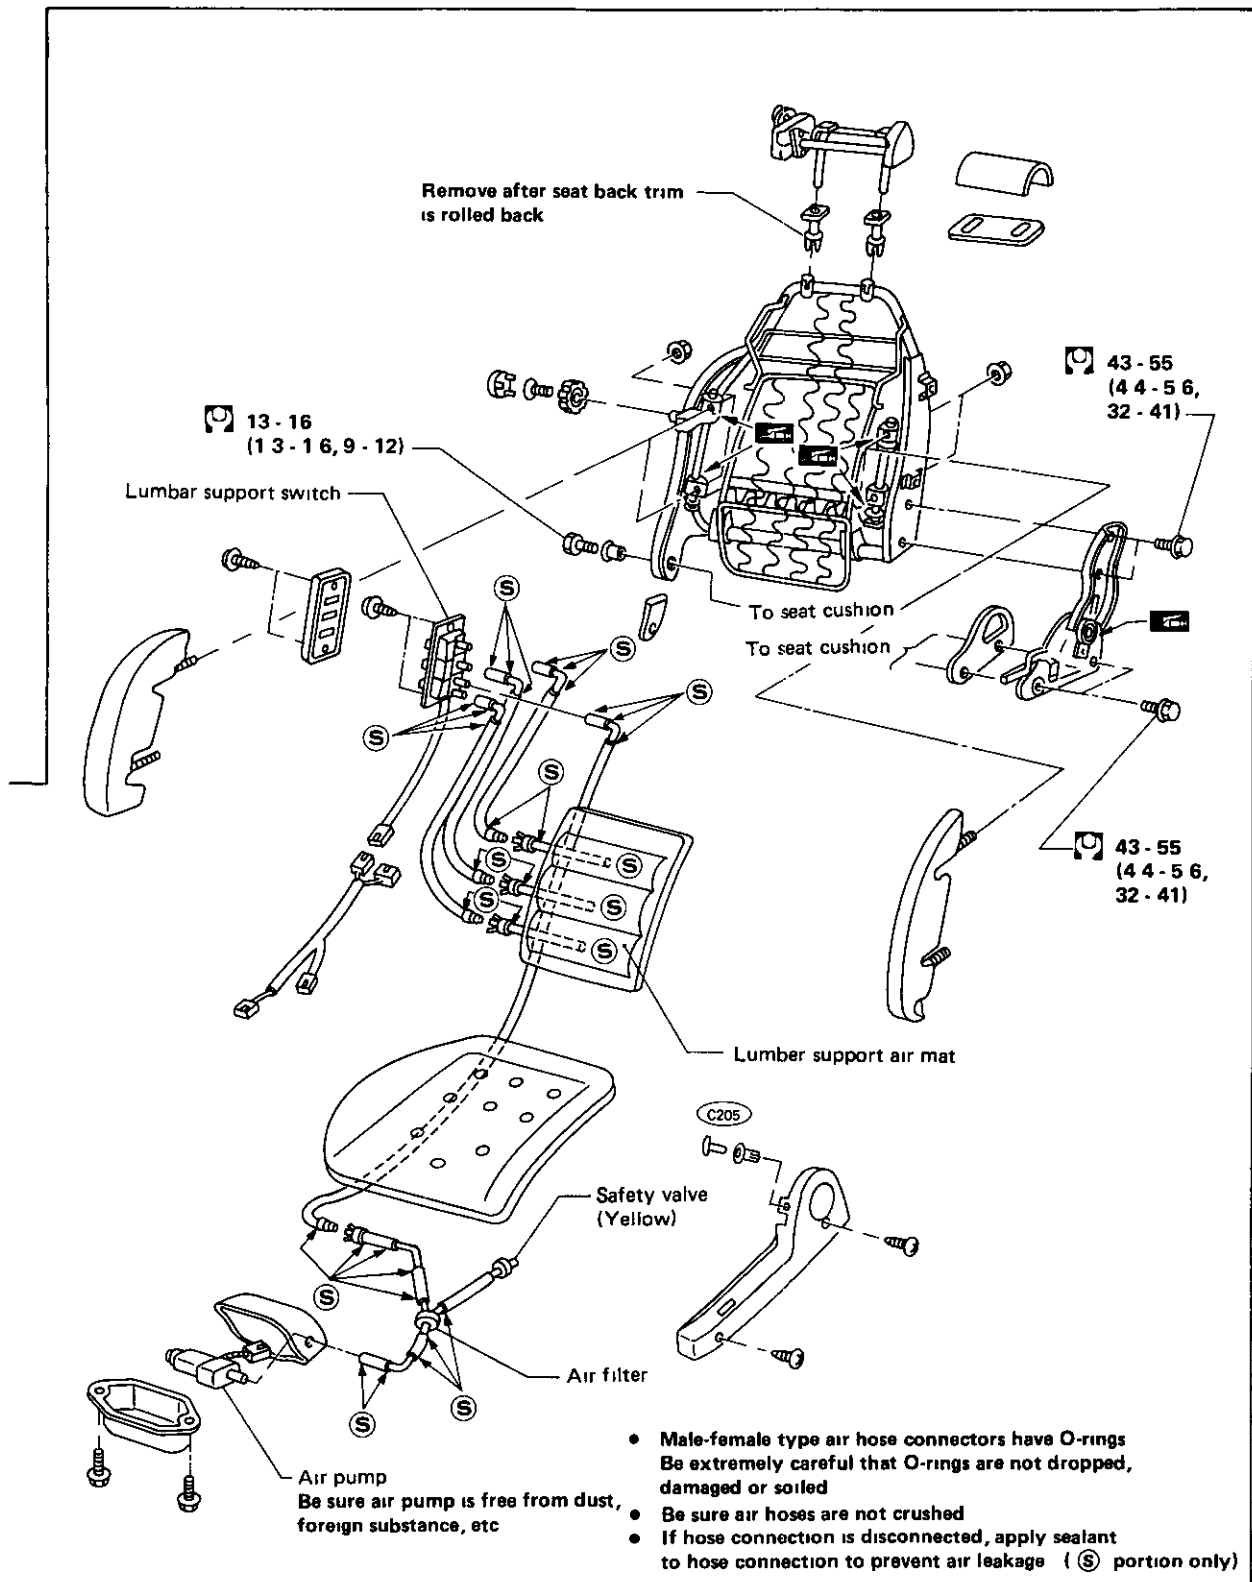

N m (kg-m, ft-lb)



Grease-up points

(Do not apply too much grease as it will drip)



Sealant points


S8F555D

SEAT

Front Semi Power Driver Seat (Cont'd)

AIR DIAGRAM

- Be sure air hoses are not crushed
- If hose connection is disconnected, apply sealant to hose connection to prevent air leakage (Ⓢ portion only)
- Be sure air pump is free from dust, foreign substance, etc
- Install safety valve in its proper direction
- Air pump operates only when each switch is turned ON
- Male female type air hose connectors have O-rings
- Be extremely careful that O-rings are not dropped, damaged or soiled

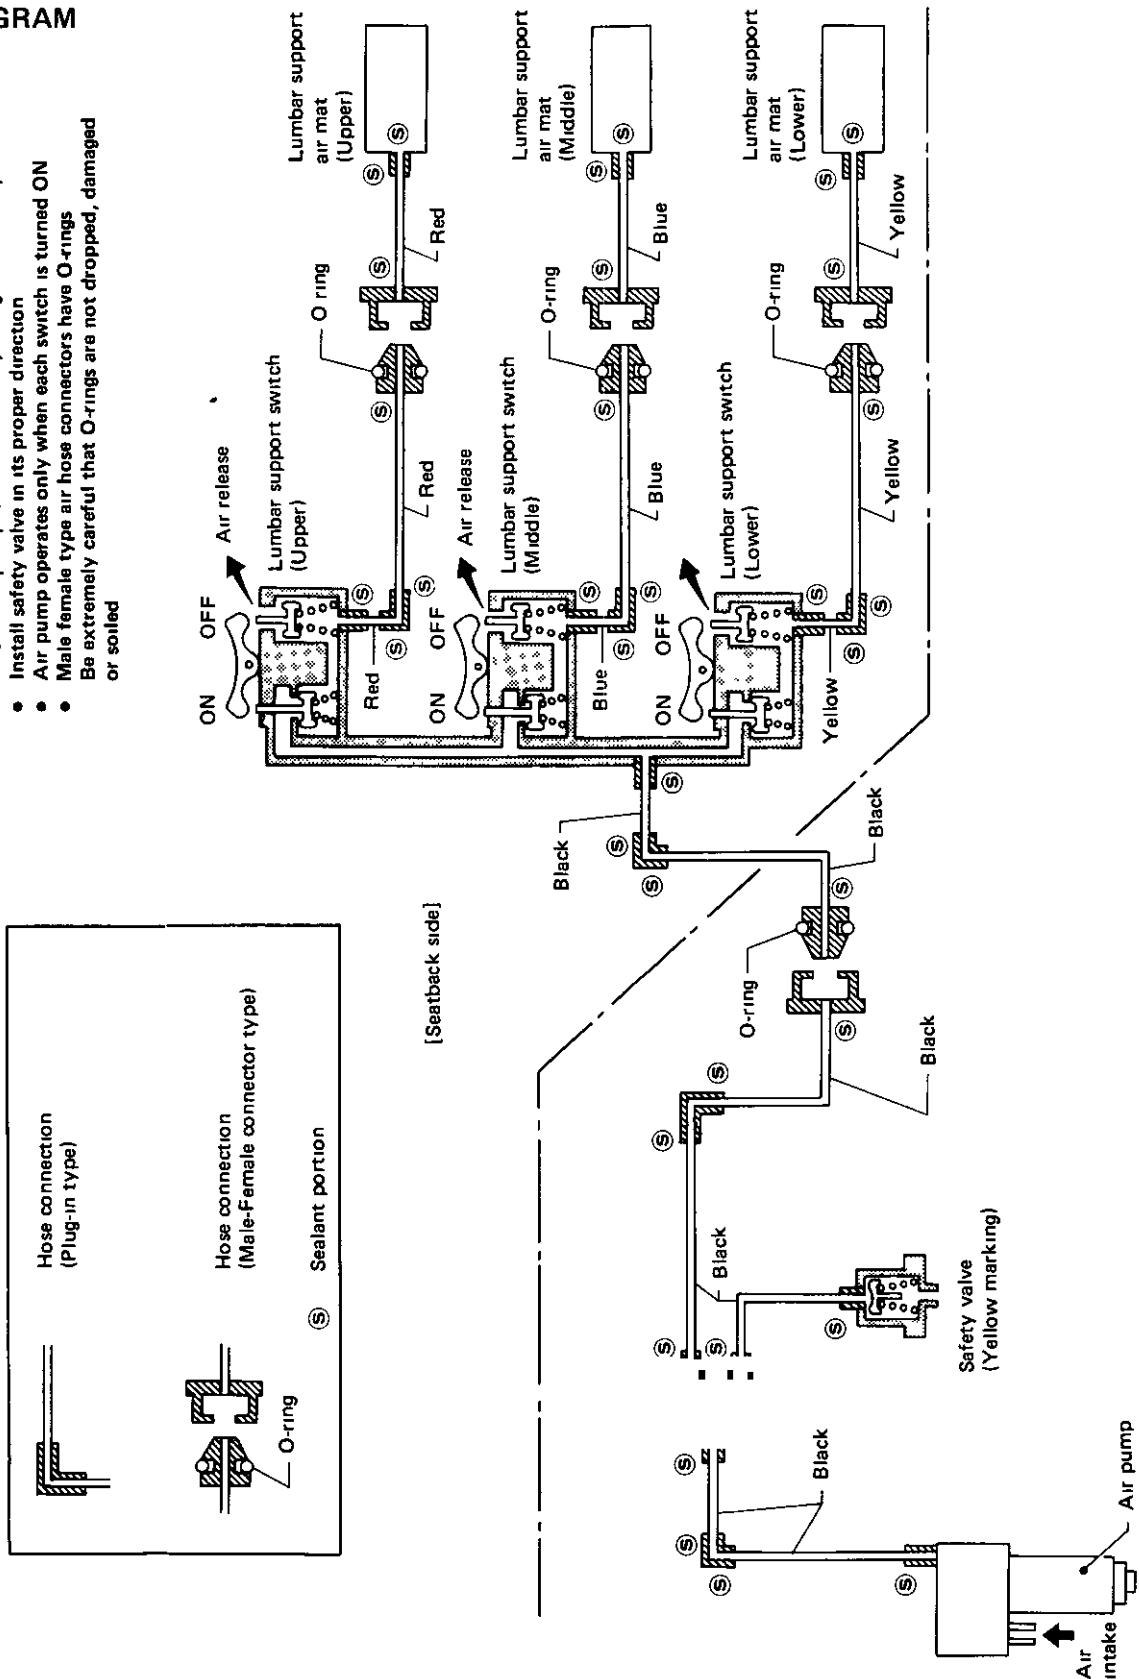


SBF556D

SEAT

Front Semi Power Driver Seat (Cont'd)



WIRING DIAGRAM

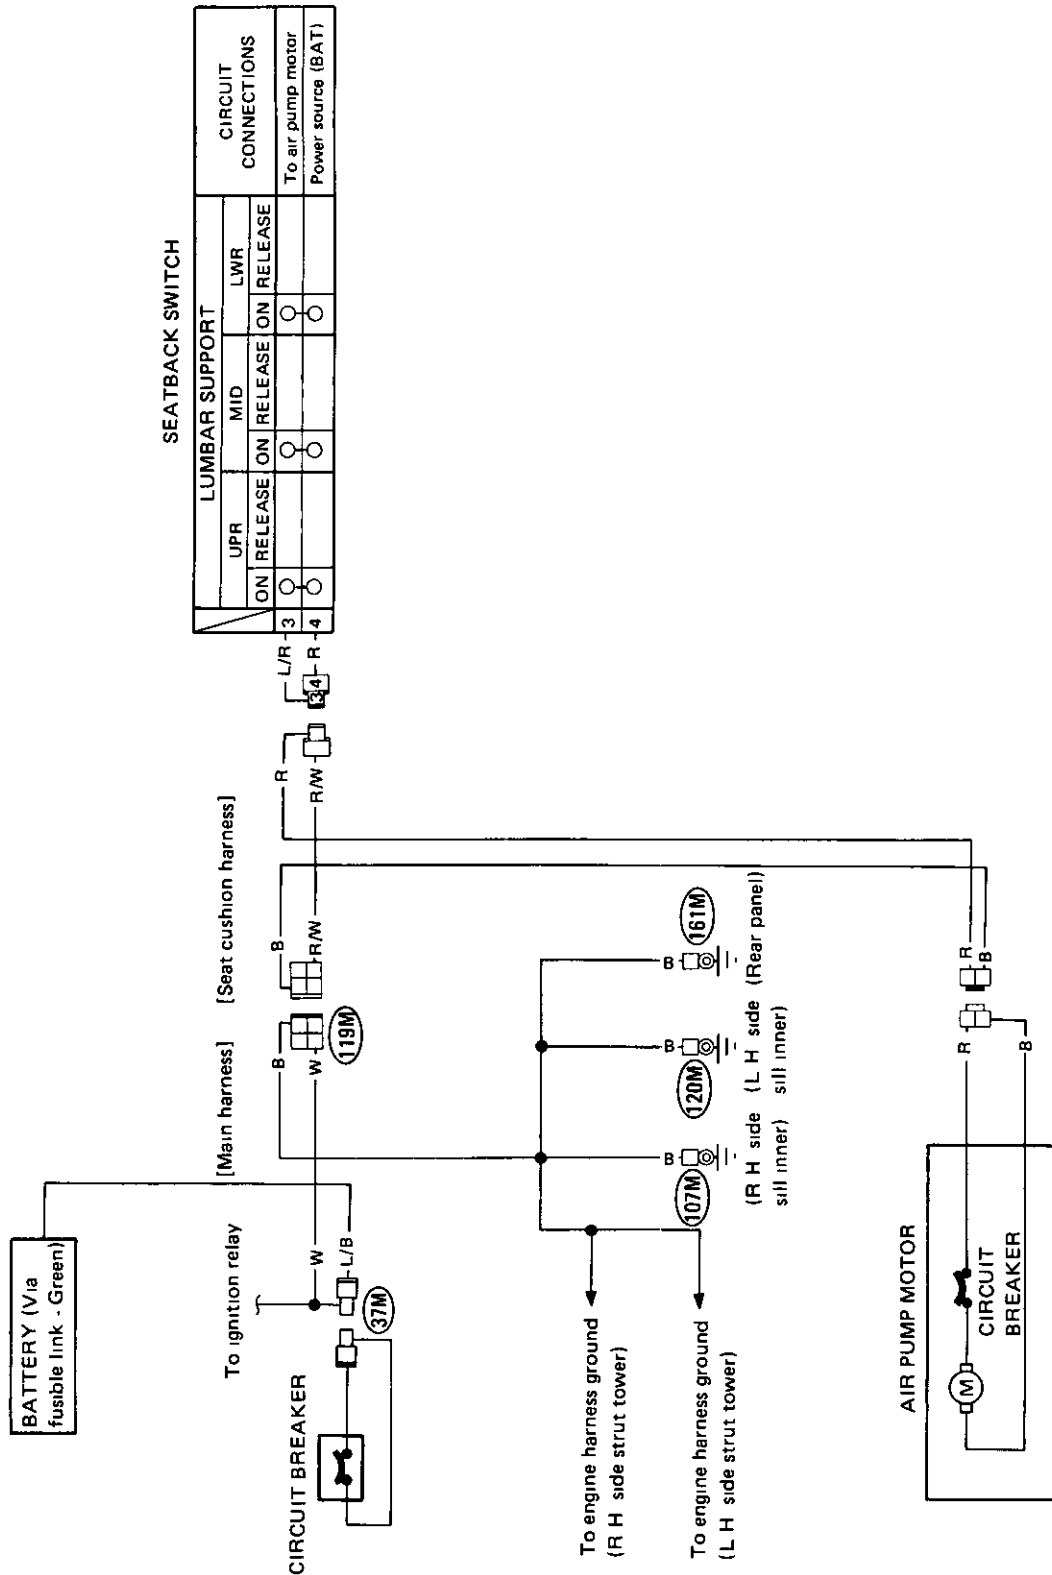



SBF537D

SEAT

Front Full Power Driver Seat

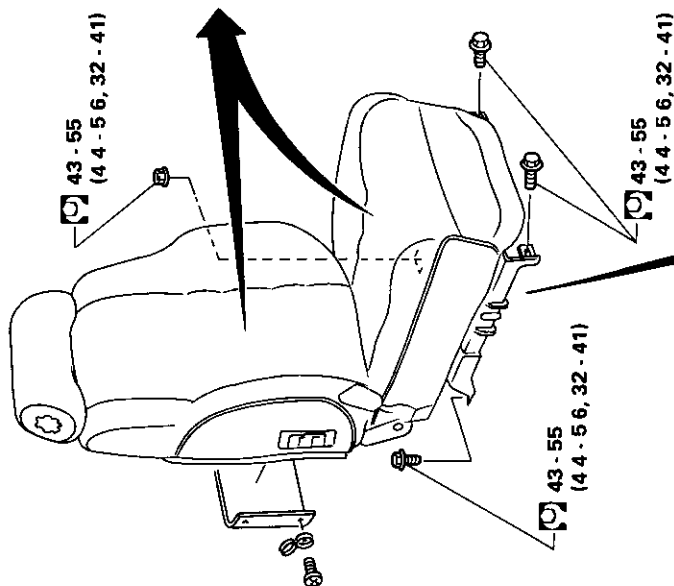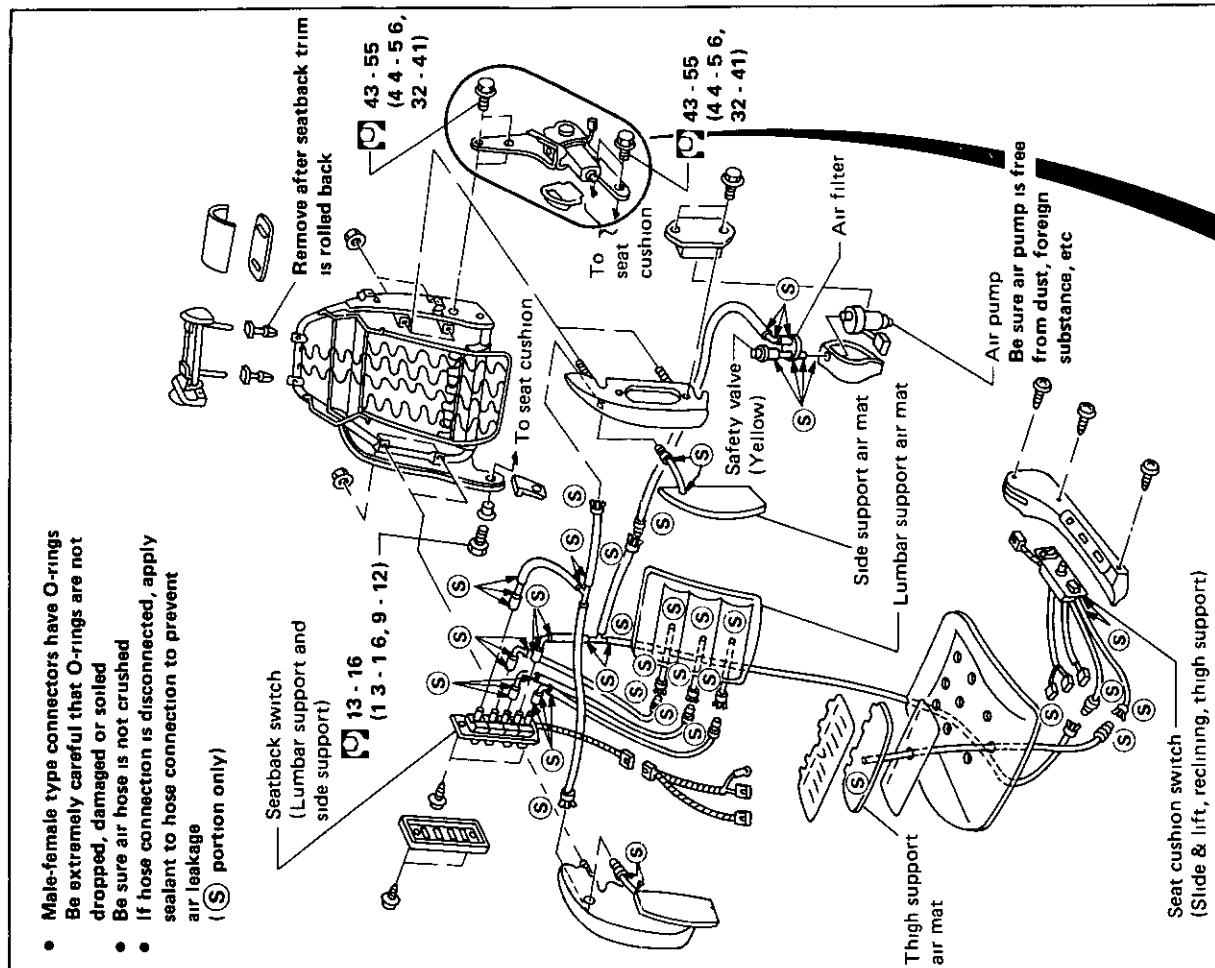

Front Full Power Driver Seat (Cont'd)

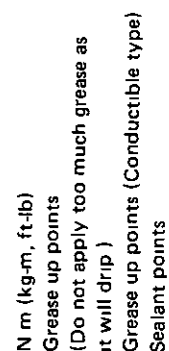


SEAT

Front Full Power Driver Seat (Cont'd)

AIR DIAGRAM


- Be sure air hoses are not crushed
 - If hose connection is disconnected, apply sealant to hose connection to prevent air leakage (S portion only)
 - Be sure air pump is free from dust, foreign substance, etc
 - Install safety valve in its proper direction
 - Air pump operates only when each switch is turned ON
 - Male-female type connectors have O-rings
- Be extremely careful that O-rings are not dropped, damaged or soiled

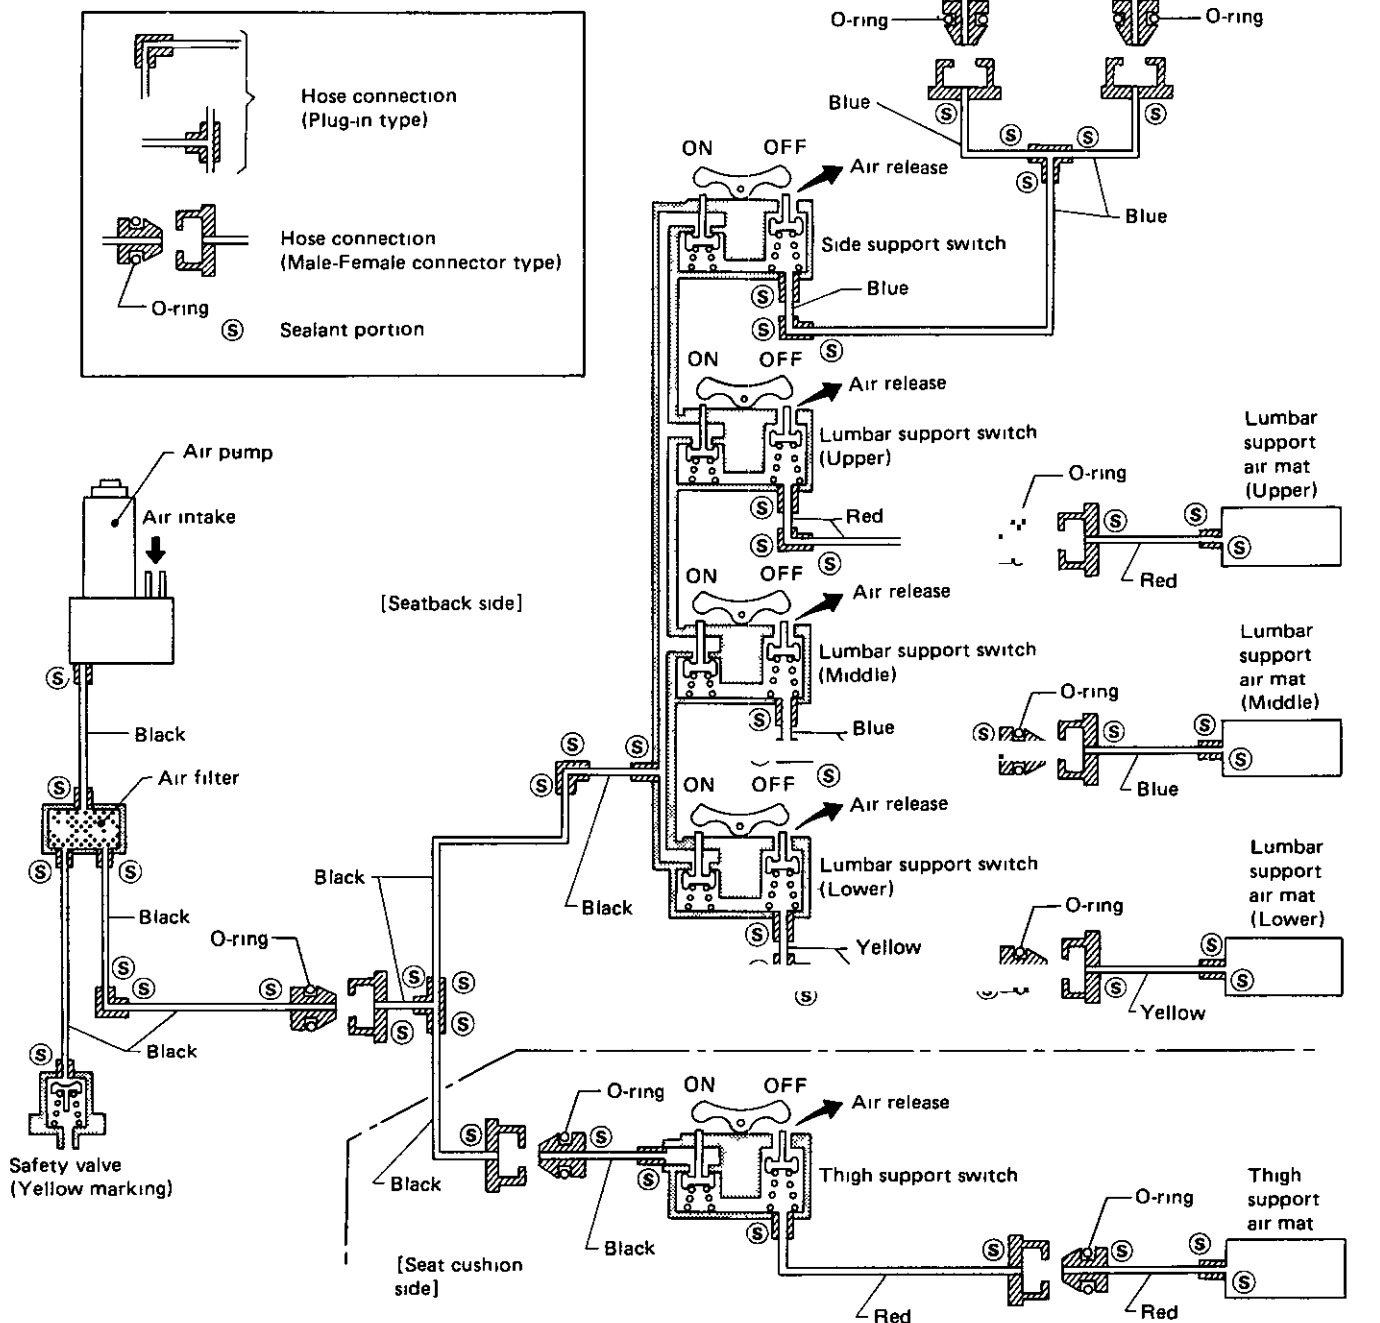

SEAT

Front Full Power Driver Seat (Cont'd)

WIRING DIAGRAM

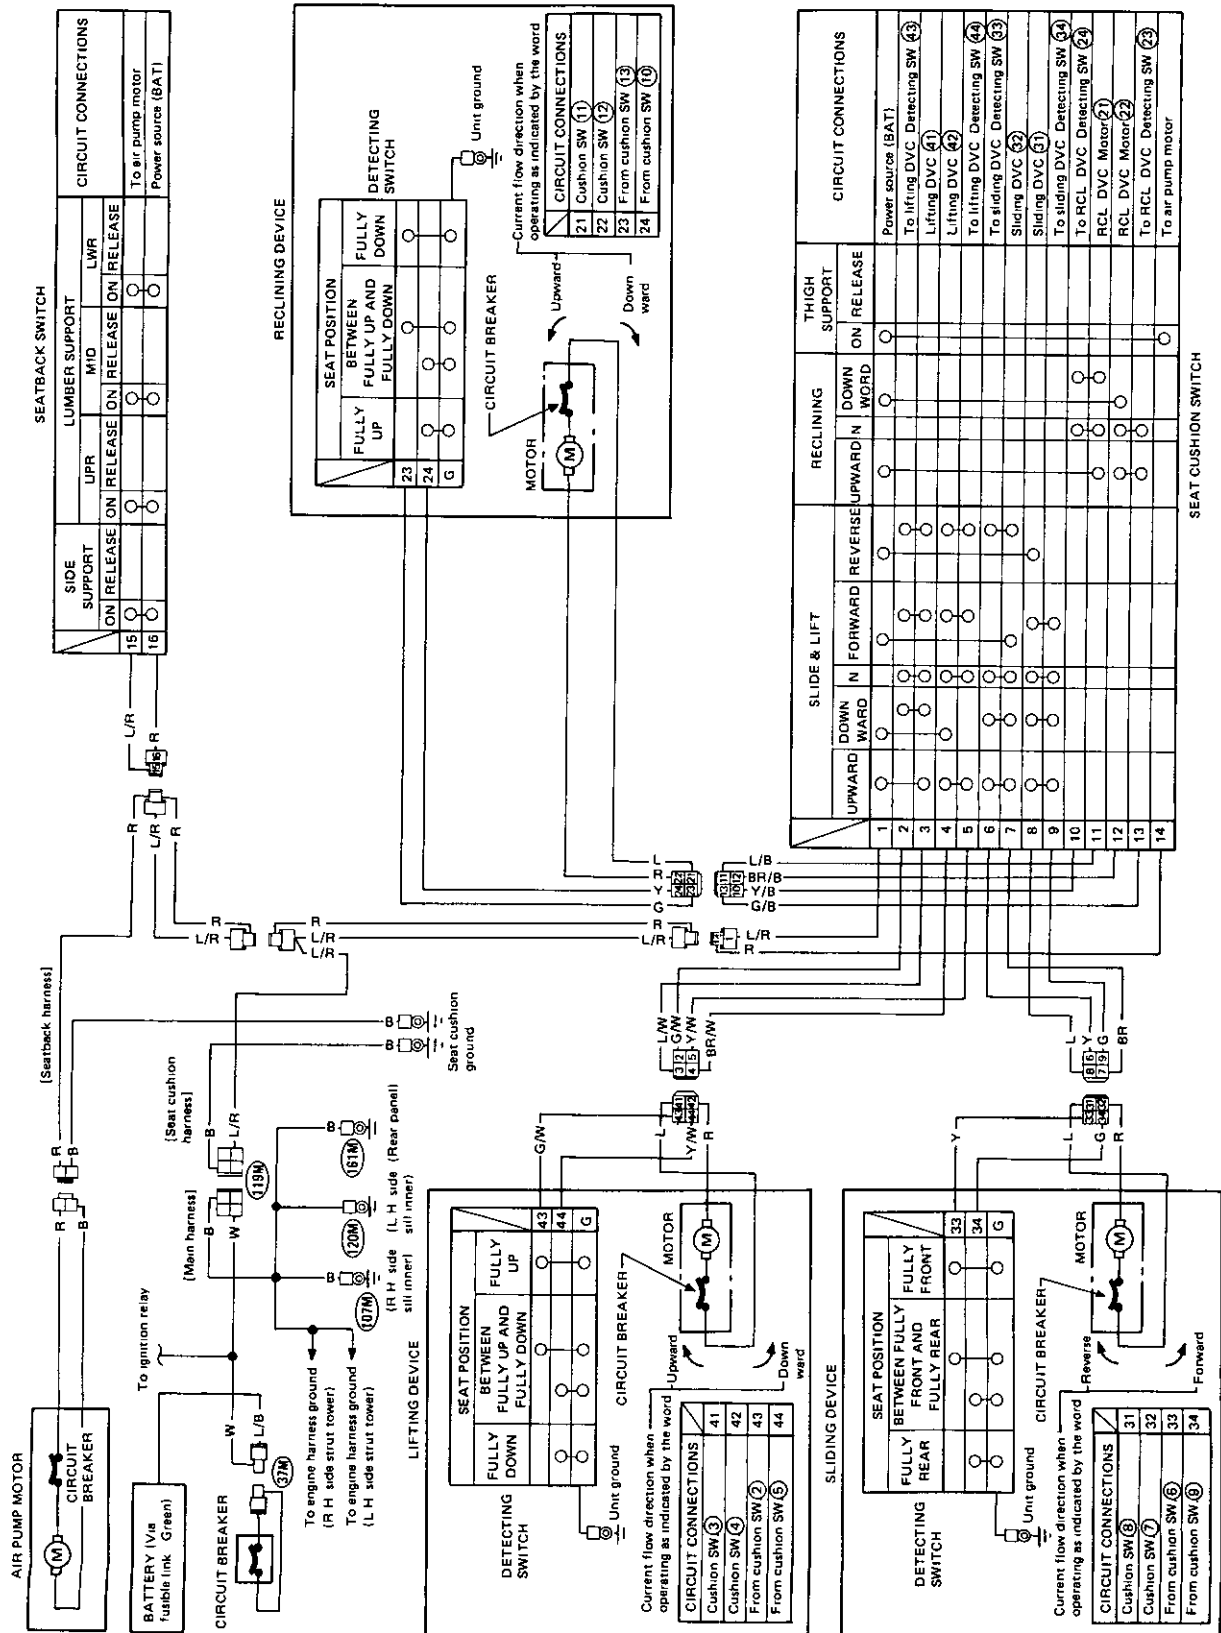



SBF538D

SEAT

Front Assist Seat

- Basically, this seat is the same as manual type front driver seat. 2 + 2 seater model differs from manual type front seat in the walk-in mechanism has been added to it. Refer to the description on manual type driver seat except for walk-in mechanism.




WALK-IN MECHANISM

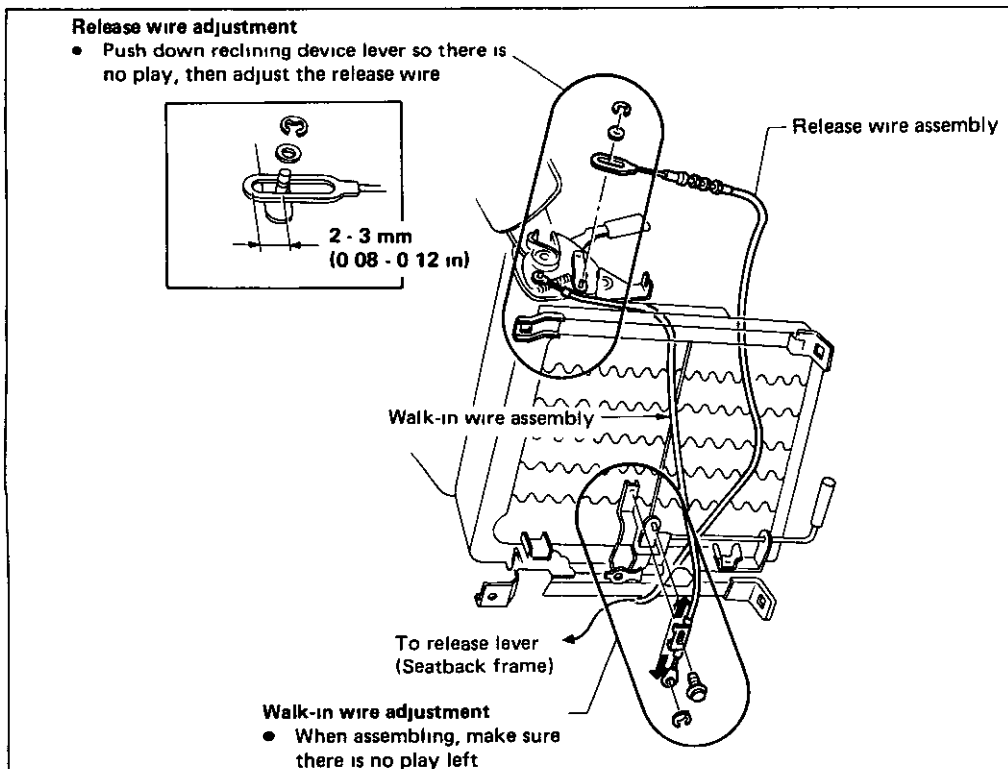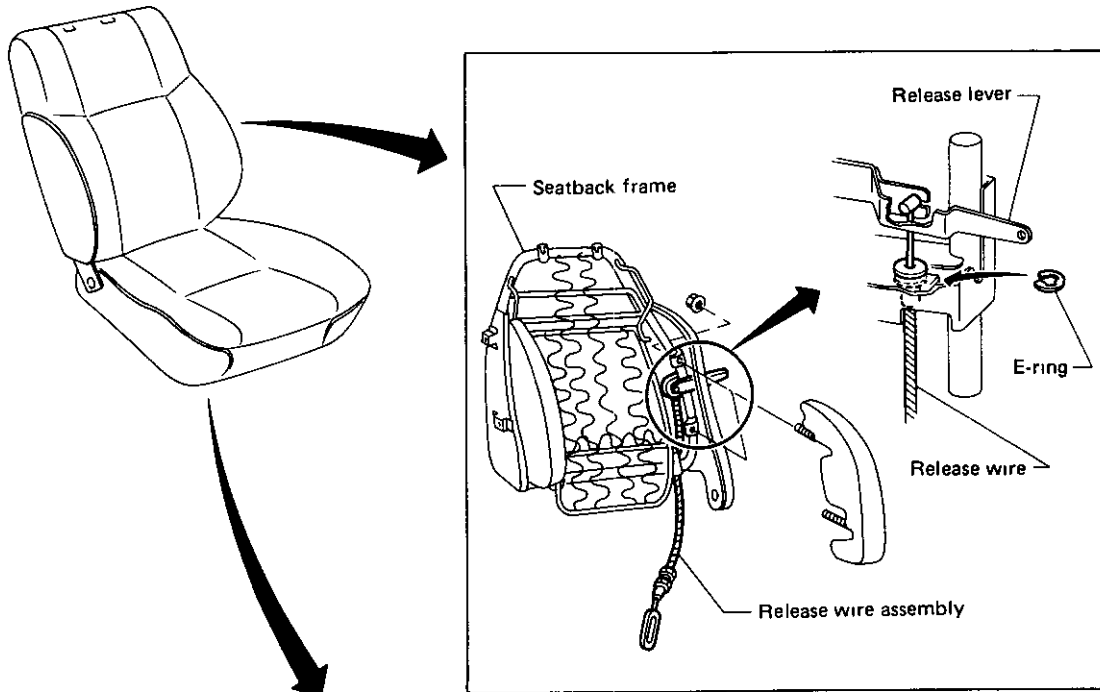

SBF528C

SEAT

Rear Seat

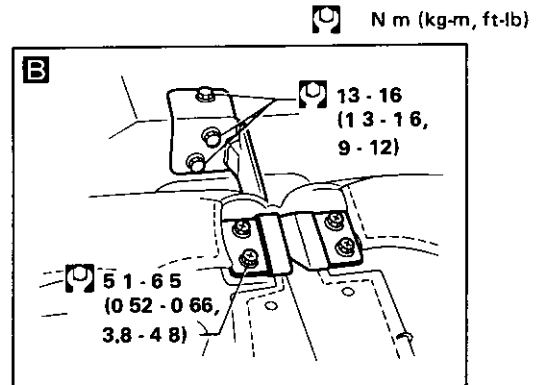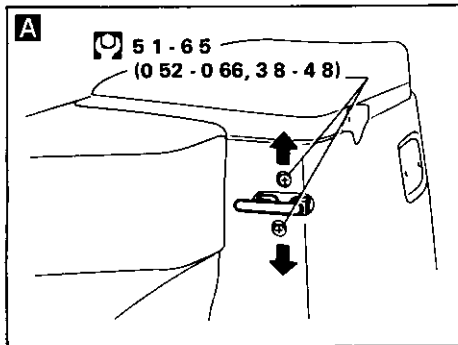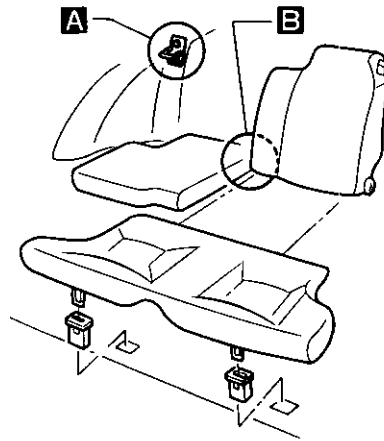


SBF476D

SEAT BELT


- Refer to MA section for installation of seat belts
- GLL model has been equipped with seat belts with tension reducer This unit reduces the force required to pull out seat belt while in use, and lessens pressure on the shoulder and hips for greater comfort

TENSION REDUCER WIRING DIAGRAM

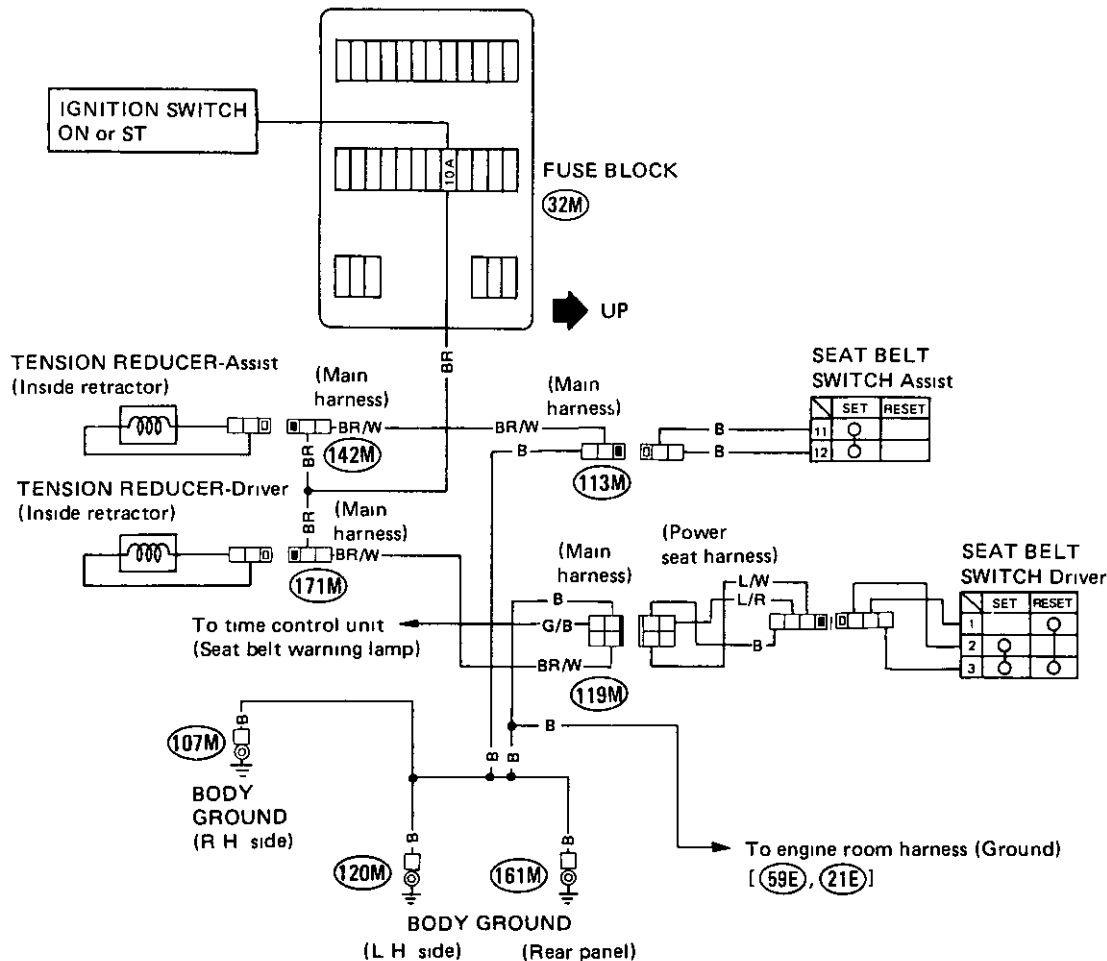

SBF539D

TENSION REDUCE OPERATION







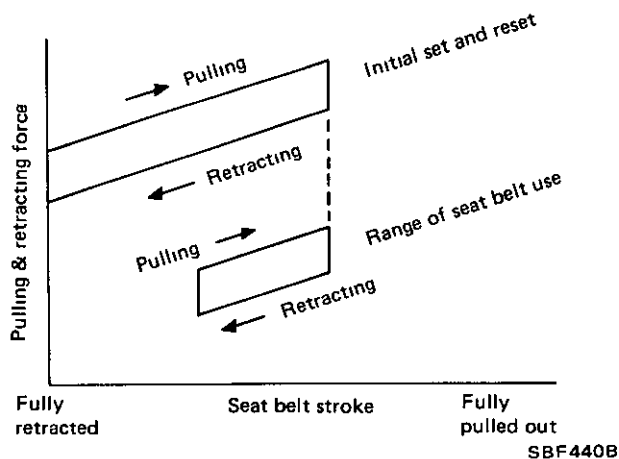


INTERIOR AND EXTERIOR

- When removing clip or fastener, refer to CLIP & FASTENER.
- When handling trim or molding, do not use excessive force and take care not to damage them

Inside Trim

SIDE, LUGGAGE AND FLOOR TRIM

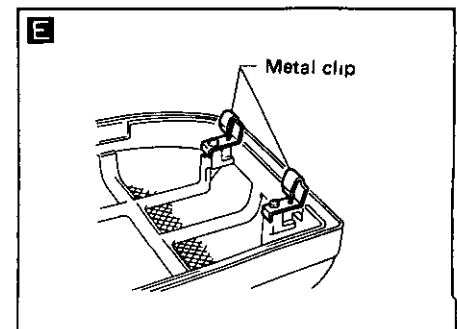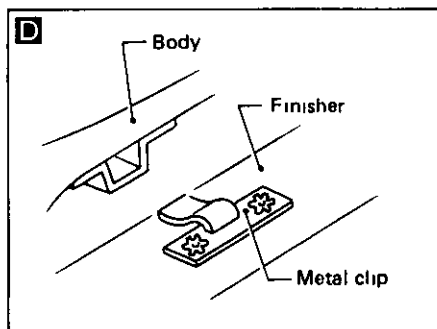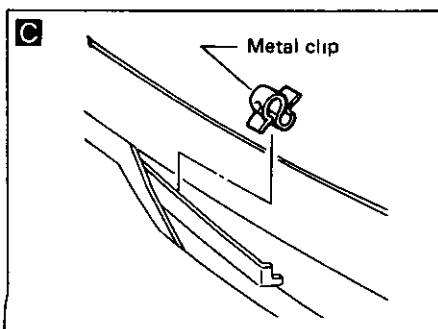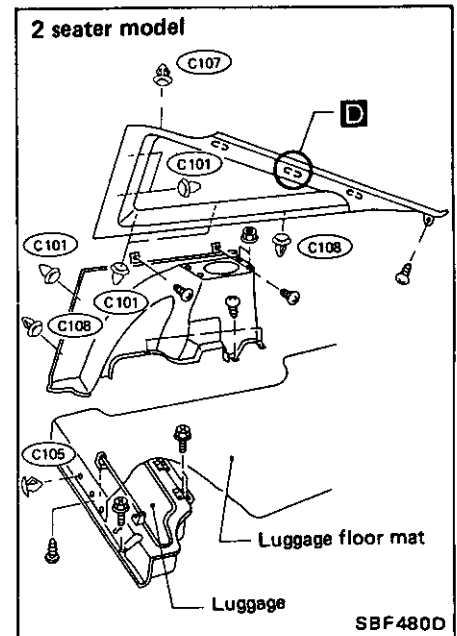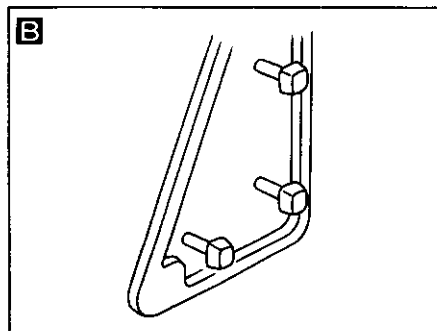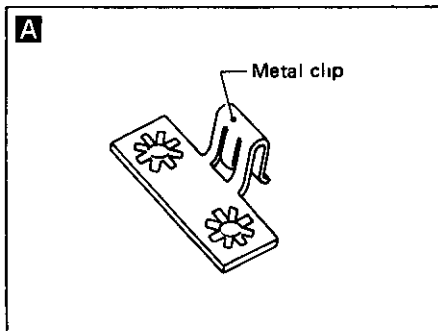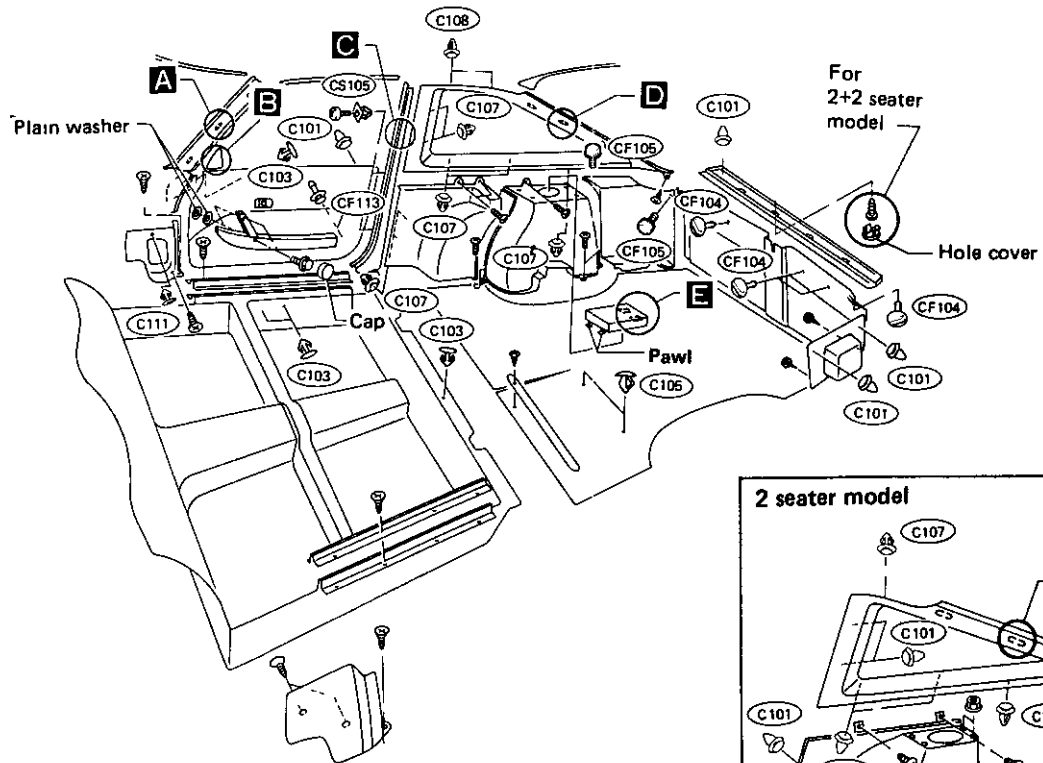
**SBF479D**

INTERIOR AND EXTERIOR


Inside Trim (Cont'd)

ROOF TRIM

Front portion

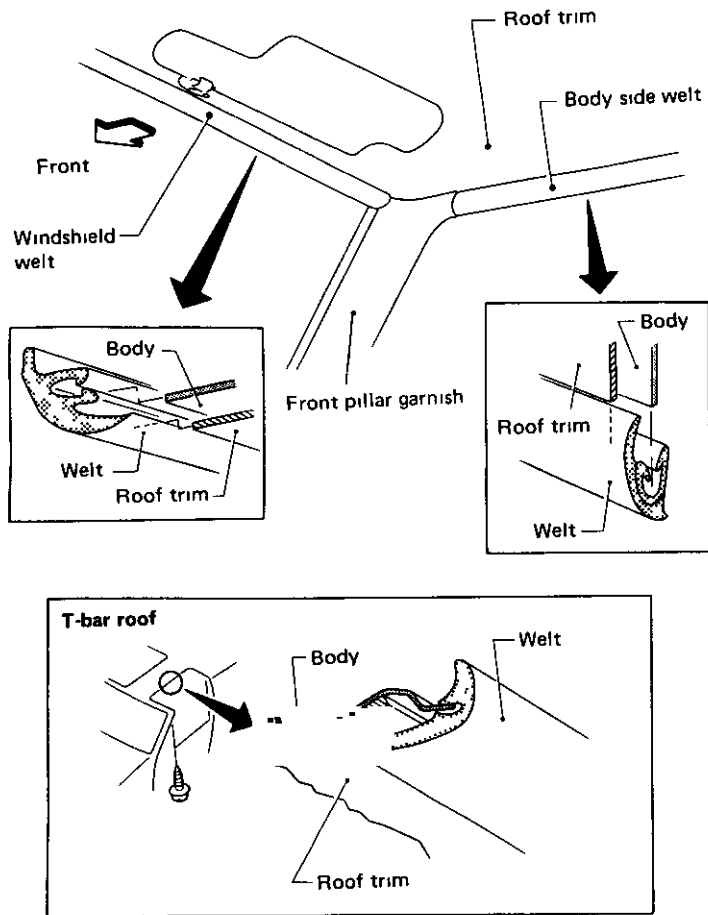

Rear portion


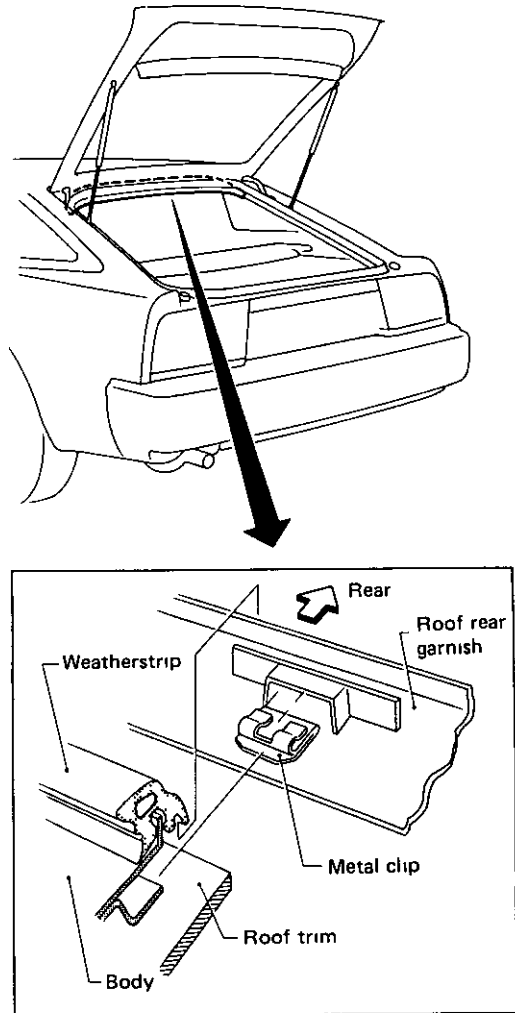


SBF591C

INTERIOR AND EXTERIOR

Exterior


- Apply sealing compound where necessary while installing parts
- When applying sealing compound, be careful that the sealing compound does not protrude from parts.

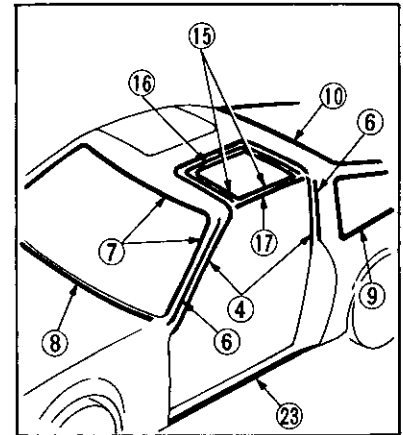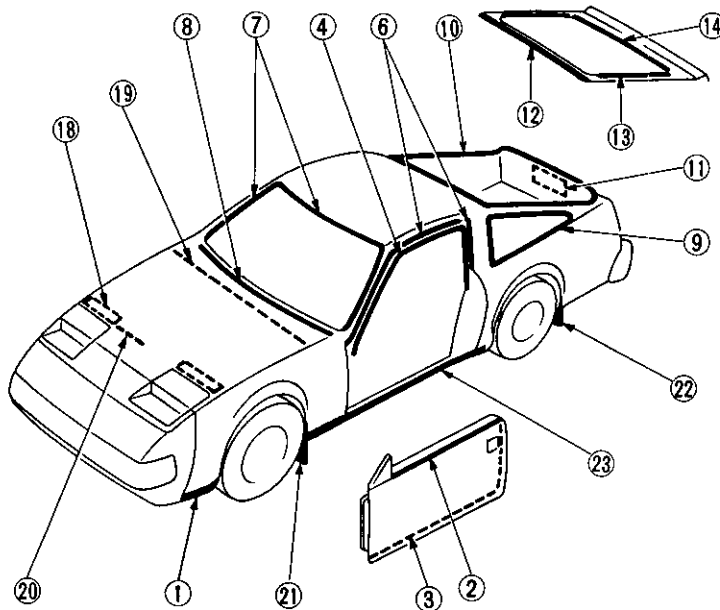

SBF482D

① Front side spoiler

- Front side spoiler is affixed to body panel with double-faced adhesive tape, clip and fastener
 - Remove it only if it is necessary to do so.
 - Removal
1. Heat molding portion to 25 to 35°C (77 to 95°F) with a heat gun.

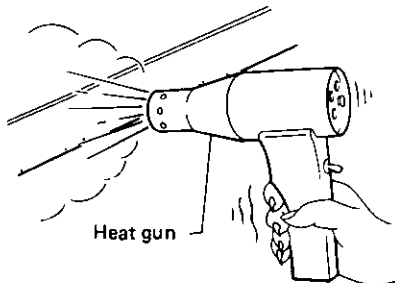


SBF455A

2. Raise end of molding and, while cutting off bonding agent, detach molding


• Installation

1. Remove all traces of bonding agent from body panel. Then clean contact face of body
2. Heat body panel and molding to 25 to 35°C (77 to 95°F) with a heat gun. Then install molding.

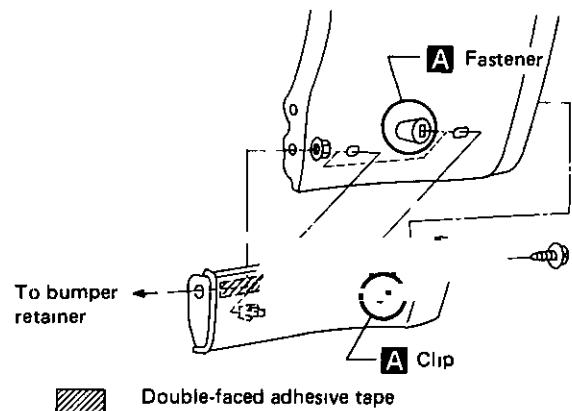

SBF483D

A Removal of fastener from body panel

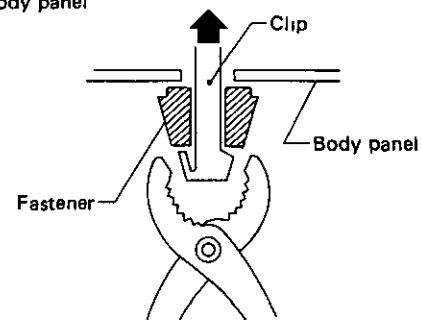


SBF484D

INTERIOR AND EXTERIOR


Exterior (Cont'd)

② Door molding

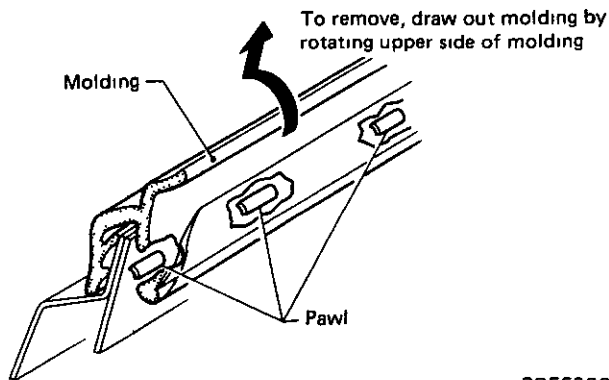


SBF593C

③, ④ Door weatherstrip and body side weatherstrip

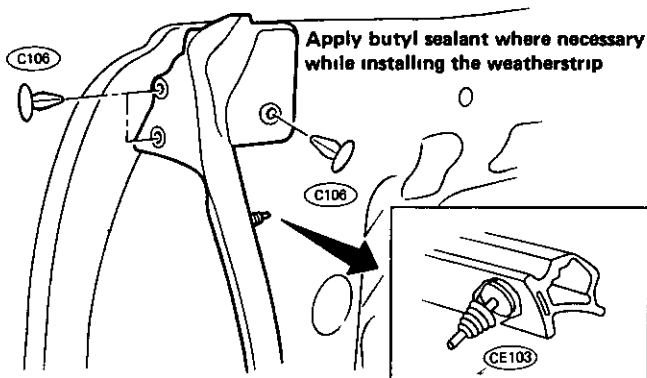


SBF398B

⑥ Drip molding

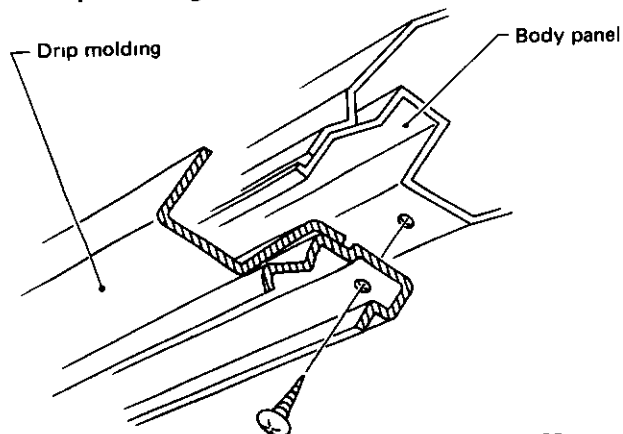


SBF400B

⑦ Windshield upper & side molding

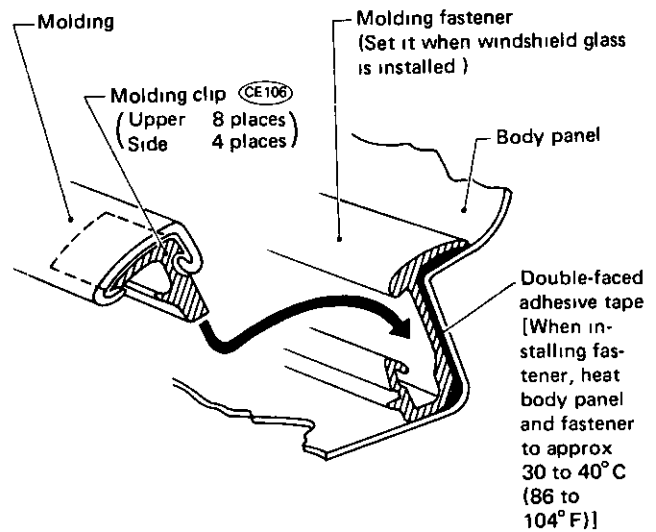

SBF401B

⑧ Windshield lower molding

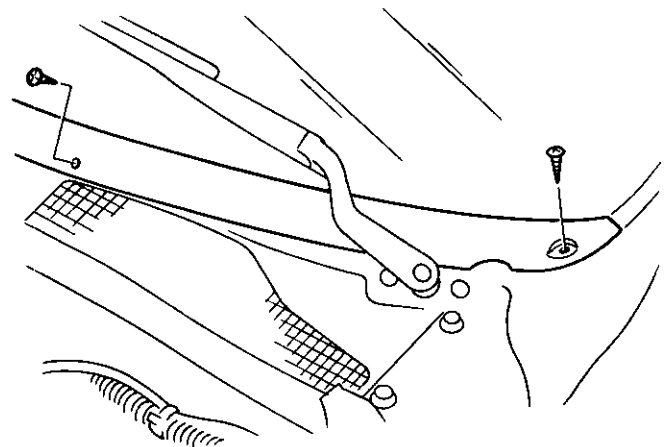

SBF402B

INTERIOR AND EXTERIOR


Exterior (Cont'd)

⑨ Side window molding

Refer to Side Window.


⑩ Back door weatherstrip

- Attach the weatherstrip by aligning each white marking with the center of each back door hinge.

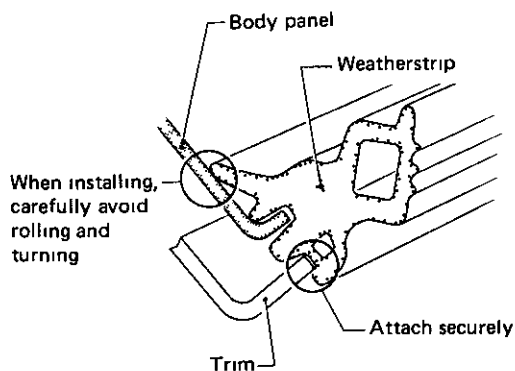


SBF403B

⑪ Rear panel outer finisher and back up lamp

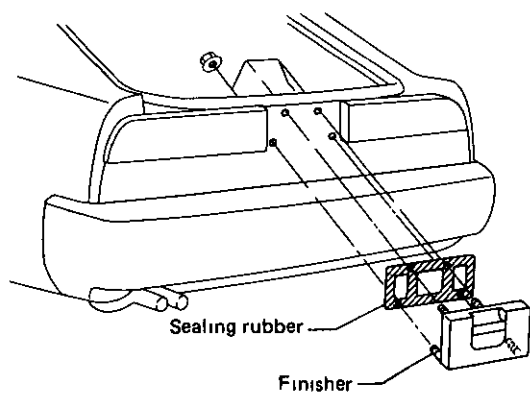


SBF485D

⑫ Back door upper molding

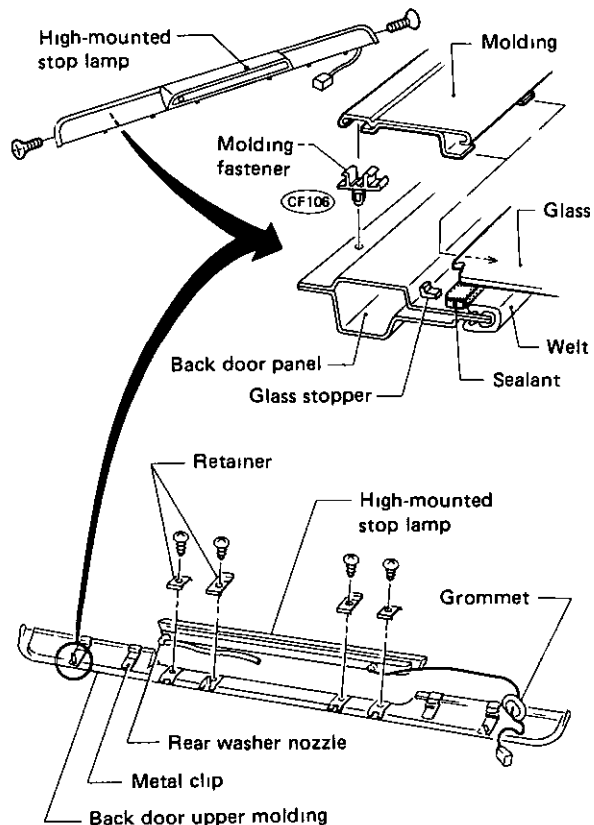

SBF486D

⑬ Back door side molding

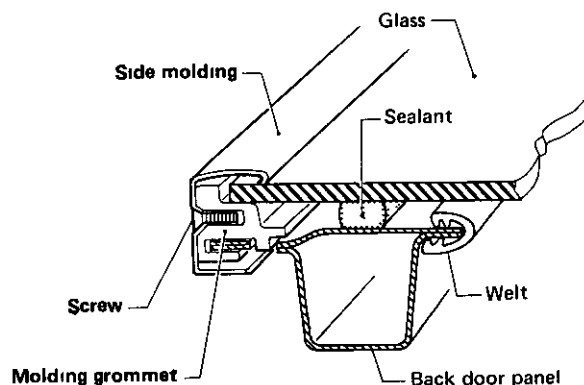


SBF406B

INTERIOR AND EXTERIOR

Exterior (Cont'd)

⑭ Back door lower molding

- Attach the molding to the glass before installing the glass

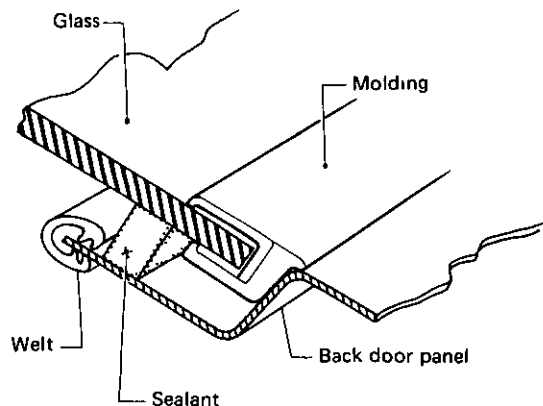


SBF407B

⑮ T-bar roof sash and T-bar roof side molding

They are part of the T-bar roof glass and cannot be removed (Refer to T-bar Roof)



If they are damaged, you should replace entire T-bar roof glass assembly.

⑯ T-bar roof weatherstrip

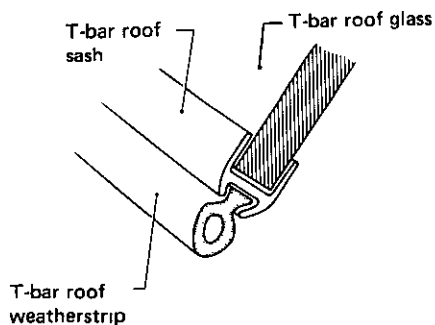

SBF435B


⑰ T-bar roof side weatherstrip

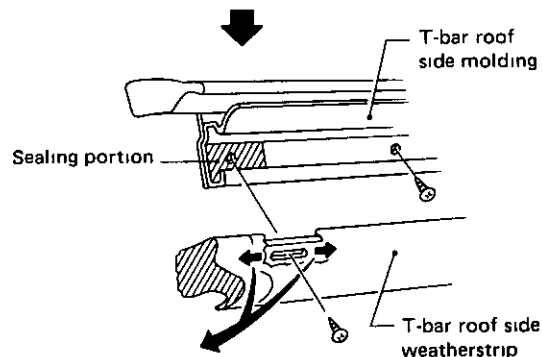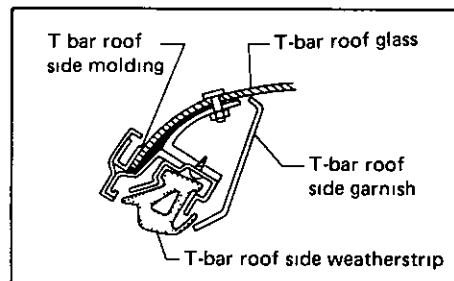

Always adjust if it is not sufficiently watertight

SBF436B

⑱ Hood front sealing rubber

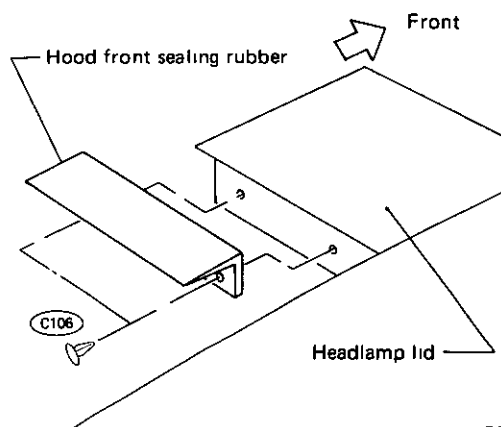


SBF597C

INTERIOR AND EXTERIOR


Exterior (Cont'd)

①⑨ Hood rear sealing rubber

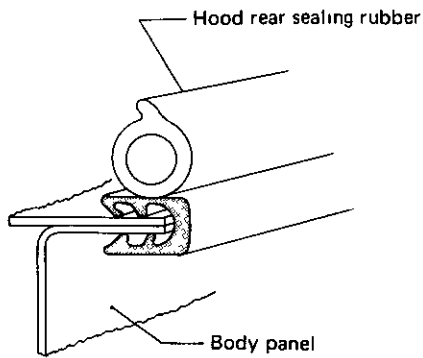


SBF598C

②⑩ Hood front sealing rubber II (Turbocharger model)

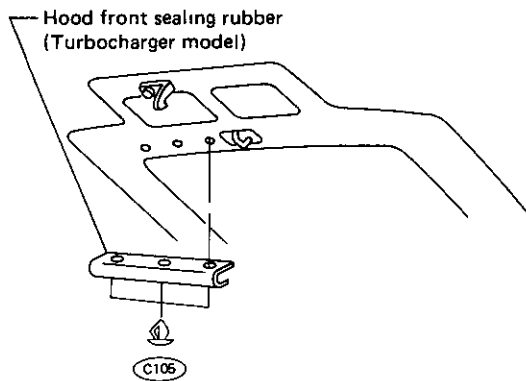


SBF487D

②① Front mud guard

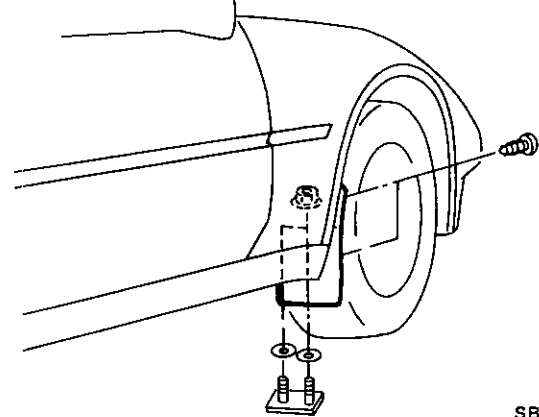


SBF492D

②② Rear mud guard

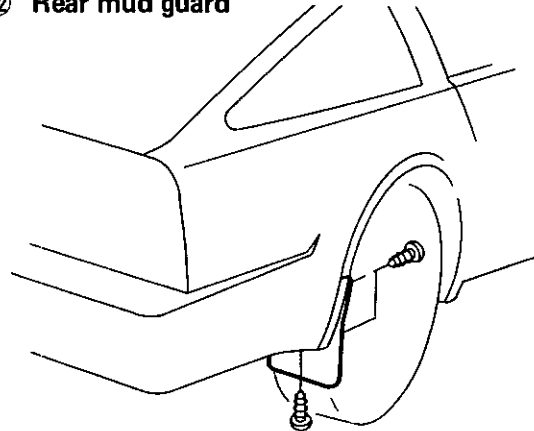

SBF493D

②③ Center mud guard

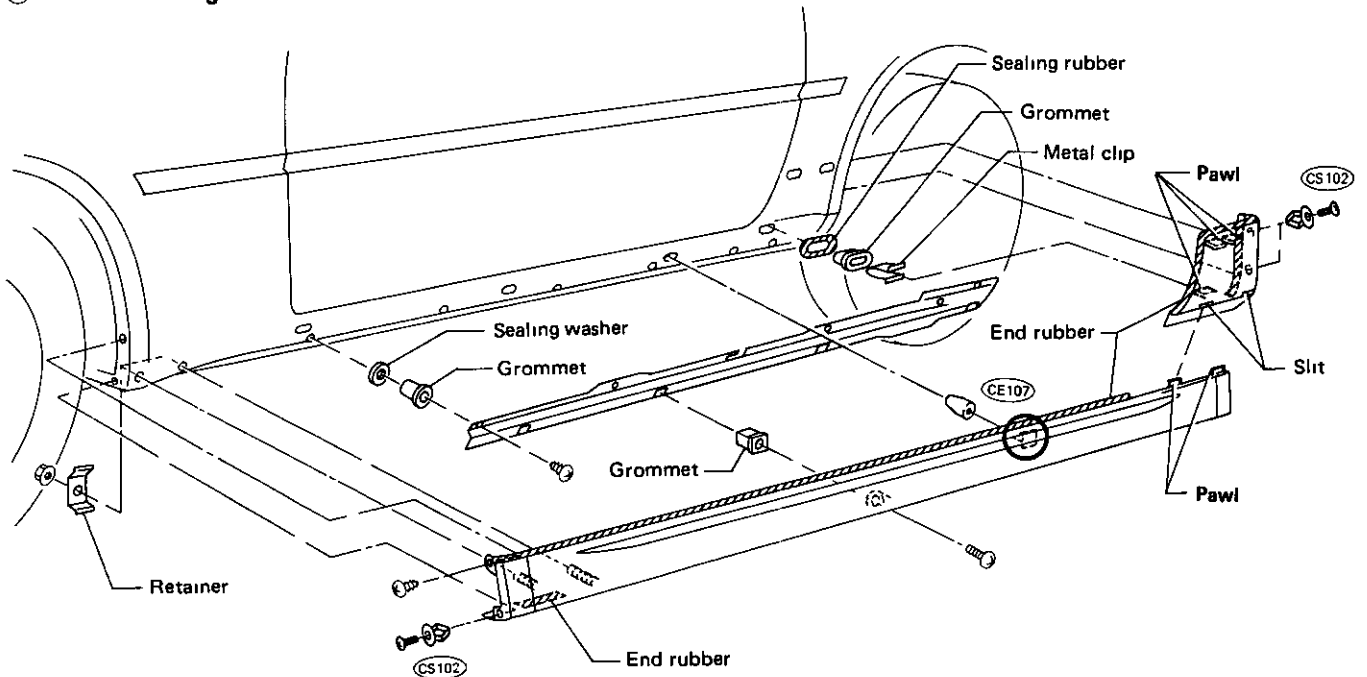


SBF488D

WINDSHIELD AND WINDOWS

Windshield

REMOVAL

After removing moldings, remove glass

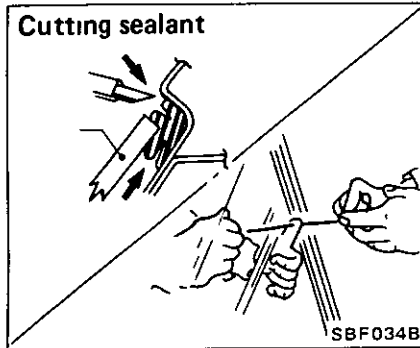

CAUTION






Be careful not to scratch glass when removing

INSTALLATION

- Use genuine Nissan Sealant kit or equivalent. Follow instructions furnished with it.
- After installation, the vehicle should remain stationary for about 24 hours.
- Do not use sealant which is more than 12 months past its production date.
- Do not leave cartridge unattended with its cap open.
- Keep Primers and sealant in a cool, dry place. Ideally, sealant should be stored in a refrigerator.

WARNING.

Keep heat or open flames away as Primers are flammable

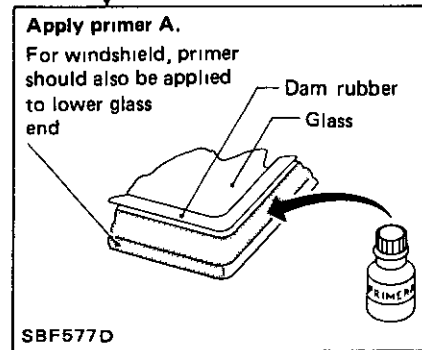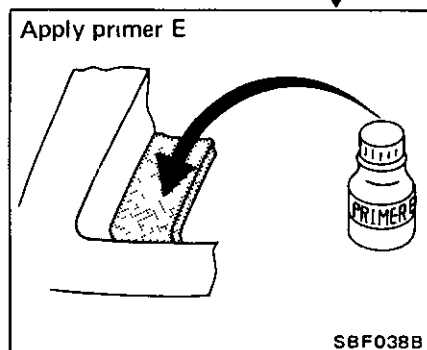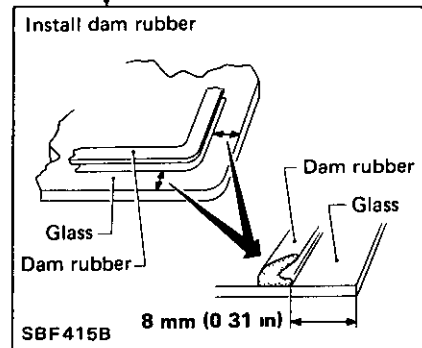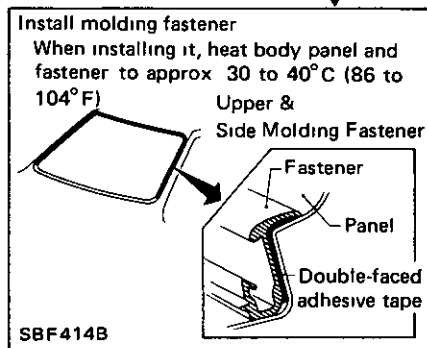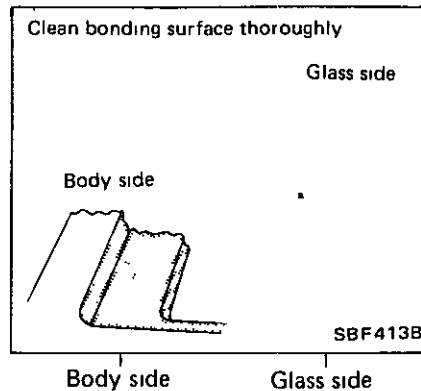

CAUTION

Allow Primers to dry for 10 to 15 minutes before proceeding to the next step

A


CAUTION

Do not apply Primer A to windshield opening flanges

B

WINDSHIELD AND WINDOWS

Windshield (Cont'd)

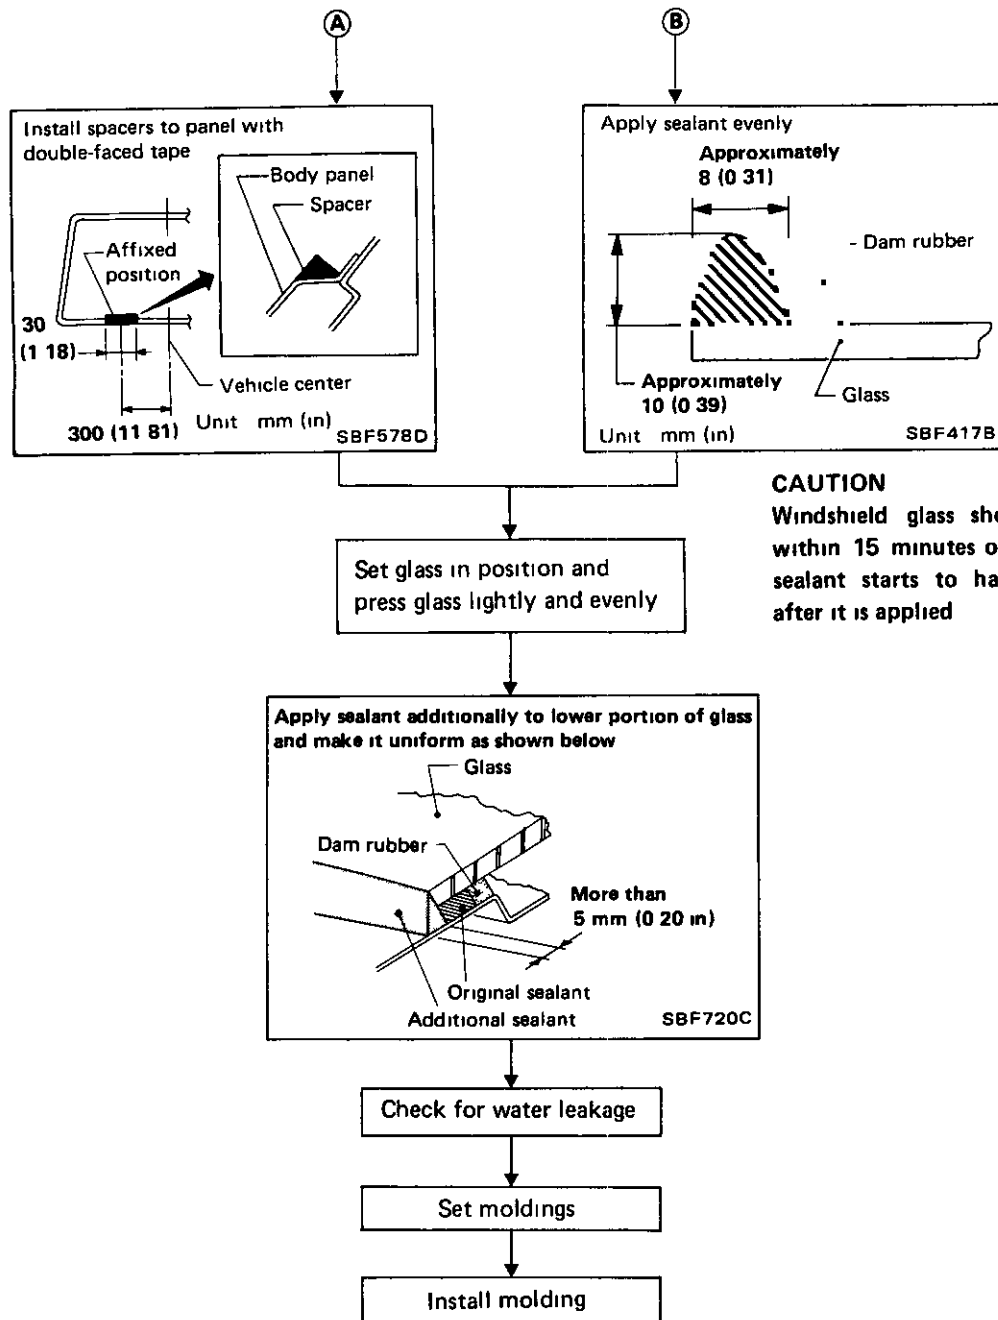

CAUTION

Windshield glass should be installed within 15 minutes of applying sealant. Sealant starts to harden 15 minutes after it is applied.

Drying period of sealant

Reference: Period required for sealant to dry to desired hardness.

		Unit: days		
Temperature °C (°F)	Relative humidity %	90	50	25
25 (77)		1 1	2 0	3 8
5 (41)		2 4	6 5	10 4





CAUTION

Advise the user of the fact that vehicle should not be driven on rough roads or surfaces until sealant has properly vulcanized.

WINDSHIELD AND WINDOWS

Back Door Window

- Attach the lower molding to the glass before installing the glass
- Attach the glass stopper (glass upper portion) and the side molding grommet to the panel before installing the glass.
- The remaining procedure for removal and installation is the same as that for the windshield
- For sealant drying period, refer to DRYING PERIOD OF SEALANT.

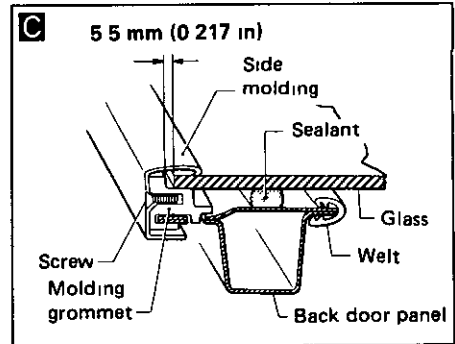
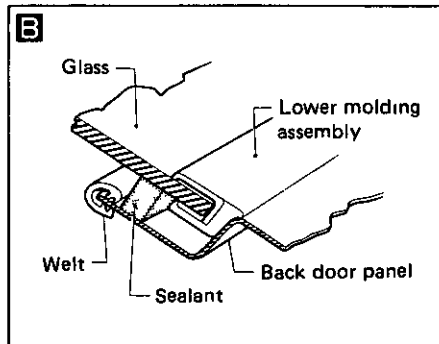
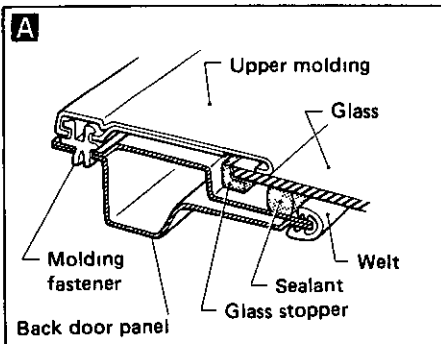
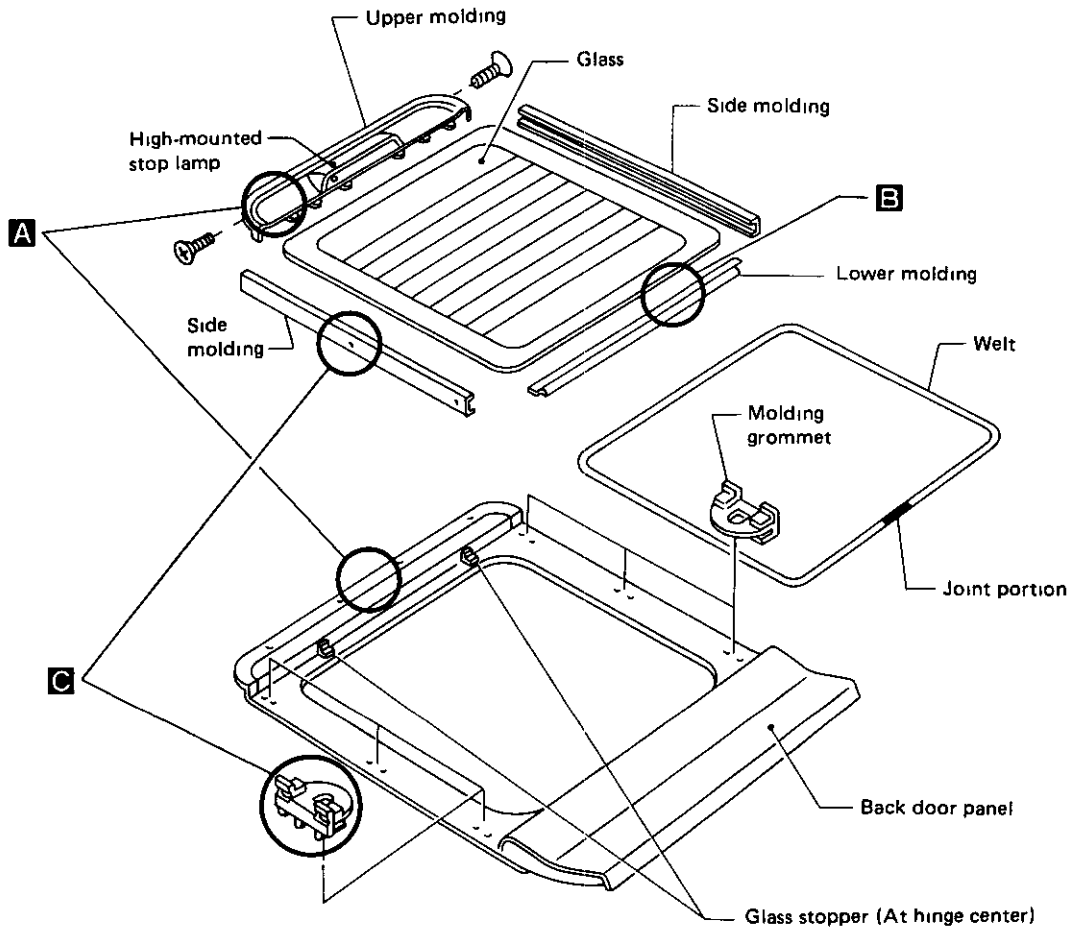


SBF489D

WINDSHIELD AND WINDOWS

Side Window

- When installing glass, assemble molding to glass, then install glass with butyl seal and nuts

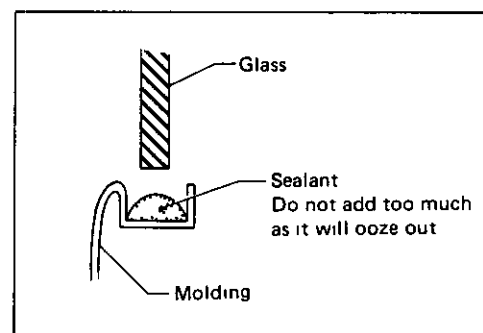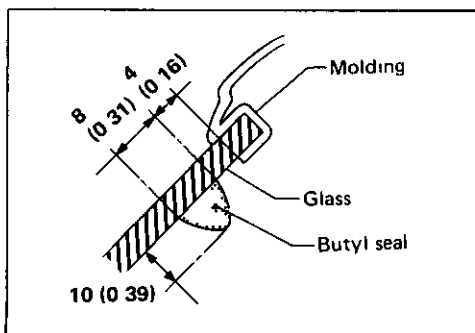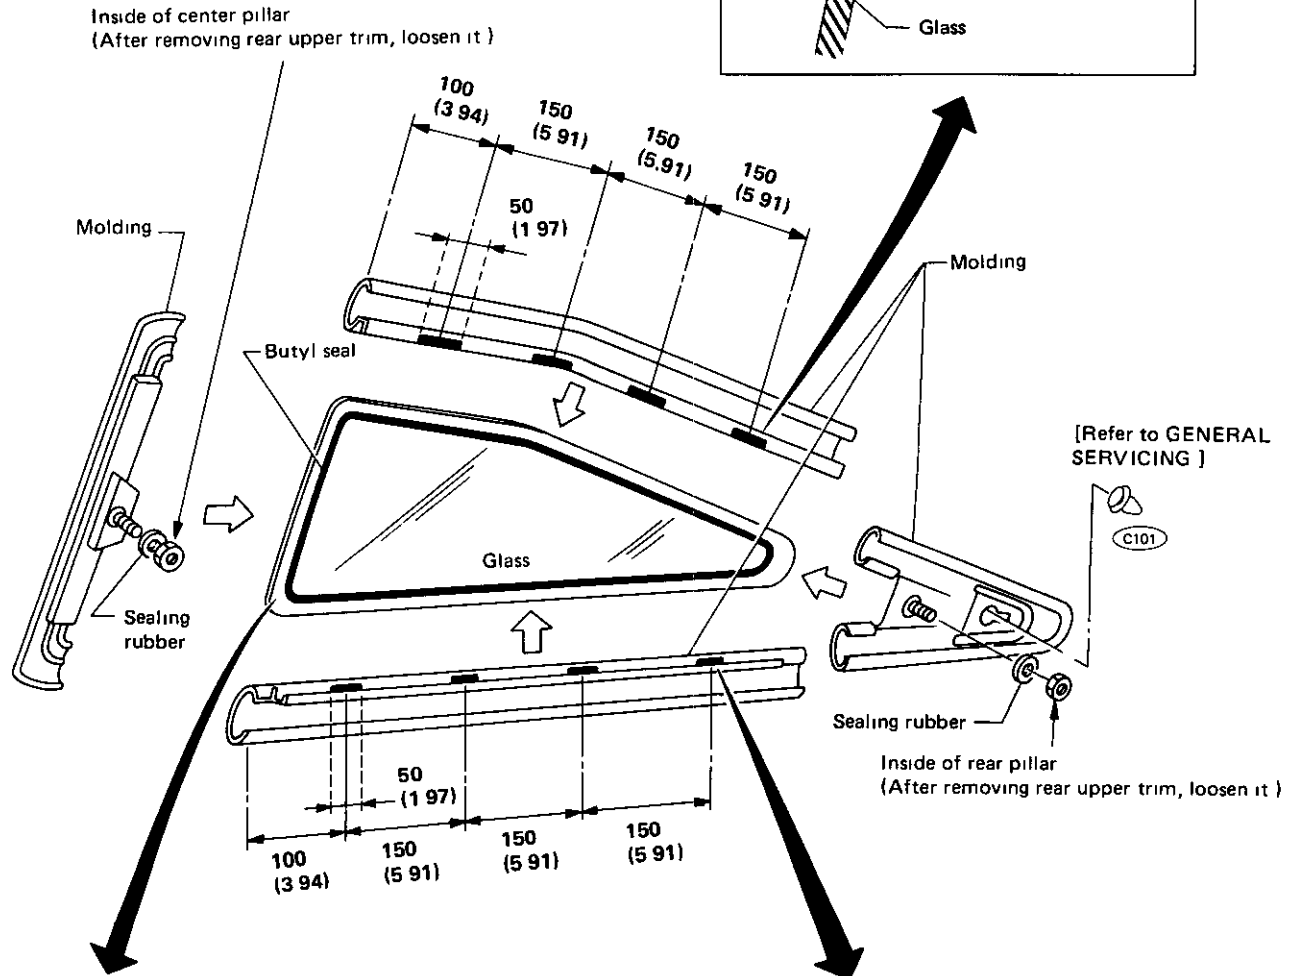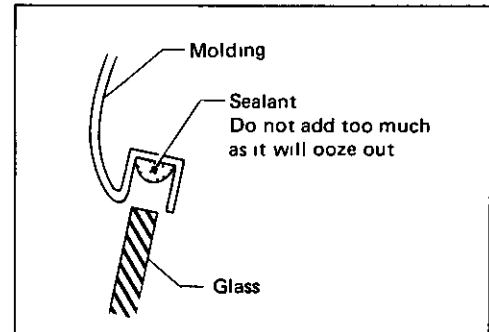

Unit mm (in)

SBF490D


WINDSHIELD AND WINDOWS

Repairing Leaks

Leaks can be repaired without removing and re-installing glass

If water is leaking between caulking material and body or between glass and caulking material, determine extent of leak by applying water while pushing glass outward

To stop the leak apply Primer and then sealant to the leak point.


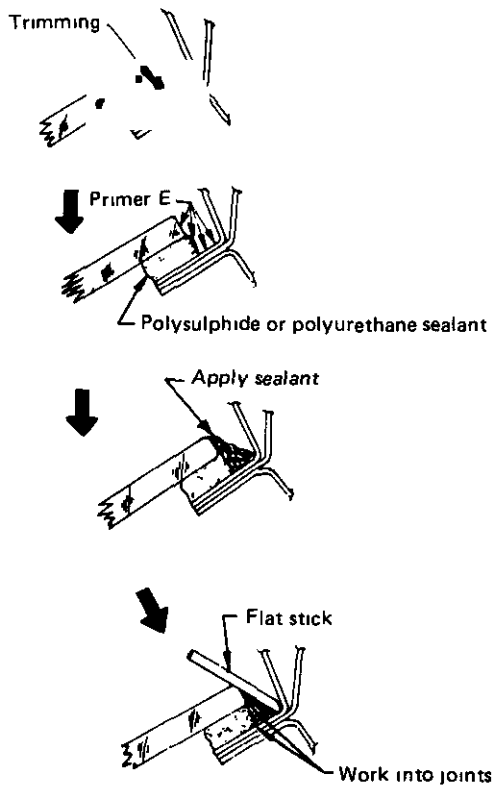


SBF182B

T-BAR ROOF

- Handle T-bar roof glass with care so not to damage it
- Apply sealant to portions susceptible to water leakage if necessary.
- Side molding, sash, lock basement and glass of T-bar roof constitute one unit and cannot be disassembled

T-bar roof female lock adjustment

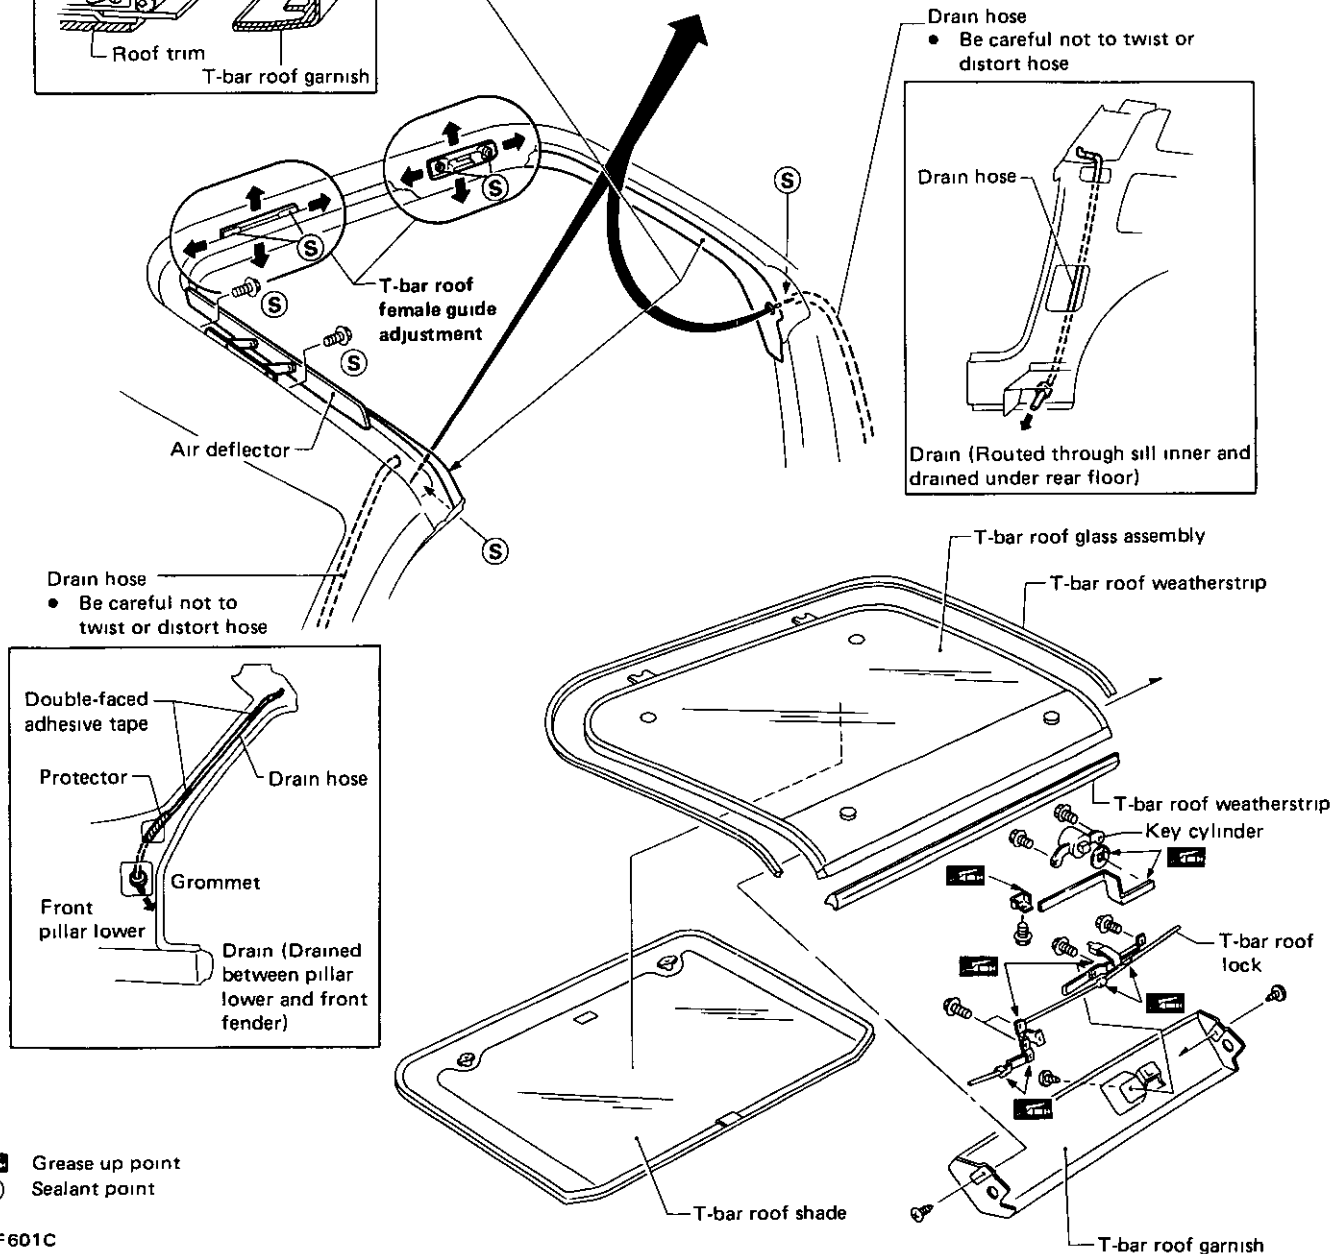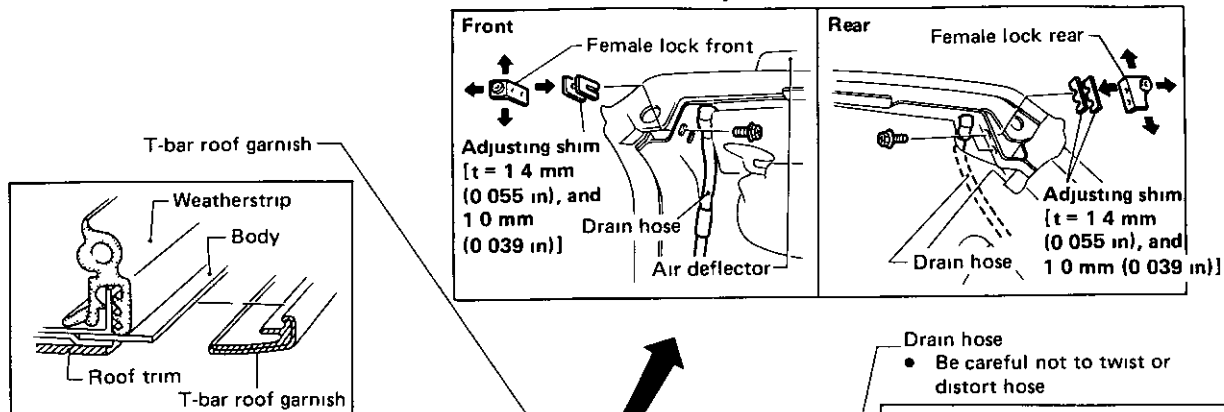


Grease up point
 (S) Sealant point

SBF601C


MIRROR

Door Mirror

29 - 38 N m
(0.30 - 0.39 kg-m, 2.2 - 2.8 ft-lb)

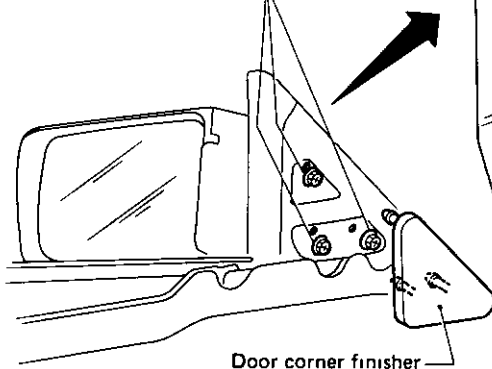

Initial setting

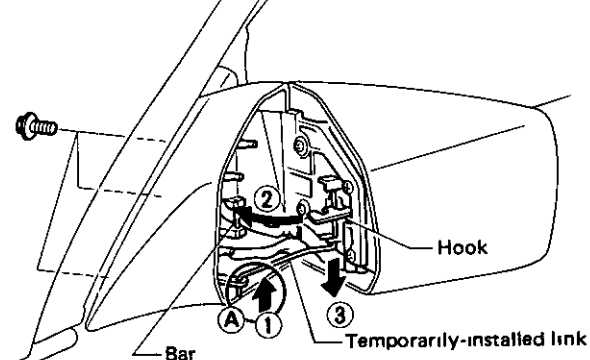

Procedure


- ① After installing mirror base to door, remove portion (A) of temporarily-installed link
- ② Hook the bar with the hook and make sure it is hooked securely
- ③ Tilt mirror body backward and while holding mirror, remove temporarily-installed link

CAUTION

Never remove temporarily-installed link from mirror body, before hooking the bar with the hook

SBF434B


ELECTRICAL REMOTE CONTROL DOOR MIRROR/WIRING DIAGRAM

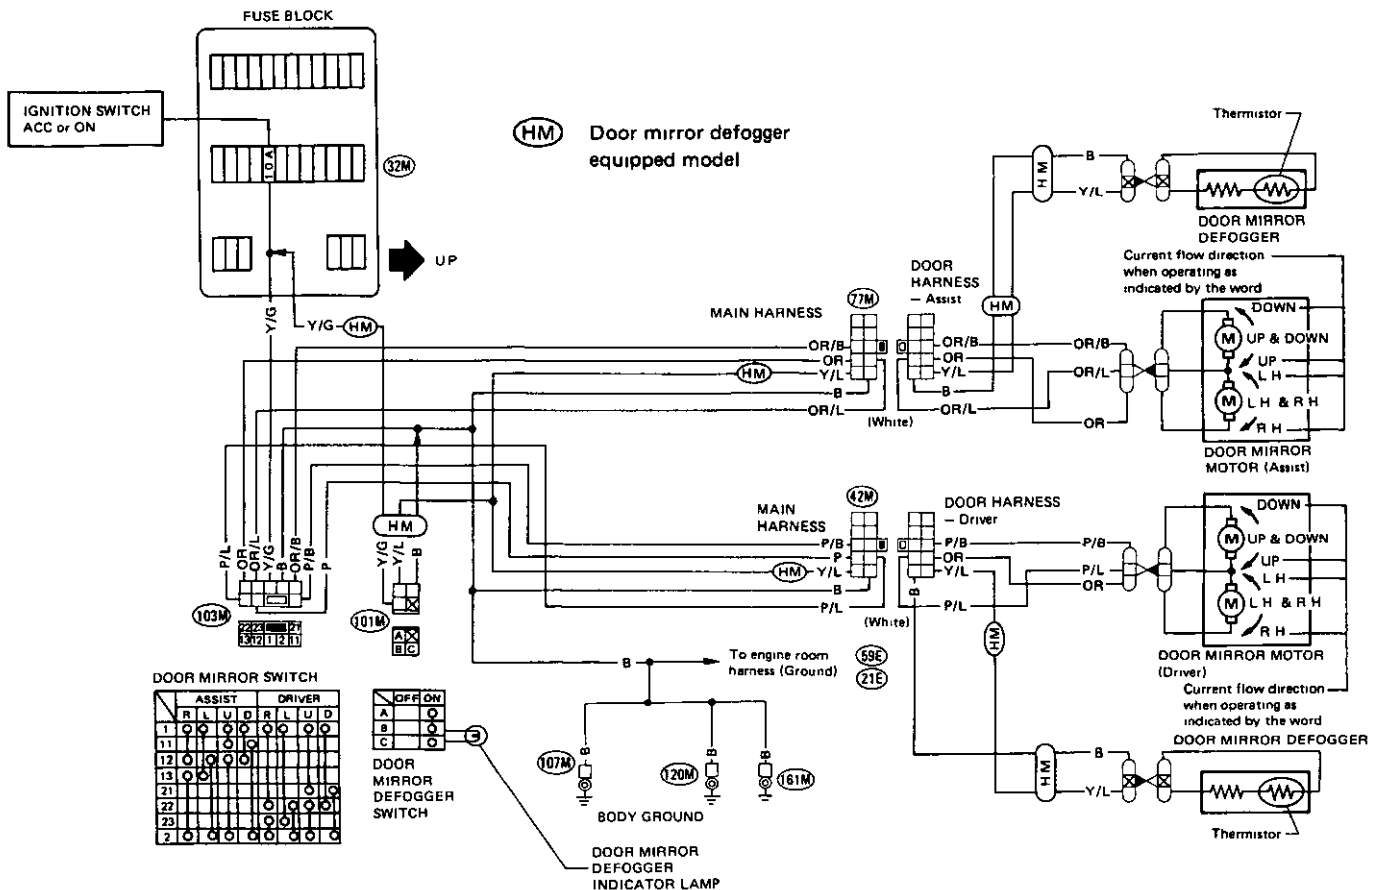

SBF540D

REAR AIR SPOILER

- When installing, make sure that there are no gaps or waves at ends of air spoiler

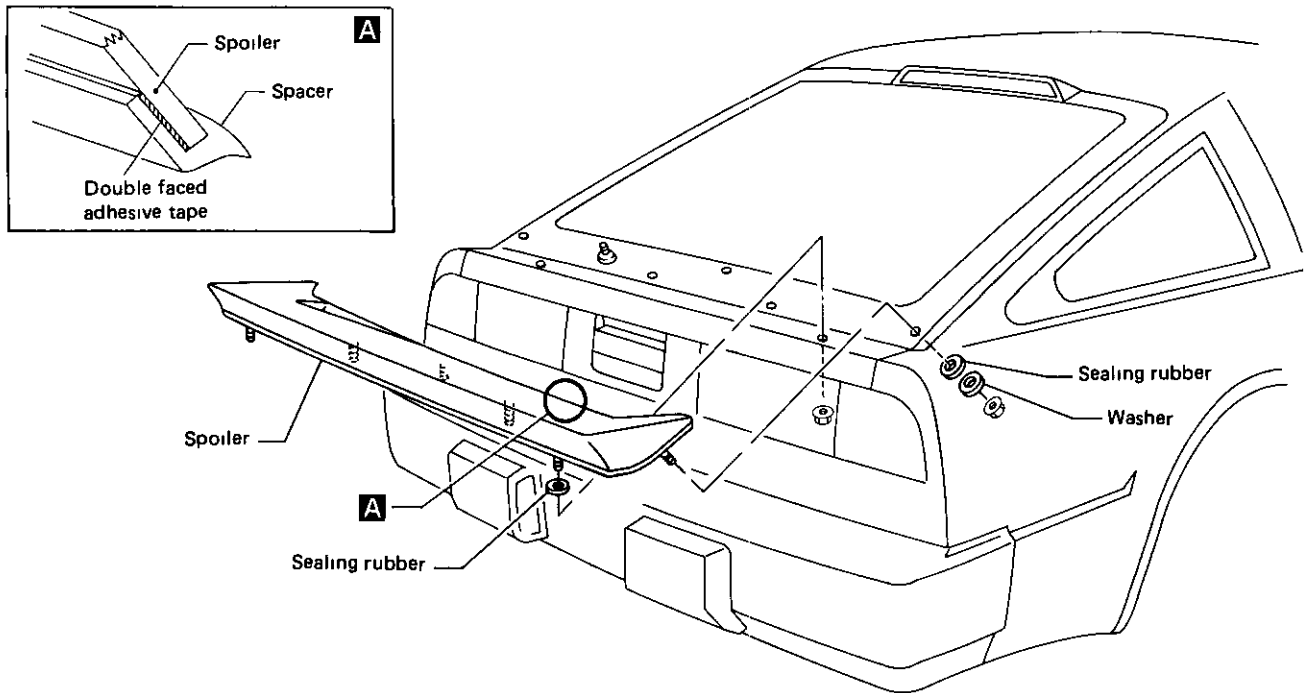


SBF491D


REAR COMBINATION LAMP

Removal and Installation

- Rear combination lamps are installed with nuts and butyl sealant.

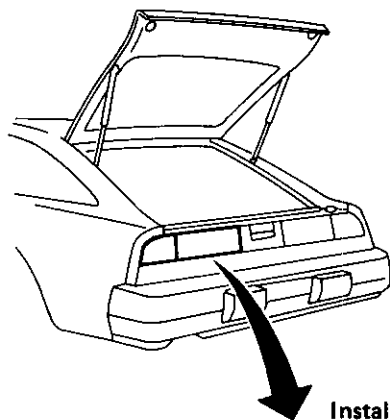


Removal

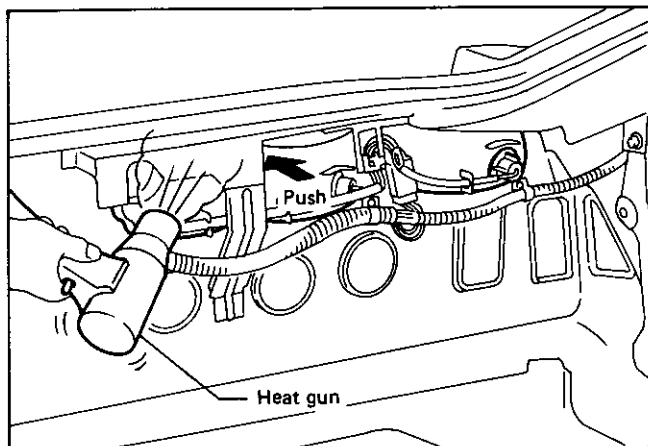

- Warm up lamp assembly area to a temperature of a little below 60° C (140° F)

Installation

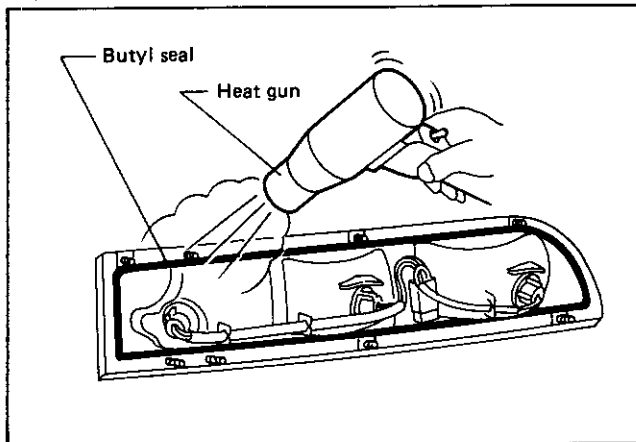

- Warm up lamp assembly area to a temperature of a little below 60° C (140° F)
- Apply butyl seal evenly as it tends to become thin in the corners

SBF491D

BODY ALIGNMENT

- All dimensions indicated in figures are actual ones.
- When a tram tracking gauge is used, adjust both pointers to equal length and check the pointers and gauge itself to make sure there is no free play.
- When a measuring tape is used, check to be sure there is no elongation, twisting or bending.
- Measurements should be taken at the center of the mounting holes
- An asterisk (*) following the value at the measuring point indicates that the measuring point on the other side is symmetrically the same value.
- Measurement points

The coordinates of the measurement points are the distances measured from the respective dimension lines in the directions of "x", "y" and "z".


Dimension lines: "x" line — Center line of vehicle

"y" line — Center line of front axle (Any measurement point in front of the dimension line refers to a minus "-" value.)

"z" line — Datum line (Any measurement point under the dimension line refers to a minus "-" value.)

Engine Compartment

MEASUREMENT

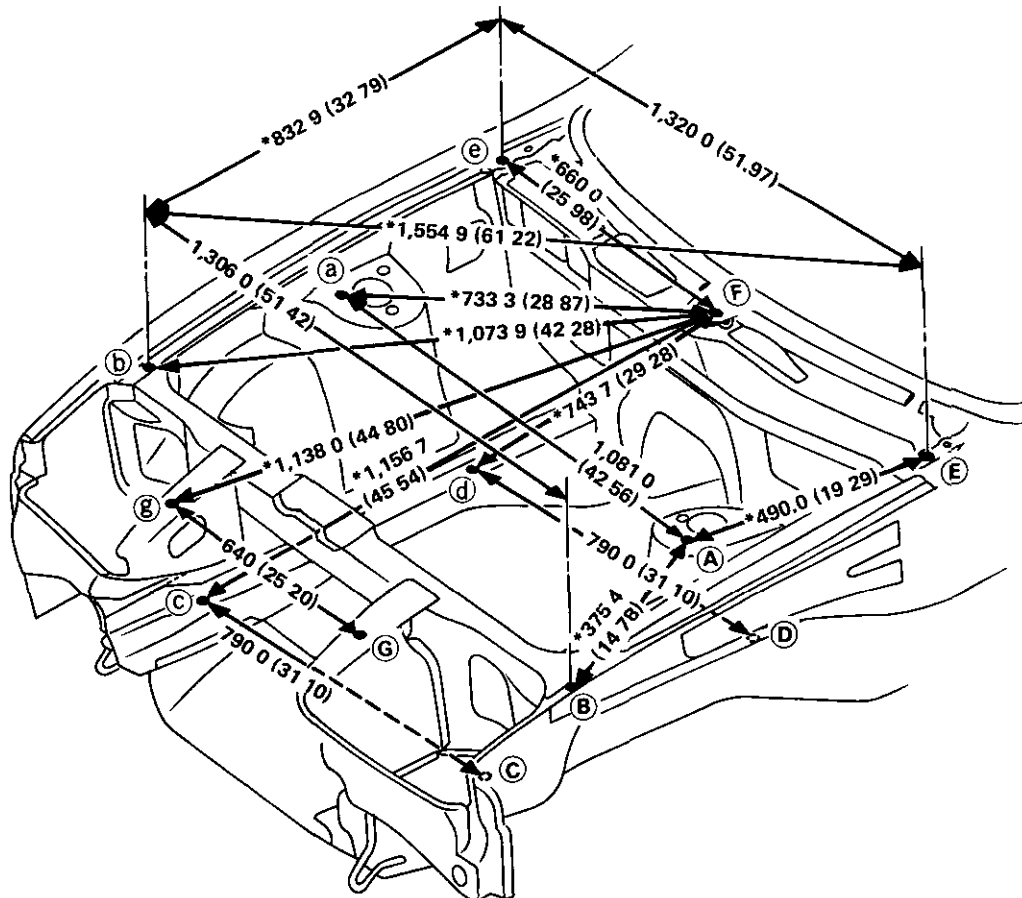





Unit mm (in)

SBF420B

BODY ALIGNMENT



Engine Compartment (Cont'd)

MEASUREMENT POINTS

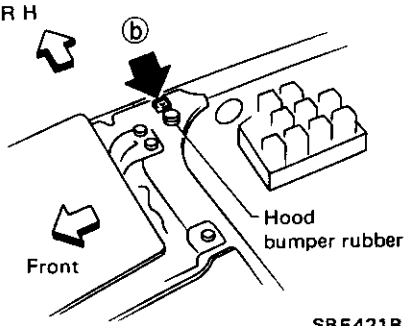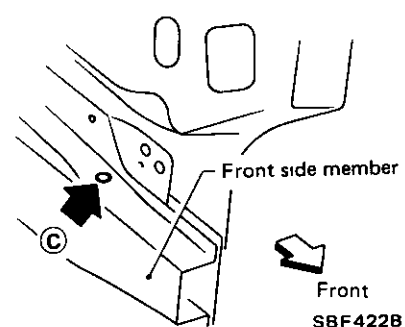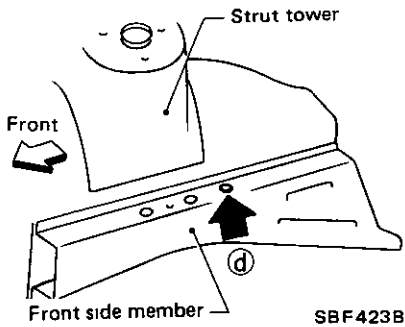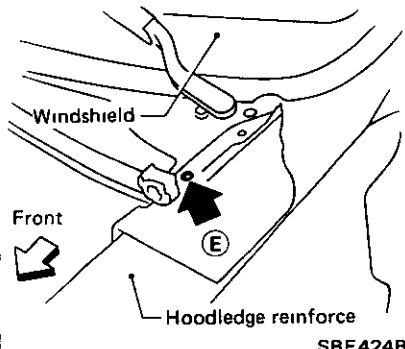Points	Hole dia mm (in)	Detailed points	Coordinates mm (in)		
			"x"	"y"	"z"
(A) (a)	12 (0 47)	Hole for front suspension upper mounting (Outside front hole)	540 5 (21 28)	26 8 (1 055)	919 0 (36 18)
(B) (b)	9 (0 35)		653 0 (25 71)	-325 0 (-12 80)	852 0 (33 54)
(C) (c)	5 4 (0 213)		395 0 (15 55)	-460 0 (-18 11)	490 0 (19 29)
(D) (d)	8 (0 31)		395 0 (15 55)	100 0 (3 94)	490 0 (19 29)
(E) (e)	11 (0 43)		660 0 (25 98)	500 0 (19 69)	966 0 (38 03)

BODY ALIGNMENT


Engine Compartment1 (Cont'd)

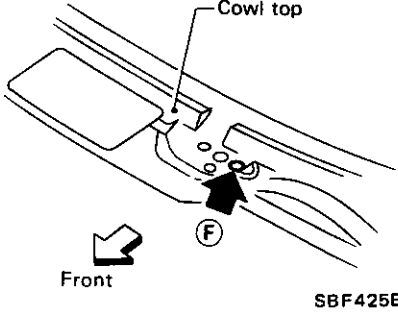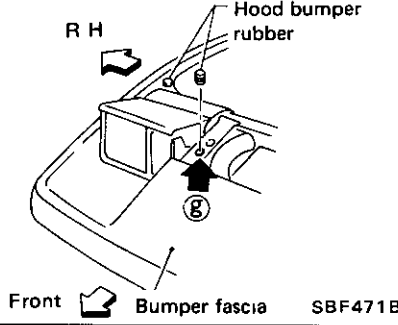Points	Hole dia mm (in)	Detailed points		Coordinates mm (in)		
				"x"	"y"	"z"
(F)	7 (0 28)		Hole for mounting wiper pivot	0 0 (0 00)	520 8 (20 50)	959 0 (37 76)
(G) (g)	16 (0 63)		Hole for mounting hood bumper rubber on headlamp side housing	320 0 (12 60)	-556 5 (-21 91)	779 0 (30 67)

BODY ALIGNMENT

Underbody

MEASUREMENT

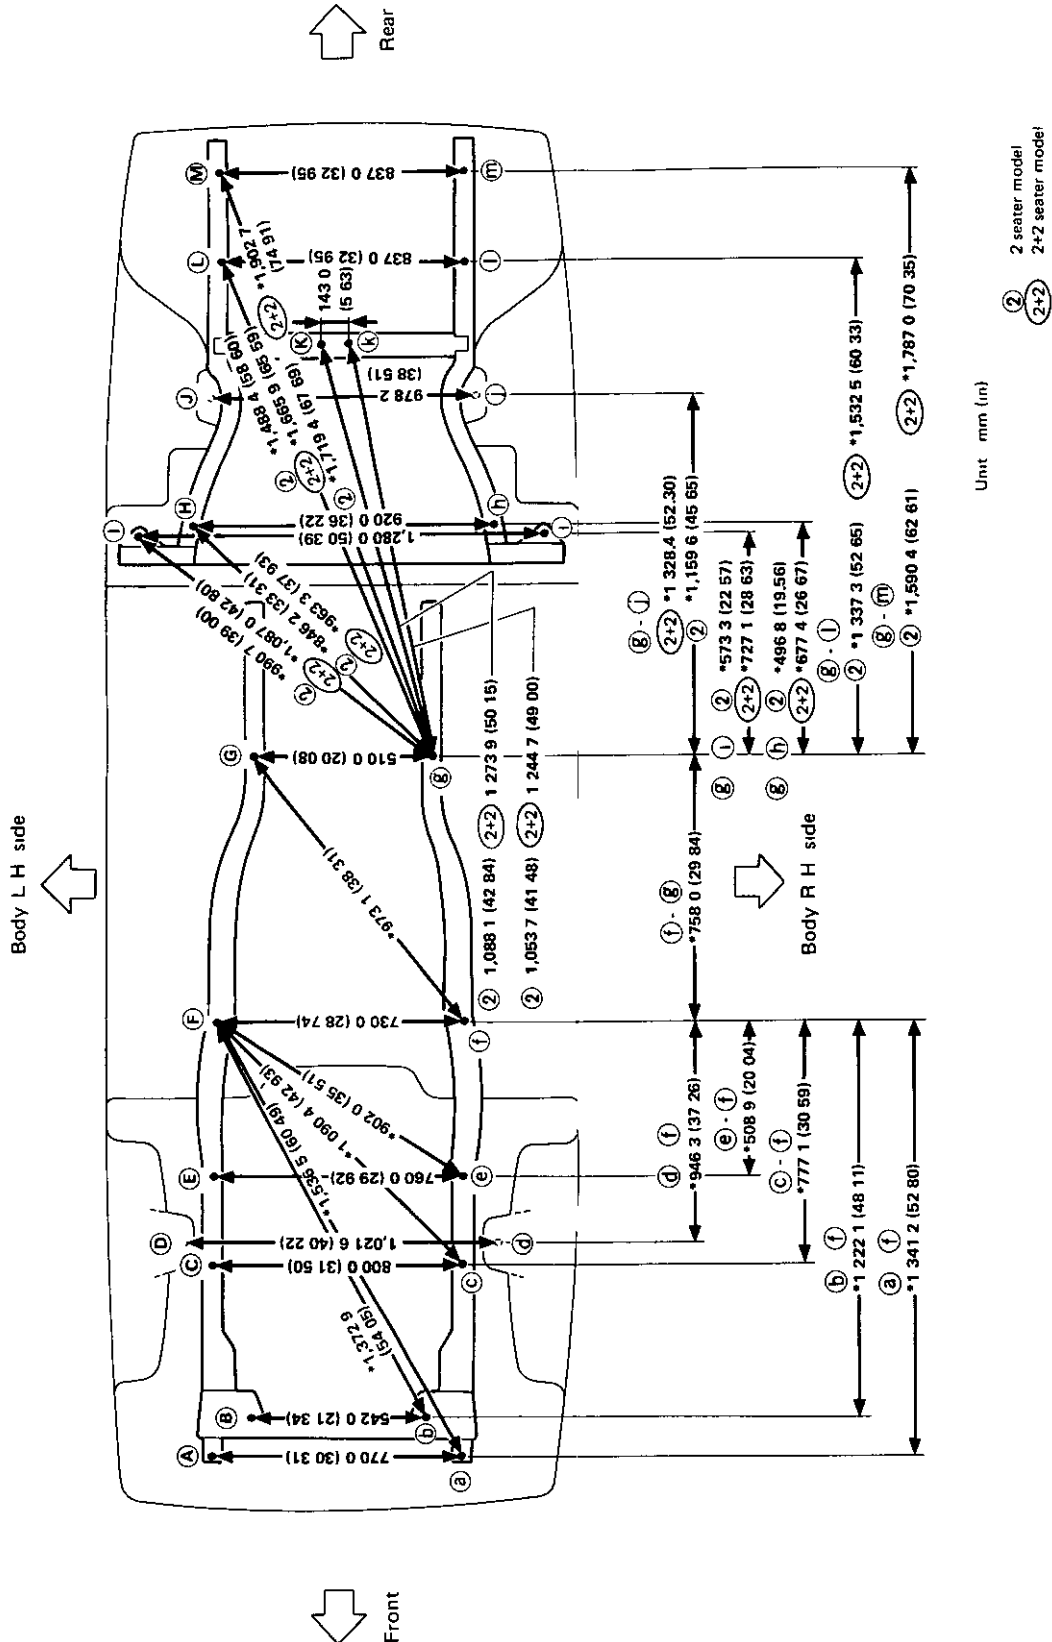


SBF426B

BODY ALIGNMENT

Underbody (Cont'd)





MEASUREMENT POINTS

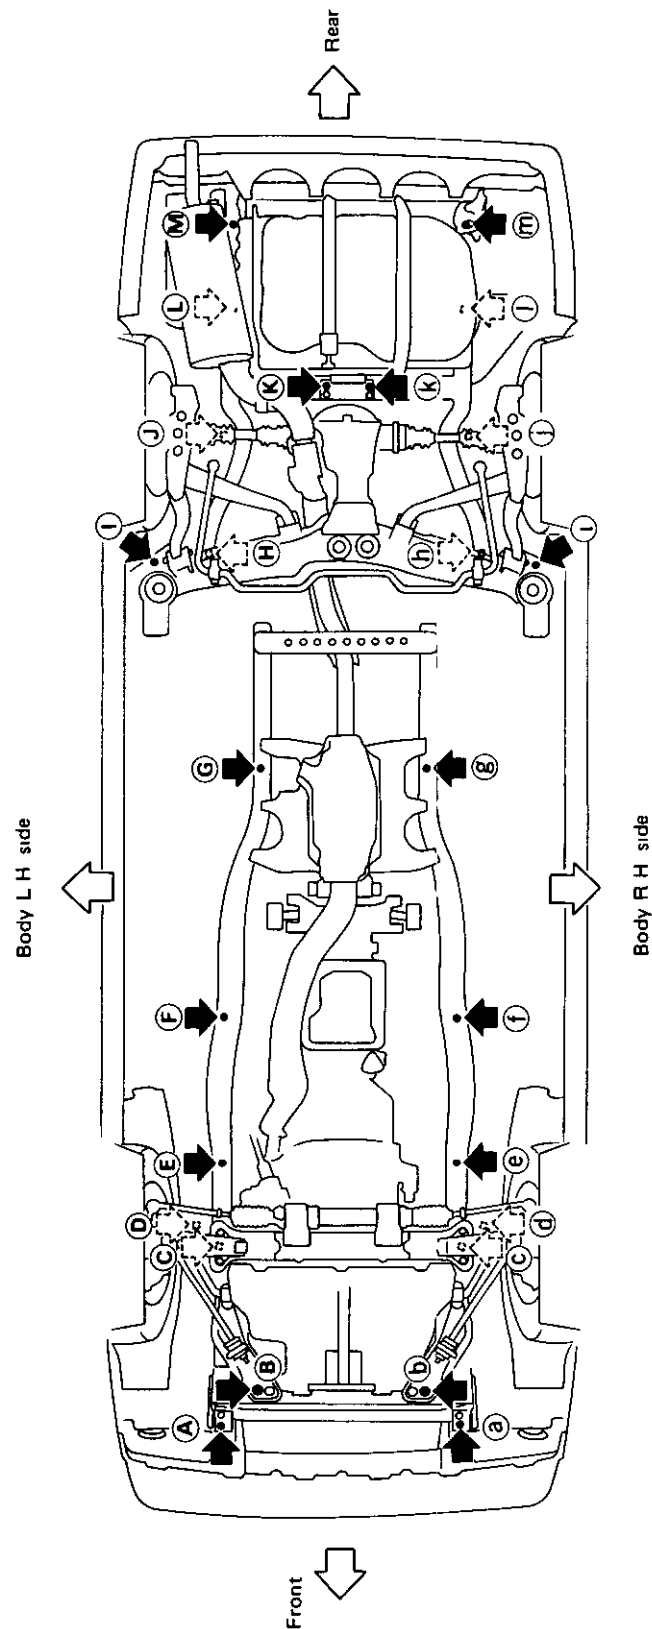

SBF433B




BODY ALIGNMENT

Underbody (Cont'd)

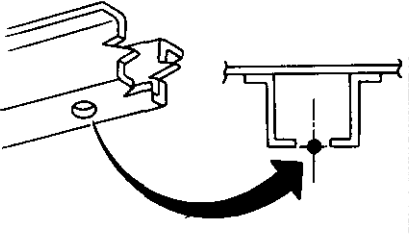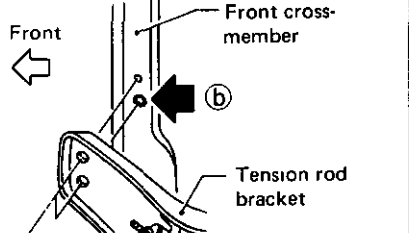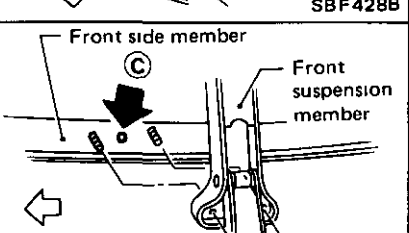Points	Hole dia mm (in)	Detailed points	Coordinates mm (in)			
			"x"	"y"	"z"	
(A) (a)	13 (0 51)		Hole for front air spoiler mounting	385 0 (15 16)	-585 0 (-23 03)	388 0 (15 28)
(E) (e)	15 (0 59)		Hole for water drainage	380 0 (14 96)	251 5 (9 90)	361 6 (14 24)
(F) (f)	18 (0 71)		Hole for locating	365 0 (14 37)	750 0 (29 53)	260 5 (10 26)
(G) (g)	13 (0 51)			255 0 (10 04)	1,500 0 (59 06)	261 0 (10 28)
(L) (l)	13 (0 51)	 SBF427B	Hole for rear bumper mounting	418 5 (16 48)	2 seater model 2,800 0 (110 24) 2+2 seater model 3,000 0 (118 11)	528 8 (20 82)
(M) (m)	15 (0 59)			418 5 (16 48)	2 seater model 3,060 0 (120 47) 2+2 seater model 3,260 0 (128 35)	523 8 (20 62)
(B) (b)	13 (0 51)	 SBF428B	Hole for mounting tension rod bracket on underside of front crossmember	271 0 (10 67)	-465 0 (-18 31)	325 5 (12 81)
(C) (c)	16 (0 63)	 SBF429B	Hole for locating on front suspension member mounting portion (Underside of front side member)	400 0 (15 75)	-10 0 (-0 394)	422 0 (16 61)

BODY ALIGNMENT

Underbody (Cont'd)

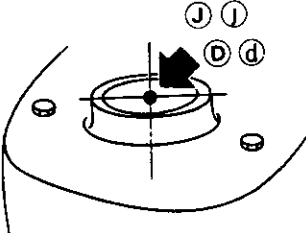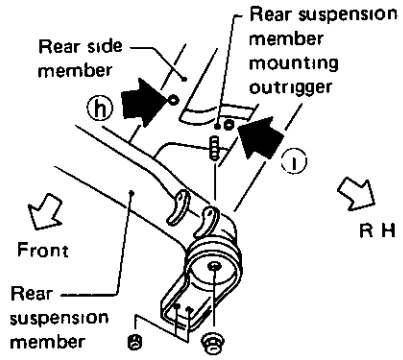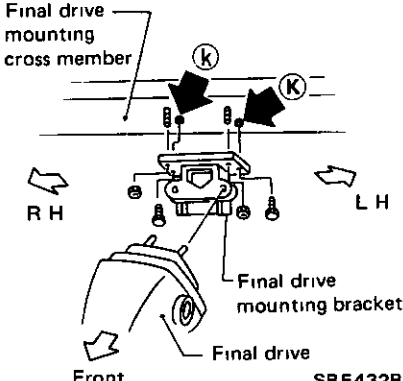Points	Hole dia mm (in)	Detailed points		Coordinates mm (in)		
				"x"	"y"	"z"
Ⓓ Ⓓ	82 3 (3 240)	 SBF430B	Front suspension upper mounting	510 8 (20 11)	80 0 (3 150)	912 6 (35 93)
Ⓙ Ⓙ	54 (2 13)		Rear suspension shock absorber upper mounting	489 1 (19 26)	2 seater model 2,450 2 (96 46) 2+2 seater model 2,650 2 (104 34)	883 0 (34 76)
Ⓕ Ⓕ	15 (0 59)	 SBF431B	Hole for locating on underside of member	460 0 (18 11)	2 seater model 1,930 0 (75 98) 2+2 seater model 2,130 0 (83 86)	402 0 (15 83)
Ⓛ Ⓛ	13 (0 51)			640 0 (25 20)	2 seater model 1,900 0 (74 80) 2+2 seater model 2,100 0 (82 68)	404 0 (15 91)
Ⓚ	15 (0 59)	 SBF432B	Hole for mounting final drive on underside of final drive mounting crossmember	74 0 (2 913)	2 seater model 2,497 5 (98 33) 2+2 seater model 2,697 5 (106 20)	545 0 (21 46)
Ⓚ				69 0 (2 717)	2 seater model 2,497 5 (98 33) 2+2 seater model 2,697 5 (106 20)	545 0 (21 46)

NISSAN FACTORY SERVICE MANUAL CDROM END-USER LICENSE AGREEMENT

NOTICE TO USER: THIS IS A CONTRACT. BY PURCHASING AND USING THE SERVICE MANUAL ON CDROM, YOU ACCEPT ALL THE TERMS AND CONDITIONS OF THIS AGREEMENT.

This End User License Agreement accompanies the Service Manual on CDROM product and related explanatory materials. Please read this Agreement carefully. By purchasing and using the Service Manual on CDROM, you are implying that you have carefully read, agree with, and will adhere to the conditions set forth in this agreement. If you do not wish to accept the terms of this End User Agreement please do not use the Service Manual on CDROM. You will not be permitted to use the Service Manual on CDROM without consenting to this end user agreement.

Upon your acceptance of this Agreement, Courtesy Nissan grants to you a nonexclusive license to use the Service Manual on CDROM, provided that you agree to the following:

USE OF SOFTWARE

You may install the contents of the CD on a hard disk or other storage device for personal use only. Each Service Manual on CDROM comes with a single user license. Under no circumstances should the contents of the Service Manual CDROM be placed on a server for purposes of distributing or allowing access to the material over a network.

COPYRIGHT AND TRADEMARK RIGHTS

The Service Manual CDROM is owned by Courtesy Nissan and its structure and organization, all graphics and coding are considered intellectual property of Courtesy Nissan. The Service Manual on CDROM is also protected by United States Copyright Law and International Treaty provisions. This Agreement does not grant you any intellectual property or resale rights to the Service Manual CDROM.

RESTRICTIONS

You agree not to modify, adapt, translate, reverse engineer, decompile or disassemble the PDF file on the Service Manual CDROM. The Service Manual on CDROM is licensed and distributed by Courtesy Nissan for single user utilization of its contents only. Licensed users will be permitted to use the contents of the Service Manual CDROM for multimedia presentation to an audience from a single machine using a large display or projection device but the Service Manual CDROM may not otherwise be distributed, sold to or made accessible to multiple users.

NO WARRANTY

The software is being delivered to you AS IS and Courtesy Nissan makes no warranty as to its use or performance. COURTESY NISSAN DOES NOT AND CANNOT WARRANT THE PERFORMANCE OR RESULTS YOU MAY OBTAIN BY USING THE SERVICE MANUAL CDROM OR DOCUMENTATION, NOR MAKES ANY WARRANTIES, EXPRESS OR IMPLIED, AS TO NONINFRINGEMENT OF THIRD-PARTY RIGHTS, MERCHANTABILITY, OR FITNESS FOR ANY PARTICULAR PURPOSE. IN NO EVENT WILL COURTESY NISSAN BE LIABLE TO YOU FOR ANY CONSEQUENTIAL, INCIDENTAL, OR SPECIAL DAMAGES FOR ANY REASON.

Courtesy Nissan
1777 North Central Expressway
Richardson, TX 75080
(800)527-1909

GOVERNING LAW AND GENERAL PROVISIONS

This Agreement will be governed by the laws of the State of Texas, USA, excluding the application of its conflicts of law rules. This Agreement will not be governed by the United Nations Convention on Contracts for the International Sale of Goods, the application of which is expressly excluded. If any part of this Agreement is found void and unenforceable, it will not affect the validity of the balance of the Agreement, which shall remain valid and enforceable according to its terms. You agree that the Service Manual on CDROM will not be shipped, transferred or exported into any country or used in any manner prohibited by the United States Export Administration act or any other export laws, restrictions or regulations. This Agreement shall automatically terminate upon failure by you to comply with its terms. This Agreement may only be modified in writing signed by and authorized officer for Courtesy Nissan.

Courtesy Nissan
1777 North Central Expressway
Richardson, TX 75080
USA

YOUR ACCEPTANCE OF THE FOREGOING AGREEMENT IS IMPLIED UPON PURCHASING AND USING THE SERVICE MANUAL CDROM.