


## 6. Fuel Insulator


### A: REMOVAL

#### 1. FUEL PUMP INSULATOR

- 1) Release the fuel pressure. <Ref. to FU(H4DOTC)-151, RELEASING OF FUEL PRESSURE, PROCEDURE, Fuel.>
- 2) Disconnect the ground cable from battery.
- 3) Open the fuel filler lid and remove the fuel filler cap.
- 4) Remove the intake manifold. <Ref. to FU(H4DOTC)-19, REMOVAL, Intake Manifold.>
- 5) Remove the clip (A) on the generator cord, and remove the fuel pipe protector.

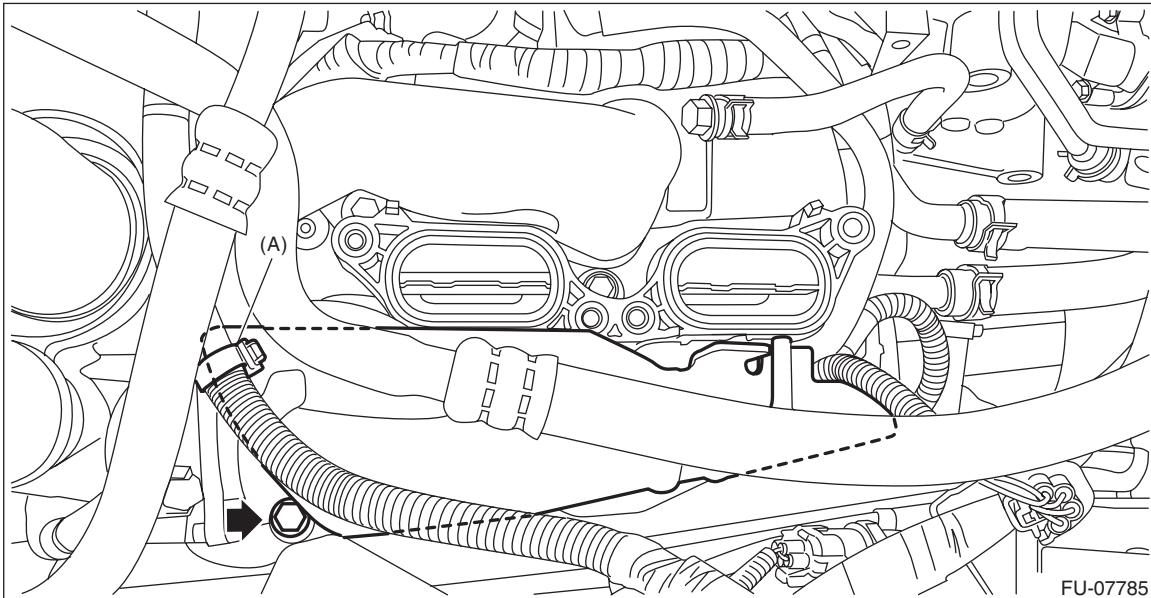


- 6) Remove the fuel pump insulator.

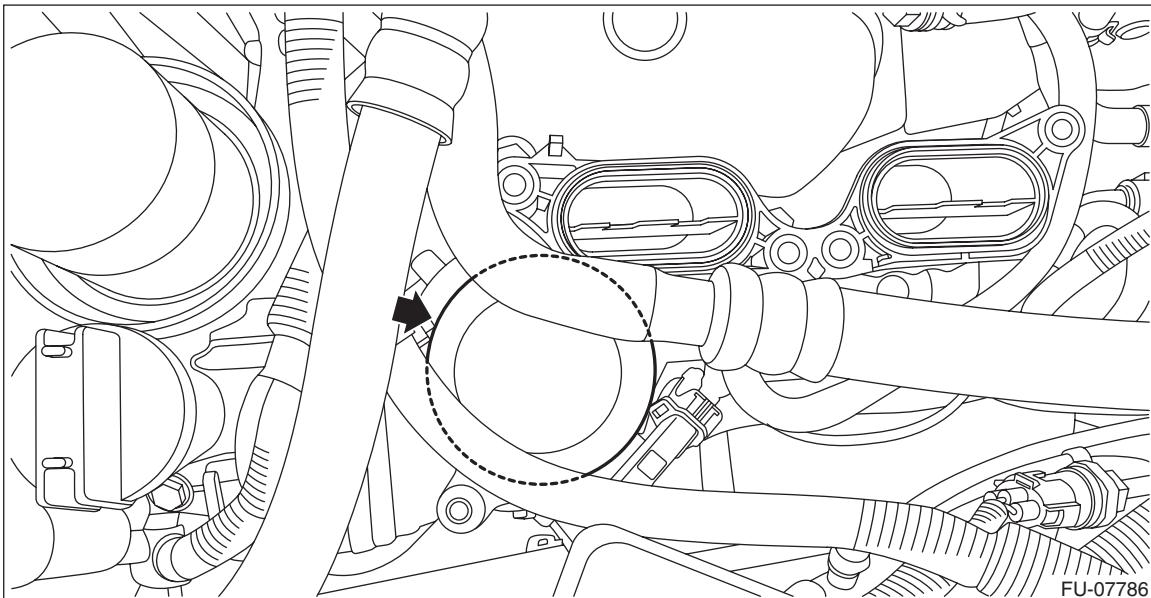


### 2. FUEL PIPE INSULATOR NO. 1

- 1) Release the fuel pressure. <Ref. to FU(H4DOTC)-151, DRAINING FUEL (WITH SUBARU SELECT MONITOR), PROCEDURE, Fuel.>
- 2) Disconnect the ground cable from battery.
- 3) Open the fuel filler lid and remove the fuel filler cap.
- 4) Remove the intake manifold. <Ref. to FU(H4DOTC)-19, REMOVAL, Intake Manifold.>
- 5) Remove the fuel pipe insulator No. 1.

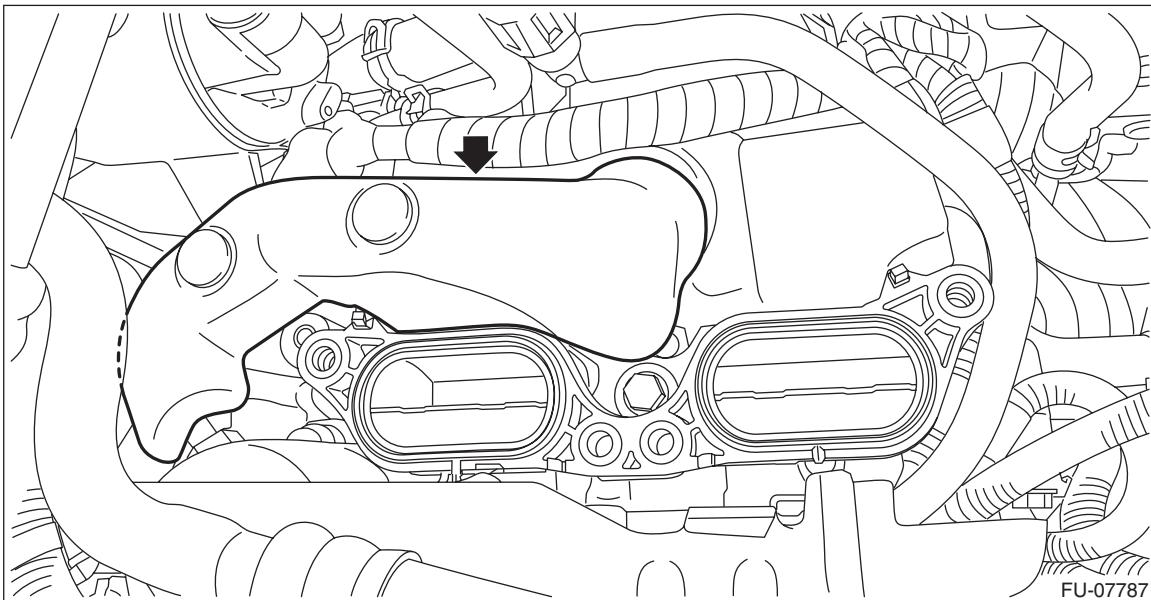

### 3. FUEL PIPE INSULATOR NO. 2

- 1) Remove the fuel pipe insulator No. 1. <Ref. to FU(H4DOTC)-47, FUEL PIPE INSULATOR NO. 1, REMOVAL, Fuel Insulator.>
- 2) Remove the fuel pipe insulator No. 2.

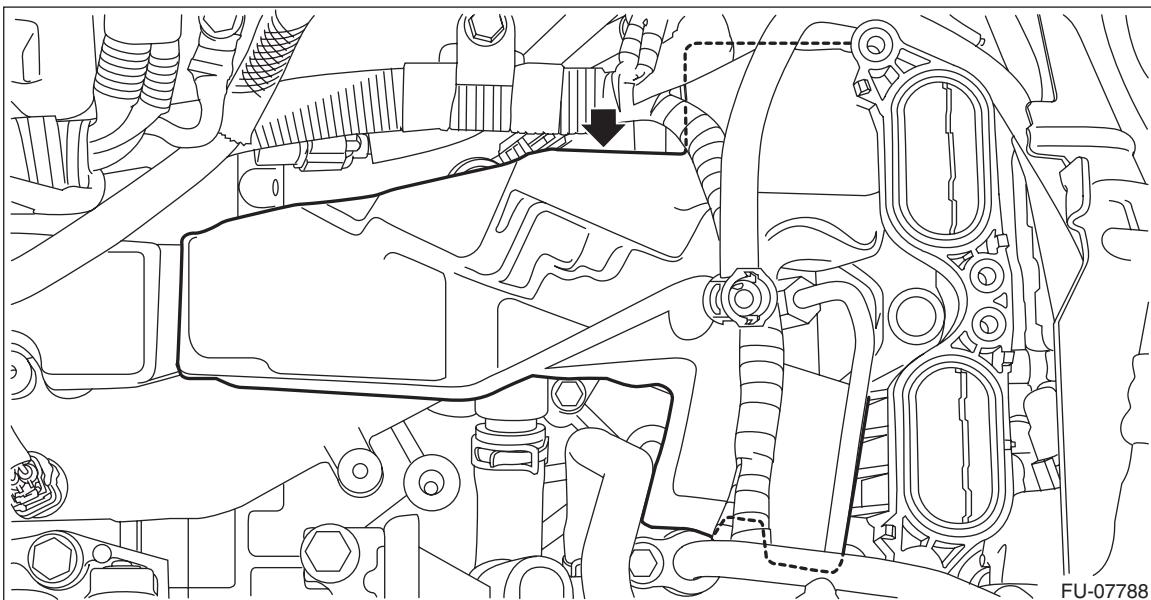


# Fuel Insulator


## FUEL INJECTION (FUEL SYSTEMS)

### 4. FUEL PIPE INSULATOR NO. 3


- 1) Release the fuel pressure. <Ref. to FU(H4DOTC)-151, DRAINING FUEL (WITH SUBARU SELECT MONITOR), PROCEDURE, Fuel.>
- 2) Disconnect the ground cable from battery.
- 3) Open the fuel filler lid and remove the fuel filler cap.
- 4) Remove the intake manifold. <Ref. to FU(H4DOTC)-19, REMOVAL, Intake Manifold.>
- 5) Disconnect the connector (A) from the EGR control valve.
- 6) Remove the bolts (B) securing the EGR cooler to the EGR control valve.
- 7) Remove the preheater hose (C) from the EGR control valve.

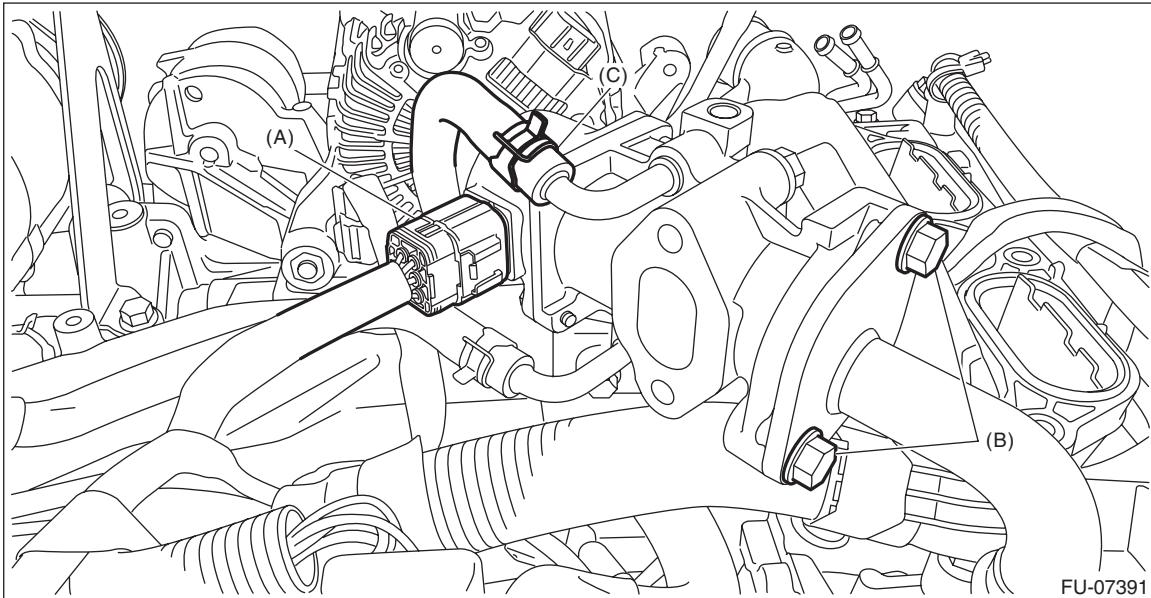

- 8) Remove the EGR control valve.

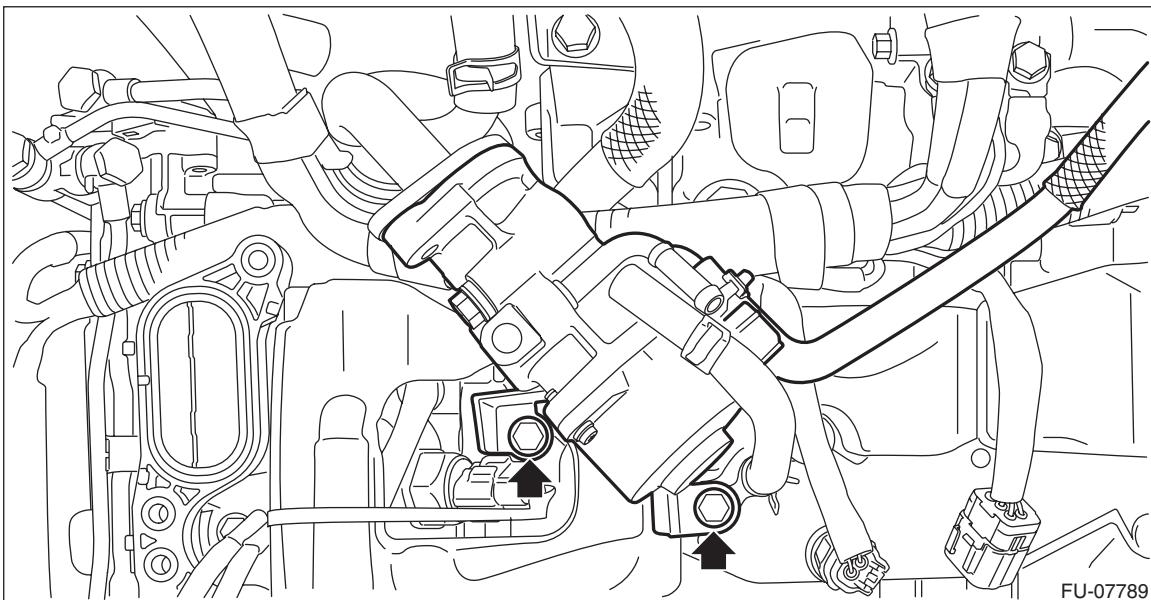

9) Disconnect the connector (A) on the fuel pressure sensor, and remove the fuel pipe insulator No. 3.

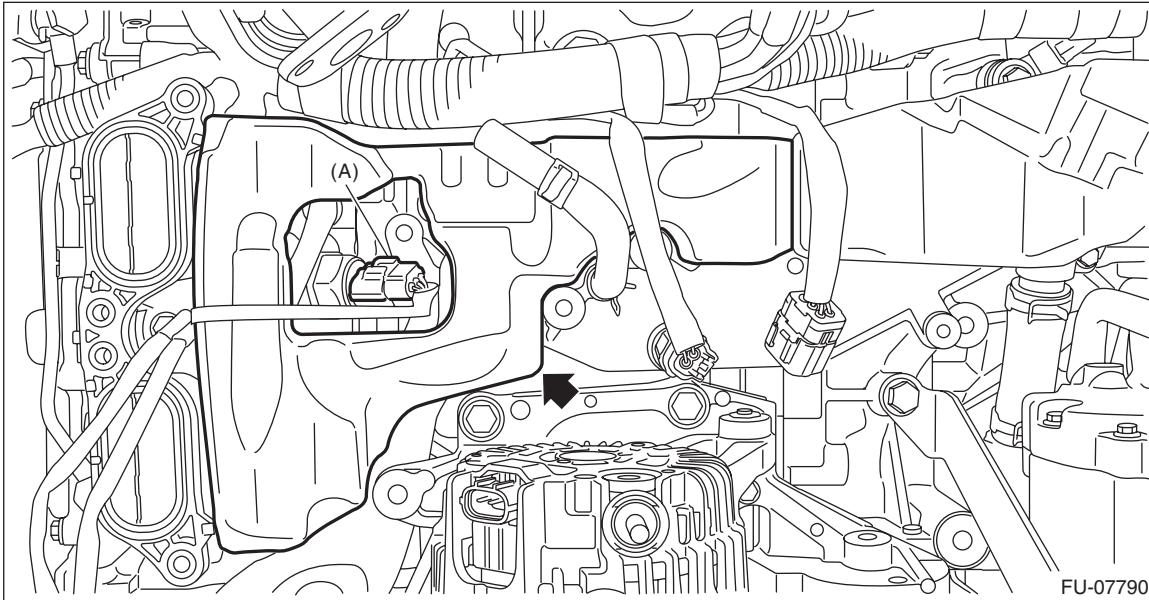

## B: INSTALLATION

### 1. FUEL PUMP INSULATOR


Install in the reverse order of removal.

### 2. FUEL PIPE INSULATOR NO. 1

Install in the reverse order of removal.

#### NOTE:

Push the sections (a) for the fuel pipe insulator No. 1, and secure them to the high-pressure fuel delivery pipe.

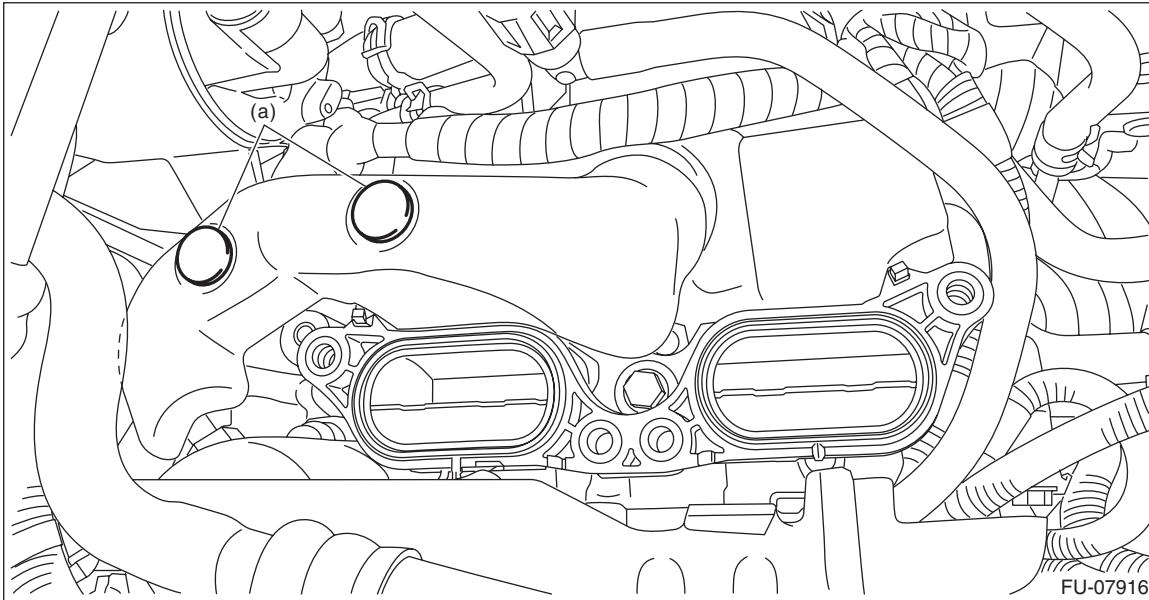

# Fuel Insulator

## FUEL INJECTION (FUEL SYSTEMS)

---

### 3. FUEL PIPE INSULATOR NO. 2

Install in the reverse order of removal.

### 4. FUEL PIPE INSULATOR NO. 3

Install in the reverse order of removal.

NOTE:

Use a new gasket.

***Tightening torque:***

**19 N·m (1.9 kgf·m, 14.0 ft-lb)**

### C: INSPECTION

Check that the fuel insulator has no deformation, cracks or other damages.