


27.Fuel Tank Protector

A: REMOVAL

- 1) Lift up the vehicle.
- 2) Remove the bolt and nuts and remove the fuel tank protector.

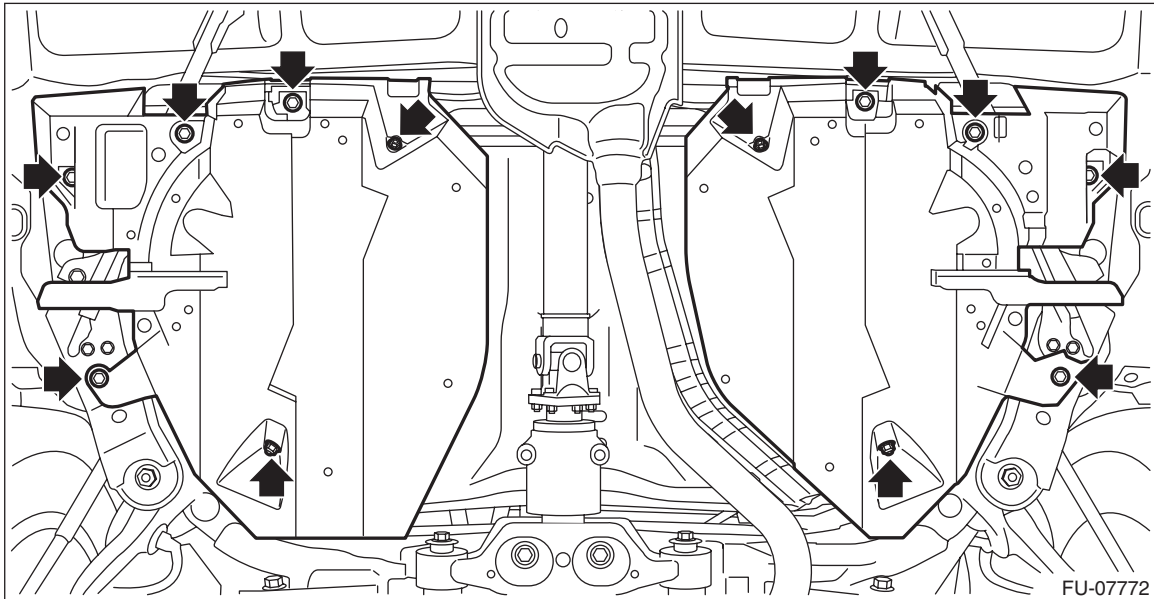

B: INSTALLATION

Install in the reverse order of removal.


NOTE:

Use a new self-locking nut.

Tightening torque:

T1: 9 N·m (0.9 kgf-m, 6.6 ft-lb)

T2: 18 N·m (1.8 kgf-m, 13.3 ft-lb)

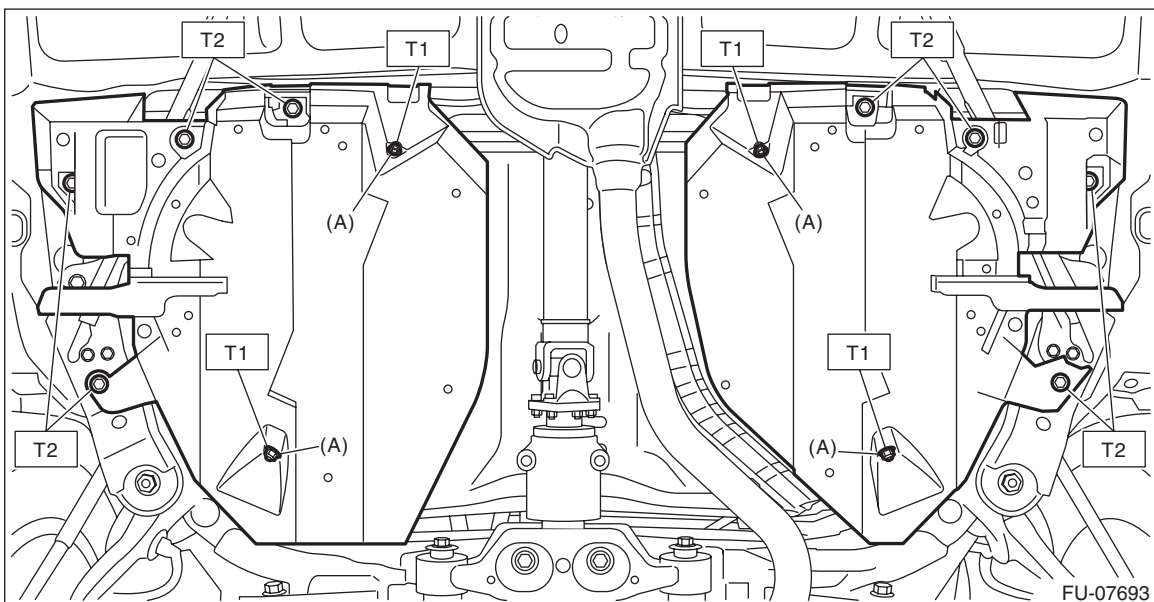

(A) Self-locking nut