

2. Accelerator Pedal

S107005

A: REMOVAL


S107005A18

- 1) Disconnect ground cable from battery.
- 2) Disconnect accelerator cable from throttle body.


CAUTION:

Be careful not to kink accelerator cable.


- 3) Remove instrument panel lower cover from instrument panel, and connector.
- 4) Disconnect accelerator cable from accelerator pedal lever.

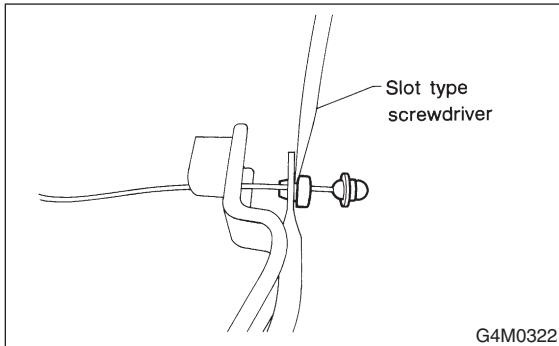

- 5) Working inside engine compartment, remove casing cap out of the toe board by turning it clockwise.

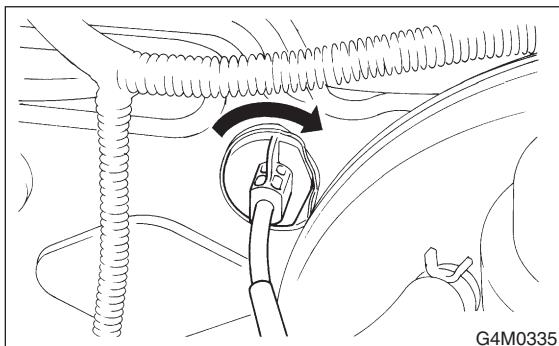

- 6) Pull out the cable from the toe board hole.
- 7) Remove accelerator pedal connecting bolt from accelerator pedal bracket.

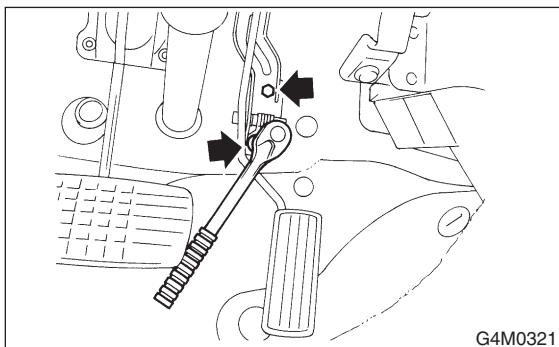


B: INSTALLATION

S107005A11

- 1) Install in the reverse order of removal.

CAUTION:

- Be careful not to bend clutch cable too much.
- Never fail to cover outer cable end with boot.
- Be careful not to kink accelerator cable.
- Make sure that holder and casing cap are securely connected.

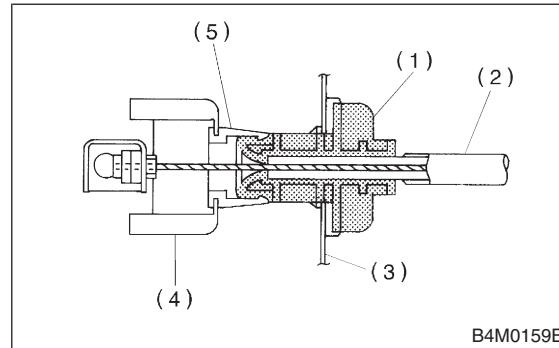

- 2) Adjust clutch pedal (2500 cc model) <Ref. to CL-24 ADJUSTMENT, Clutch Pedal.>
- 3) Inspect after pedal installation <Ref. to SP-4 INSPECTION, Accelerator Pedal.>


ACCELERATOR PEDAL

Speed Control Systems

C: DISASSEMBLY

S107005A06

- 1) Remove the clip, and then remove the accelerator pedal from the bracket.
- 2) Pull out the spring pin, and then remove the accelerator pedal from the accelerator pedal lever.

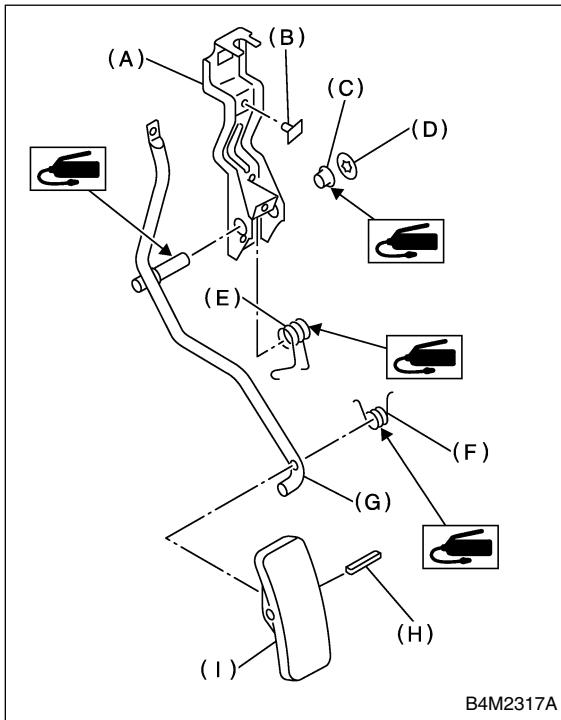

- (A) Bracket
- (B) Stopper
- (C) Bushing
- (D) Clip
- (E) Accelerator spring
- (F) Accelerator pedal spring
- (G) Accelerator pedal lever
- (H) Spring pin
- (I) Accelerator pedal

D: ASSEMBLY

S107005A02

Assemble in the reverse order of disassembly.

CAUTION:

Clean and apply grease to spacer and inside bore of a accelerator pedal.

E: INSPECTION

S107005A10

Lightly move pedal pad in lateral the direction to ensure pedal deflection is in specified range.

CAUTION:

If excessive deflection is noted, replace bushing and clip with new ones.

Deflection of accelerator pedal:

Service limit

5.0 mm (0.197 in) or less

