


## 4. Front Seat Belt

### A: REMOVAL


#### 1. OUTER BELT (FRONT)

- 1) Fold backrest all the way forward, and then move the front seat all the way forward.
- 2) Turn the ignition switch OFF, disconnect the ground cable from battery, and wait for more than 20 seconds before starting work.
- 3) Remove the center pillar lower trim. <Ref. to EI-47, REMOVAL, Lower Inner Trim.>
- 4) Remove the anchor cover. Loosen the shoulder anchor bolt, and then detach the shoulder anchor from center pillar.

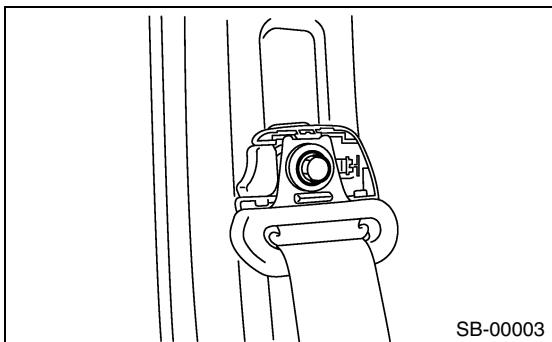

SB-00003

- 5) Turn over the floor mat to remove the bolts.

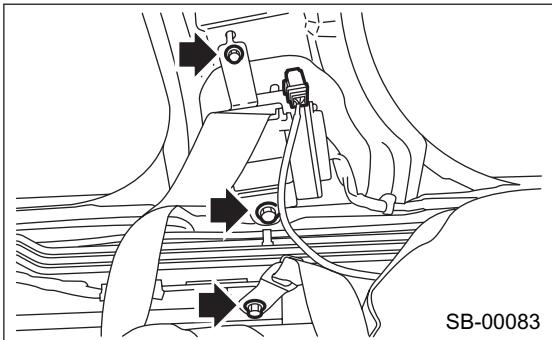

SB-00083


- 6) Disconnect the yellow connector of pretensioner harness, and remove the outer belt (front).

**CAUTION:**

- Do not drop or apply any impact to the pretensioner.
- Pretensioner and bracket should be treated as an assembly. Do not attempt to disassemble it.

#### 2. INNER BELT (FRONT)

- 1) Disconnect the connector.
- 2) Remove the anchor bolt, and then detach the inner belt.

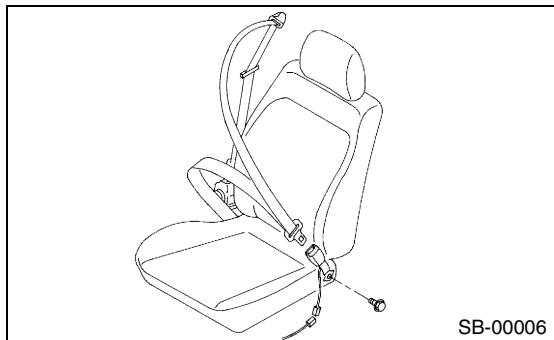

SB-00006

### B: INSTALLATION

#### 1. OUTER BELT (FRONT)

Install in the reverse order of removal.

**CAUTION:**

- The parts on right and left are not identical.
- Before installation, make sure that the correct part is used.
- Be careful not to twist the belts during installation.

#### 2. INNER BELT (FRONT)

Install in the reverse order of removal.

### C: INSPECTION

#### 1. OUTER BELT (FRONT)

Check for the following, and replace with new parts if necessary.

- Pretensioner is cracked or deformed.
- Seat belt is slackened, bent, or frayed. Seat belt is abnormally wound or extended.

#### 2. INNER BELT (FRONT)

Check for the following, and replace with new parts if necessary.

- Inner belt is deformed or damaged.
- Seat belt buckle is engaged improperly.