


3. Front Disc Rotor

A: REMOVAL


- 1) Lift up the vehicle, and remove the front wheels.
- 2) Remove the caliper body and the support from housing, and suspend it from the strut using a wire.

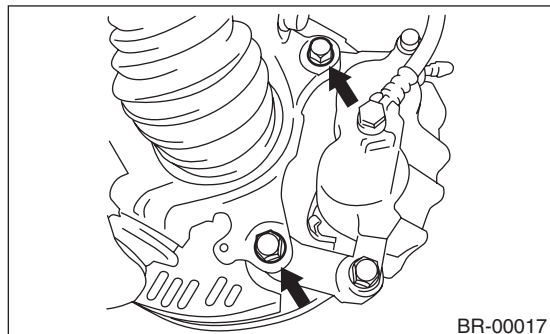

- 3) Remove the disc rotor.

NOTE:

If it is difficult to remove the disc rotor from the hub, drive an 8 mm bolt into the threaded section (B) of the rotor, then remove the rotor.

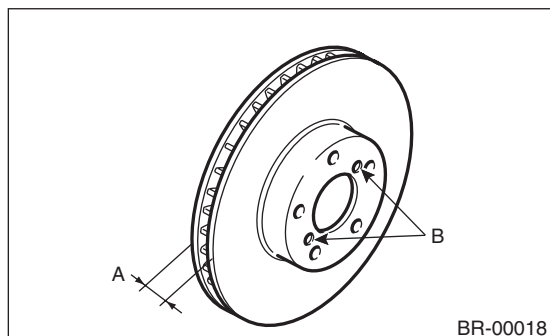

- 4) Remove mud and foreign matter from the caliper body assembly and the support.

B: INSTALLATION

- 1) Install the disc rotor.
- 2) Install the caliper body and the support to housing.


Tightening torque:

80 N·m (8.2 kgf-m, 59 ft-lb)

- 3) Install the front wheels.

C: INSPECTION


- 1) Check the front wheel bearing play and axle hub runout before the inspection of disc rotor runout limit. <Ref. to DS-16, INSPECTION, Front Axle.>
- 2) Secure the disc rotor by tightening the five wheel nuts.
- 3) Set a dial gauge 10 mm (0.39 in) inward from the disc rotor outer circumference. Rotate the disc rotor to check runout. If the disc rotor runout exceeds the limit, resurface the disc rotor. After grinding, check the thickness of the disc rotor according to the procedure in step 4).

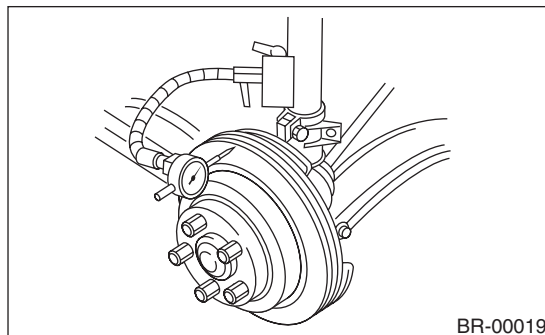

Disc rotor runout limit:

0.05 mm (0.0020 in)

- 4) Set a micrometer 10 mm (0.39 in) inward from the disc rotor outer perimeter, and then measure the disc rotor thickness. If the thickness of the disc rotor exceeds the service limit, replace with a new disc rotor.

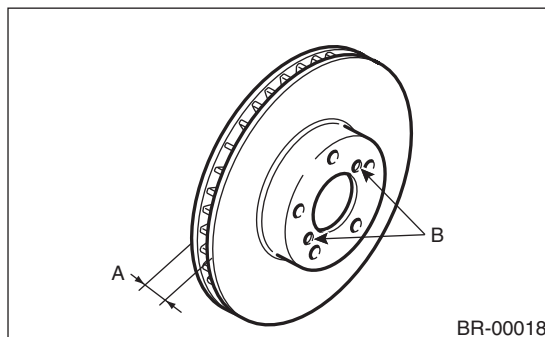

		Specifica- tion	Service limit	Disc rotor diameter
Disc rotor thickness A mm (in)	15"	24 (0.94)	22 (0.87)	277 (10.91)
	16"	24 (0.94)	22 (0.87)	294 (11.57)