



3. Parking Brake Cable

A: REMOVAL

- 1) Remove the rear seat cushion.
- 2) Remove the console box.
- 3) Remove the parking cable adjusting nut (self-locking nut).
- 4) Remove the parking brake lever. <Ref. to PB-4, REMOVAL, Parking Brake Lever.>
- 5) Roll up the floor mat and remove the clamps.

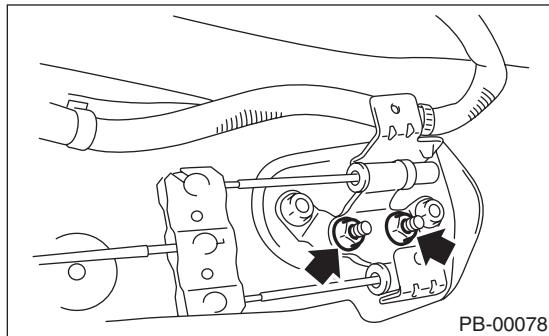


- 6) Remove the inner cable end from equalizer.

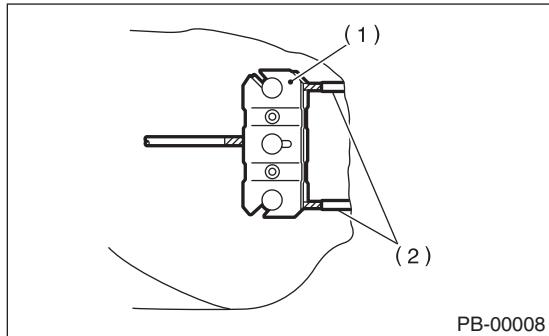

(1) Equalizer
(2) Inner cable end

- 7) Lift up the vehicle, and remove the rear wheels.
- 8) Remove the parking brake cable from rear brake. <Ref. to PB-6, REMOVAL, Parking Brake Assembly (Rear Disc Brake).> <Ref. to BR-27, REMOVAL, Rear Drum Brake Shoe.>
- 9) Remove the clamp from the rear brake.
- 10) Remove the cable clamp from the rear arm bracket.
- 11) Remove the cable clamp from rear floor.

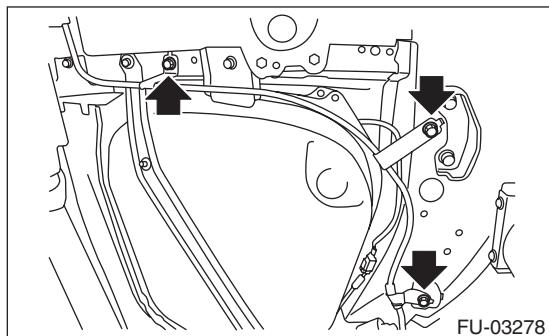

- 12) Remove the grommet from the rear floor, and remove the cable assembly.

B: INSTALLATION

- 1) Install in the reverse order of removal.

NOTE:

Be sure to pass the cable through the tunnel in the cable guide.

- 2) Be sure to adjust the lever stroke. <Ref. to PB-4, ADJUSTMENT, Parking Brake Lever.>

C: INSPECTION

Check and replace the removed cable if damaged, rusty or faulty.

- 1) Check the cable for smooth operation.
- 2) Check the inner cable for damage and rust.
- 3) Check the outer cable for damage, bends and cracks.
- 4) Check the boot for damage, cracks, and corrosion.