


26.Rear Gate Trim

A: REMOVAL

1) Remove the trim panel - rear gate UPR.

(1) Remove the claws on the trim edge.


(2) Release the claws in the center of trim, and remove the trim panel - rear gate UPR.

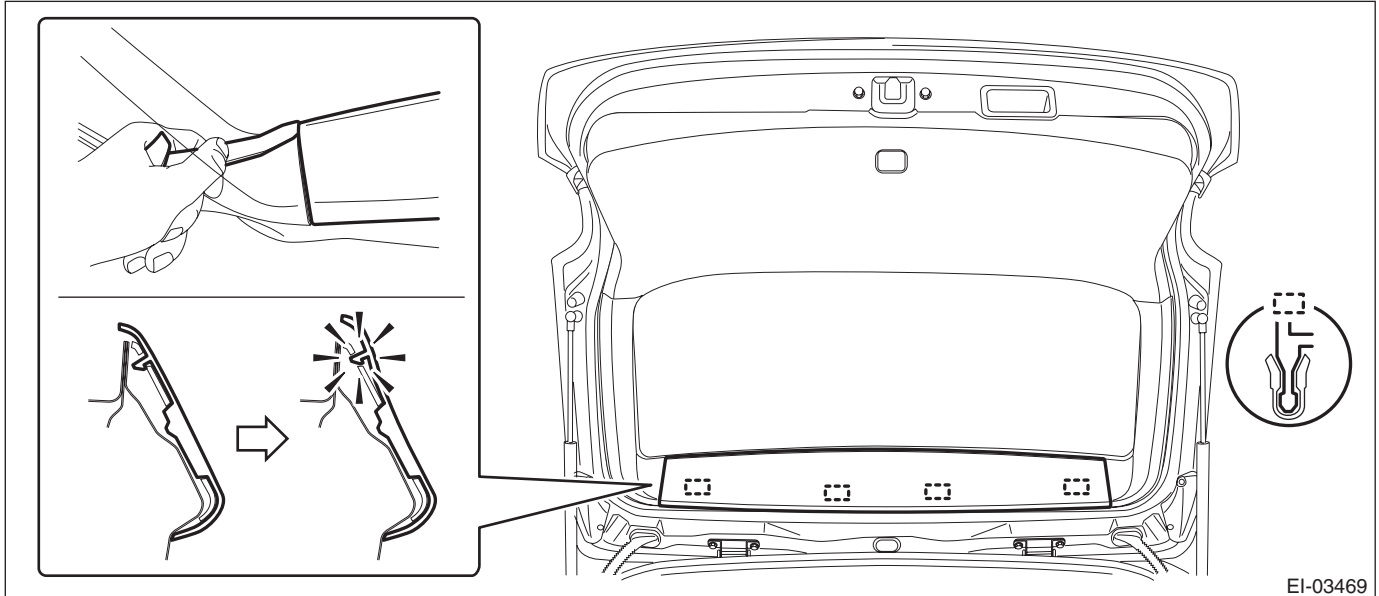


2) Remove the trim panel - rear gate pillar side.

(1) Release the claws.

(2) Remove the claws on the bottom of trim, and remove the trim panel - rear gate pillar side.

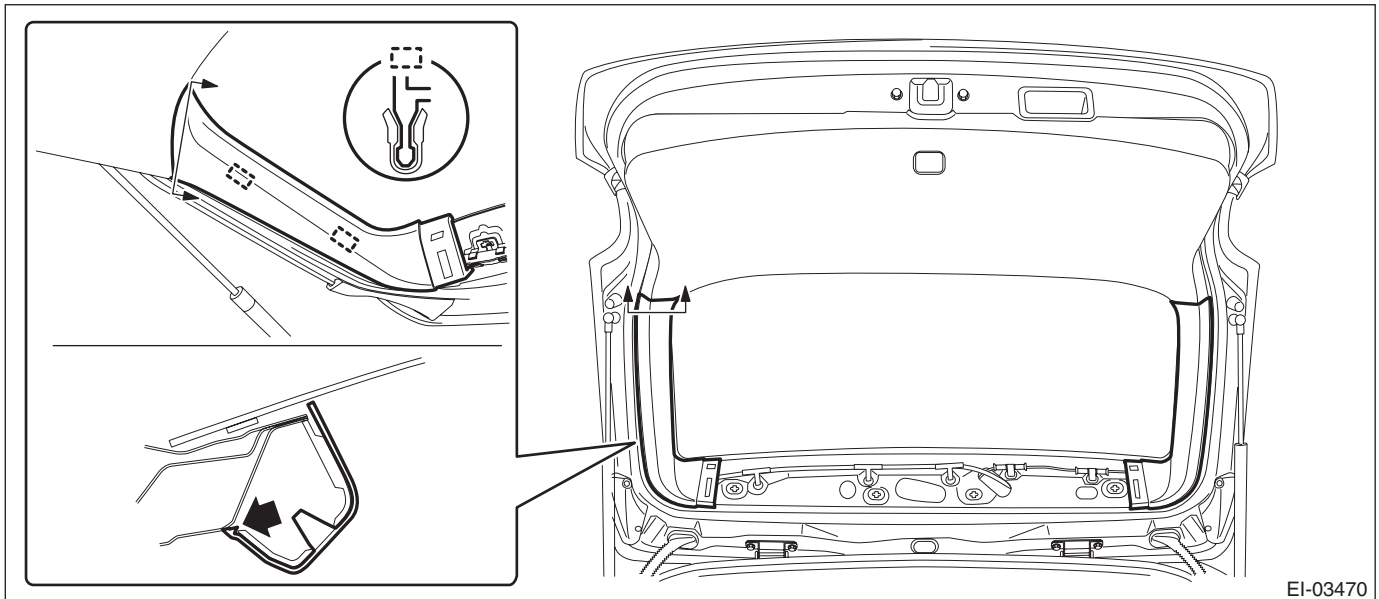

- 3) Remove the trim panel - rear gate LWR.
- (1) Remove the clips on both ends.
 - (2) Release the clips, and remove the trim panel - rear gate LWR.

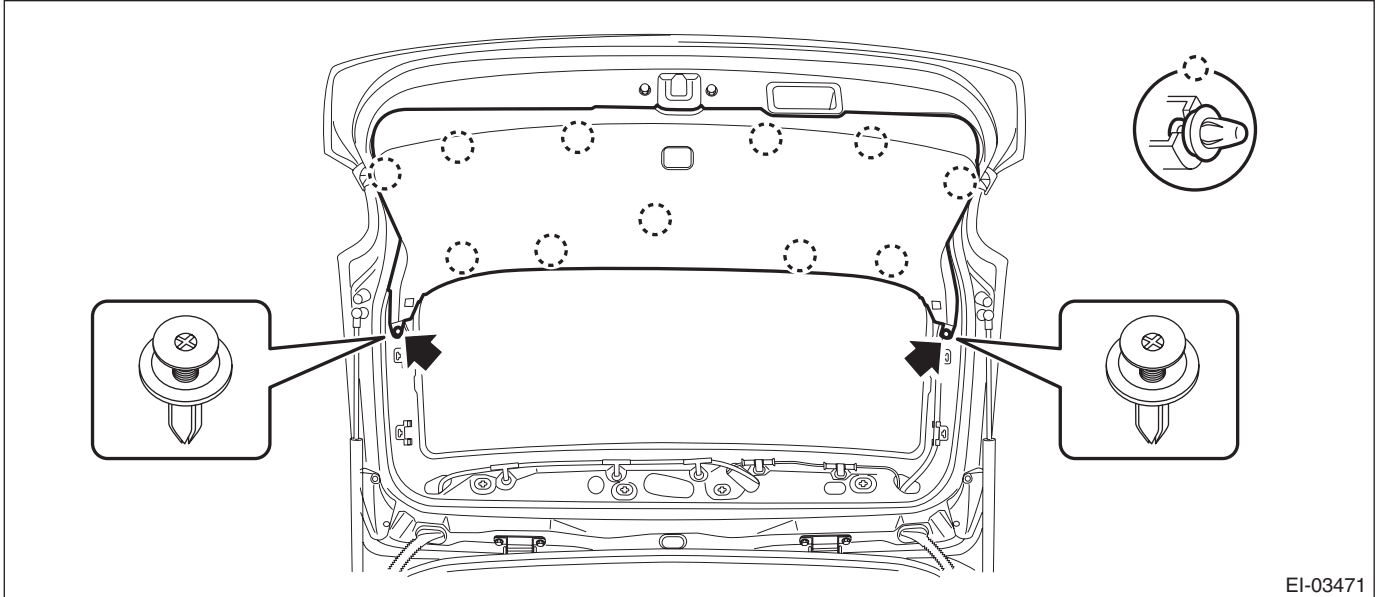

B: INSTALLATION

Install each part in the reverse order of removal.