


## Relay and Fuse

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

### 20. Relay and Fuse

#### A: LOCATION

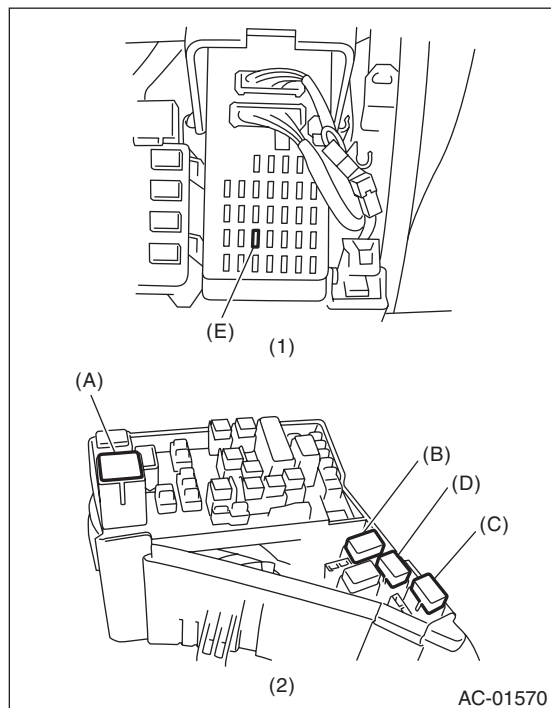

- (1) Joint box  
(2) Main fuse box

|                  |     |
|------------------|-----|
| Main fan relay 1 | (A) |
| Main fan relay 2 | (B) |
| Sub fan relay    | (C) |
| A/C relay        | (D) |
| A/C Fuse         | (E) |



#### B: INSPECTION

##### 1. FUSE

- 1) Remove the fuse and inspect visually.
- 2) If the fuse is blown out, replace the fuse.

##### 2. RELAY

- 1) Connect terminal No. 4 to the battery positive terminal and the terminal No. 3 to the battery negative terminal, and check the resistance value between the relay terminals.

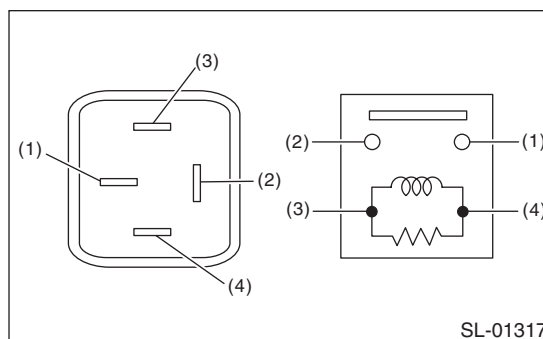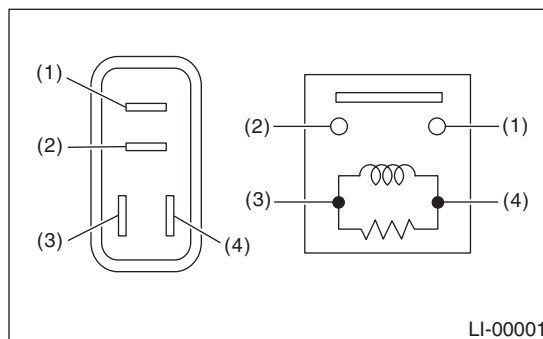

| Continuity | Terminal No. | Specification        |
|------------|--------------|----------------------|
| Yes        | 1 and 2      | Less than 1 $\Omega$ |
| None       |              | 1 M $\Omega$ or more |

- 2) Replace the relay if the inspection result is not within the standard value.