


32. Day Time Running Resistor

A: REMOVAL

- 1) Remove the front bumper face. <Ref. to EI-31, FRONT BUMPER FACE, REMOVAL, Front Bumper.>
- 2) Disconnect the harness connector.
- 3) Remove the bolt, and remove the daytime running resistor.

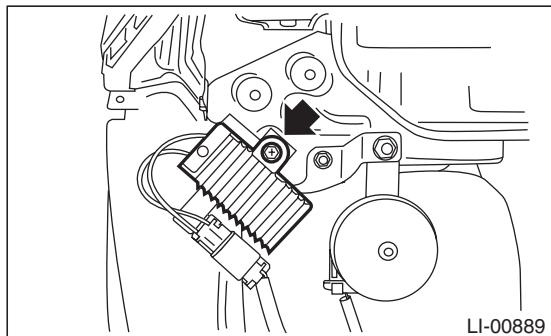

B: INSTALLATION

- 1) Install each part in the reverse order of removal.

Tightening torque:

7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

- 2) Adjust the fog light beam. (Model with fog light)
<Ref. to LI-21, FOG LIGHT AIMING, ADJUSTMENT, Front Fog Light Assembly.>