


# General Description

## SECURITY AND LOCKS

### 1. General Description

#### A: COMPONENT

##### 1. DOOR LOCK ASSEMBLY

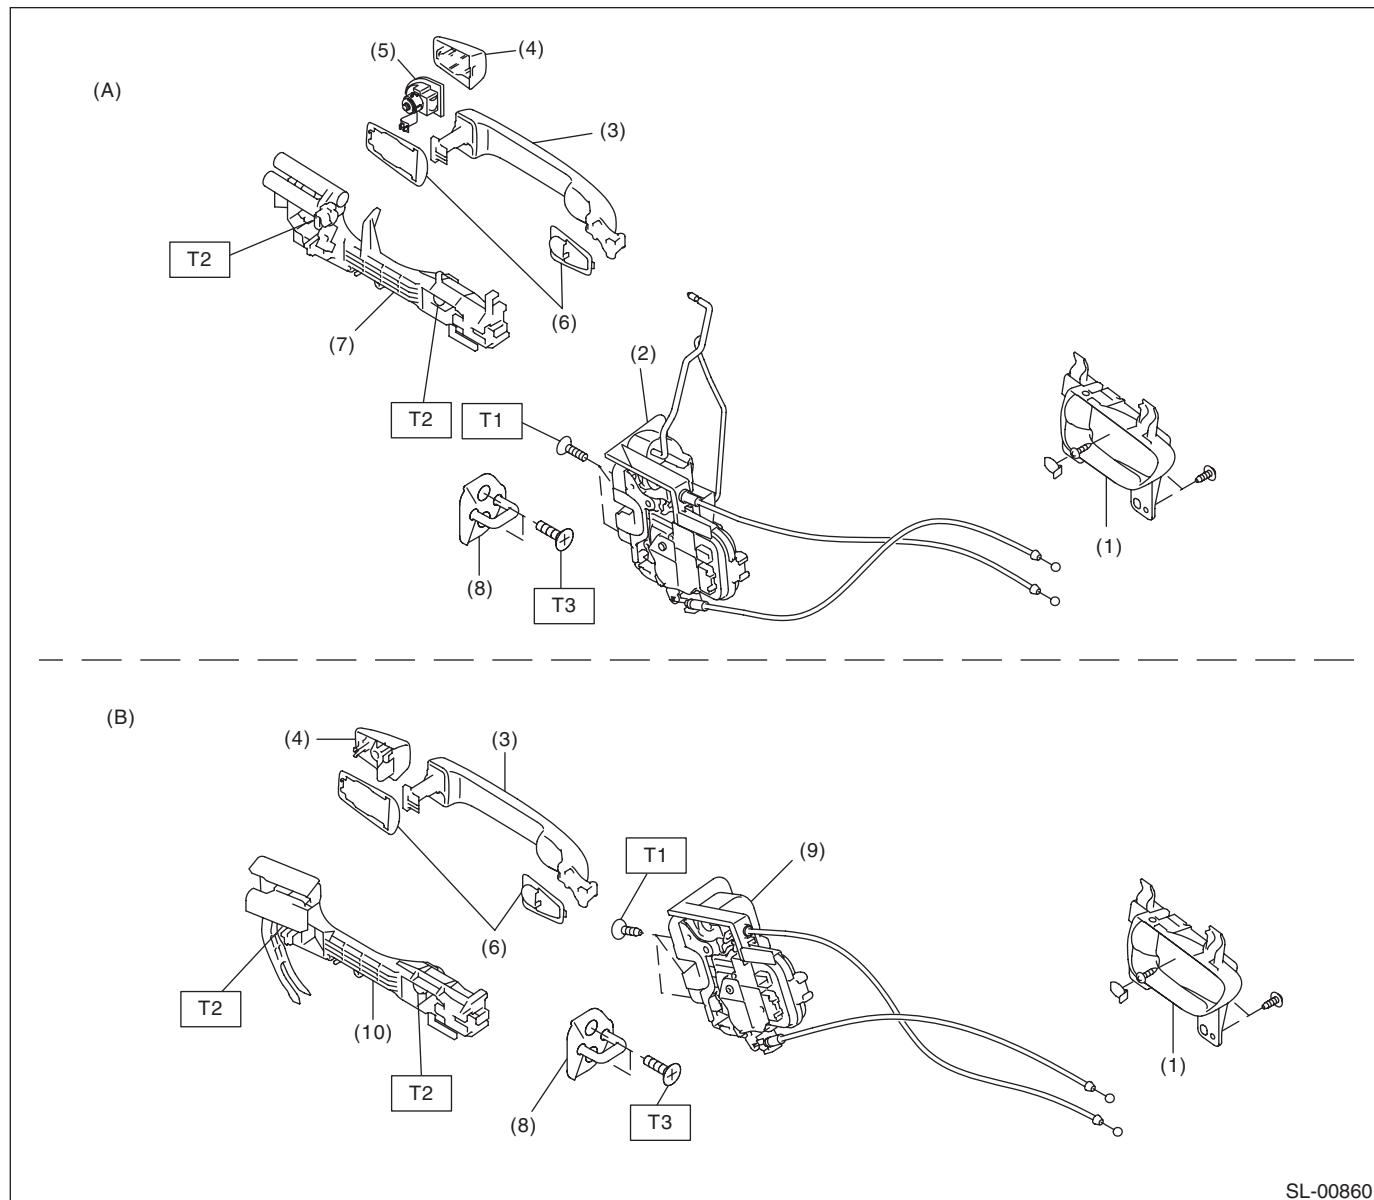

(A) Front

- (1) Inner remote ASSY
- (2) Front door latch and door lock actuator ASSY
- (3) Door outer handle
- (4) Door outer handle cover
- (5) Key cylinder (driver's side only)

(B) Rear

- (6) Door outer handle spacer
- (7) Front door outer handle frame ASSY
- (8) Striker
- (9) Rear door latch and door lock actuator ASSY
- (10) Rear door outer handle frame ASSY


**Tightening torque: N·m (kgf·m, ft-lb)**

**T1: 6.5 (0.66, 4.8)**

**T2: 7.5 (0.76, 5.5)**

**T3: 18 (1.84, 13.3)**

## 2. REAR GATE LOCK AND TRUNK LID

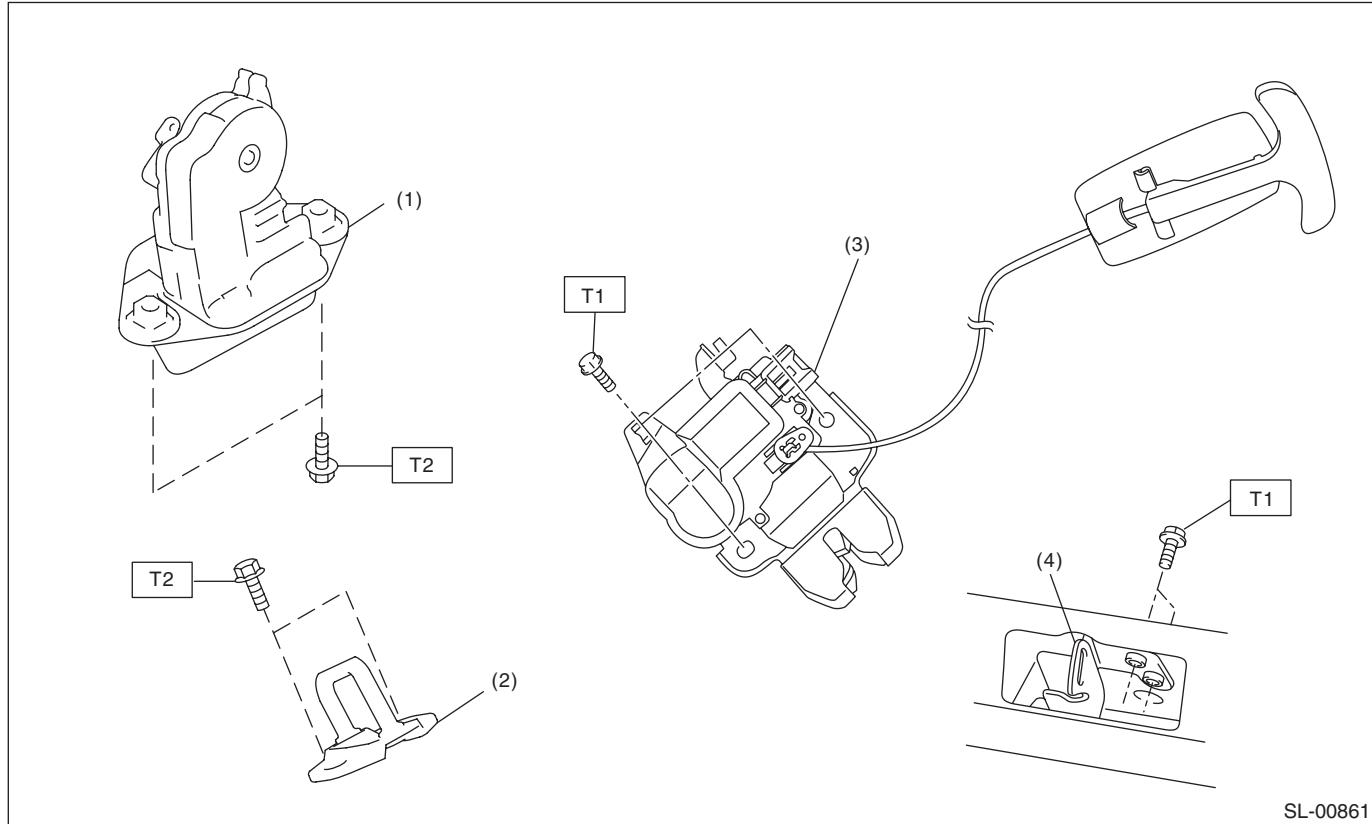

(1) Rear gate latch and actuator ASSY

(2) Rear gate striker

(3) Trunk lid latch and actuator ASSY

(4) Trunk lid striker

***Tightening torque: N·m (kgf·m, ft-lb)***


***T1: 7.5 (0.76, 5.5)***

***T2: 25 (2.55, 18.4)***

# General Description

## SECURITY AND LOCKS

### 3. FRONT HOOD LOCK AND REMOTE OPENERS

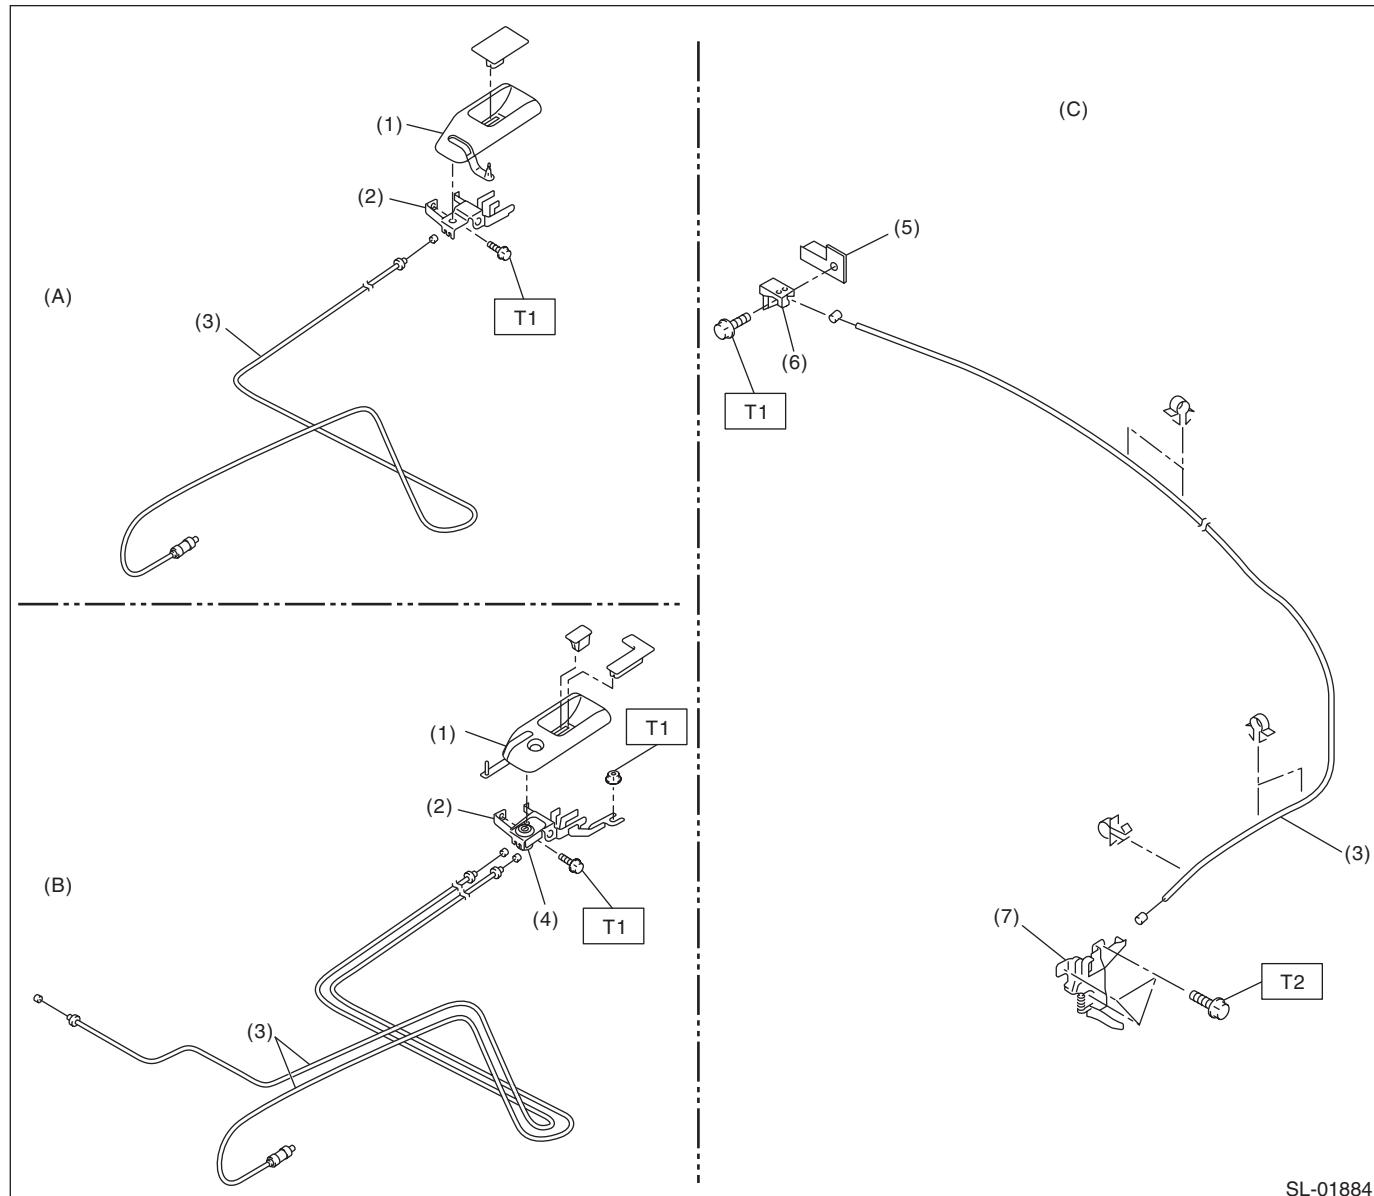

SL-01884

(A) Fuel lock release

- (1) Cover
- (2) Pull handle ASSY
- (3) Cable
- (4) Key cylinder

(B) Fuel and trunk lock release

- (5) Lever ASSY bracket
- (6) Lever ASSY
- (7) Front hood lock ASSY


(C) Hood lock release

**Tightening torque: N·m (kgf·m, ft-lb)**

**T1: 7.5 (0.76, 5.5)**

**T2: 33 (3.36, 24.2)**

### 4. KEYLESS ENTRY SYSTEM

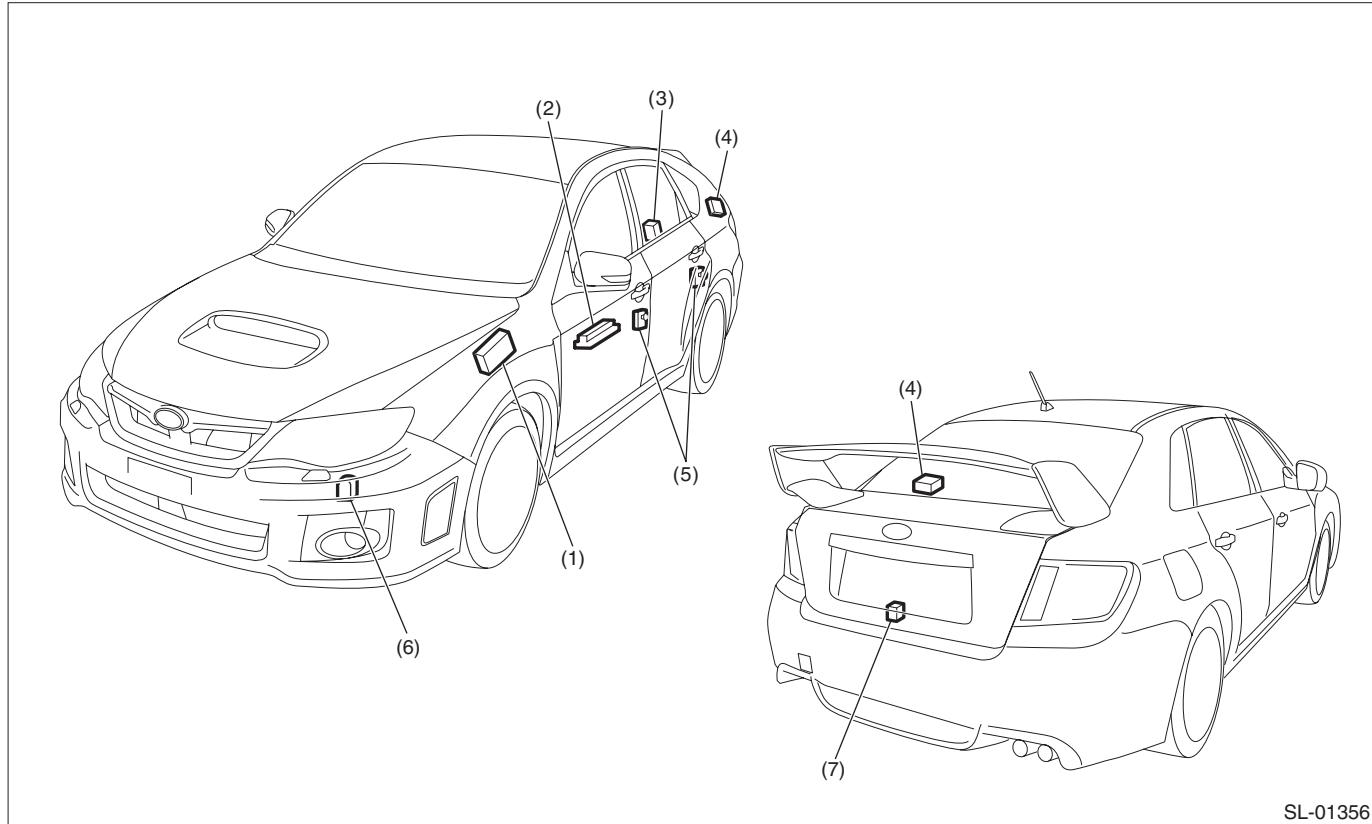


(1) Body integrated unit	(4) Keyless entry control module	(7) Trunk lid latch switch (4 door model)
(2) Power window main switch	(5) Door switch	
(3) Rear gate latch switch (5 door model)	(6) Keyless buzzer	

# General Description

## SECURITY AND LOCKS

### 5. SECURITY SYSTEM

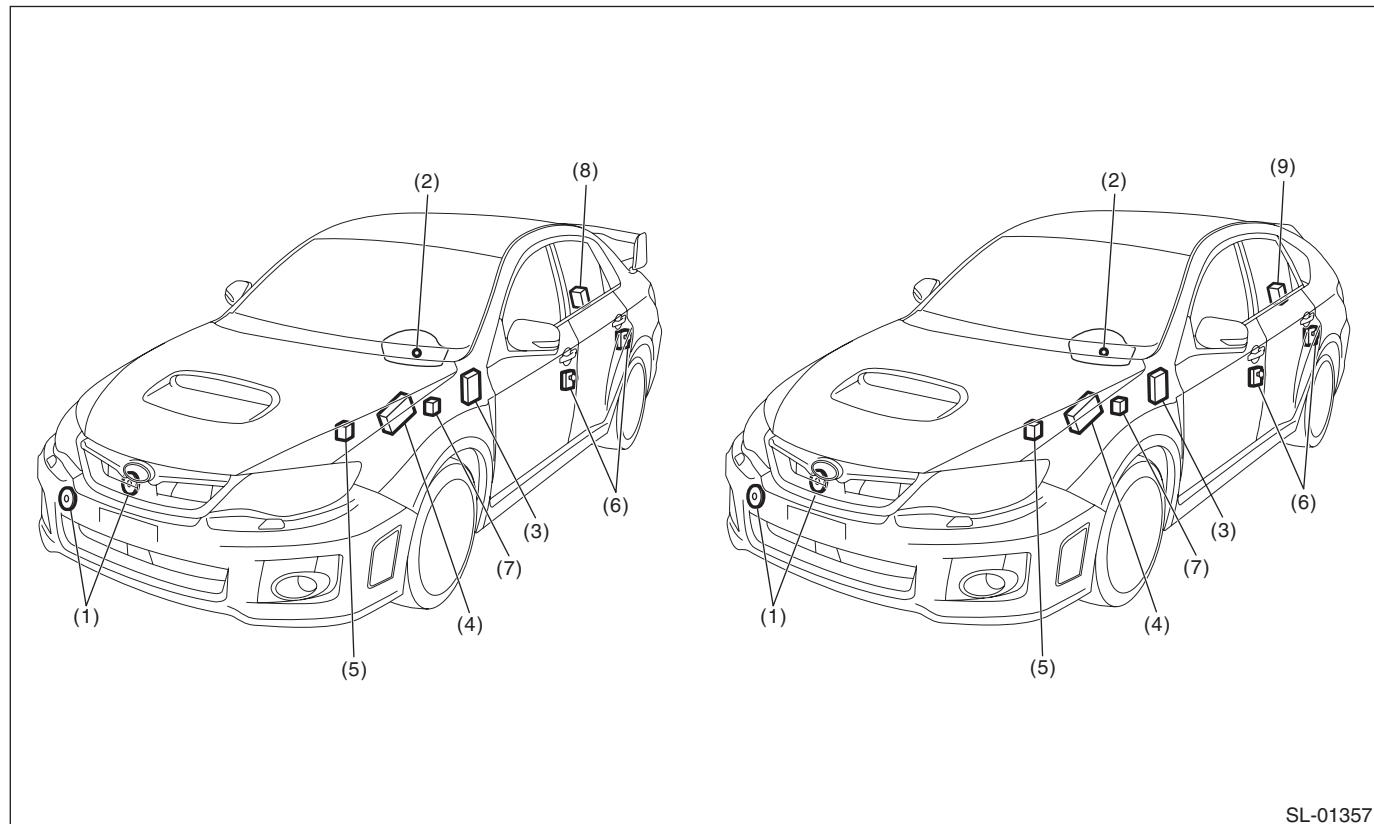

SL-01357


(1) Horn	(4) Body integrated unit	(7) Turn signal and hazard module
(2) Security indicator light (in combination meter)	(5) Horn relay (in main fuse box)	(8) Trunk lid latch switch (4 door model)
(3) Impact sensor (driver's seat instrument panel side) (dealer option)	(6) Door switch	(9) Rear gate latch switch (5 door model)

### B: CAUTION

- Before disassembling or reassembling parts, always disconnect the battery ground cable from battery. When replacing the audio, control module and other parts provided with memory functions, record the memory contents before disconnecting the battery ground cable. Otherwise, the memory is cleared.
- When performing a check after disconnecting the battery or restoring from a dead battery condition, perform the check after turning the ignition to ON and OFF, then opening and closing the driver's side door a few times.
- Reassemble the parts in the reverse order of disassembly procedure unless otherwise indicated.
- Connect the connectors securely during reassembly.
- After reassembly, make sure that the functional parts operate normally.
- If any immobilizer related part has been replaced, make sure to register the immobilizer.
- Do not use any electrical test equipment on the airbag system wiring harnesses and connector circuits.
- Be careful not to damage the airbag system wiring harness when servicing the ignition key cylinder.

### C: PREPARATION TOOL

#### 1. SPECIAL TOOL

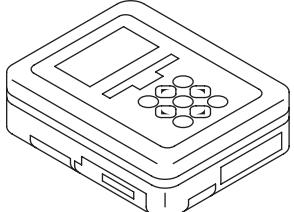ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST1B022XU0	1B022XU0	SUBARU SELECT MONITOR III KIT	Used for troubleshooting the electrical system.

#### 2. GENERAL TOOL

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance and voltage.
Drill	Used for replacing ignition key lock.
TORX® T30	Used for removing and installing the door outer handle.
Clip remover	Used for removing trim clip