

6. Muffler

A: REMOVAL

CAUTION:


Vehicle components are extremely hot after driving. Be wary of receiving burns from heated parts.

- 1) Lift up the vehicle.
- 2) Remove the clip (A) which holds the cover - rear bumper side to the vehicle and rear bumper.

NOTE:

This procedure is required to facilitate the removal/installation of the muffler.


- 3) Remove the bolts and self-locking nuts which secure the rear exhaust pipe to the muffler.

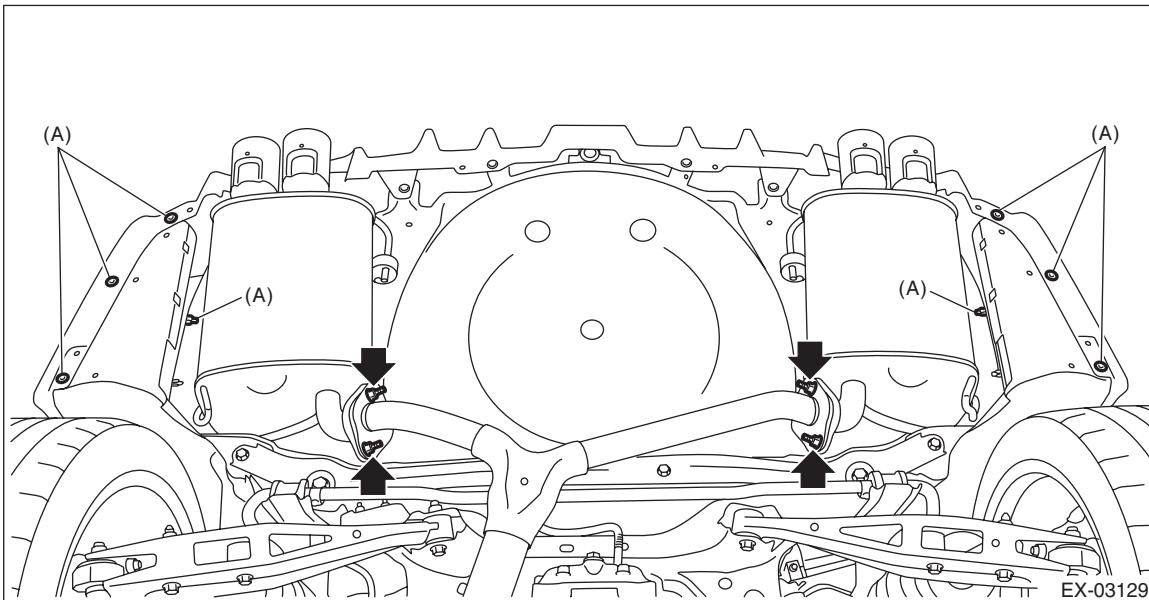


- 4) Apply a coat of spray type lubricant to the mating area of cushion rubber.
- 5) Remove the muffler from the cushion rubber.

CAUTION:

Be careful not to drop the muffler during removal.

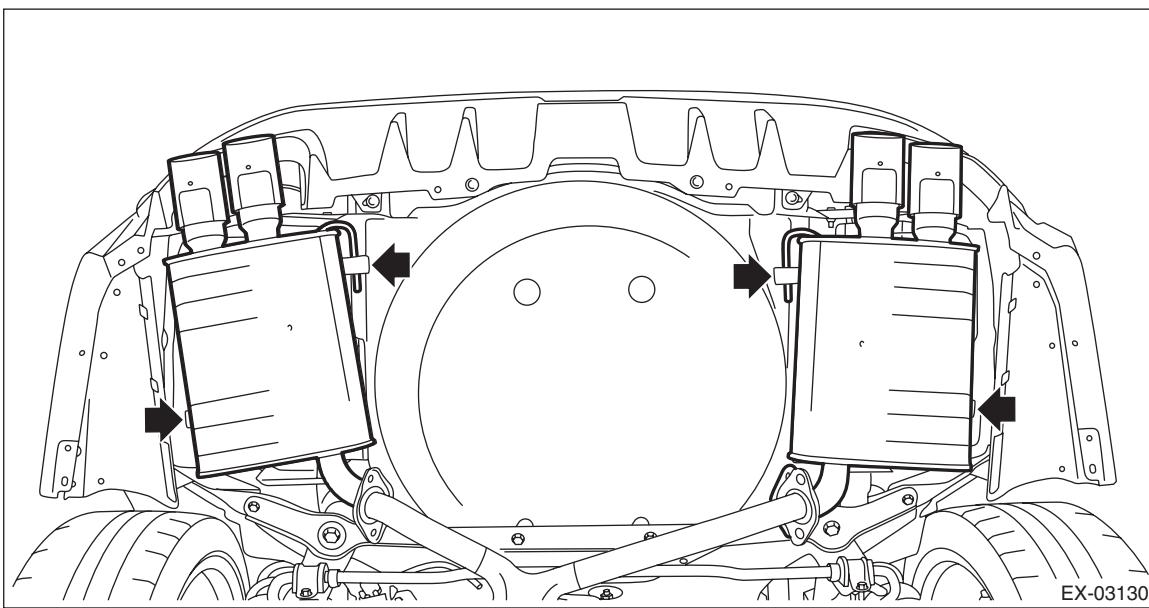

6) Remove the cushion rubber and rear exhaust cover from the vehicle.

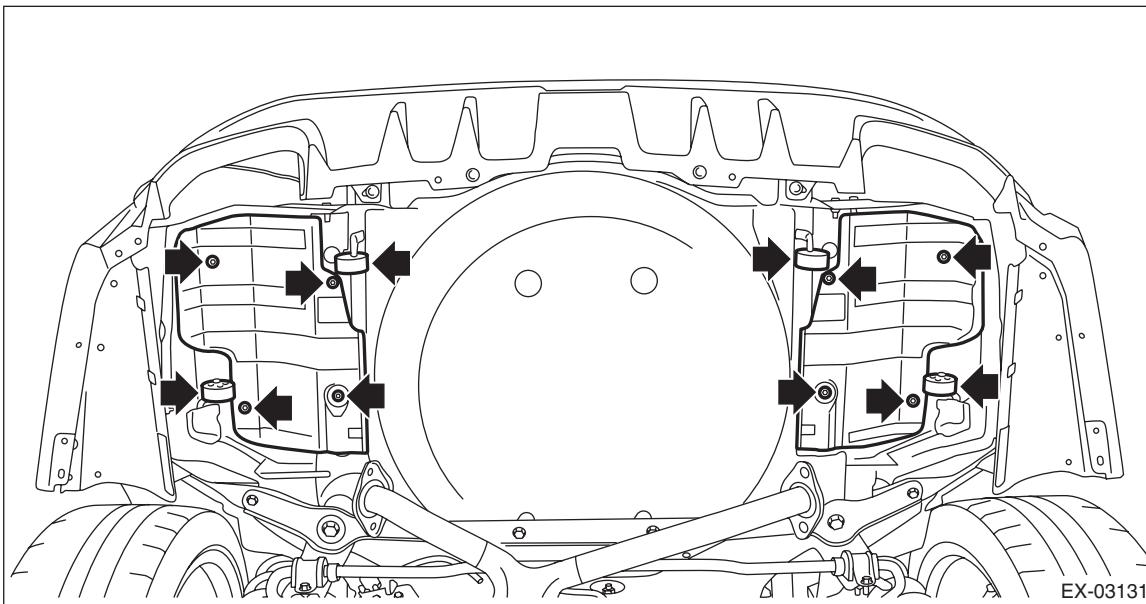

B: INSTALLATION


Install in the reverse order of removal.

NOTE:

- Use a new gasket and self-locking nut.
- After assembling, degrease the lubricant which was applied to the cushion rubber while removing/installing.

Tightening torque:

10 N·m (1.0 kgf·m, 7.4 ft-lb)

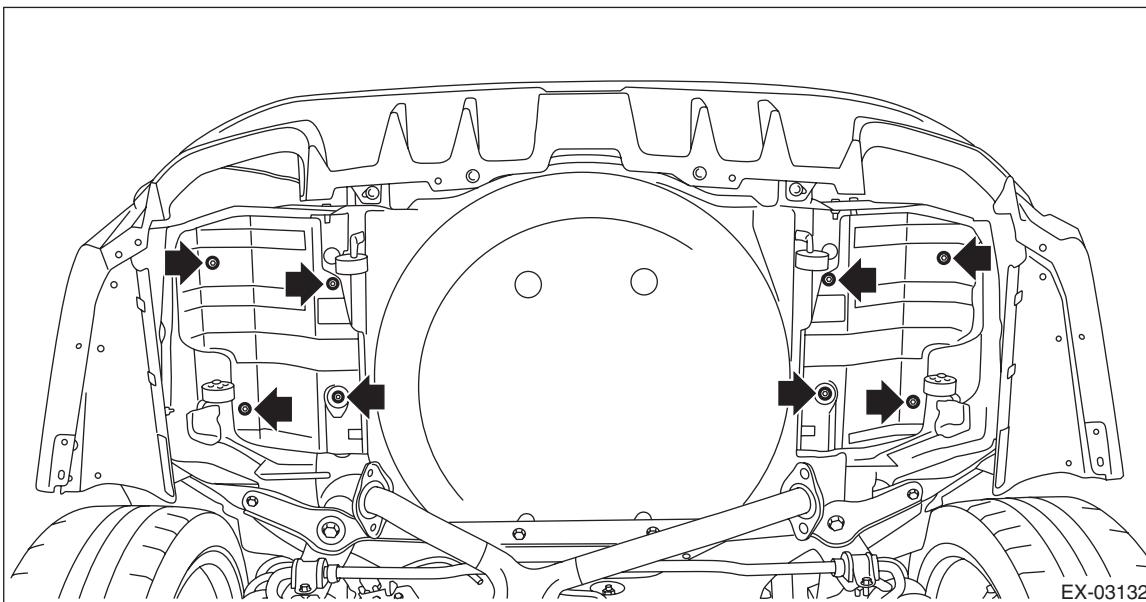


Muffler

EXHAUST

Tightening torque:

48 N·m (4.9 kgf·m, 35.4 ft-lb)

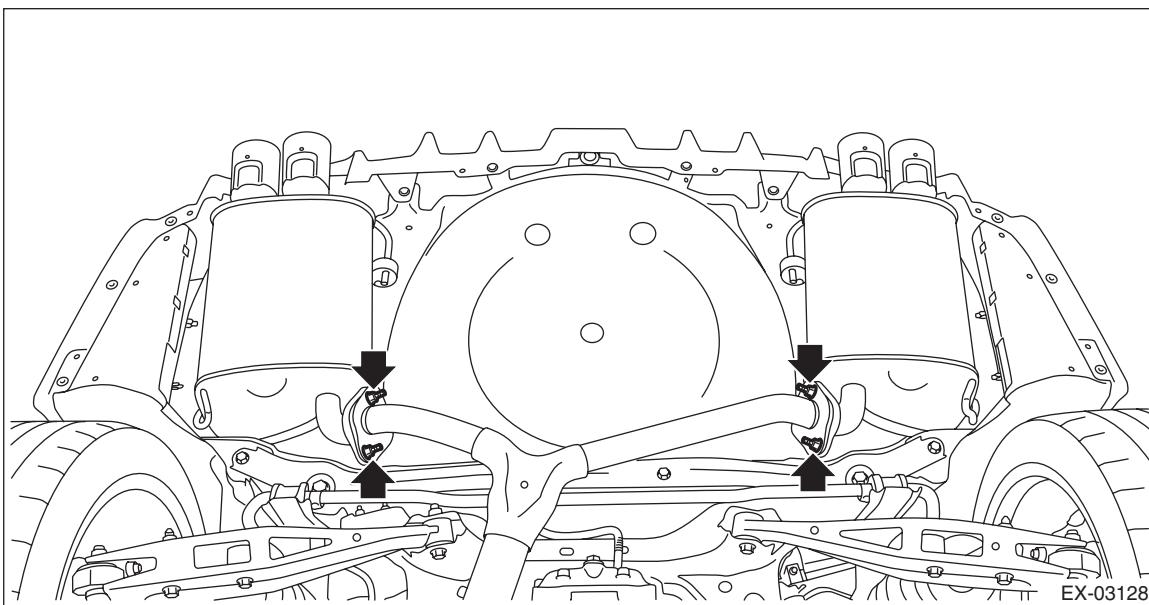

C: INSPECTION

- 1) Check the connections and welded parts for exhaust leaks.
- 2) Make sure there are no holes or rusting.
- 3) Check the cushion rubber for wear or crack.

COOLING

CO(STI)

	Page
1. General Description	2
2. Radiator Fan System	7
3. Engine Coolant	13
4. Water Pump	15
5. Thermostat	17
6. Radiator	19
7. Radiator Cap	22
8. Radiator Main Fan and Fan Motor	23
9. Radiator Sub Fan and Fan Motor	25
10. Reservoir Tank	27
11. Coolant Filler Tank	28
12. Engine Cooling System Trouble in General	29