

## 16. Diagnostics for Engine Starting Failure

### A: PROCEDURE

1. Check of the fuel amount
↓
2. Inspection of starter motor circuit. <Ref. to EN(H4SO)(diag)-66, STARTER MOTOR CIRCUIT, Diagnostics for Engine Starting Failure.>
↓
3. Inspection of ECM power supply and ground line. <Ref. to EN(H4SO)(diag)-70, CHECK POWER SUPPLY AND GROUND LINE OF ENGINE CONTROL MODULE (ECM), Diagnostics for Engine Starting Failure.>
↓
4. Inspection of ignition control system. <Ref. to EN(H4SO)(diag)-72, IGNITION CONTROL SYSTEM, Diagnostics for Engine Starting Failure.>
↓
5. Inspection of fuel pump circuit. <Ref. to EN(H4SO)(diag)-74, FUEL PUMP CIRCUIT, Diagnostics for Engine Starting Failure.>
↓
6. Inspection of fuel injector circuit. <Ref. to EN(H4SO)(diag)-76, FUEL INJECTOR CIRCUIT, Diagnostics for Engine Starting Failure.>

# Diagnostics for Engine Starting Failure


## ENGINE (DIAGNOSTICS)

### B: STARTER MOTOR CIRCUIT

#### CAUTION:

After servicing or replacing faulty parts, perform Clear Memory Mode <Ref. to EN(H4SO)(diag)-53, Clear Memory Mode.>, and Inspection Mode <Ref. to EN(H4SO)(diag)-41, Inspection Mode.>.

#### WIRING DIAGRAM:

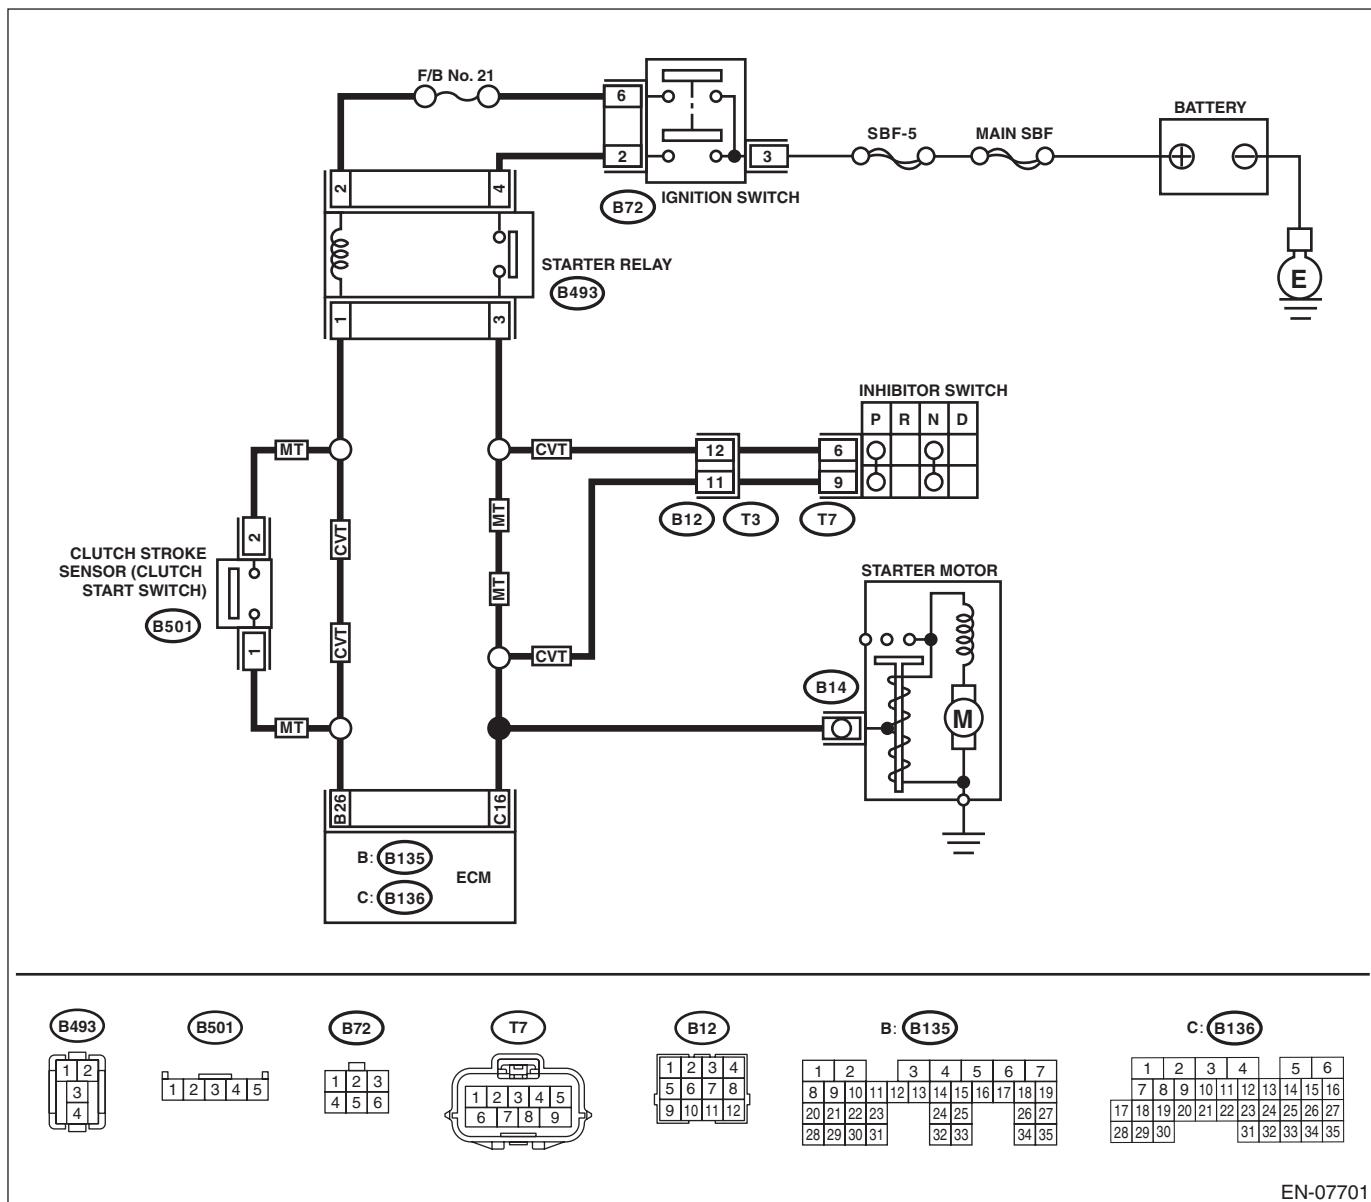

EN-07701

Step	Check	Yes	No
1 <b>CHECK BATTERY.</b> Check the battery voltage.	Is the voltage 12 V or more?	Go to step 2.	Charge or replace the battery.
2 <b>CHECK OPERATION OF STARTER MOTOR.</b> NOTE: Make sure the security alarm does not sound.	Does the starter motor operate?	Go to step 3.	Go to step 4.

# Diagnostics for Engine Starting Failure

ENGINE (DIAGNOSTICS)

Step	Check	Yes	No
<b>3 CHECK DTC.</b>	Is DTC displayed? <Ref. to EN(H4SO)(diag)-40, OPERATION, Read Diagnostic Trouble Code (DTC).>	Check the appropriate DTC using the "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4SO)(diag)-78, List of Diagnostic Trouble Code (DTC).>	The circuit has returned to a normal condition at this time. Reproduce the failure, and then perform the diagnosis again.  NOTE: In this case, temporary poor contact of connector, temporary open or short circuit of harness may be the cause.
<b>4 CHECK INPUT SIGNAL FOR STARTER MOTOR.</b>  1) Turn the ignition switch to OFF. 2) Disconnect the connector from starter motor. 3) Turn the ignition switch to START. 4) Measure the voltage between the starter motor connector and the engine ground.  <i>Connector &amp; terminal</i> <b>(B14) No. 1 (+) — Engine ground (-):</b>  NOTE: For CVT model, place the select lever in "P" range or "N" range. For MT model, depress the clutch pedal.	Is the voltage 10 V or more?	Check the starter motor. <Ref. to SC(H4SO)-9, Starter.>	Go to step 5.
<b>5 CHECK HARNESS BETWEEN BATTERY AND IGNITION SWITCH CONNECTOR.</b>  1) Turn the ignition switch to OFF. 2) Disconnect the connector from ignition switch. 3) Measure the voltage between ignition switch connector and chassis ground.  <i>Connector &amp; terminal</i> <b>(B72) No. 3 (+) — Chassis ground (-):</b>	Is the voltage 10 V or more?	Go to step 6.	Repair the power supply circuit.
<b>6 CHECK IGNITION SWITCH.</b>  Measure the resistance between ignition switch terminals after turning the ignition switch to START position.  <i>Terminals</i> <b>No. 3 — No. 2:</b> <b>No. 3 — No. 6:</b>	Is the resistance less than 1 Ω?	Go to step 7.	Replace the ignition switch. <Ref. to SL-59, REPLACEMENT, Ignition Key Lock.>
<b>7 CHECK INPUT VOLTAGE OF STARTER RELAY.</b>  1) Turn the ignition switch to OFF. 2) Remove the starter relay. 3) Connect the connector to ignition switch. 4) Measure the input voltage between starter relay connector and chassis ground after turning the ignition switch to START position.  <i>Connector &amp; terminal</i> <b>(B493) No. 2 (+) — Chassis ground (-):</b> <b>(B493) No. 4 (+) — Chassis ground (-):</b>	Is the voltage 10 V or more?	Go to step 8.	Repair open or short circuit to ground in harness between starter relay and ignition switch connector.

# Diagnostics for Engine Starting Failure

## ENGINE (DIAGNOSTICS)

Step	Check	Yes	No
<b>8 CHECK STARTER RELAY.</b> 1) Connect the battery to starter relay terminals No. 1 and No. 2. 2) Measure the resistance between starter relay terminals. <i>Terminals</i> <i>No. 3 — No. 4:</i>	Is the resistance less than 1 Ω?	Go to step 9.	Replace the starter relay. <Ref. to EN(H4SO)(diag)-9, Electrical Component Location.>
<b>9 CHECK HARNESS BETWEEN ECM AND STARTER RELAY CONNECTOR.</b> 1) Turn the ignition switch to OFF. 2) Disconnect the connector from ECM. 3) Measure the resistance of harness connector between ECM and starter relay. <i>Connector &amp; terminal</i> <i>(B493) No. 1 — (B135) No. 26:</i>	Is the resistance less than 1 Ω?	Go to step 10.	Repair the open circuit of harness between ECM and starter relay connector.
<b>10 CHECK TRANSMISSION TYPE.</b>	Is the transmission type CVT?	Go to step 11.	Go to step 15.
<b>11 CHECK ECM INPUT VOLTAGE.</b> 1) Turn the ignition switch to START. 2) Measure the input voltage between ECM and chassis ground. <i>Connector &amp; terminal</i> <i>(B135) No. 26 (+) — Chassis ground (-):</i>	Is the voltage 10 V or more?	Go to step 12.	Repair the open circuit of harness between ECM and ignition switch connector.
<b>12 CHECK HARNESS BETWEEN STARTER RELAY AND INHIBITOR SWITCH CONNECTOR.</b> 1) Turn the ignition switch to OFF. 2) Disconnect the connector from inhibitor switch. 3) Measure the resistance of harness between the starter relay and inhibitor switch. <i>Connector &amp; terminal</i> <i>(B493) No. 3 — (T7) No. 6:</i>	Is the resistance less than 1 Ω?	Go to step 13.	Repair the harness and connector. <b>NOTE:</b> In this case, repair the following item: <ul style="list-style-type: none"><li>• Open circuit in harness between starter relay connector and inhibitor switch connector</li><li>• Poor contact of coupling connector</li></ul>
<b>13 CHECK HARNESS BETWEEN INHIBITOR SWITCH AND STARTER MOTOR.</b> Measure the resistance of harness between the inhibitor switch and starter motor. <i>Connector &amp; terminal</i> <i>(T7) No. 9 — (B14) No. 1:</i>	Is the resistance less than 1 Ω?	Go to step 14.	Repair the harness and connector. <b>NOTE:</b> In this case, repair the following item: <ul style="list-style-type: none"><li>• Open circuit in harness between inhibitor switch connector and starter motor</li><li>• Poor contact of coupling connector</li></ul>
<b>14 CHECK INHIBITOR SWITCH.</b> 1) Place the select lever in "P" range or "N" range. 2) Measure the resistance between inhibitor switch terminals. <i>Terminals</i> <i>No. 6 — No. 9:</i>	Is the resistance less than 1 Ω?	Check the ECM power supply and ground line. <Ref. to EN(H4SO)(diag)-70, CHECK POWER SUPPLY AND GROUND LINE OF ENGINE CONTROL MODULE (ECM), Diagnostics for Engine Starting Failure.>	Replace the inhibitor switch. <Ref. to CVT-94, Inhibitor Switch.>

# Diagnostics for Engine Starting Failure

## ENGINE (DIAGNOSTICS)

Step	Check	Yes	No
15 <b>CHECK HARNESS BETWEEN IGNITION SWITCH AND CLUTCH STROKE SENSOR CONNECTOR.</b> 1) Turn the ignition switch to OFF. 2) Disconnect the connector from clutch stroke sensor. 3) Turn the ignition switch to START. 4) Measure the voltage between clutch stroke sensor connector and chassis ground. <i>Connector &amp; terminal (B501) No. 2 (+) — Chassis ground (-):</i>	Is the voltage 10 V or more?	Go to step 16.	Repair the open circuit in harness between ignition switch connector and clutch stroke sensor connector.
16 <b>CHECK CLUTCH STROKE SENSOR.</b> Measure the resistance between clutch stroke sensor terminals while depressing the clutch. <i>Terminals No. 1 — No. 2:</i>	Is the resistance less than 1 $\Omega$ ?	Go to step 17.	Replace the clutch stroke sensor. <Ref. to PB(diag)-10, Electrical Component Location.>
17 <b>CHECK HARNESS BETWEEN ECM AND CLUTCH STROKE SENSOR CONNECTOR.</b> Measure the resistance of harness between ECM and clutch stroke sensor connector. <i>Connector &amp; terminal (B135) No. 26 — (B501) No. 1:</i>	Is the resistance less than 1 $\Omega$ ?	Go to step 18.	Repair the open circuit of harness between ECM and clutch stroke sensor connector.
18 <b>CHECK HARNESS BETWEEN STARTER RELAY AND STARTER MOTOR.</b> Measure the resistance of harness between starter relay connector and starter motor. <i>Connector &amp; terminal (B493) No. 3 — (B14) No. 1:</i>	Is the resistance less than 1 $\Omega$ ?	Check the ECM power supply and ground line. <Ref. to EN(H4SO)(diag)-70, CHECK POWER SUPPLY AND GROUND LINE OF ENGINE CONTROL MODULE (ECM), Diagnostics for Engine Starting Failure.>	Repair the open circuit of the harness between starter relay connector and starter motor.

# Diagnostics for Engine Starting Failure


## ENGINE (DIAGNOSTICS)

### C: CHECK POWER SUPPLY AND GROUND LINE OF ENGINE CONTROL MODULE (ECM)

#### CAUTION:

After servicing or replacing faulty parts, perform Clear Memory Mode <Ref. to EN(H4SO)(diag)-53, OPERATION, Clear Memory Mode.>, and Inspection Mode <Ref. to EN(H4SO)(diag)-41, PROCEDURE, Inspection Mode.>.

#### WIRING DIAGRAM:

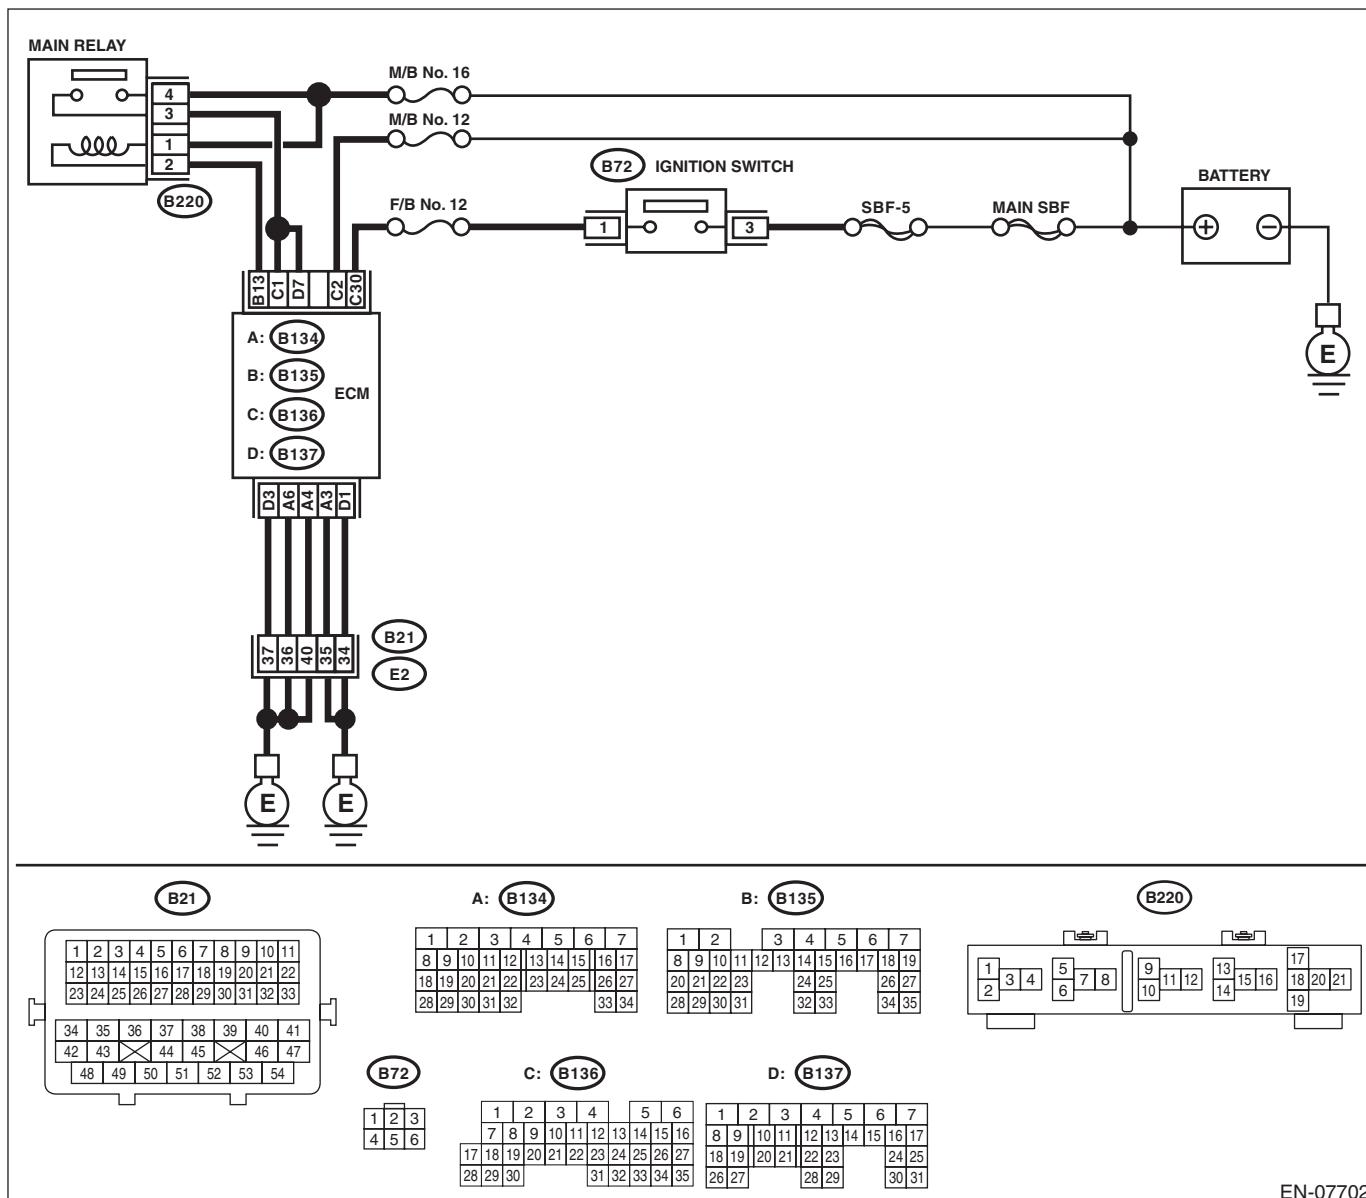

Step	Check	Yes	No
1 <b>CHECK MAIN RELAY.</b> 1) Turn the ignition switch to OFF. 2) Remove the main relay. 3) Connect the battery to main relay terminals No. 1 and No. 2. 4) Measure the resistance between main relay terminals. <b>Terminals</b> No. 3 — No. 4:	Is the resistance less than 1 Ω?	Go to step 2.	Replace the main relay. <Ref. to FU(H4SO)-40, Main Relay.>

# Diagnostics for Engine Starting Failure

## ENGINE (DIAGNOSTICS)

Step	Check	Yes	No
<b>2 CHECK GROUND CIRCUIT FOR ECM.</b> 1) Disconnect the connector from ECM. 2) Measure the resistance of harness between ECM and chassis ground. <b>Connector &amp; terminal</b> <i>(B134) No. 3 — Chassis ground:</i> <i>(B134) No. 4 — Chassis ground:</i> <i>(B134) No. 6 — Chassis ground:</i> <i>(B137) No. 1 — Chassis ground:</i> <i>(B137) No. 3 — Chassis ground:</i>	Is the resistance less than 5 Ω?	Go to step 3.	Repair the harness and connector. <b>NOTE:</b> In this case, repair the following item: <ul style="list-style-type: none"><li>• Open circuit in harness between ECM and engine ground terminal</li><li>• Poor contact of coupling connector</li></ul>
<b>3 CHECK INPUT VOLTAGE OF ECM.</b> 1) Turn the ignition switch to ON. 2) Measure the voltage between ECM and chassis ground. <b>Connector &amp; terminal</b> <i>(B136) No. 2 (+) — Chassis ground (-):</i> <i>(B136) No. 30 (+) — Chassis ground (-):</i>	Is the voltage 10 V or more?	Go to step 4.	Repair the open or ground short circuit of harness of power supply circuit.
<b>4 CHECK INPUT VOLTAGE OF MAIN RELAY.</b> Measure the voltage between main relay connector and chassis ground. <b>Connector &amp; terminal</b> <i>(B220) No. 1 (+) — Chassis ground (-):</i> <i>(B220) No. 4 (+) — Chassis ground (-):</i>	Is the voltage 10 V or more?	Go to step 5.	Repair the open or ground short circuit of harness of power supply circuit.
<b>5 CHECK INPUT VOLTAGE OF ECM.</b> 1) Turn the ignition switch to OFF. 2) Install the main relay. 3) Turn the ignition switch to ON. 4) Measure the voltage between ECM and chassis ground. <b>Connector &amp; terminal</b> <i>(B135) No. 13 (+) — Chassis ground (-):</i>	Is the voltage 10 V or more?	Go to step 6.	Repair the open circuit in harness between ECM and main relay connector.
<b>6 CHECK INPUT VOLTAGE OF ECM.</b> 1) Turn the ignition switch to OFF. 2) Connect the connector to ECM. 3) Turn the ignition switch to ON. 4) Measure the voltage between ECM and chassis ground. <b>Connector &amp; terminal</b> <i>(B136) No. 1 (+) — Chassis ground (-):</i> <i>(B137) No. 7 (+) — Chassis ground (-):</i>	Is the voltage 10 V or more?	Check ignition control system. <Ref. to EN(H4SO)(diag)-72, IGNITION CONTROL SYSTEM, Diagnostics for Engine Starting Failure.>	Repair the harness and connector. <b>NOTE:</b> In this case, repair the following item: <ul style="list-style-type: none"><li>• Open circuit in harness between ECM and main relay connector</li><li>• Poor contact of main relay connector</li><li>• Poor contact of ECM connector</li></ul>

# Diagnostics for Engine Starting Failure


## ENGINE (DIAGNOSTICS)

### D: IGNITION CONTROL SYSTEM

#### CAUTION:

After servicing or replacing faulty parts, perform Clear Memory Mode <Ref. to EN(H4SO)(diag)-53, Clear Memory Mode.>, and Inspection Mode <Ref. to EN(H4SO)(diag)-41, Inspection Mode.>.

#### WIRING DIAGRAM:

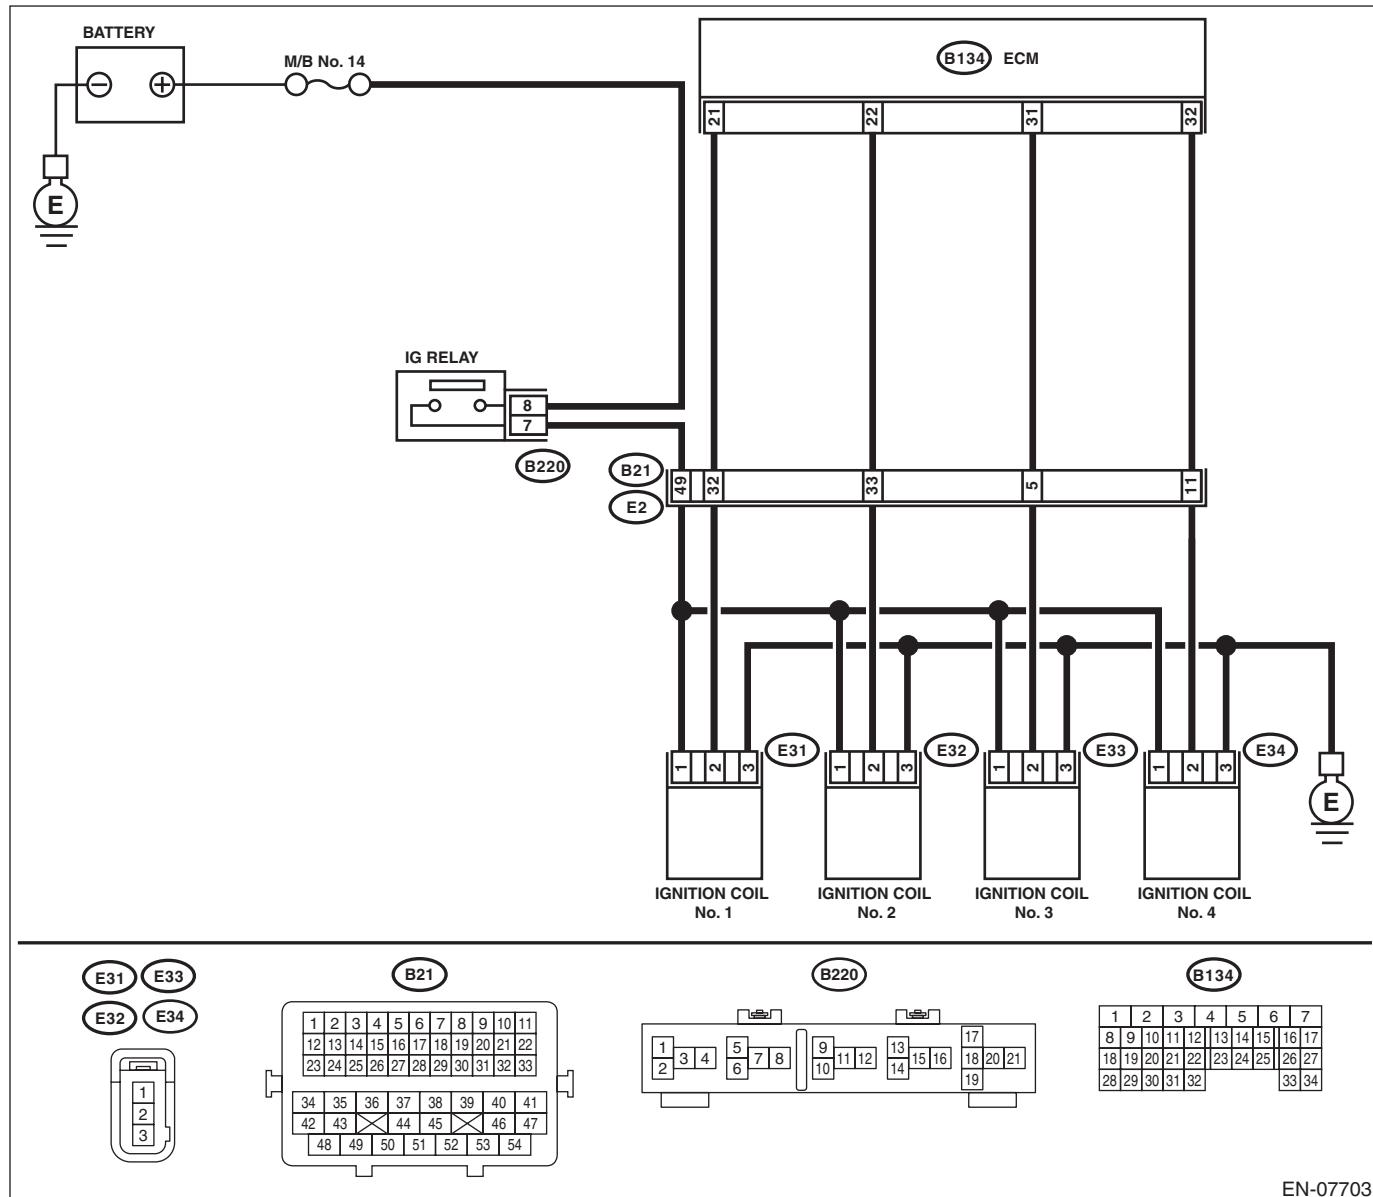

Step	Check	Yes	No
1 <b>CHECK SPARK PLUG CONDITION.</b> 1) Remove the spark plug. <Ref. to IG(H4SO)-3, REMOVAL, Spark Plug.> 2) Check the spark plug condition. <Ref. to IG(H4SO)-3, INSPECTION, Spark Plug.>	Is the spark plug condition normal?	Go to step 2.	Replace the spark plug. <Ref. to IG(H4SO)-3, Spark Plug.>

# Diagnostics for Engine Starting Failure

## ENGINE (DIAGNOSTICS)

Step	Check	Yes	No
<b>2 CHECK IGNITION SYSTEM FOR SPARKS.</b> 1) Connect the spark plug to ignition coil. 2) Release the fuel pressure. <Ref. to FU(H4SO)-46, RELEASING OF FUEL PRESSURE, PROCEDURE, Fuel.> 3) Contact the spark plug thread portion to engine. 4) While opening the throttle valve fully, crank the engine to check that spark occurs at each cylinder.	Does spark occur at each cylinder?	Check fuel pump system. <Ref. to EN(H4SO)(diag)-74, FUEL PUMP CIRCUIT, Diagnostics for Engine Starting Failure.>	Go to step 3.
<b>3 CHECK IGNITION COIL POWER SUPPLY CIRCUIT.</b> 1) Turn the ignition switch to OFF. 2) Disconnect the connector from ignition coil. 3) Turn the ignition switch to ON. 4) Measure the voltage between ignition coil connector and engine ground.  <b>Connector &amp; terminal</b> <b>(E31) No. 1 (+) — Engine ground (-):</b> <b>(E32) No. 1 (+) — Engine ground (-):</b> <b>(E33) No. 1 (+) — Engine ground (-):</b> <b>(E34) No. 1 (+) — Engine ground (-):</b>	Is the voltage 10 V or more?	Go to step 4.	Repair the harness and connector.  <b>NOTE:</b> In this case, repair the following item: <ul style="list-style-type: none"><li>• Open circuit or short circuit to ground in harness of power supply circuit</li><li>• Poor contact of coupling connector</li><li>• Blown out of fuse (M/B No. 14)</li></ul>
<b>4 CHECK HARNESS OF IGNITION COIL GROUND CIRCUIT.</b> 1) Turn the ignition switch to OFF. 2) Measure the resistance of harness between ignition coil connector and engine ground.  <b>Connector &amp; terminal</b> <b>(E31) No. 3 — Engine ground:</b> <b>(E32) No. 3 — Engine ground:</b> <b>(E33) No. 3 — Engine ground:</b> <b>(E34) No. 3 — Engine ground:</b>	Is the resistance less than 5 $\Omega$ ?	Go to step 5.	Repair the open circuit in harness between ignition coil connector and engine grounding terminal.
<b>5 CHECK HARNESS BETWEEN ECM AND IGNITION COIL CONNECTOR.</b> 1) Disconnect the connector from ECM. 2) Measure the resistance of harness between ECM and ignition coil connector.  <b>Connector &amp; terminal</b> <b>(B134) No. 21 — (E31) No. 2:</b> <b>(B134) No. 22 — (E32) No. 2:</b> <b>(B134) No. 31 — (E33) No. 2:</b> <b>(B134) No. 32 — (E34) No. 2:</b>	Is the resistance less than 1 $\Omega$ ?	Go to step 6.	Repair the harness and connector.  <b>NOTE:</b> In this case, repair the following item: <ul style="list-style-type: none"><li>• Open circuit of harness between ECM and ignition coil connector</li><li>• Poor contact of coupling connector</li></ul>
<b>6 CHECK HARNESS BETWEEN ECM AND IGNITION COIL CONNECTOR.</b> Measure the resistance of harness between ECM and engine ground.  <b>Connector &amp; terminal:</b> <b>(B134) No. 21 — Engine ground:</b> <b>(B134) No. 22 — Engine ground:</b> <b>(B134) No. 31 — Engine ground:</b> <b>(B134) No. 32 — Engine ground:</b>	Is the resistance 1 $M\Omega$ or more?	Go to step 7.	Repair the ground short circuit of harness between ECM and ignition coil connector.
<b>7 CHECK FOR POOR CONTACT.</b> Check for poor contact of ECM connector.	Is there poor contact of ECM connector?	Repair the poor contact of ECM connector.	Replace the ignition coil. <Ref. to IG(H4SO)-5, Ignition Coil.>

## Diagnostics for Engine Starting Failure


## ENGINE (DIAGNOSTICS)

## E: FUEL PUMP CIRCUIT

**CAUTION:**

After servicing or replacing faulty parts, perform Clear Memory Mode <Ref. to EN(H4SO)(diag)-53, OPERATION, Clear Memory Mode.>, and Inspection Mode <Ref. to EN(H4SO)(diag)-41, PROCEDURE, Inspection Mode.>.

## WIRING DIAGRAM:

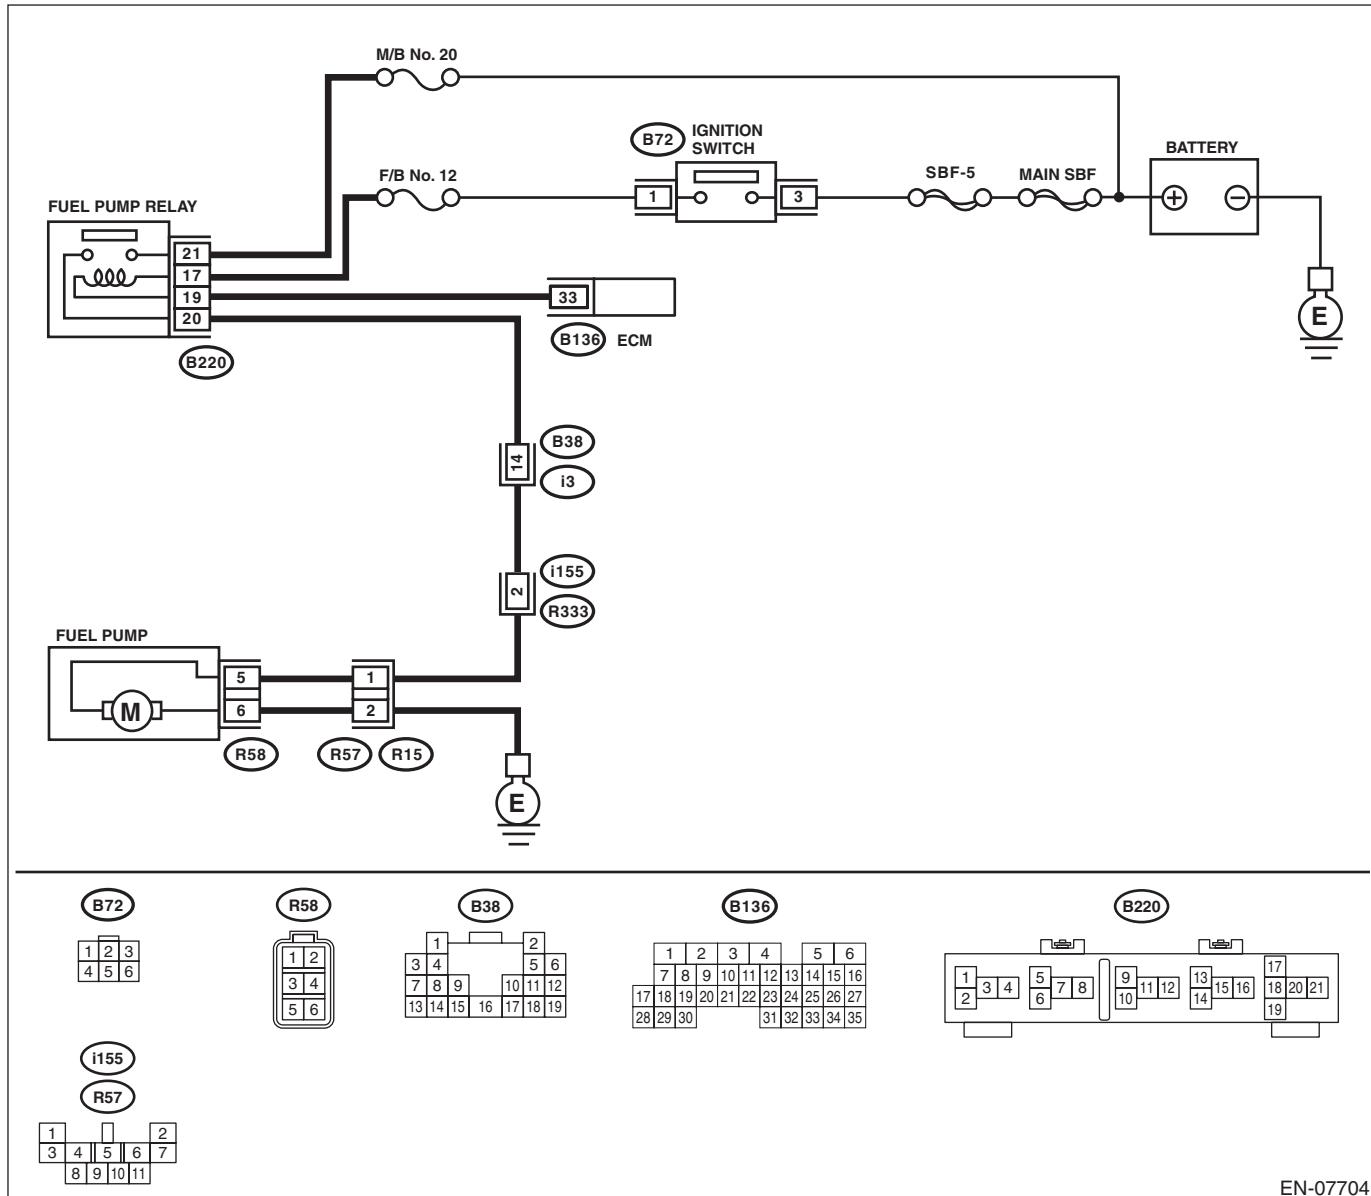

Step	Check	Yes	No
<p><b>1 CHECK OPERATING SOUND OF FUEL PUMP.</b></p> <p>Check if the fuel pump operates for two seconds when turning the ignition switch to ON.</p> <p><b>NOTE:</b> Fuel pump operation can be executed using the Subaru Select Monitor. For detailed procedures, refer to “SYSTEM OPERATION CHECK MODE”. &lt;Ref. to EN(H4SO)(diag)-54, System Operation Check Mode.&gt;</p>	<p>Does the fuel pump emit operating sound?</p>	<p>Check the fuel injector circuit. &lt;Ref. to EN(H4SO)(diag)-76, FUEL INJECTOR CIRCUIT, Diagnostics for Engine Starting Failure.&gt;</p>	<p>Go to step 2.</p>

# Diagnostics for Engine Starting Failure

## ENGINE (DIAGNOSTICS)

Step	Check	Yes	No
2 <b>CHECK GROUND CIRCUIT OF FUEL PUMP.</b> 1) Turn the ignition switch to OFF. 2) Remove the fuel pump access hole lid. 3) Disconnect the connector from fuel pump. 4) Measure the resistance of harness connector between fuel pump and chassis ground.  <i>Connector &amp; terminal (R58) No. 6 — Chassis ground:</i>	Is the resistance less than 5 Ω?	Go to step 3.	Repair the harness and connector.  NOTE: In this case, repair the following item: <ul style="list-style-type: none"><li>• Open circuit in harness between fuel pump connector and chassis grounding terminal</li><li>• Poor contact of coupling connector</li></ul>
3 <b>CHECK POWER SUPPLY TO FUEL PUMP.</b> 1) Turn the ignition switch to ON. 2) Measure the voltage between fuel pump connector and chassis ground.  <i>Connector &amp; terminal (R58) No. 5 (+) — Chassis ground (-):</i>	Is the voltage 10 V or more?	Replace the fuel pump. <Ref. to FU(H4SO)-58, Fuel Pump.>	Go to step 4.
4 <b>CHECK HARNESS BETWEEN FUEL PUMP AND FUEL PUMP RELAY CONNECTOR.</b> 1) Turn the ignition switch to OFF. 2) Measure the resistance of harness between fuel pump connector and fuel pump relay connector.  <i>Connector &amp; terminal (R58) No. 5 — (B220) No. 20:</i>	Is the resistance less than 1 Ω?	Go to step 5.	Repair the harness and connector.  NOTE: In this case, repair the following item: <ul style="list-style-type: none"><li>• Open circuit in harness between fuel pump connector and fuel pump relay connector</li><li>• Poor contact of coupling connector</li></ul>
5 <b>CHECK HARNESS BETWEEN FUEL PUMP AND FUEL PUMP RELAY CONNECTOR.</b> Measure the resistance of harness between fuel pump and fuel pump relay connector.  <i>Connector &amp; terminal (R58) No. 5 — Chassis ground:</i>	Is the resistance 1 MΩ or more?	Go to step 6.	Repair the short circuit to ground in harness between fuel pump connector and fuel pump relay connector.
6 <b>CHECK FUEL PUMP RELAY.</b> 1) Remove the fuel pump relay. 2) Connect the battery to fuel pump relay terminals No. 17 and No. 19. 3) Measure the resistance between terminals of fuel pump relay.  <i>Terminals No. 20 — No. 21:</i>	Is the resistance less than 1 Ω?	Go to step 7.	Replace the fuel pump relay. <Ref. to FU(H4SO)-42, Fuel Pump Relay.>
7 <b>CHECK HARNESS BETWEEN ECM AND FUEL PUMP RELAY CONNECTOR.</b> 1) Disconnect the connector from ECM. 2) Measure the resistance of harness between ECM and fuel pump relay connector.  <i>Connector &amp; terminal (B136) No. 33 — (B220) No. 19:</i>	Is the resistance less than 1 Ω?	Go to step 8.	Repair the open circuit of harness between ECM and fuel pump relay connector.
8 <b>CHECK POWER SUPPLY OF FUEL PUMP RELAY.</b> 1) Turn the ignition switch to ON. 2) Measure the voltage between fuel pump relay connector and chassis ground.  <i>Connector &amp; terminal (B220) No. 17 (+) — Chassis ground (-): (B220) No. 21 (+) — Chassis ground (-):</i>	Is the voltage 10 V or more?	Repair the poor contact of ECM connector.	Repair the open or ground short circuit of harness of power supply circuit.

## Diagnostics for Engine Starting Failure


## ENGINE (DIAGNOSTICS)

## F: FUEL INJECTOR CIRCUIT

## CAUTION:

- Check or repair only faulty parts.
- After servicing or replacing faulty parts, perform Clear Memory Mode <Ref. to EN(H4SO)(diag)-53, OPERATION, Clear Memory Mode.>, and Inspection Mode <Ref. to EN(H4SO)(diag)-41, PROCEDURE, Inspection Mode.>.

## WIRING DIAGRAM:

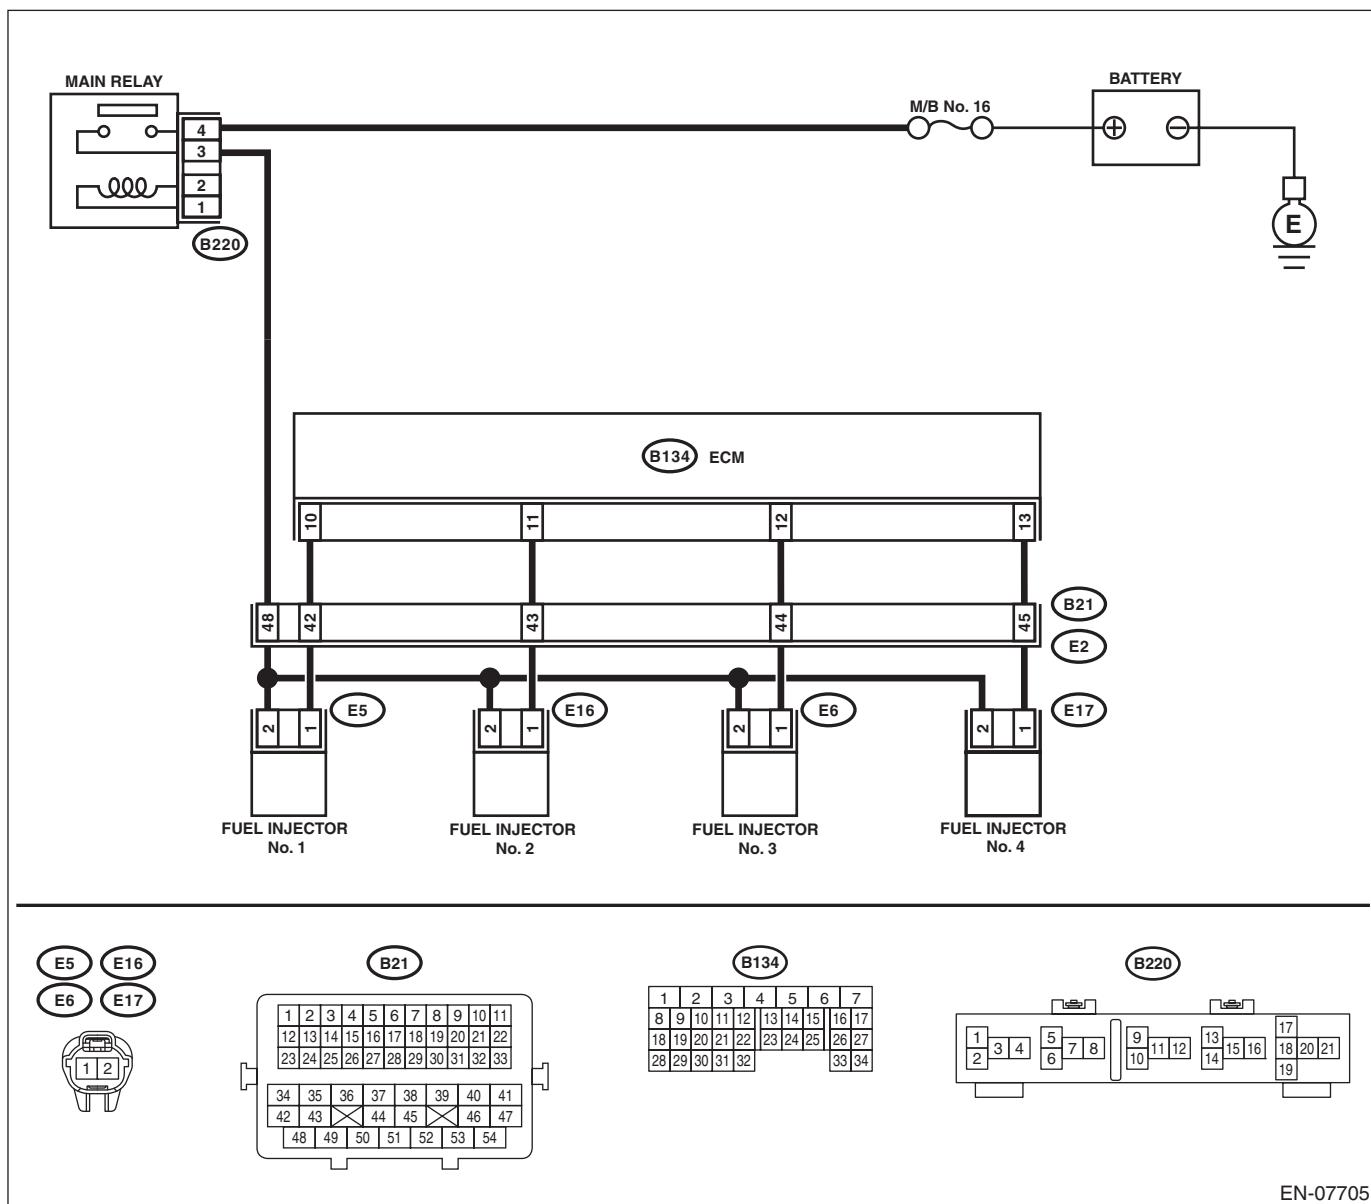

Step	Check	Yes	No
<b>1 CHECK OPERATION OF EACH FUEL INJECTOR.</b> While cranking the engine, check each fuel injector emits operating sound. Use a sound scope or attach a screwdriver to the injector to listen to sounds for this check.	Does the fuel pump emit operating sound?	Check the fuel pressure. <Ref. to ME(H4SO)-28, INSPECTION, Fuel Pressure.>	Go to step 2.

# Diagnostics for Engine Starting Failure

## ENGINE (DIAGNOSTICS)

Step	Check	Yes	No
<b>2 CHECK POWER SUPPLY TO EACH FUEL INJECTOR.</b> 1) Turn the ignition switch to OFF. 2) Disconnect the connector from fuel injector. 3) Turn the ignition switch to ON. 4) Measure the voltage between fuel injector connector and the engine ground.  <i>Connector &amp; terminal</i> #1 (E5) No. 2 (+) — Engine ground (-): #2 (E16) No. 2 (+) — Engine ground (-): #3 (E6) No. 2 (+) — Engine ground (-): #4 (E17) No. 2 (+) — Engine ground (-):	Is the voltage 10 V or more?	Go to step 3.	Repair the harness and connector.  NOTE: In this case, repair the following item: <ul style="list-style-type: none"><li>• Open circuit in harness between main relay connector and fuel injector connector</li><li>• Poor contact of main relay connector</li><li>• Poor contact of coupling connector</li></ul>
<b>3 CHECK HARNESS BETWEEN ECM AND FUEL INJECTOR CONNECTOR.</b> 1) Turn the ignition switch to OFF. 2) Disconnect the connector from ECM. 3) Measure the resistance of harness between ECM and fuel injector connector.  <i>Connector &amp; terminal</i> #1 (B134) No. 10 — (E5) No. 1: #2 (B134) No. 11 — (E16) No. 1: #3 (B134) No. 12 — (E6) No. 1: #4 (B134) No. 13 — (E17) No. 1:	Is the resistance less than 1 Ω?	Go to step 4.	Repair the harness and connector.  NOTE: In this case, repair the following item: <ul style="list-style-type: none"><li>• Open circuit in harness between ECM and fuel injector connector</li><li>• Poor contact of coupling connector</li></ul>
<b>4 CHECK HARNESS BETWEEN ECM AND FUEL INJECTOR CONNECTOR.</b> Measure the resistance between ECM and chassis ground.  <i>Connector &amp; terminal</i> #1 (B134) No. 10 — Chassis ground: #2 (B134) No. 11 — Chassis ground: #3 (B134) No. 12 — Chassis ground: #4 (B134) No. 13 — Chassis ground:	Is the resistance 1 MΩ or more?	Go to step 5.	Repair the ground short circuit of harness between ECM and fuel injector connector.
<b>5 CHECK EACH FUEL INJECTOR.</b> Measure the resistance between each fuel injector terminals.  <i>Terminals</i> No. 1 — No. 2:	Is the resistance 5 — 20 Ω?	Go to step 6.	Replace the faulty fuel injector. <Ref. to FU(H4SO)-32, Fuel Injector.>
<b>6 CHECK FOR POOR CONTACT.</b> Check for poor contact of ECM connector.	Is there poor contact of ECM connector?	Repair the poor contact of ECM connector.	Inspection using "General Diagnostic Table" <Ref. to EN(H4SO)(diag)-299, INSPECTION, General Diagnostic Table.>