


3. Second-row Seats

A: REMOVAL

1. LH&CTR SEAT


- 1) Tilt the backrest forward, and move the seat forward.
- 2) Remove the slide rail cover at the seat rear side, and remove the two bolts.
- 3) Move the seat to the rear end.
- 4) Remove the slide rail cover at the seat front side, and remove the two bolts.

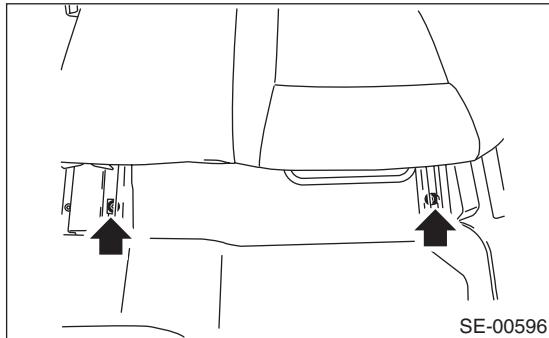

- 5) Remove the seat from vehicle.

2. RH SEAT

- 1) Tilt the backrest forward, and move the seat forward.
- 2) Remove the slide rail cover at the seat rear side, and remove the two bolts.
- 3) Move the seat to the rear end.
- 4) Remove the slide rail cover at the seat front side, and remove the two bolts.

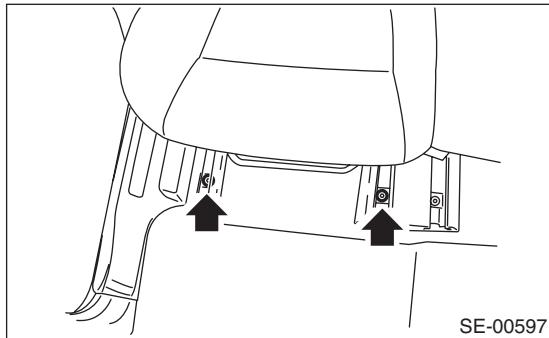

- 5) Remove the seat from vehicle.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

Refer to “COMPONENT” of “General Description”. <Ref. to SE-2, COMPONENT, General Description.>


NOTE:

Tighten the slide rail bolts diagonally in two or three steps by gradually increasing the torque, until they reach the specified torque.


C: DISASSEMBLY

1. LH SEAT


- 1) Remove the seat from vehicle. <Ref. to SE-12, LH&CTR SEAT, REMOVAL, Second-row Seats.>
- 2) Remove the headrest.
- 3) Remove the hinge outer cover.

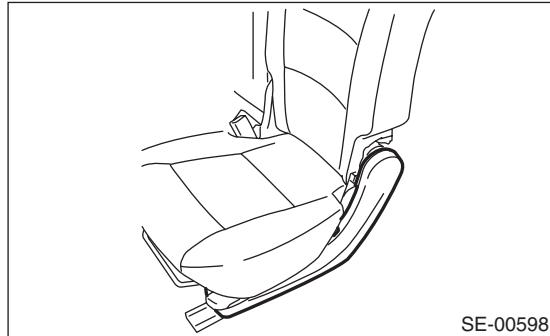


- 4) Remove the two reclining hinge bolts of 2nd seat CTR, then remove the seat back.

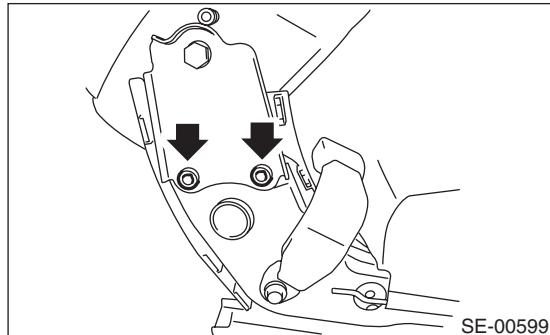


- 5) Remove the two reclining hinge bolts of 2nd seat LH on each of the left and right sides, then remove the seat back.

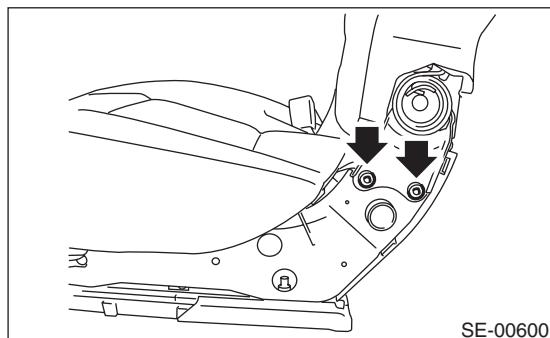


6) Remove the backrest back cover.

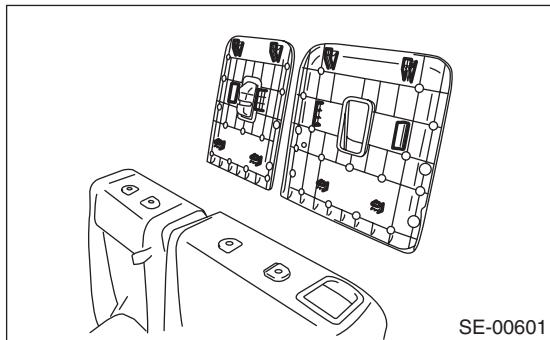


7) Remove the stopper.

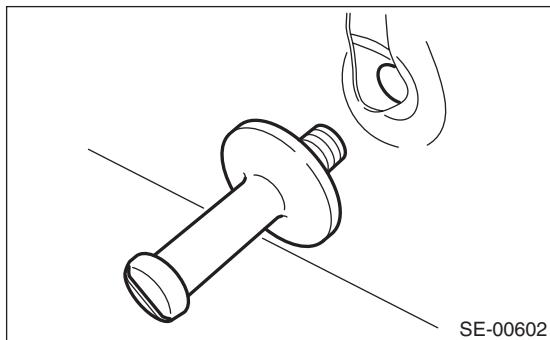


8) Remove the hog rings (A) and hooks at the rear face of the backrest.

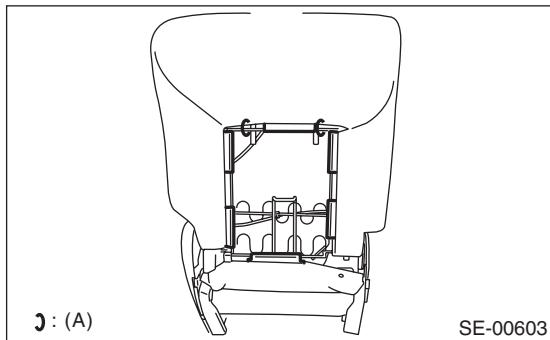

9) Remove the two screws securing the holder.

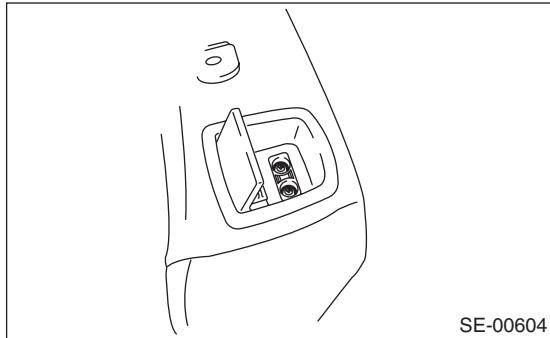

10) Disconnect the wire connected to the holder, then remove the holder.

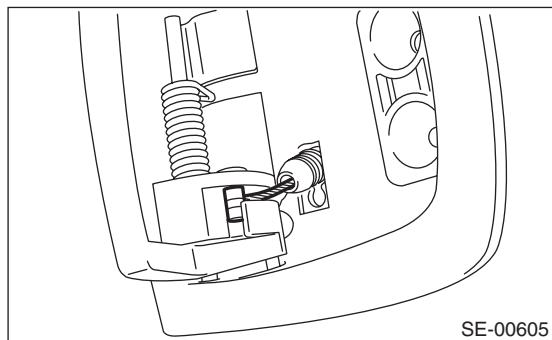


11) Remove the headrest lock bushing.

NOTE:


Push outward from inside of the seat to remove.

12) Pull out the frame from the backrest.

13) Remove the hog rings (A) of backrest, and then remove the backrest cover from backrest.

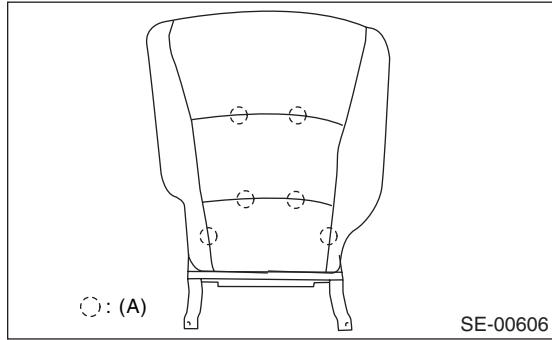


14) Remove the hooks and hog rings (A) from the rear side of seat cushion.

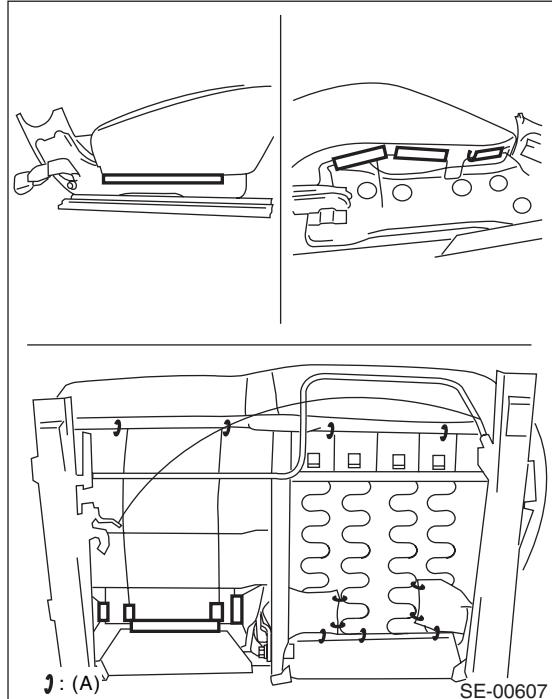

Second-row Seats


SEATS

- 15) Remove the seat cushion from the slide rail assembly.
- 16) Remove the seat cushion hog rings (A), and then remove the seat cushion cover from seat cushion.

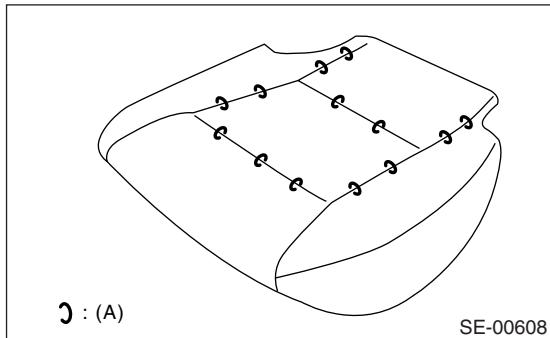


SE-00608

- 9) Remove the seat back latch cover.

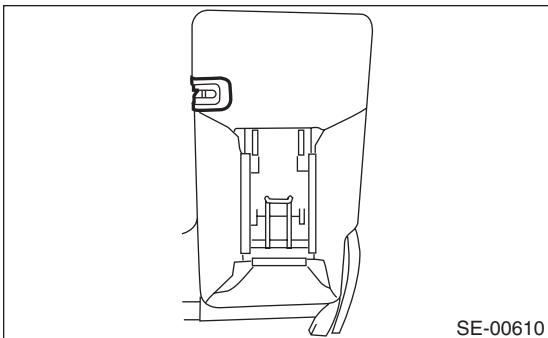

SE-00610


- 10) Remove the hog rings (A) on the front face of the backrest, and then remove the backrest cover from the backrest.

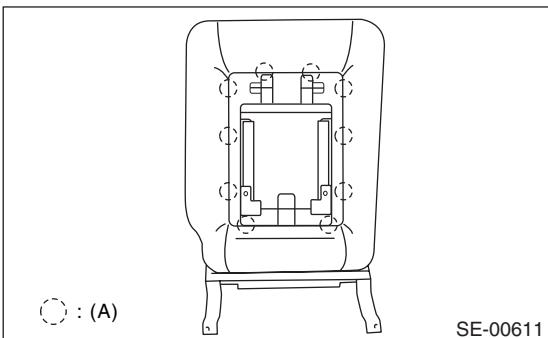

SE-00611


2. CTR SEAT

- 1) Remove the seat from vehicle. <Ref. to SE-12, LH&CTR SEAT, REMOVAL, Second-row Seats.>
- 2) Remove the hinge outer cover.
- 3) Remove the two reclining hinge bolts of 2nd seat CTR, then remove the seat back.
- 4) Remove the backrest back cover.

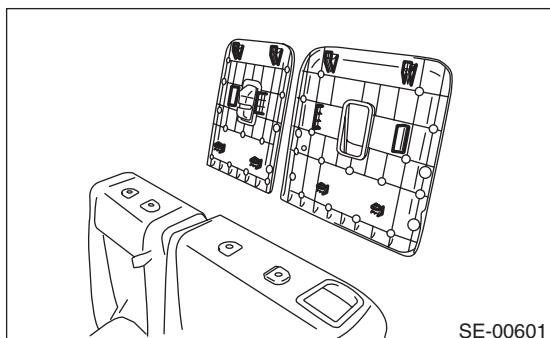


SE-00601

- 5) Remove the hooks and hog rings (A) at the rear side of backrest.

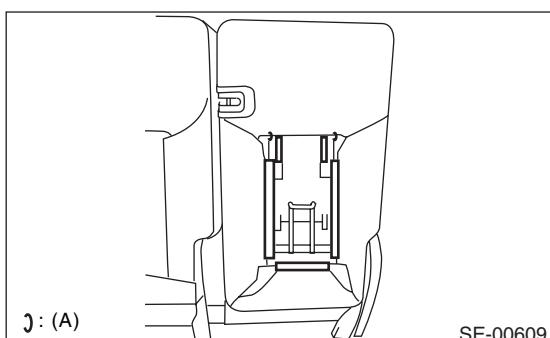

SE-00609


- 6) Remove the nut, then remove the armrest and arm rest rear board.
- 7) Remove the four screws securing the arm rest.
- 8) Remove the nut, then remove the armrest rear board and arm rest.

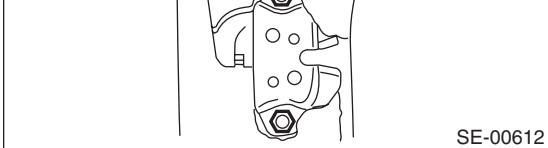


SE-00612

3. RH SEAT


- 1) Remove the seat from vehicle. <Ref. to SE-12, RH SEAT, REMOVAL, Second-row Seats.>
- 2) Remove the headrest.
- 3) Remove the hinge outer cover.
- 4) Remove the backrest back cover.
- 5) Remove the hog rings (A) and hooks at the rear face of the backrest.

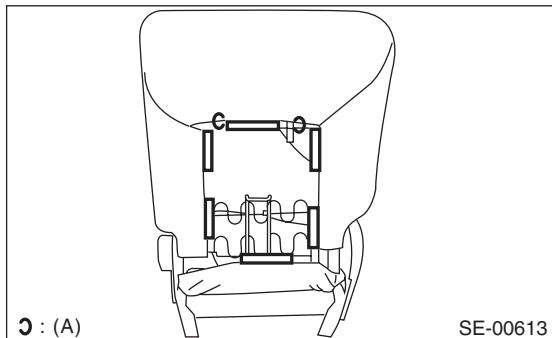


- 6) Remove the two screws securing the holder.

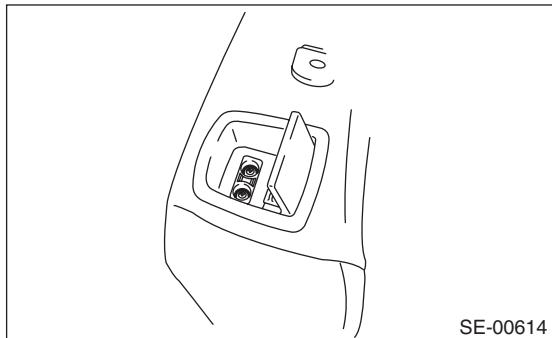


- 7) Disconnect the wire connected to the holder, then remove the holder.

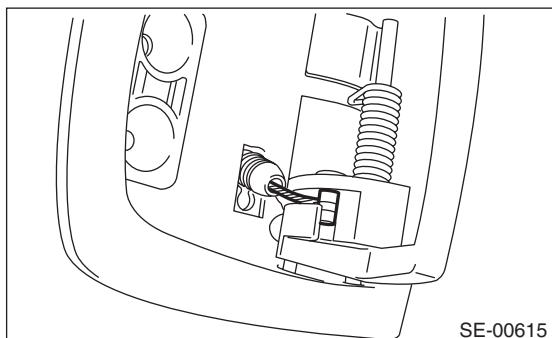


- 8) Disconnect the wire connected to the reclining hinge.

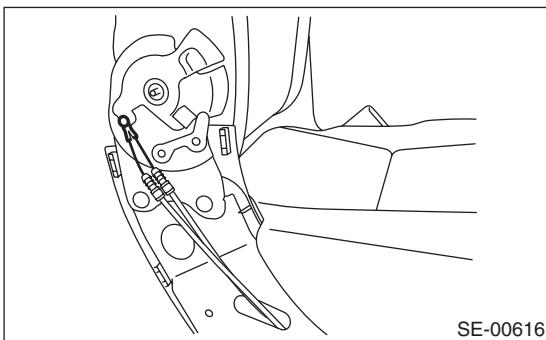

- 9) Remove the four reclining hinge bolts of 2nd seat RH, then remove the seat back.
- 10) Remove the two screws securing the reclining lever cover.

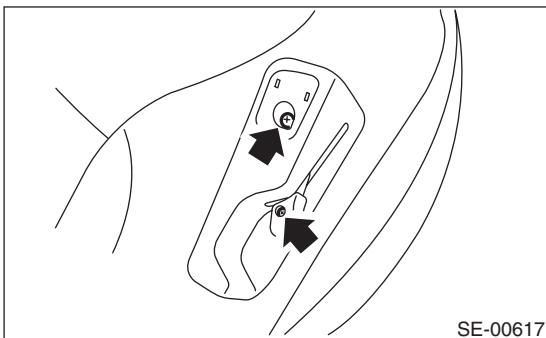

- 11) Remove the reclining lever cover.

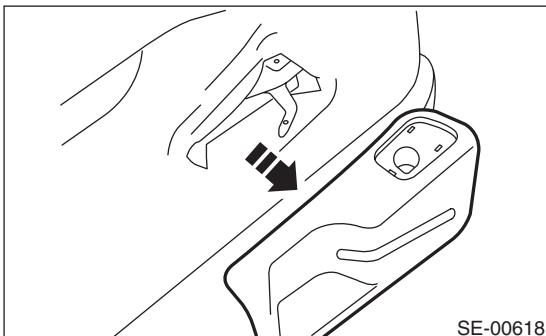

- 12) Remove the headrest lock bushing.

NOTE:


Push outward from inside of the seat to remove.

- 13) Pull out the frame from the backrest.


Second-row Seats

SEATS

14) Remove the hog rings (A) of backrest, and then remove the backrest cover from backrest.

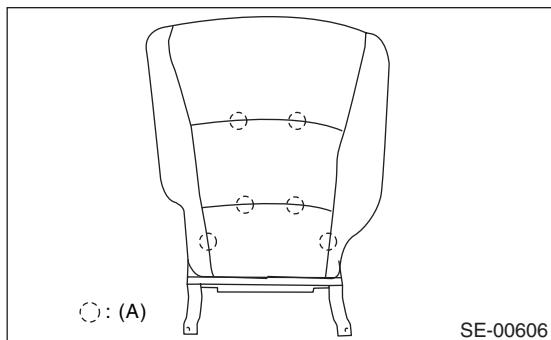


15) Remove the hooks and hog rings (A) from the rear side of seat cushion.

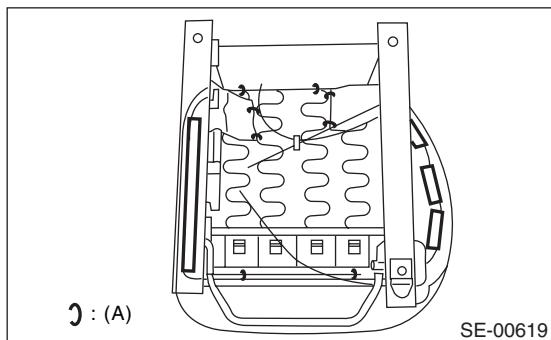

16) Remove the seat cushion from the slide rail assembly.

17) Remove the seat cushion hog rings (A), and then remove the seat cushion cover from seat cushion.

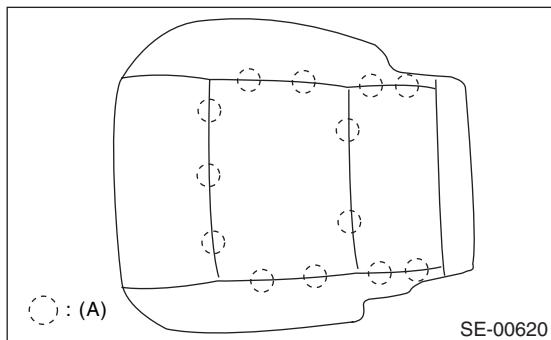

D: ASSEMBLY

CAUTION:


- Be careful not to stain or damage the backrest cover during assembly.
- Always use new hog rings.
- Secure the hog ring using hog ring pliers.
- Install the hog rings to the specified points securely and make sure that no wrinkle or twisting on backrest cover.

Assemble in the reverse order of disassembly.

1) Assemble the seat cushion in the reverse order of disassembly.

2) Assemble the backrest in the reverse order of disassembly.

3) Temporarily tighten the reclining hinge bolts in the order of (1) through (4), to an extent that the seat back assembly is not locked.

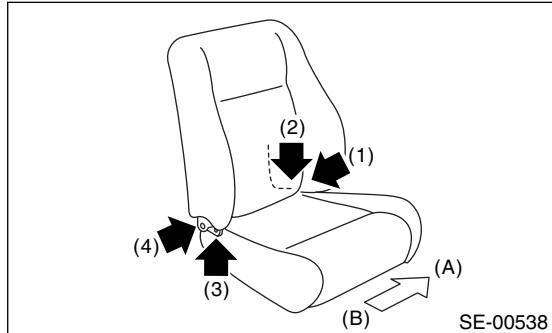

(A) Vehicle inside

(B) Vehicle outside

4) Use the reclining lever to place the backrest in the most upright position, and check the first lock position of recliner.

5) Hold the seat cushion assembly securely, and tighten the reclining hinge bolts in the order described above until they reach the specified torque.

CAUTION:

Do not touch the backrest assembly when tightening the reclining hinge bolts.

6) Assemble each harness, inner belt assembly and each cover in the reverse order of removal.

Tightening torque:

Refer to “COMPONENT” of “General Description”. <Ref. to SE-2, COMPONENT, General Description.>

E: INSPECTION

Check that no tear or fray on the seat cover.