


Blower Motor Unit Assembly

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

7. Blower Motor Unit Assembly

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the glove box. <Ref. to EI-38, REMOVAL, Glove Box.>
- 3) Disconnect the connectors of the A/C control module, intake door actuator, blower motor, power transistor and blower resistor.
- 4) Lift the floor mat.
- 5) Loosen the bolt and nut to remove blower motor unit assembly.

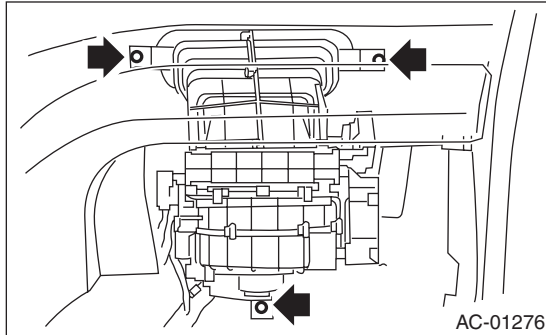

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

***Refer to “COMPONENT” of “General Description”. <Ref. to AC-5, HEATER COOLING UNIT, COMPONENT, General Description.>
<Ref. to AC-7, BLOWER MOTOR UNIT, COMPONENT, General Description.>***