

8. Valve Clearance

A: INSPECTION


CAUTION:

If engine oil is spilt onto the exhaust pipe, wipe it off with cloth to avoid emission of smoke or causing a fire.

NOTE:


Inspection and adjustment of valve clearance should be performed while engine is cold.

- 1) Remove the collector cover.
- 2) Disconnect the ground cable from battery.
- 3) Lift up the vehicle.
- 4) Remove the under cover. <Ref. to EI-18, REMOVAL, Front Under Cover.>
- 5) Lower the vehicle.
- 6) When inspecting #1, #3 and #5 cylinders
 - (1) Remove the air cleaner case, intake boot, and air intake chamber. <Ref. to IN(H6DO)-6, REMOVAL, Air Cleaner Case.> <Ref. to IN(H6DO)-8, REMOVAL, Air Intake Chamber.>
 - (2) Remove the feed hose from fuel pipe protector RH.

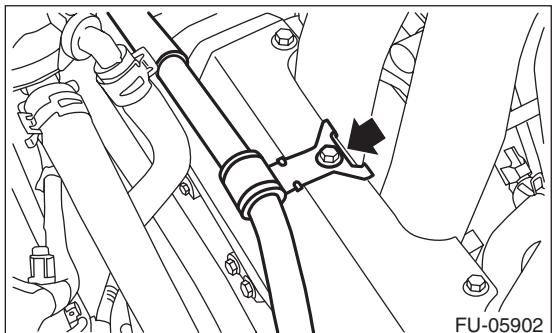

FU-05902

(3) Remove the fuel pipe protector (RH).

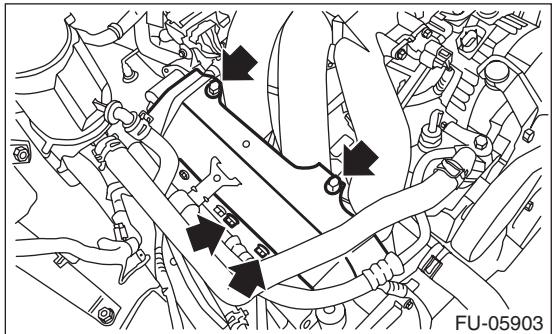

FU-05903


(4) Disconnect the connector of oil pressure switch.

(5) Remove the ignition coil. <Ref. to IG(H6DO)-8, REMOVAL, Ignition Coil.>

(6) Remove the rocker cover (RH). <Ref. to ME(H6DO)-76, REMOVAL, Camshaft.>


7) When inspecting #2, #4 and #6 cylinders

- (1) Remove the battery and battery carrier. <Ref. to SC(H6DO)-18, REMOVAL, Battery.>
- (2) Remove two fixing clips on the fuel pipe protector (LH).

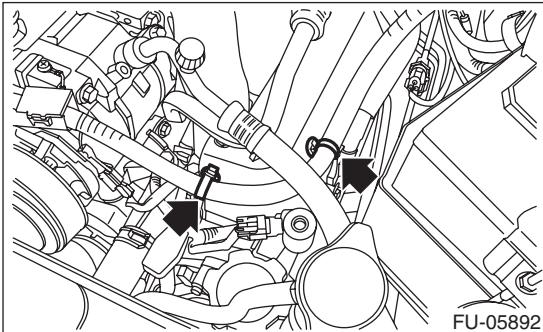

FU-05892

- (3) Generator connector
- (4) Generator terminal B
- (5) Remove the harness cover from collector cover bracket.
- (6) Magnet clutch connector

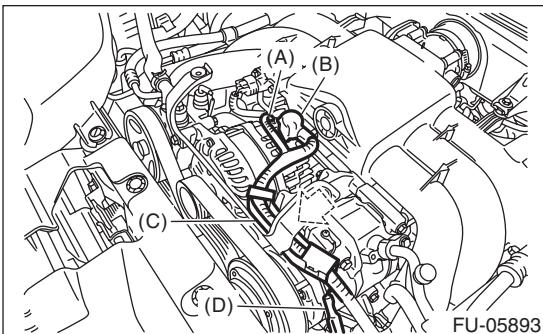


FU-05893

- (A) Generator connector
- (B) Terminal B
- (C) Remove the harness cover from collector cover bracket.
- (D) Magnet clutch connector

(7) Slide the harness and connector to the battery side.

(8) Disconnect the PCV hose and blow-by hose from the rocker cover (LH).

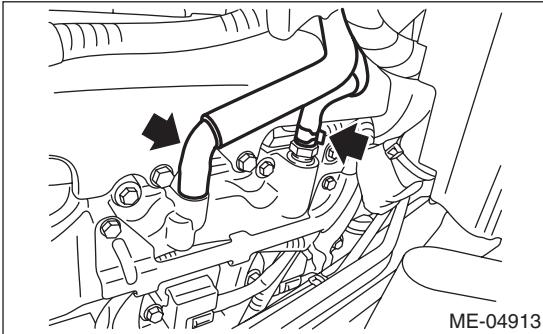


ME-04913

Valve Clearance

MECHANICAL


(9) Remove the fuel pipe protector (LH).

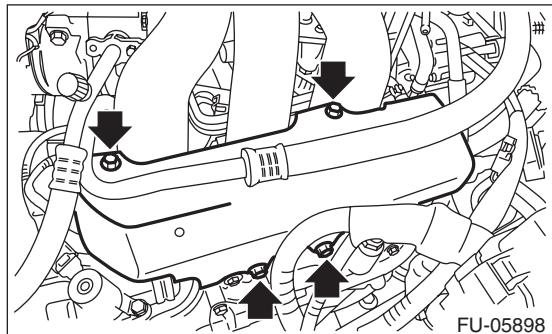

(10) Remove the ignition coil. <Ref. to IG(H6DO)-8, REMOVAL, Ignition Coil.>

(11) Remove the rocker cover (LH). <Ref. to ME(H6DO)-76, REMOVAL, Camshaft.>

8) Turn the crankshaft clockwise until the camshaft is set to position shown in the figure.

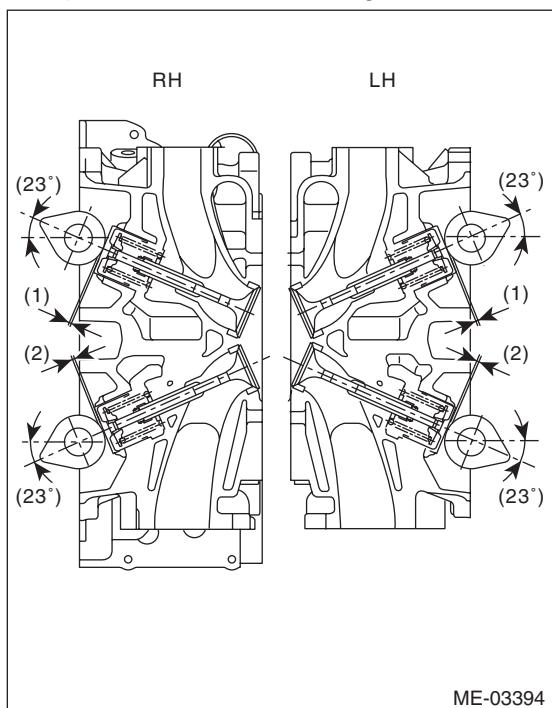

(1) Valve clearance (Intake side)

(2) Valve clearance (Exhaust side)

9) Measure the clearance of intake valve and exhaust valve using thickness gauge (A).

NOTE:

- Measure it within the range of $\pm 30^\circ$ from specified position shown in the figure.
- Insert a thickness gauge in a direction as horizontal as possible with respect to the valve lifter.
- If the measured value is not within specification, take notes of the value in order to adjust the valve clearance later on.


Valve clearance (inspection value):

Intake

$0.20^{+0.04} \text{--} 0.06 \text{ mm (} 0.0079^{+0.0016} \text{--} 0.0024 \text{ in)}$

Exhaust

$0.35 \pm 0.05 \text{ mm (} 0.0138 \pm 0.0020 \text{ in)}$

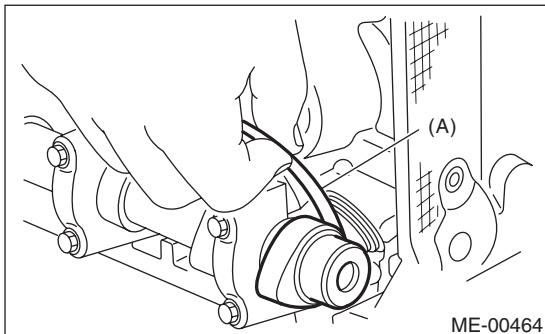

10) If necessary, adjust the valve clearance. <Ref. to ME(H6DO)-34, ADJUSTMENT, Valve Clearance.>

11) Further turn the crank pulley clockwise and then measure the valve clearances again.

12) After inspection, install the related parts in the reverse order of removal. <Ref. to ME(H6DO)-77, INSTALLATION, Camshaft.>

B: ADJUSTMENT

1. INTAKE SIDE

1) Remove the engine from vehicle. <Ref. to ME(H6DO)-36, REMOVAL, Engine Assembly.>

2) Measure all the valve clearances. <Ref. to ME(H6DO)-33, INSPECTION, Valve Clearance.>

NOTE:

Record each valve clearance after measurement.


3) Remove the timing chain assembly. <Ref. to ME(H6DO)-55, REMOVAL, Timing Chain Assembly.>

4) Remove the cam sprocket. <Ref. to ME(H6DO)-74, REMOVAL, Cam Sprocket.>

5) Remove the camshaft. <Ref. to ME(H6DO)-76, REMOVAL, Camshaft.>

6) Remove the valve lifter.

7) Measure the thickness of valve lifter using micrometer.

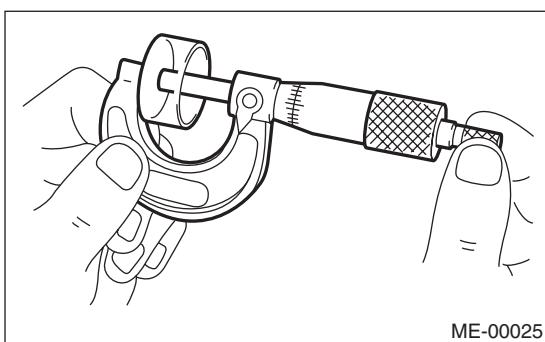

8) Select a valve lifter of suitable thickness using the measured valve clearance and valve lifter thickness, and install it.

NOTE:

Use a new valve lifter.

Unit: mm (in)	
$S = (V + T) - 0.20$ (0.0079)	
S: Valve lifter thickness required	
V: Measured valve clearance	
T: Valve lifter thickness to be used	

9) Install the camshaft. <Ref. to ME(H6DO)-77, INSTALLATION, Camshaft.>

10) Install the cam sprocket. <Ref. to ME(H6DO)-74, INSTALLATION, Cam Sprocket.>

11) Install the timing chain assembly. <Ref. to ME(H6DO)-61, INSTALLATION, Timing Chain Assembly.>

12) Measure all valve clearance again at this time. If the valve clearance is not appropriate, repeat from the first step.

Valve clearance (adjustment value):

$0.20^{+0.04} \text{--} 0.06 \text{ mm (} 0.0079^{+0.0016} \text{--} 0.0024 \text{ in)}$

13) After adjustment, install the related parts in the reverse order of removal.

NOTE:

Use a new rocker cover gasket.

2. EXHAUST SIDE

1) Remove the engine from vehicle. <Ref. to ME(H6DO)-36, REMOVAL, Engine Assembly.>

2) Measure all the valve clearances. <Ref. to ME(H6DO)-33, INSPECTION, Valve Clearance.>


NOTE:

Record each valve clearance after measurement.

3) Remove the camshaft. <Ref. to ME(H6DO)-76, REMOVAL, Camshaft.>

4) Remove the valve lifter.

5) Measure the thickness of valve lifter using micrometer.

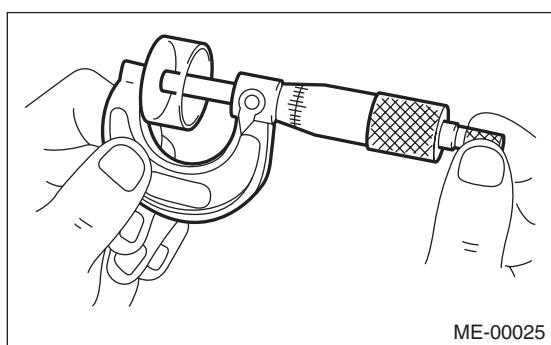

6) Select a valve lifter of suitable thickness using the measured valve clearance and valve lifter thickness, and install it.

NOTE:

Use a new valve lifter.

Unit: mm (in)	
$S = (V + T) - 0.35$ (0.0138)	
S: Valve lifter thickness required	
V: Measured valve clearance	
T: Valve lifter thickness to be used	

7) Install the camshaft. <Ref. to ME(H6DO)-77, INSTALLATION, Camshaft.>

8) Install the cam sprocket. <Ref. to ME(H6DO)-74, INSTALLATION, Cam Sprocket.>

9) Install the timing chain assembly. <Ref. to ME(H6DO)-61, INSTALLATION, Timing Chain Assembly.>

10) Measure all valve clearance again at this time. If the valve clearance is not appropriate, repeat from the first step.

Valve clearance (adjustment value):

$0.35 \pm 0.05 \text{ mm (} 0.0138 \pm 0.0020 \text{ in)}$

11) After adjustment, install the related parts in the reverse order of removal.

NOTE:

Use a new rocker cover gasket.