

### 4. Tire Pressure Monitoring System

#### A: REMOVAL

##### 1. TRANSMITTER (SNAP IN TYPE)

- 1) Remove the wheels from the vehicle. <Ref. to WT-5, REMOVAL, Tire and Wheel.>
- 2) Remove the tires from wheels.


**CAUTION:**

**Use a tire changer when removing the tire from the wheel.**

- 3) Loosen the screw to remove the transmitter from the valve stem.

**NOTE:**

Replace the valve and screw with a new part when reusing transmitter.

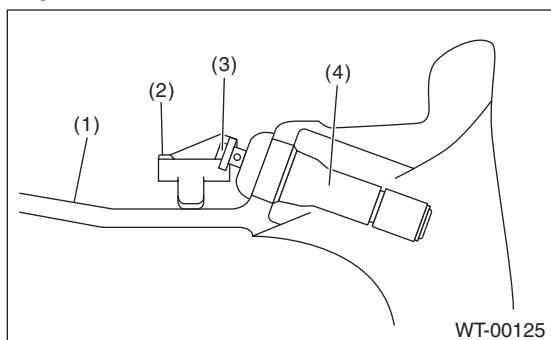

- (1) Wheel
- (2) Transmitter
- (3) Screw
- (4) Valve

- 4) Remove the valve from the wheel.


##### 2. TPMS & KEYLESS ENTRY CONTROL MODULE

**NOTE:**

TPMS control module is integrated into keyless entry control module.

- 1) Disconnect the ground cable from battery.
- 2) Remove the glove box. <Ref. to EI-38, REMOVAL, Glove Box.>

- 3) Remove the nut, disconnect the connector, and then remove the TPMS & keyless entry control module.

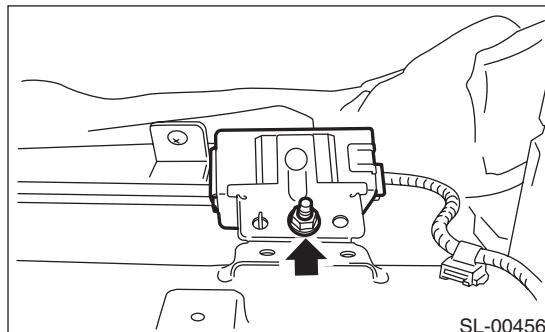

SL-00456


#### B: INSTALLATION

##### 1. TRANSMITTER (SNAP IN TYPE)

**CAUTION:**

**Use the new transmitter assembly or replace the new valve and screw, when installing.**

- 1) Replace the valve and screw with a new part when reusing transmitter.

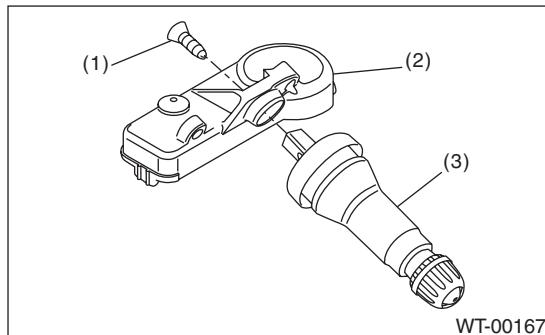

- (1) Screw
- (2) Transmitter
- (3) Valve

**Tightening torque:**

**1.4 N·m (0.14 kgf·m, 1 ft-lb)**

- 2) Install the transmitter to the wheel by aligning it with valve hole.

**NOTE:**

When using the jig that pulls the valve cap by hooking its neck part, use another short-type cap.

# Tire Pressure Monitoring System


## WHEEL AND TIRE SYSTEM

---

3) Install the tires to wheels.

### CAUTION:

- Use a tire changer when installing tire to wheel.
- To prevent damaging the transmitter, set the tire changer boom in the position as shown in the figure.

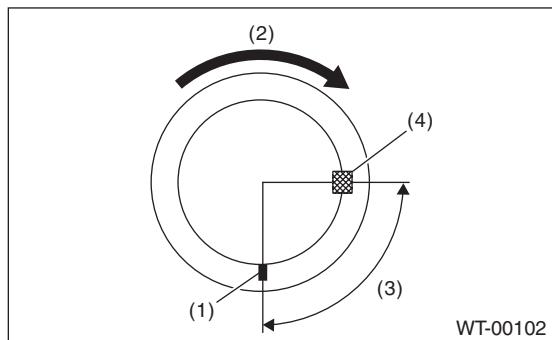

- (1) Transmitter
- (2) Direction of turn table rotation
- (3) 90°
- (4) Tire changer boom

4) Install the wheels to vehicle. <Ref. to WT-5, INSTALLATION, Tire and Wheel.>

5) Register the transmitter ID to the TPMS & keyless entry control module. <Ref. to TPM(diag)-8, REGISTER TRANSMITTER (ID), OPERATION, Subaru Select Monitor.>

## 2. TPMS & KEYLESS ENTRY CONTROL MODULE

Install each part in the reverse order of removal.

### ***Tightening torque:***

***7.5 N·m (0.76 kgf-m, 5.5 ft-lb)***

## C: ADJUSTMENT

Re-register the transmitter ID when transmitter has been replaced. <Ref. to TPM(diag)-8, REGISTER TRANSMITTER (ID), OPERATION, Subaru Select Monitor.>

Re-register the keyless transmitter when TPMS & keyless entry control module has been replaced. <Ref. to SL-48, REGISTRATION OF KEYLESS TRANSMITTER WITH SUBARU SELECT MONITOR, REPLACEMENT, Transmitter.>