


8. Oil Cooler

A: REMOVAL


CAUTION:

If the engine oil is spilt over exhaust pipe or the under cover, wipe it off with cloth to avoid emitting smoke or causing a fire.

- 1) Lift up the vehicle.
- 2) Remove the under cover. <Ref. to EI-18, REMOVAL, Front Under Cover.>
- 3) Drain engine coolant. <Ref. to CO(H6DO)-12, DRAINING OF ENGINE COOLANT, REPLACEMENT, Engine Coolant.>
- 4) Drain the engine oil. <Ref. to LU(H6DO)-10, REPLACEMENT, Engine Oil.>
- 5) Remove the bolts which hold the engine oil cooler water pipe to chain cover and disconnect the water hose from oil cooler.

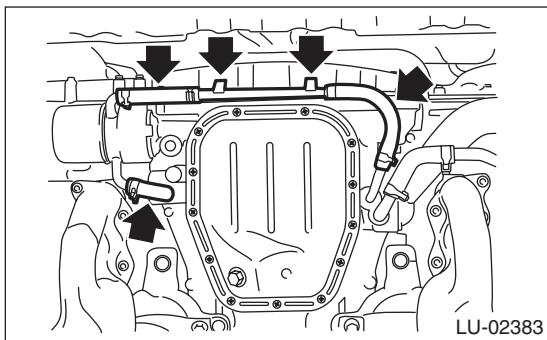

- 6) Remove the oil filter using the ST. <Ref. to LU(H6DO)-16, REMOVAL, Engine Oil Filter.>
- 7) Remove the oil cooler connector and remove the oil cooler.

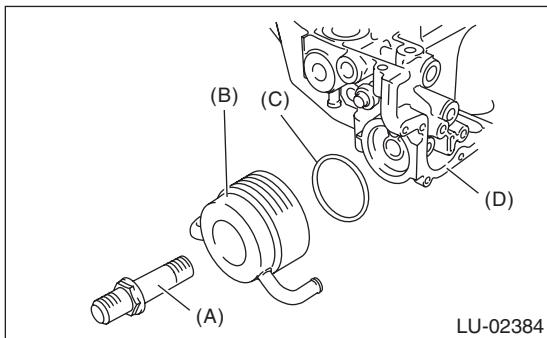

(A) Oil cooler connector
 (B) Oil cooler
 (C) O-ring
 (D) Oil pan upper

B: INSTALLATION


- 1) Tighten the oil cooler connector to install the oil cooler to the oil pan upper.

Tightening torque:

54 N·m (5.5 kgf-m, 39.8 ft-lb)

NOTE:

Use new O-rings.

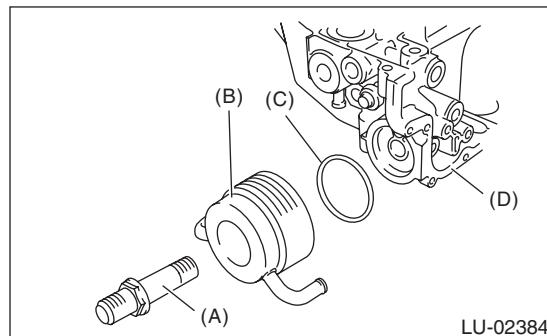


LU-02384

(A) Oil cooler connector
 (B) Oil cooler
 (C) O-ring
 (D) Oil pan upper

- 2) Install the oil filter. <Ref. to LU(H6DO)-16, INSTALLATION, Engine Oil Filter.>
- 3) Attach the bolts which hold the engine oil cooler water pipe to chain cover and connect the water hose to oil cooler.

Tightening torque:

6.4 N·m (0.7 kgf-m, 4.7 ft-lb)

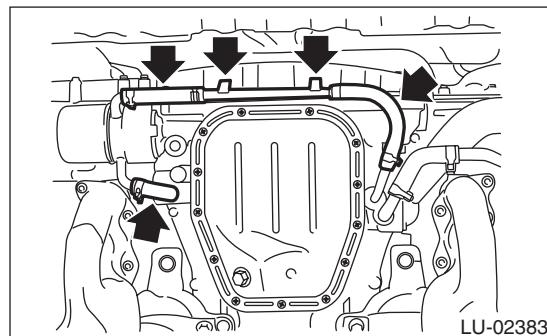

LU-02383

- 4) Lower the vehicle.
- 5) Refill the engine oil. <Ref. to LU(H6DO)-10, REPLACEMENT, Engine Oil.>
- 6) Fill the ATF. <Ref. to CO(H6DO)-12, FILLING OF ENGINE COOLANT, REPLACEMENT, Engine Coolant.>
- 7) Check the engine oil level. <Ref. to LU(H6DO)-10, INSPECTION, Engine Oil.>

C: INSPECTION

- 1) Check that coolant passages are not clogged using an compressed air.
- 2) Check that the oil pan upper and O-ring installing surface of oil filter are not damaged.