


## ROCKER OUTER PANEL (CUT) REPLACEMENT

### 1. REMOVE ROCKER OUTER PANEL

- (a) Cut and join the parts at the locations as shown below.

#### HINT:

This part is reused to cut from the front of the supply part cut point, behind the front pillar side and at the quarter panel side.

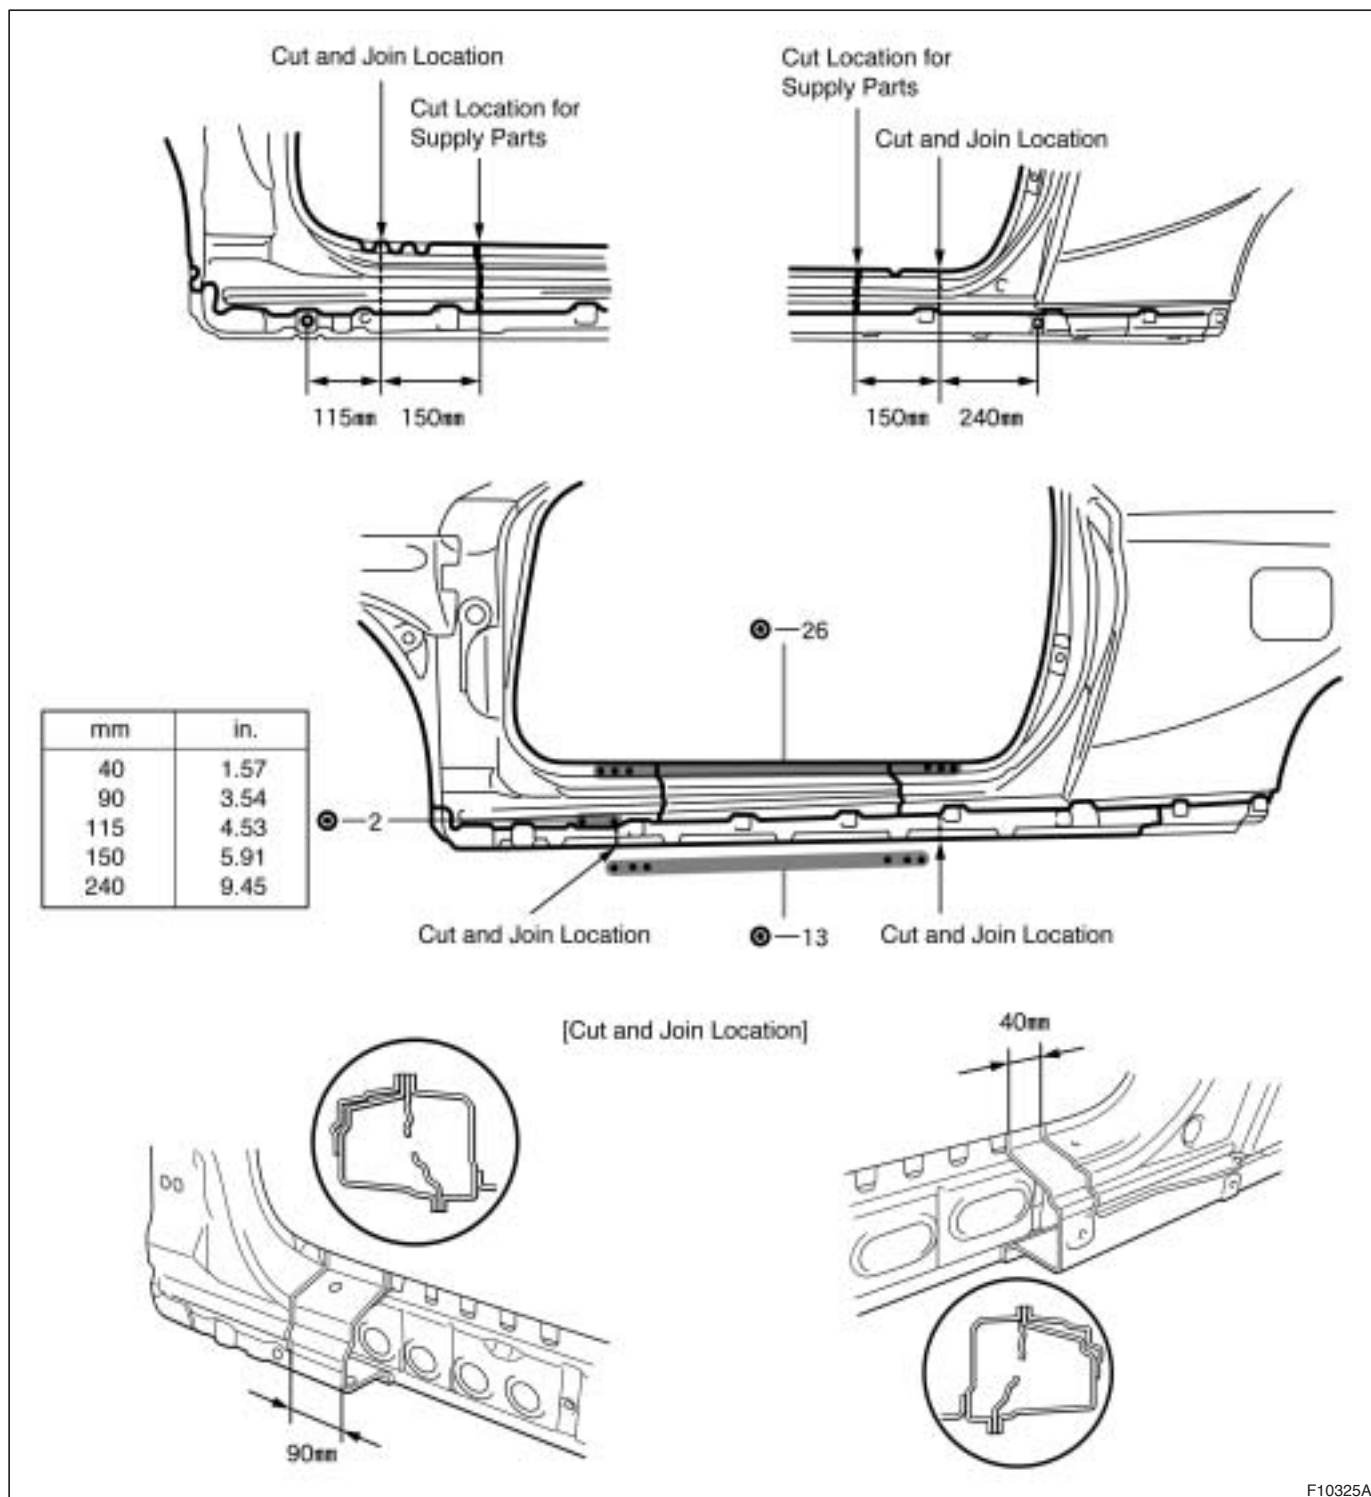


## 2. INSTALL ROCKER OUTER PANEL

### HINT:

Inspect the fitting of the front door, etc., before welding, since this affects the appearance of the finish.

- Cut the new parts for rocker panel at the location as shown below.
- After welding the rocker panel to the vehicle install the outer panel.
- Temporarily install the new parts and measure each part in accordance with the body dimension diagram.

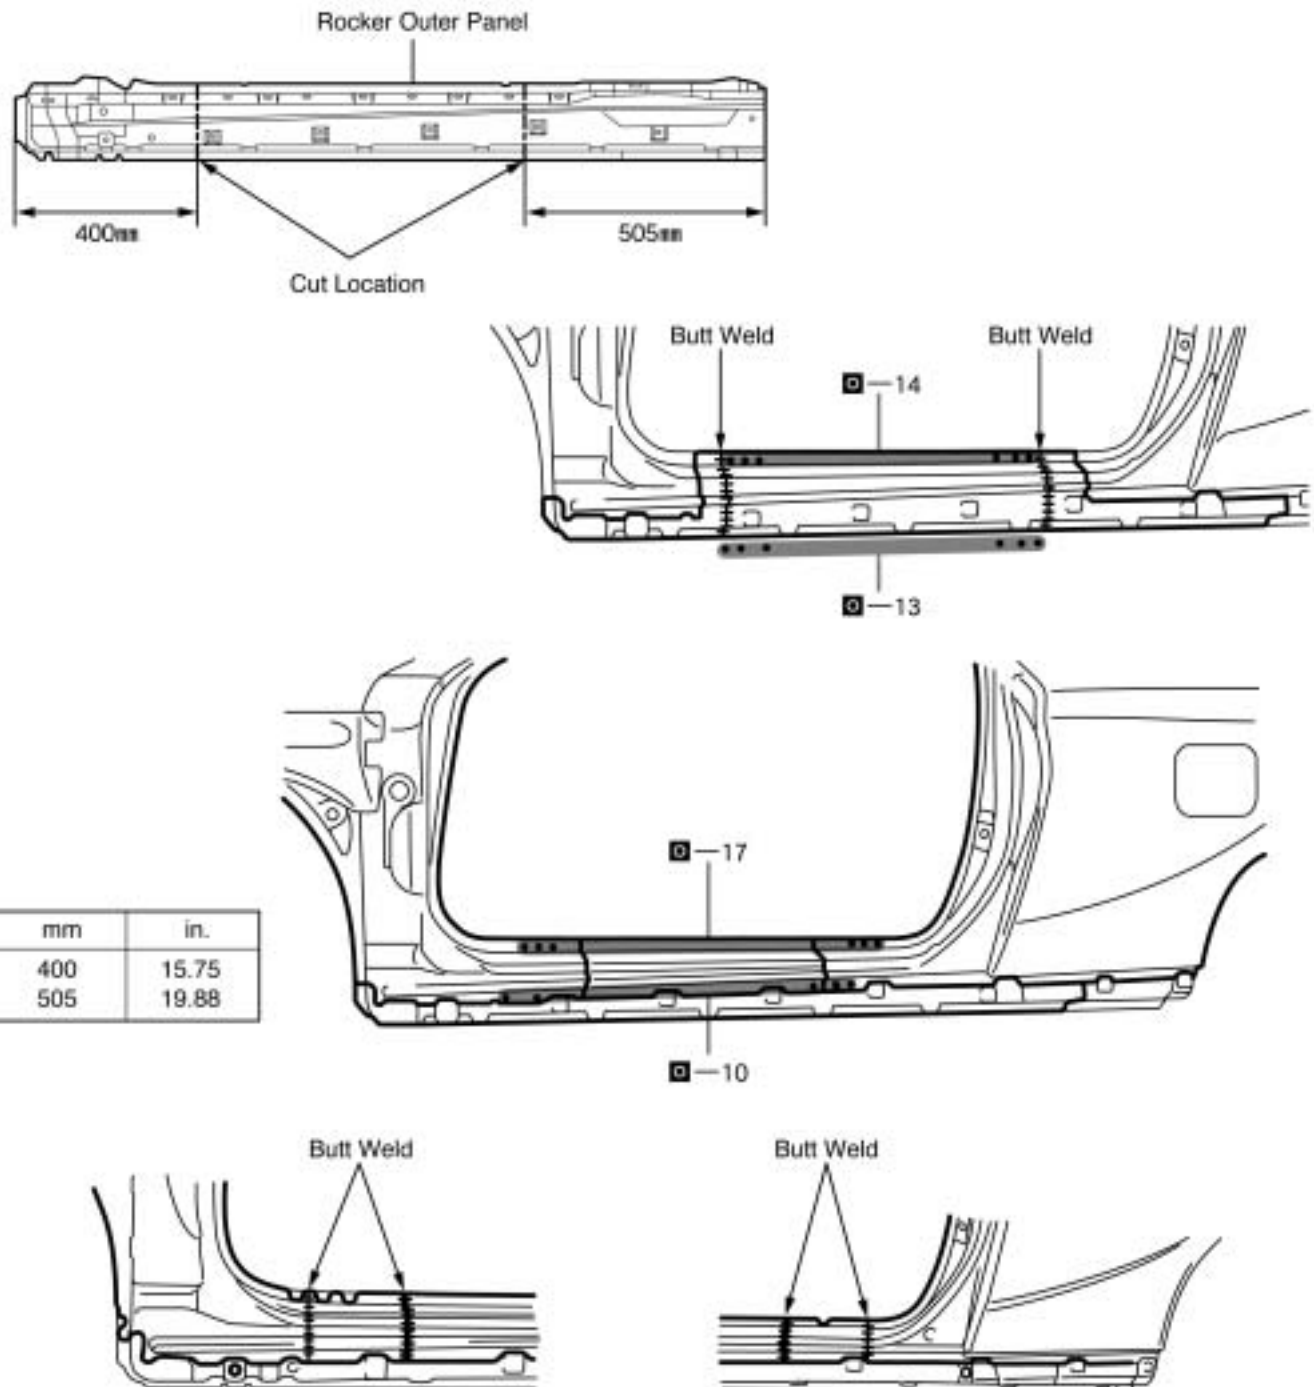

3. MEASURING THE OPENING PORTION DIMENSIONS ([See page BP-72](#))
4. APPLYING SEALER TO THE ENGINE COMPARTMENT ([See page PC-1](#))
5. APPLYING SEALER TO THE REAR LUGGAGE COMPARTMENT ([See page PC-1](#))
6. APPLYING ANTI-RUST AGENT
  - (a) After applying the top coat layer, apply the anti-rust agent to the inside of the necked section structural weld spots.